



BATHROOM LIGHT FITTINGS




**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
LEAVE A COPY FOR THE USER / MAINTENANCE ENGINEER FOR FUTURE REFERENCE**

GENERAL

- Aurora bathroom lights are to be connected to a 240V mains supply.
- These fittings are not dimmable.


IMPORTANT INSTALLATION INFORMATION

- Installation should be carried out by a qualified electrician and in accordance with the latest edition of the I.E.E. Wiring Regulations (BS7671) and taking into consideration Part P of the Building Regulations. If in doubt, consult a qualified electrician.
- Maximum Voltage – 240V AC.
- Use only with lamp type and wattage rating as indicated on the product rating label.
- Ensure that ALL electrical connections are tight with no loose strands, even factory made connections.
- These luminaires are for indoor use only.
- Before commencing installation or maintenance, ensure electricity is switched off at the mains.
- Refer to the I.E.E Wiring Regulations BS7671:2001 Section 601 for suitability of installation in particular zones of rooms containing a bath or shower. See Fig 2 below for details.
-  This luminaire is suitable to be mounted on a Normally Flammable Surface e.g. a material based on wood.

IMPORTANT USER INFORMATION

- Always switch off mains supply before servicing, fitting or changing the lamps.
- Replace immediately, lamps that have failed (or showing signs of failure, i.e. flickering). Allow the lamp and fitting to cool before replacing lamp.
- Check that the correct lamp type and wattage is fitted as indicated on the rating label.
- Replace any cracked protective shield.

INSTALLATION INSTRUCTIONS

1. Select the required position for the luminaire.
2. Remove the cover fixing screws / nuts.
3. Fix the mounting bracket / base of luminaire to the wall with the screws / wall plugs provided. Beware of joists, water pipes and electric cables when drilling holes.
4. Connect the mains supply cable to the terminal block as follows. Ensure that there are no exposed conductors or trapped insulation. Conductor size 1 - 1.5mm². Connections should be tight with no loose strands.
5. Connect the luminaire to the mains supply using the terminal block supplied as follows:
 - SWITCHED LIVE – (red or brown) to terminal marked L.
 - NEUTRAL – (black or blue) to terminal marked N.
 - EARTH (green/yellow) to terminal marked E or  These fittings must be earthed.



Please note: If your light fitting is not at the end of a wiring 'spur' there will be a pair of live 'through' wires in your supply wiring which are coloured either red or black. These should be connected together using an additional terminal block as shown overleaf. If in any doubt, consult a qualified electrician.

6. Replace the cover ensuring that cables are not trapped between the cover and the wall / mounting bracket.
7. Insert the lamp into the lampholder. Ensure that the lamp is correctly located in the lampholder. Switch on the power supply.

Corner Mounting on AU-BLL824

This luminaire may be wall mounted horizontally or vertically and also corner mounted using a corner mounting bracket available separately. See figure 1.

GUARANTEE

This product is guaranteed in the UK for a period of 1 year from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. Aurora does not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. Aurora reserves the right to alter specifications without prior notice.

Fig. 1


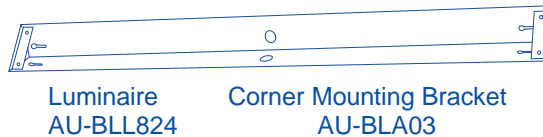


Fig. 2

AU-BLL826 - This luminaire is only suitable for installation into Zone 3 (except where water jets are likely to be used for cleaning purposes).

AU-BLL824/AU-BLL825/
AU-BLL827 - These luminaires are only suitable for installation into Zone 2 or 3 (except where water jets are likely to be used for cleaning purposes).

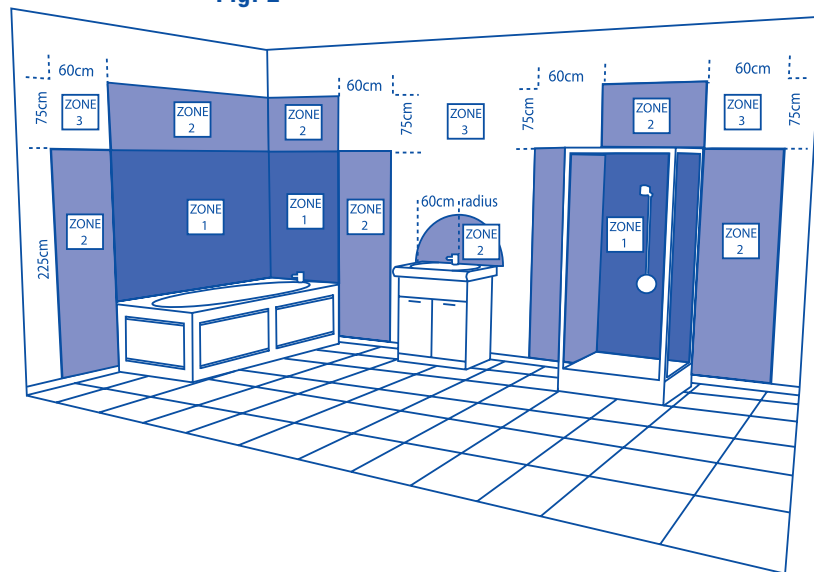

plumbworld
Big brands, small prices.

Pdf Supplied By <http://www.plumbworld.co.uk/>