

# Single Lever Ceramic Disc Shower

valve instructions

This guide shows you how to install, maintain and generally get the most out of your Ceramic Disc Shower Valve.

**WE RECOMMEND INSTALLATION BY A QUALIFIED PLUMBER ONLY**

Before Proceeding please note :

1. The Valve must be installed in compliance with local authority bylaws and water supply bylaws.
2. Read all the instruction guide before proceeding.
3. Only begin the installation when you have all the necessary tools ready.

## AFTERCARE

When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance of the fitting, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration.

### General

1. For servicing purposes, this shower valve should have isolating valves fitted.
2. The hot supply must be on the left when viewed from the front with the outlet at the bottom and the screw cap on the top.

### Water Supplies

The installation must comply with the regulations of the local water authority as contained in their bylaws in order to operate effectively.

To ensure an adequate shower the bottom of the cold water tank should be at least 0.9m / 3 ft / above the highest installed position of the shower hand set. This head is a minimum and only applies if the storage tank is more or less directly over the bath. Should there be any long horizontal pipe runs it may be necessary to raise the cold water tank to increase the head of water. Maximum pressure is 3 bar.

## Installation

remove all debris. The shower valve is suitable for top or bottom shower outlets. The shower outlet bush can be removed by using a suitable Allen key. The plug can be removed using the coin slot. Ensure that the valve is positioned with the allen screw hole on the bottom.

### Concealed Model Only :

1. The wall should be cut away to receive the valve complete with connecting elbows.
2. Drill or cut away the wall to accept supply pipes and shower connection.
3. Slide on concealing plate.
4. Fit the handle onto the shaft of the cartridge with the lever pointing down. Secure in place with retaining screw.

### Concealed and Exposed Models

1. The pipework centres are 150 mm
2. Using the backplate as a template, mark the position of the fixing holes.
3. Drill and plug the wall to suit and fix backplate.
4. Locate the mixer body onto the backplate. Lock into place with the inlets horizontal by tightening the Allen screw.
5. Connect inlet pipes to the swivel elbows with the hot on the left and cold on the right.
6. Fit the handle onto the shaft of the cartridge with the lever pointing down. Secure in place with retaining screw.

### Operation

To turn the shower on pull the lever towards you, to turn the shower off push the lever away from you.

Rotating the lever left or right will alter the temperature from full hot to the left through warm to full cold on the right.

### Customer Guarantee

We are proud of our products and guarantee them against any faulty material or manufacture, provided they have been installed, cared for and used in accordance with our instructions.

**plumbworld**  
**Big brands, small prices.**

Pdf Supplied By <http://www.plumbworld.co.uk/>