

 

 

 






 





 
Description	Instruction	Qty									
Radiator		1									
Bracket	<table border="0"> <tr> <td>SINGLE</td> <td>DOUBLE</td> <td></td> </tr> <tr> <td></td> <td></td> <td>4</td> </tr> </table>	SINGLE	DOUBLE				4	4			
SINGLE	DOUBLE										
		4									
Washer	<table border="0"> <tr> <td>SINGLE</td> <td>DOUBLE</td> <td></td> </tr> <tr> <td></td> <td></td> <td>4</td> </tr> <tr> <td>4</td> <td>8</td> <td>8</td> </tr> </table>	SINGLE	DOUBLE				4	4	8	8	8
SINGLE	DOUBLE										
		4									
4	8	8									
Fixing Screw		8									
Air Vent		1									
End Plug		3									



SINGLE



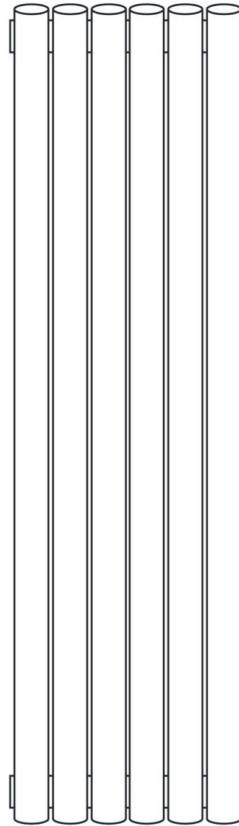DOUBLE



1/2

Prior to installation

Check that all of the parts are enclosed as per the contents table.

Ensure that the radiator is positioned so that it can easily be connected to the central heating system.

1. Select desired position for radiator - ensuring that the wall is strong enough to support the weight.
2. Mark out where brackets need to be positioned - checking that the top and bottom pair are level.
3. Drill hole and insert rawl plug into it.
4. Insert the screw through the washer then the bracket and into the rawl plug.
5. Repeat this for all 4 brackets.
6. Insert the air vent and the end plug into the top two threads on the radiator.
7. Hang radiator on brackets and plumb into your central heating.
8. Bleed out any air bubbles once plumbed in using the air vent plug.

## Check out our full range of Heating Products

Central Heating Controls

Honeywell Heating Controls

Danfoss Heating Controls

Radiator Valves

Fernox

Sentinel

Magnaclean

Warmup underfloor heating

Water Heaters

Hand Dryers

**plumbworld**  
**Big brands, small prices.**