

# INSTALLATION MANUAL

Ovens ID SERIES

**Haier**

FROM **COOKING**

TO **AMAZING**





## WELCOME

This installation manual is designed for kitchen manufacturers who will deal with these products. To ensure safety and get the best results, please read this manual carefully, including safety instructions, and keep it for future reference. Before proceeding with installation, take note of the serial number, as you may need it in case of repairs. Check for any damage during transport and consult a technician if in doubt before using. Always keep all packing material away from children.

**i NOTE:** Features, pictures in the manual and product accessories may vary depending on the model purchased.

# Index

|           |                                                      |                  |
|-----------|------------------------------------------------------|------------------|
| <b>1</b>  | <b>Safety warnings for installation</b>              | <b>p. 2-3</b>    |
| <b>2</b>  | <b>Where to install the product</b>                  | <b>p.3</b>       |
| <b>3</b>  | <b>Oven dimensions</b>                               | <b>p.4-5</b>     |
| <b>4</b>  | <b>Dimensions of combinable products</b>             | <b>p.6-13</b>    |
| 4.1       | Compact oven h45 drop down opening                   |                  |
| 4.2       | Compact oven h38 drop down opening                   |                  |
| 4.3       | Compact oven h38 side wing opening                   |                  |
| 4.4       | Warming drawer                                       |                  |
| <b>5</b>  | <b>Installation tools</b>                            | <b>p.14</b>      |
| <b>6</b>  | <b>Furniture and ventilation</b>                     | <b>p.14 - 21</b> |
| 6.1       | Precautions                                          |                  |
| 6.2       | Undertop installation                                |                  |
| 6.3       | Combination with cooktop                             |                  |
| 6.4       | Corner installation                                  |                  |
| 6.5       | Installation oven in column                          |                  |
| 6.6       | Installation compact oven in column                  |                  |
| 6.7       | Installation compact oven + warming drawer in column |                  |
| 6.8       | Drawer adjustments                                   |                  |
| 6.9       | Installation oven + compact oven h45 in column       |                  |
| 6.10      | Installation oven + compact oven h38 in column       |                  |
| <b>7</b>  | <b>Connection to the mains</b>                       | <b>p.22 - 25</b> |
| 7.1       | Safety warnings                                      |                  |
| 7.2       | Instructions                                         |                  |
| 7.3       | Other tips                                           |                  |
| <b>8</b>  | <b>Instructions for Oven installation</b>            | <b>p.26 - 31</b> |
| 8.1       | Important warnings                                   |                  |
| 8.2       | Fixing to the cabinet                                |                  |
| 8.3       | Installation step by step                            |                  |
| <b>9</b>  | <b>Delivery to the user</b>                          | <b>p.32</b>      |
| <b>10</b> | <b>First startup</b>                                 | <b>p.32</b>      |
| <b>11</b> | <b>Disassembling the product</b>                     | <b>p.32</b>      |

## 1 Safety warnings for installation

---

**Observe these directions before beginning the installation of the product.**

- Your safety is very important to us. Please read this information carefully before using the oven;
- Installation must be carried on by a qualified technician who must know and respect the laws in force in the country of installation and the manufacturer's instruction;
- If manufacturer service is required to eliminate faults resulting from improper installation, such service is not covered by the fix;
- Remove the packing material before operating the appliance;
- After unboxing the appliance, always check it is not damaged, in case of issue contact the customer service before installing and do not connect to the power supply;
- A damaged product can be the cause of a short circuit, electric shock, fire start and other hazards;
- Check the packaging for accessories or accompanying materials (envelopes with screws, documents, brochures, etc.) and, if so, remove and store them;
- The oven can be located high in a column or under a worktop;
- Before fixing, you must ensure good ventilation in the oven space to allow proper circulation of the fresh air required for cooling and protecting the internal parts. Make the openings specified on the illustrations according to the type of fitting. Always fix the oven to the furniture with screws provided with the appliance;
- No additional operation/setting is required in order to operate the appliance at the rated frequencies;
- The appliance must not be installed behind a decorative door in order to avoid overheating;
- If the assistance of the manufacturer is required to rectify faults arising from incorrect installation, this assistance is not covered by the guarantee. The installation instructions for professionally qualified personnel must be followed;
- Incorrect installation may cause harm or injury to people, animals or belongings. The manufacturer cannot be held responsible for such harm or injury;
- Safe use is only guaranteed if installation has been carried out properly according to these instructions. In case of damage due to improper installation, the responsibility lies with the person who installed the product;
- During installation the oven should be disconnected from the mains to avoid overheating;
- During installation do not use the oven door's handle to lift and move the oven;
- It is recommended to wear protective gloves during installation to avoid cut injuries;
- The installation furniture and the adjacent ones must withstand temperatures of 95°C;

- Warranty does not cover damage caused by improper installation;
- In case of incorrect installation, tampering with the device and improper connection, the validity of the product warranty will expire;
- Make sure that when the product's power supply cable is completed, it is not accessible;
- After assembly, the power cord must not come into contact with moving parts of kitchen components (such as a drawer) and must not be exposed to mechanical stresses;
- This product requires constant ventilation during use. Do not cover the air vents;
- When delivering the product to the end user, the technician must ensure that it has been installed correctly.

---


## Where to install the product **2**

- Install and use this product in a closed, covered, dry and well-ventilated environment;
- Do not install the product in open environments exposed to atmospheric agents;
- This appliance is designed to be used at altitude lower than 2000m;
- Mount the product near an electrical outlet;
- Use the product only when placed in a recessed compartment, otherwise you risk injury and burns.


### 3 Oven Dimensions

Dimensions in **mm**

**Frontal axonometric view**

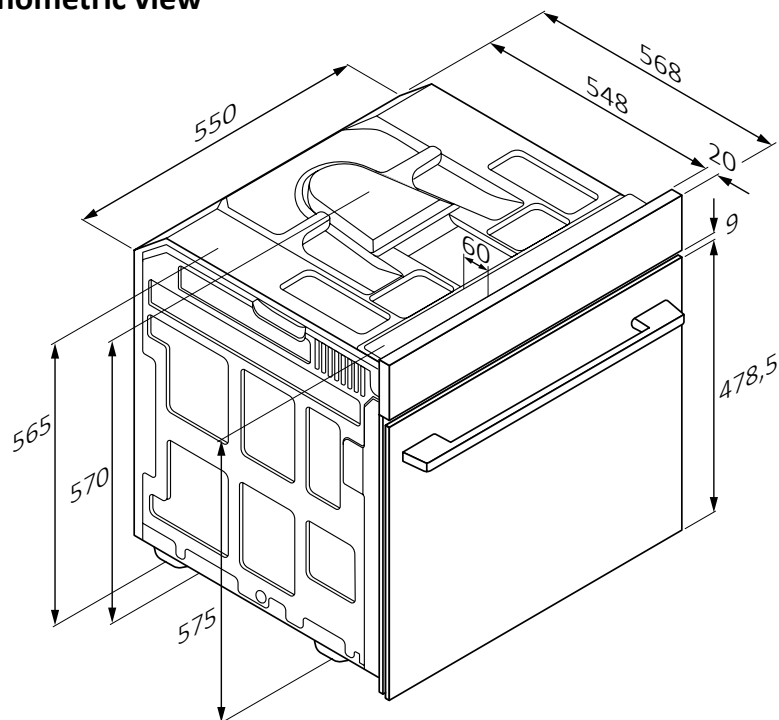


**Back axonometric view**

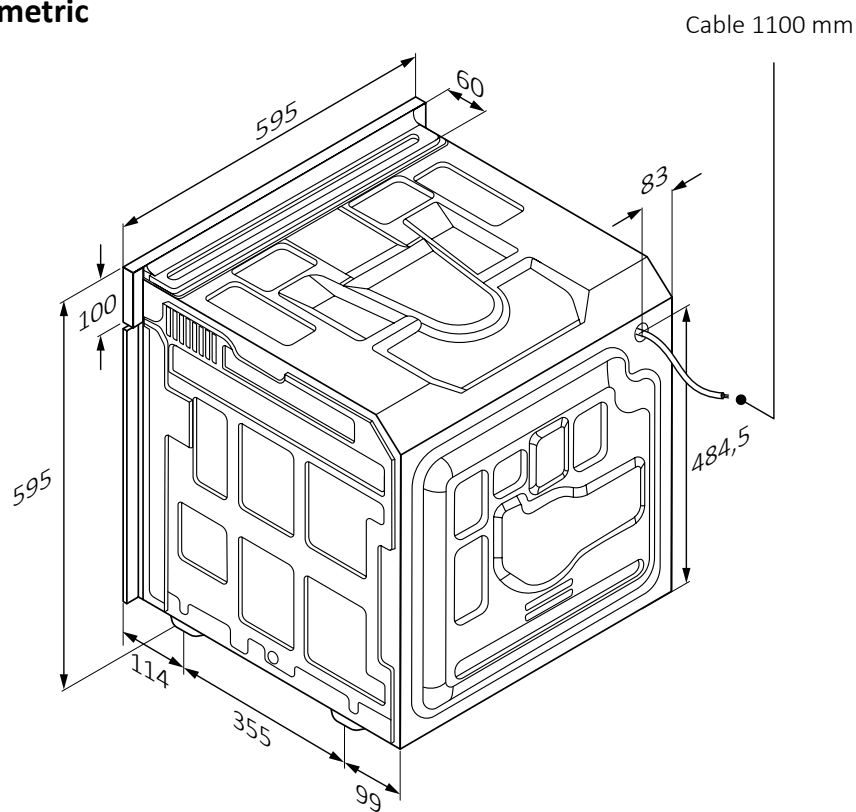


Dimensions in **mm**

**Side view**

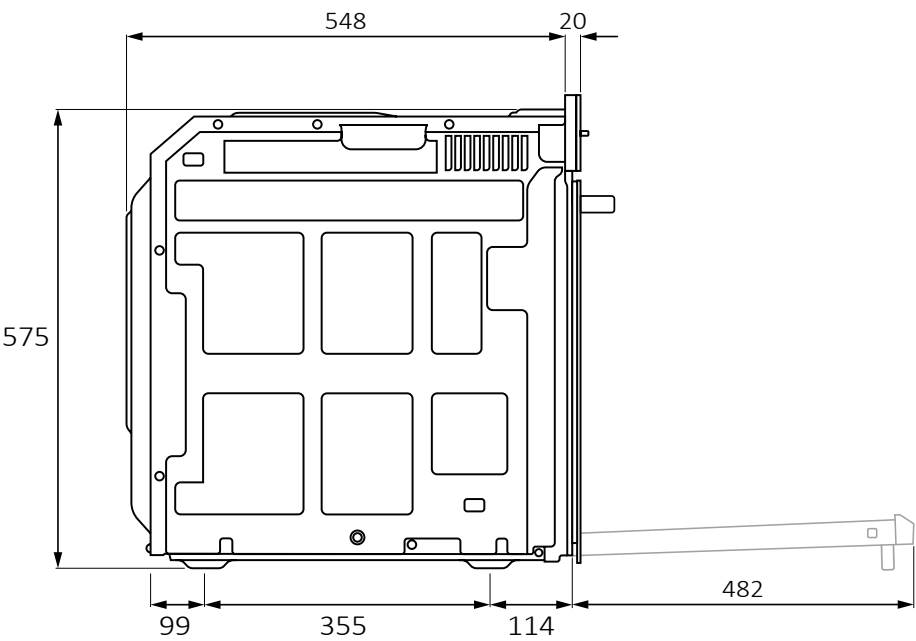

**Back view**

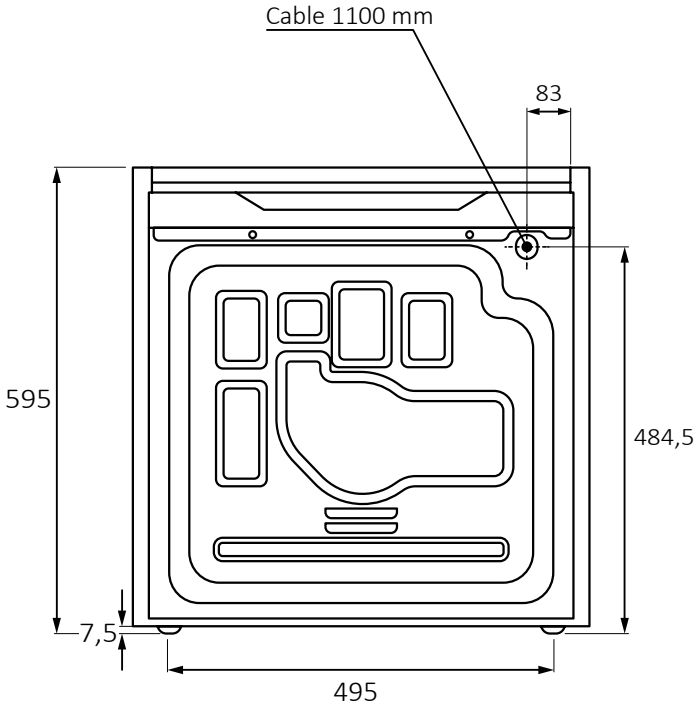

**Product codes**


|               |               |               |               |               |               |               |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| H6 ID23B3HTX  | H6 ID23B4HTB  | H6 ID46G5YTB  | H6 ID66C3HTB  | H6 ID48L5YTB  | H6 ID2P5B3YTX | H6 ID68CSYTB1 |
| H6 ID23B3YTB  | H6 ID25B3LYTB | H6 ID66G5YTB  | H6 ID46C3YTB  | H6 ID48M5HTB  | H6 ID43B3HTB  | H6 ID48M5YTB1 |
| H6 ID25B3LHTX | H6 ID25B4LYTB | H6 ID46G3SHTB | H6 ID66C3YTB  | H6 ID68M5HTB  | H6 ID46C3HTB1 | H6 ID68M5YTB1 |
| H6 ID25G3HTX  | H6 ID46G3HTB  | H6 ID46G3SYTB | H6 ID48C5HTB  | H6 ID48M5YTB  | H6 ID66C3HTB1 | H6 ID48M5HTB1 |
| H6 ID25G3HTB  | H6 ID46G3YTB  | H6 ID46G5SHTB | H6 ID48C5YTB  | H6 ID68M5YTB  | H6 ID46C3YTB1 | H6 ID68M5HTB1 |
| H6 ID25G3YTX  | H6 ID65G3YTB  | H6 ID46G5SYTB | H6 ID68C5YTB  | H6 ID46B3HTB  | H6 ID66C3YTB1 | H6 ID2P5B3YTB |
| H6 ID25G3YTB  | H6 ID66G3HTB  | H6 ID46R5YTB  | H6 ID48C5SYTB | H6 ID2P3T1HTB | H6 ID25G3HTB1 | H6 ID25G5SYTX |
| H6 ID25C3YTX  | H6 ID46G5HTB  | H6 ID46C3HTB  | H6 ID68C5SYTB | H6 ID2P3T1HTX | H6 ID25G3YTB1 | H6 ID66G3SHTB |
| H6 ID23B3HTB  |               |               |               |               |               |               |

## 4 Dimensions of combinable products


### 4.1 Compact oven h45 drop down opening

Dimensions in **mm**

**Frontal axonometric view**

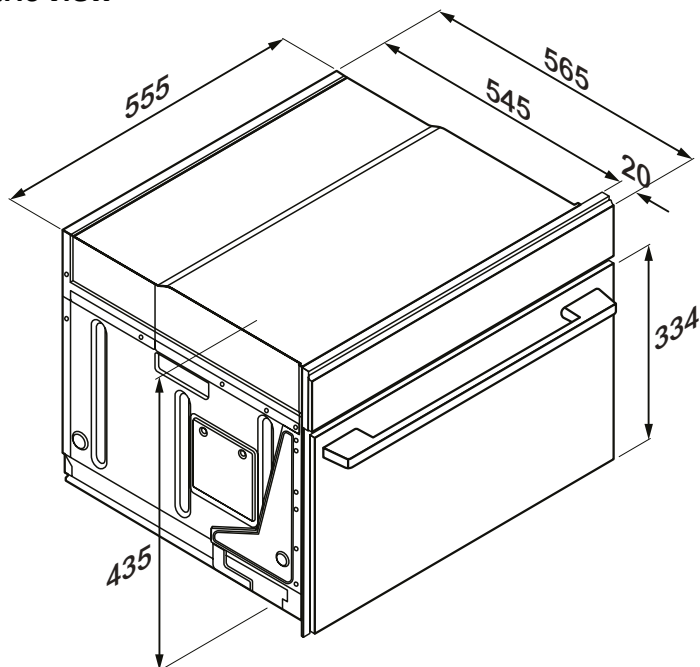


**Back axonometric view**

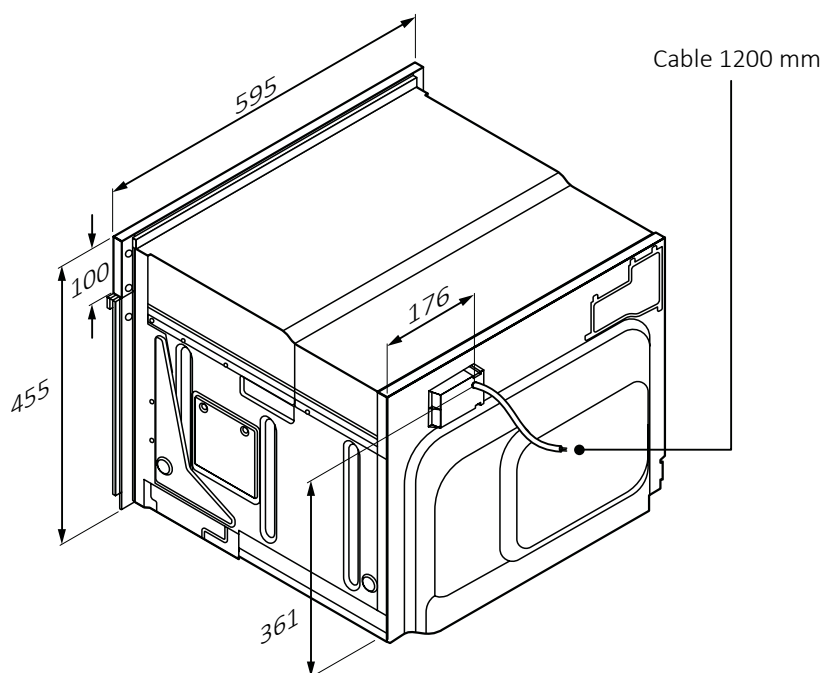


## 4.1 Compact oven h45 drop down opening

Dimensions in **mm**

### Side view

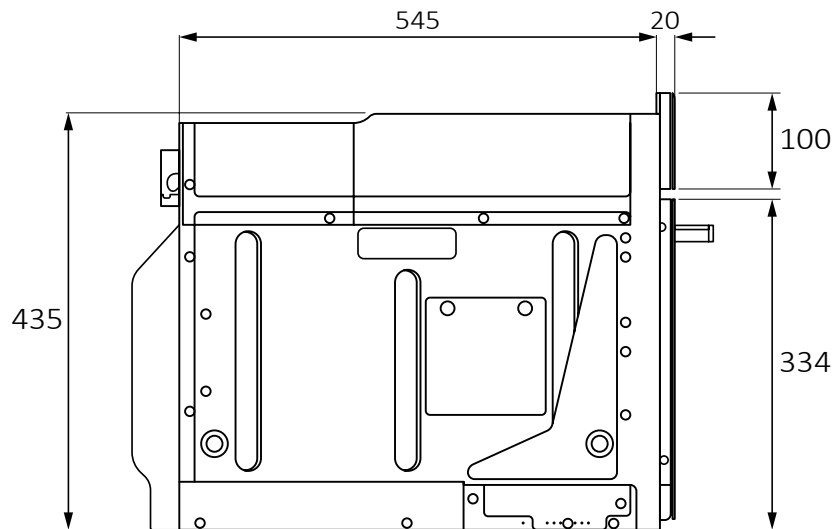

### Back view

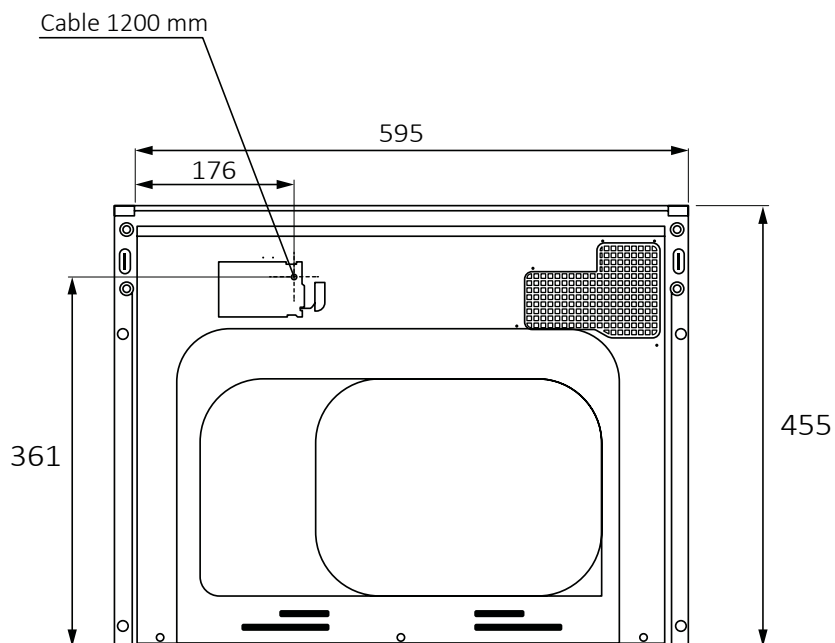

#### Product codes


H4MWID29G6NQB H4MWID49G6NQB H4MWID69G6NQB H4MWID49C6NQB H4MWID69C6NQB H4MWID69P6NQB  
H4MWID49P6NQB

## 4 Dimensions of combinable products


### 4.2 Compact oven h38 drop down opening

Dimensions in **mm**

**Frontal axonometric view**

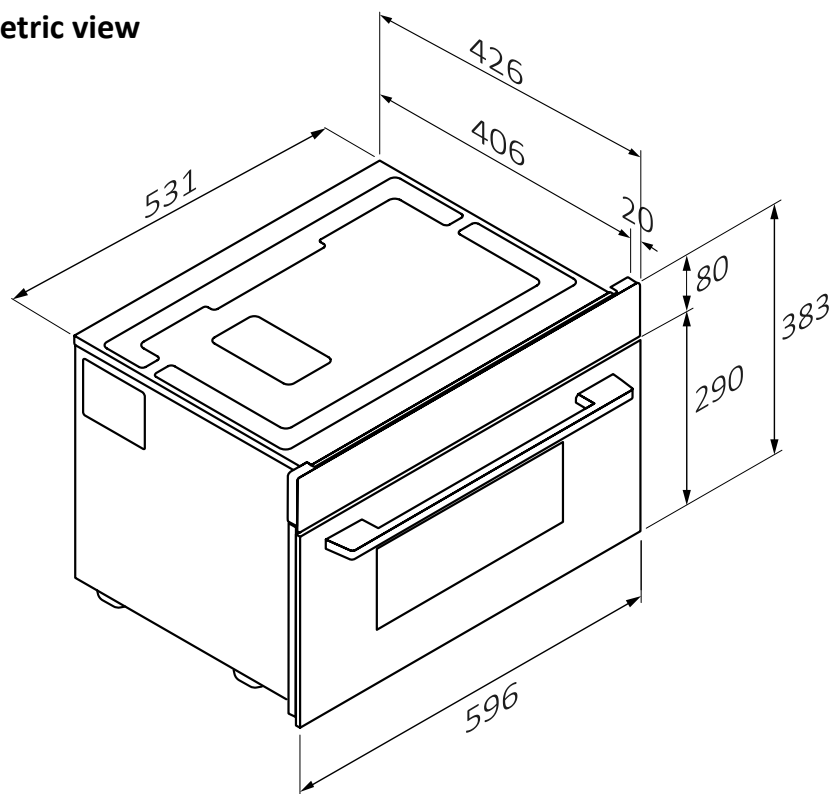


**Back axonometric view**

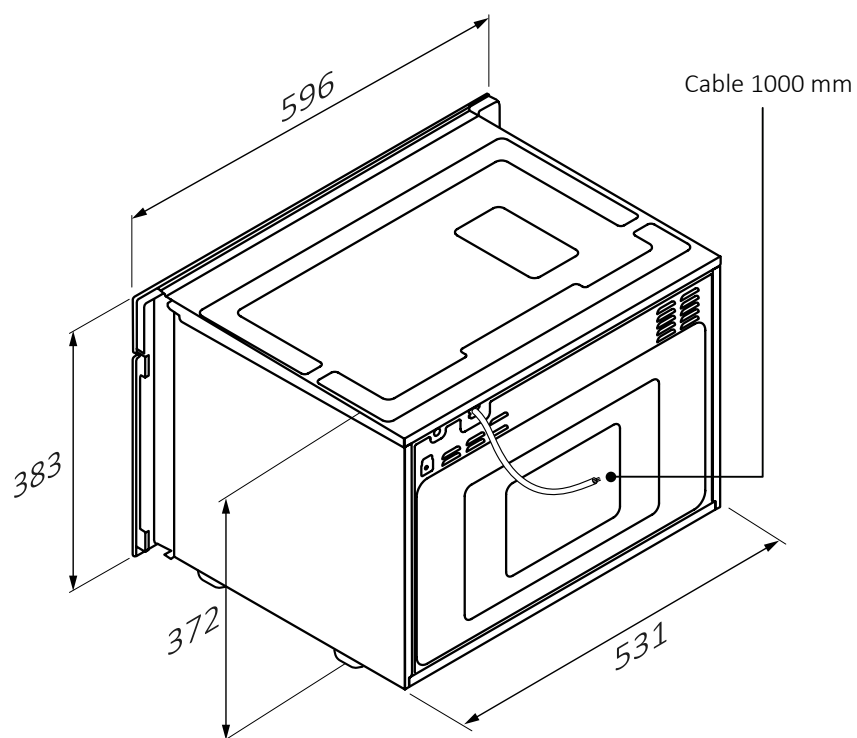


## 4.2 Compact oven h38 drop down opening

Dimensions in **mm**

**Side view**

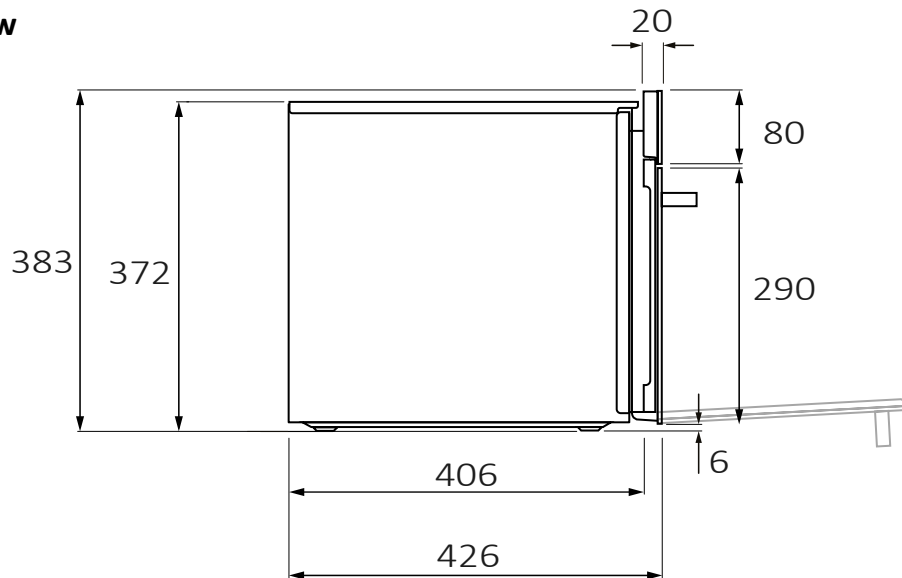

**Back view**

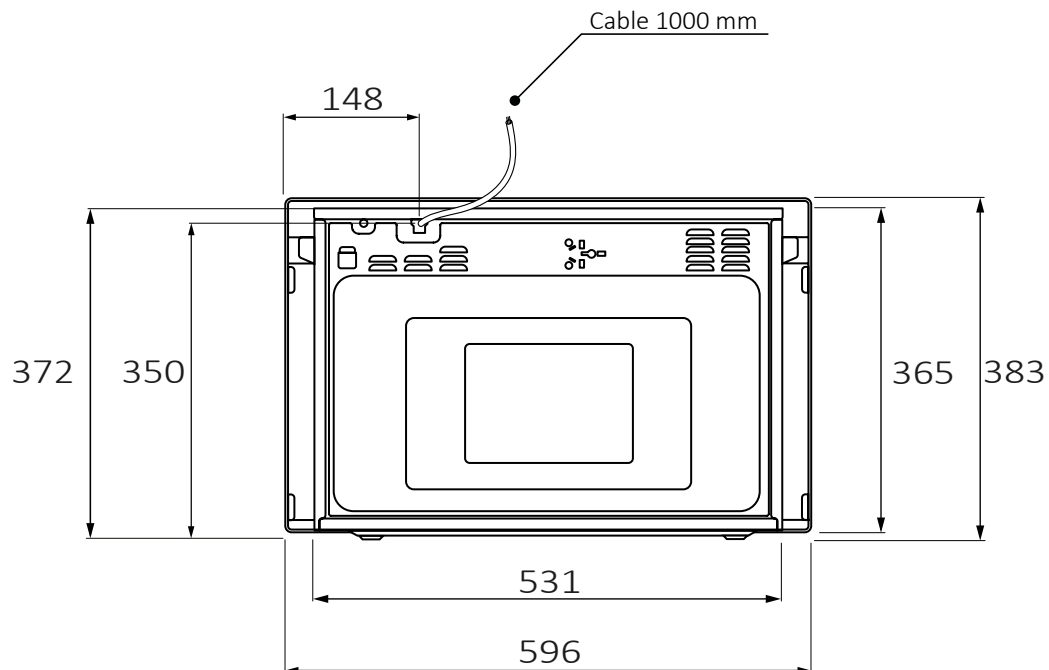

**Product codes**


H38DMWID26NB H38DMWID26NX H38DMWID46NB

## 4 Dimensions of combinable products


### 4.3 Compact oven h38 side wing opening

Dimensions in **mm**

**Frontal axonometric view**

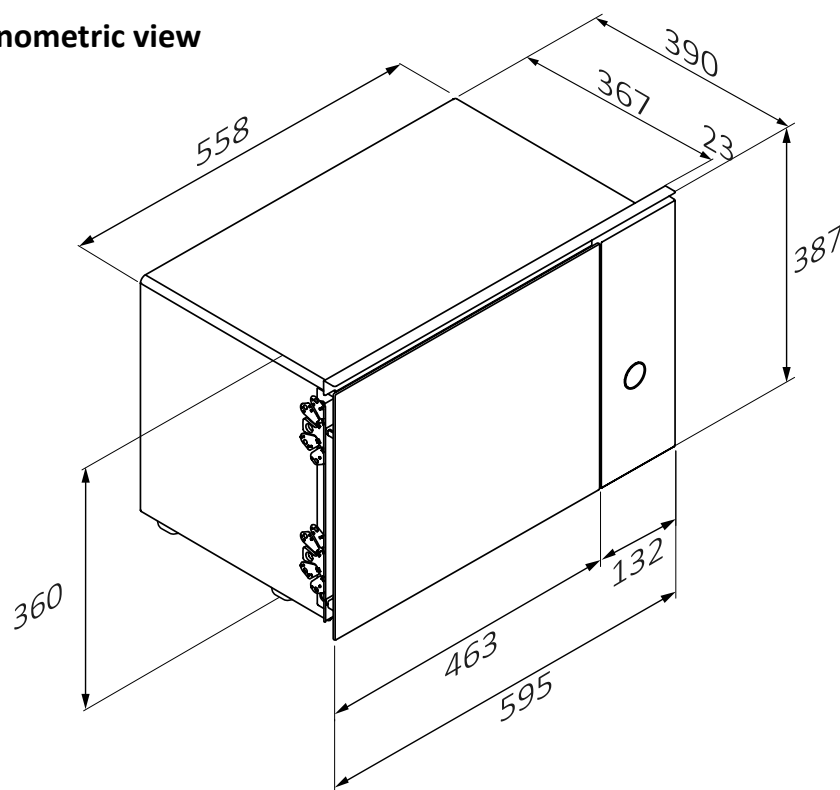


**Back axonometric view**

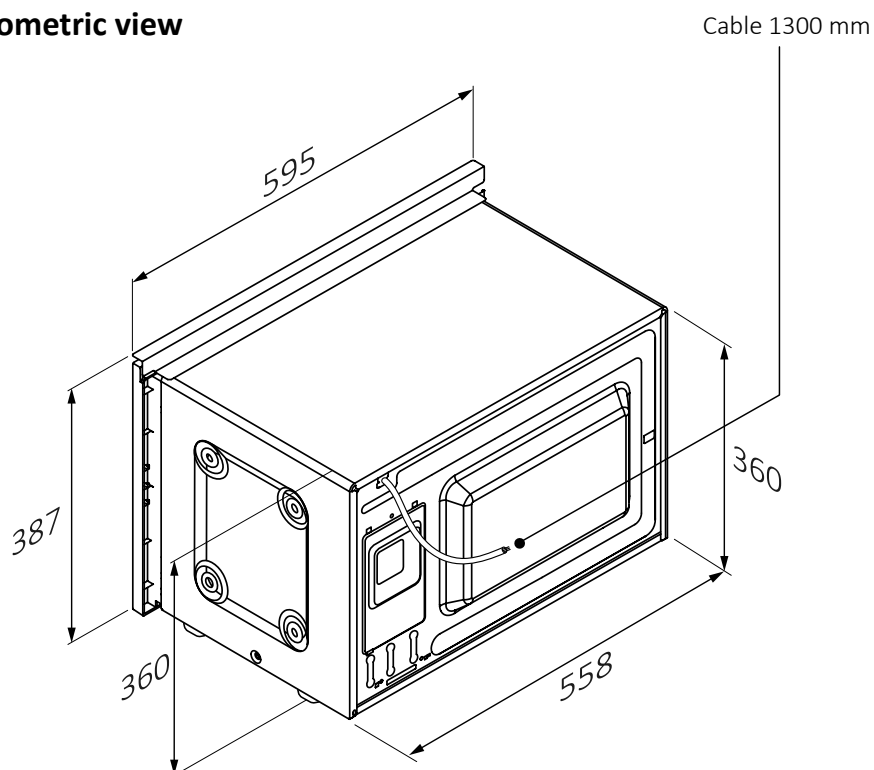


## 4.2 Compact oven h38 side wing opening

Dimensions in **mm**

### Side view

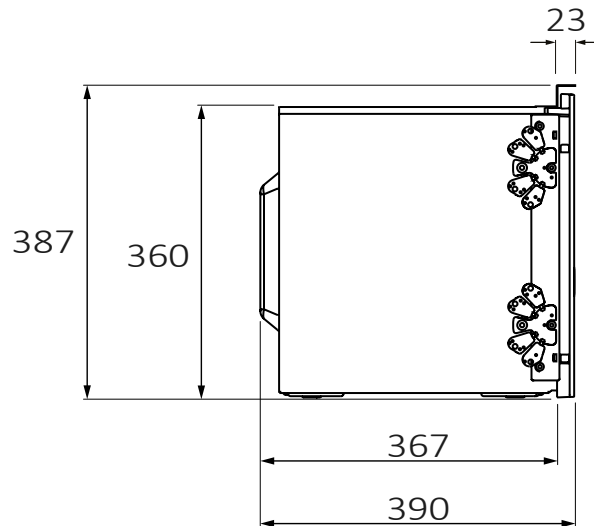

### Back view

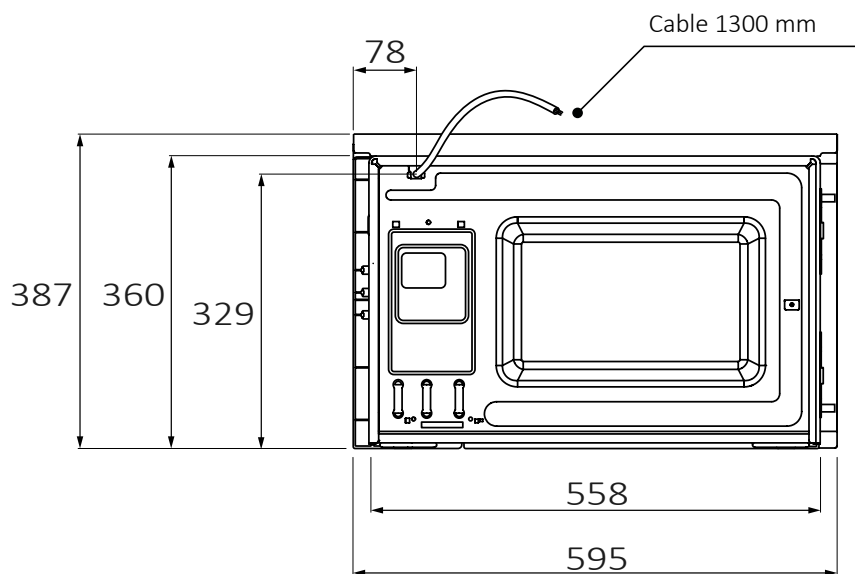

#### Product codes


H38MWID4ID27N H38FMWID627N H38FMWID4ID27N H38FMWID2S7

## 4 Dimensions of combinable products


### 4.4 Warming drawer

Dimensions in **mm**

**Frontal axonometric view**

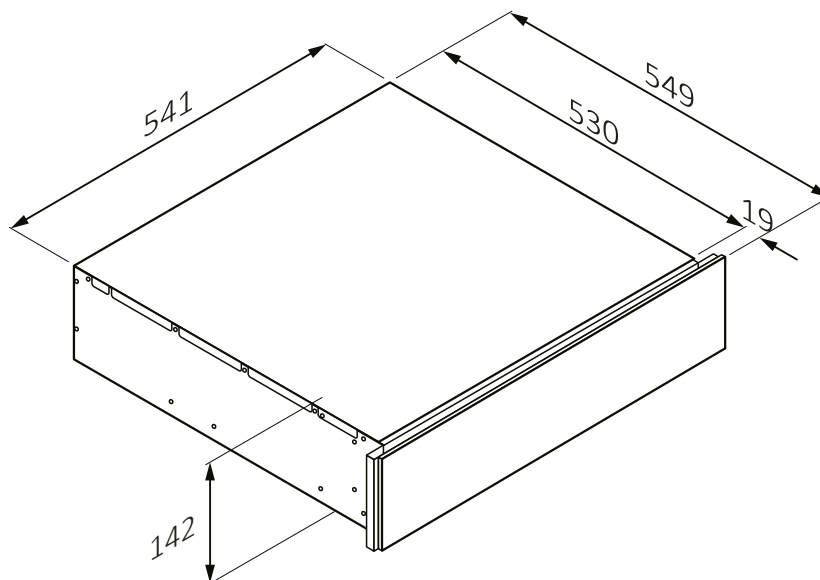


**Back axonometric view**

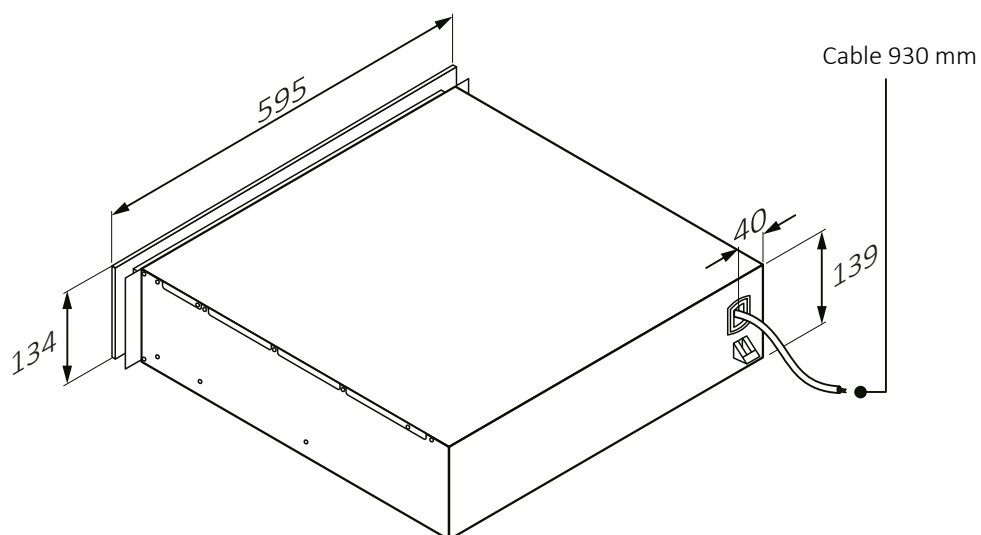


4.3 Warming drawer

Dimensions in mm

Side view

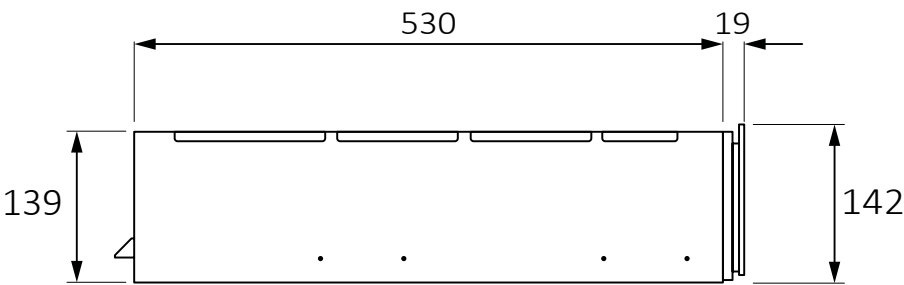

Back view

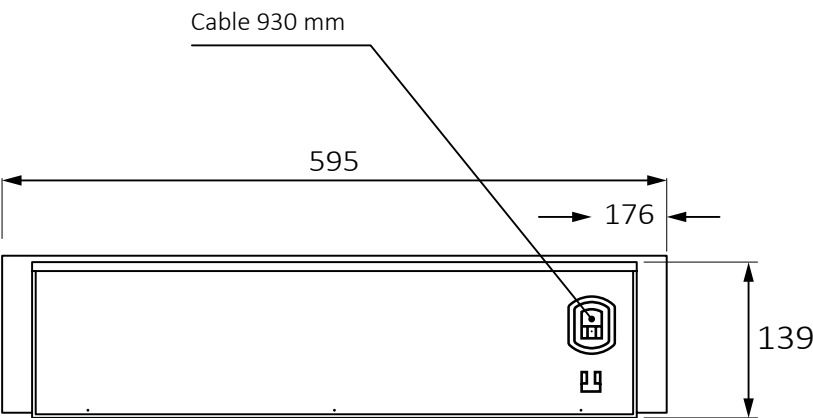

Product codes

HWD14ID6E    HWD14ID4E

## 5 Installation tools

### Tools needed



cutter



gloves



screwdriver

### Tools provided with the product




screws x2

## 6 Furniture and ventilation

### 6.1 Precautions


- Provide the recessed compartment without a back wall;
- Products protrude 20 mm from the cabinet edge;
- For ventilation of the product, follow the instructions in this manual;
- If the product is installed under a cooktop, also refer to the cooktop installation instructions;
- The connection socket must not be within area **A**;
- It is recommended that the cabinet be fixed to the wall to prevent tipping over;

### 6.2 Undertop installation

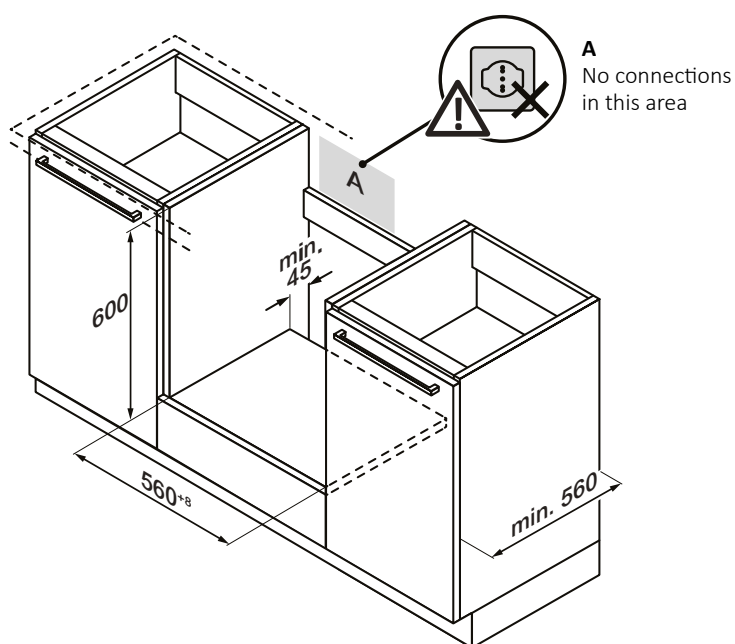

### 6.3 Combination with cooktop


To ensure proper ventilation, also refer to the cooktop installation instructions;

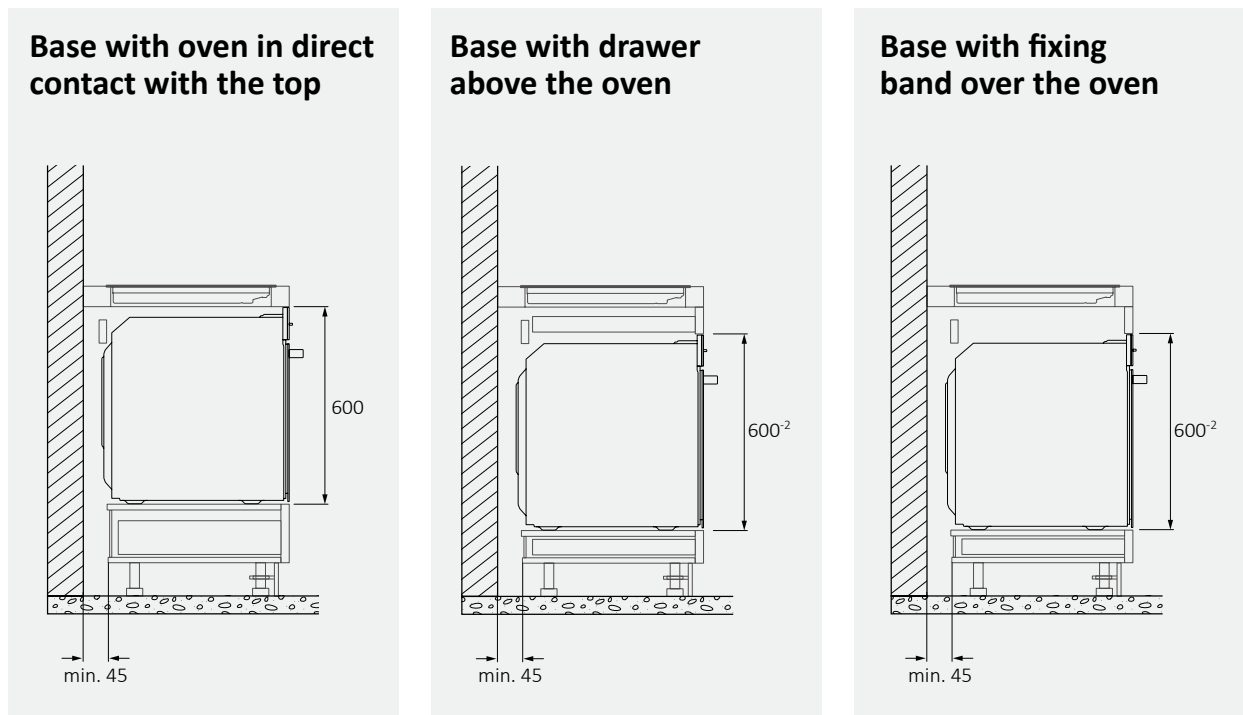

### 6.4 Corner installation

For corner installation, observe the dimensions and flush-installation instructions;


- In order to allow the opening of the door, take into account the minimum dimensions of the corner mounting;
- The **X** measurement depends on the thickness of the cabinet front and handle.

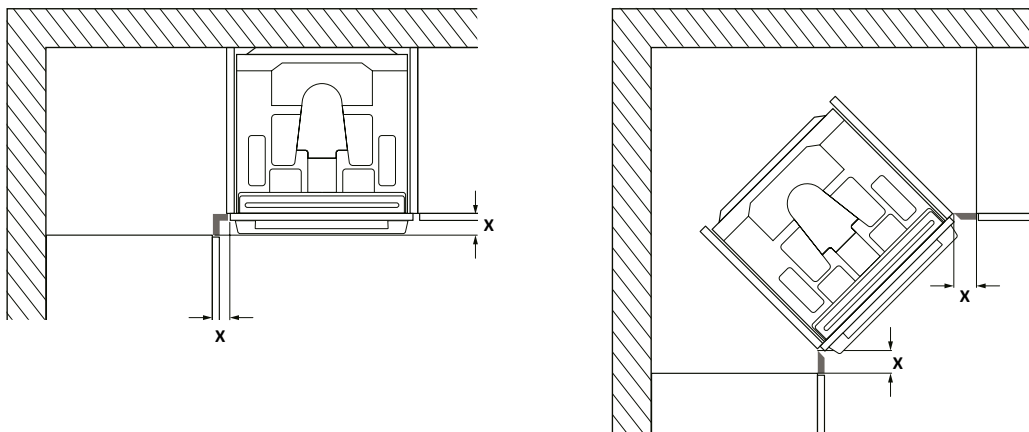

### 6.5 Installation oven in column


For column installation, observe the dimensions and flush-installation instructions;

- A rear slit is needed for ventilation of products;
- Pay attention that the air exchange is in accordance with the drawings below;
- Install products at a height where accessories can be easily picked up.

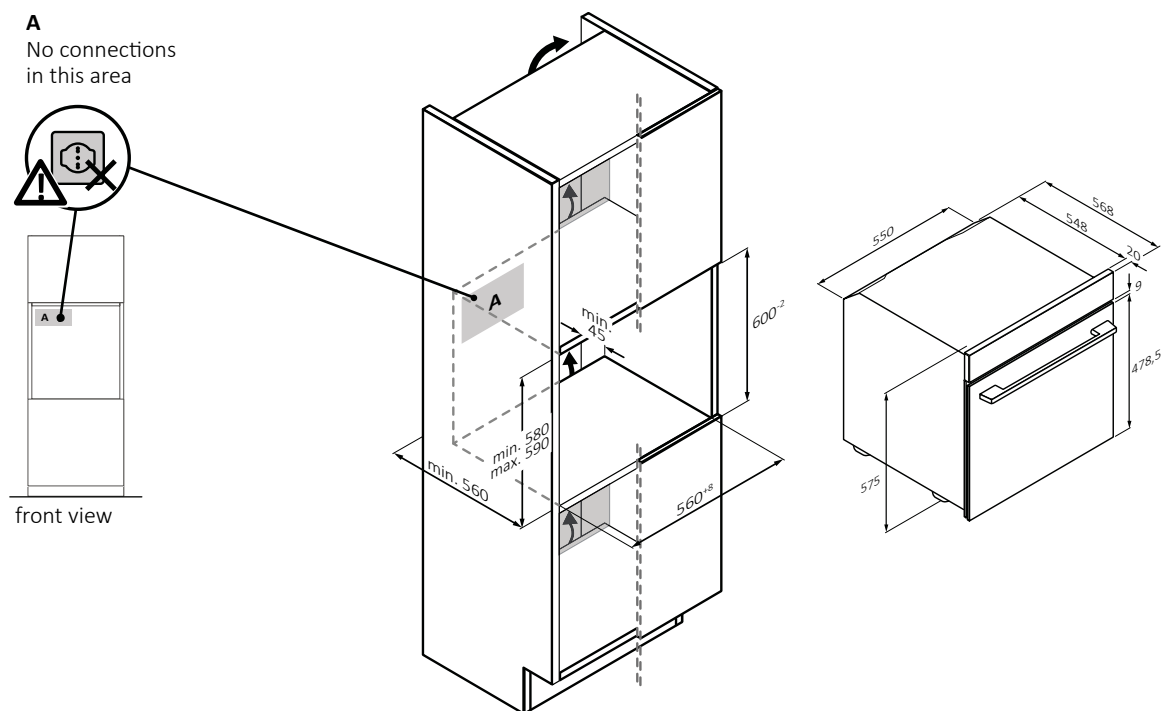


#### Single product

Side view

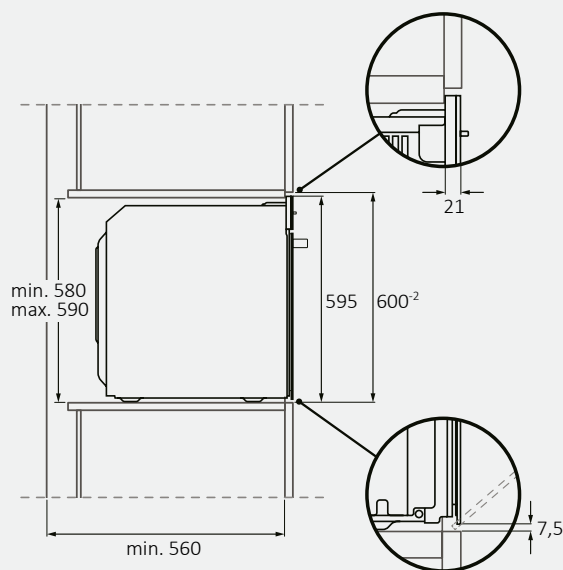


## 6.6 Installation compact oven in column

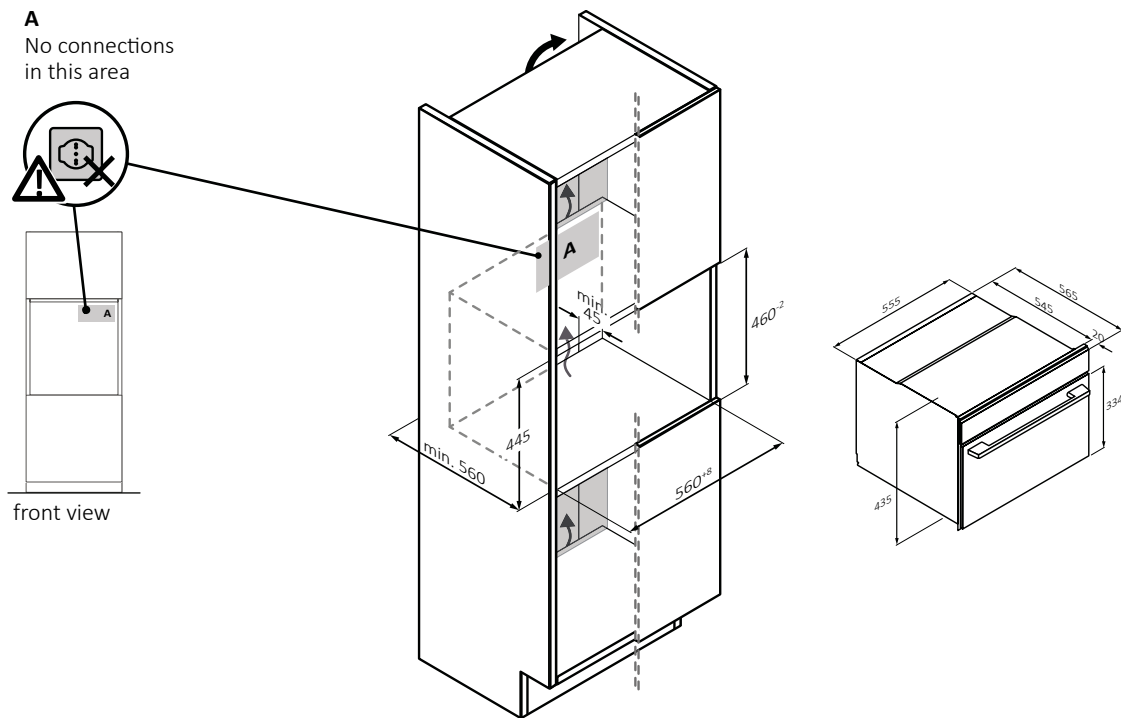


### Single product

Side view

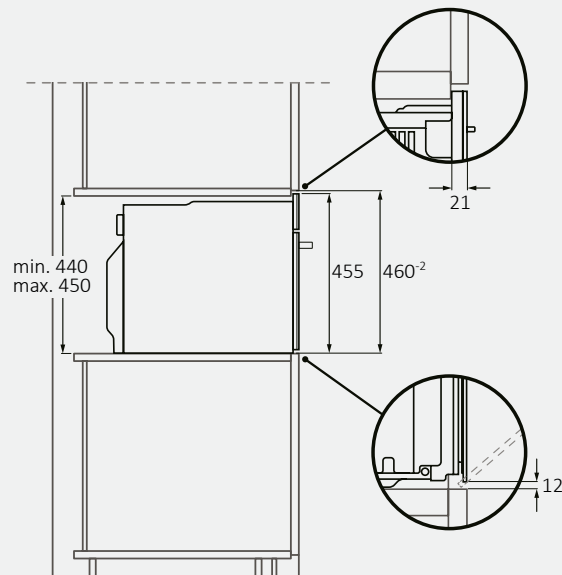


### 6.7 Installation compact oven + warming drawer in column

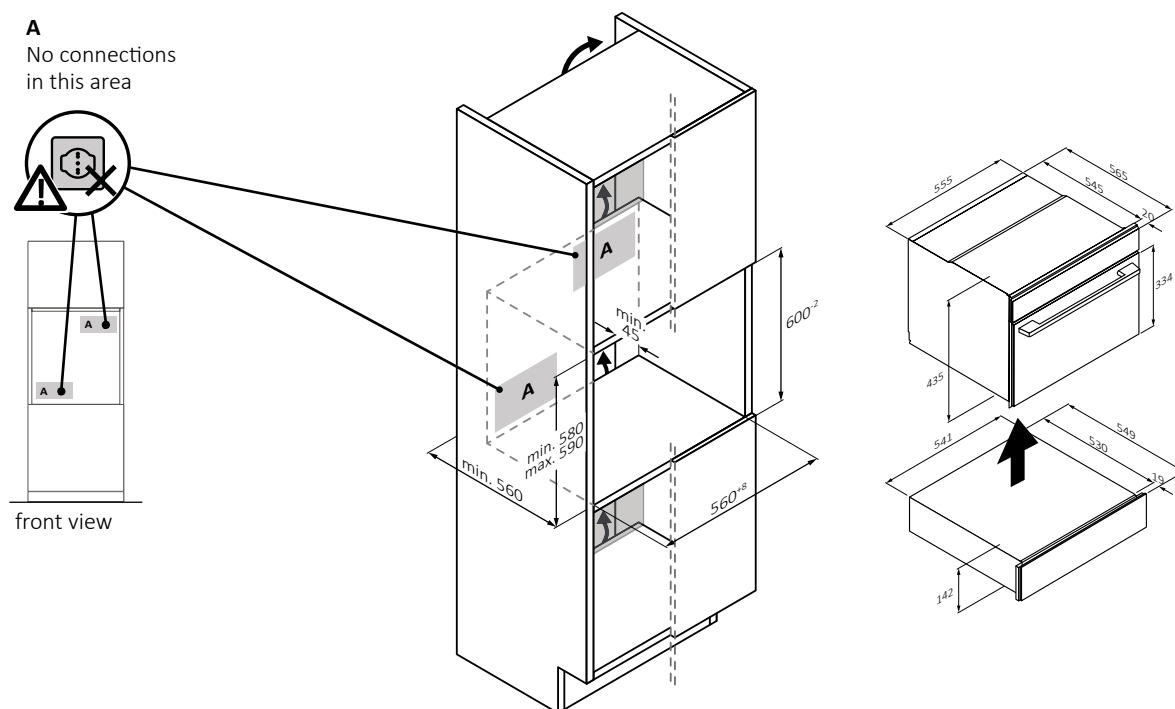

#### Combined products Compact oven + warming drawer


Side view

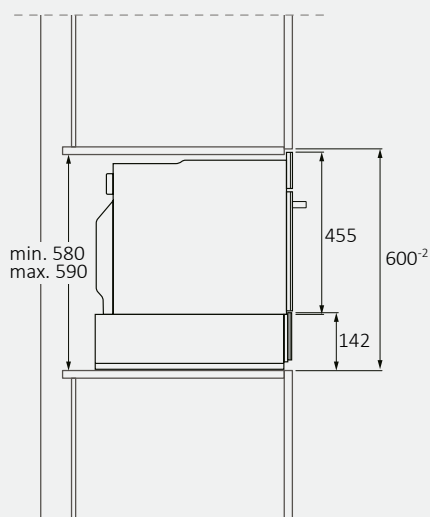


 **Note:** The drawer front protrudes in height. Use caution during installation.

## 6.8 Drawer adjustments

Installation in combination with another appliance: make sure the warming drawer is aligned with the matching appliance.

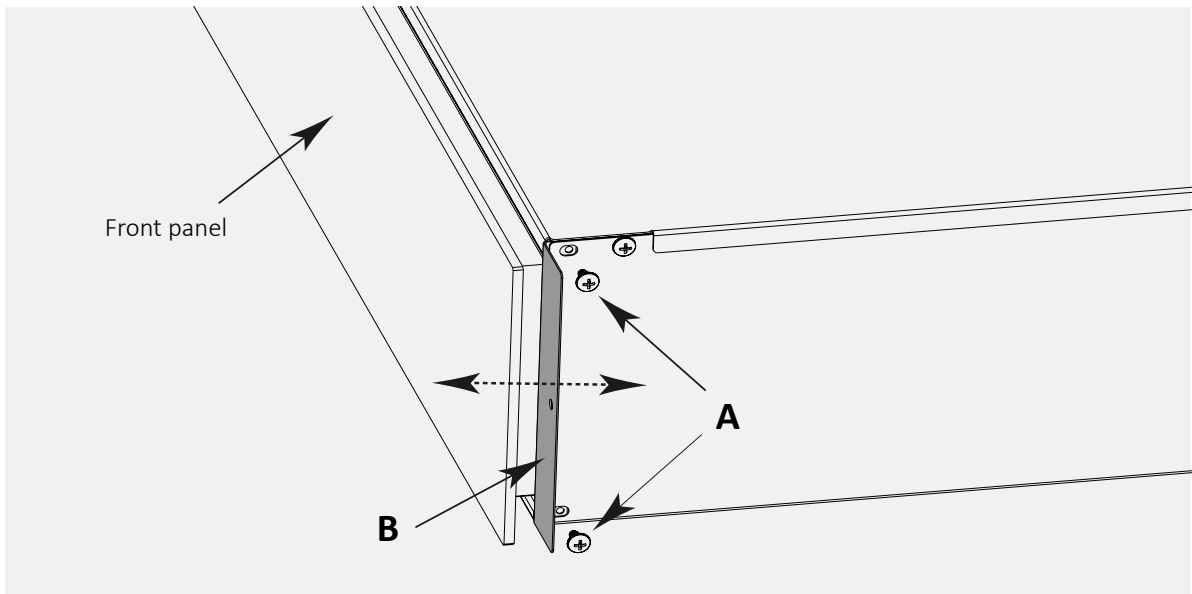


- To adjust the depth of the warming drawer, loosen screws “A” and adjust brackets “B” until the front panel is properly aligned with the matching appliance;
- Retighten screws “A” until fully secured.

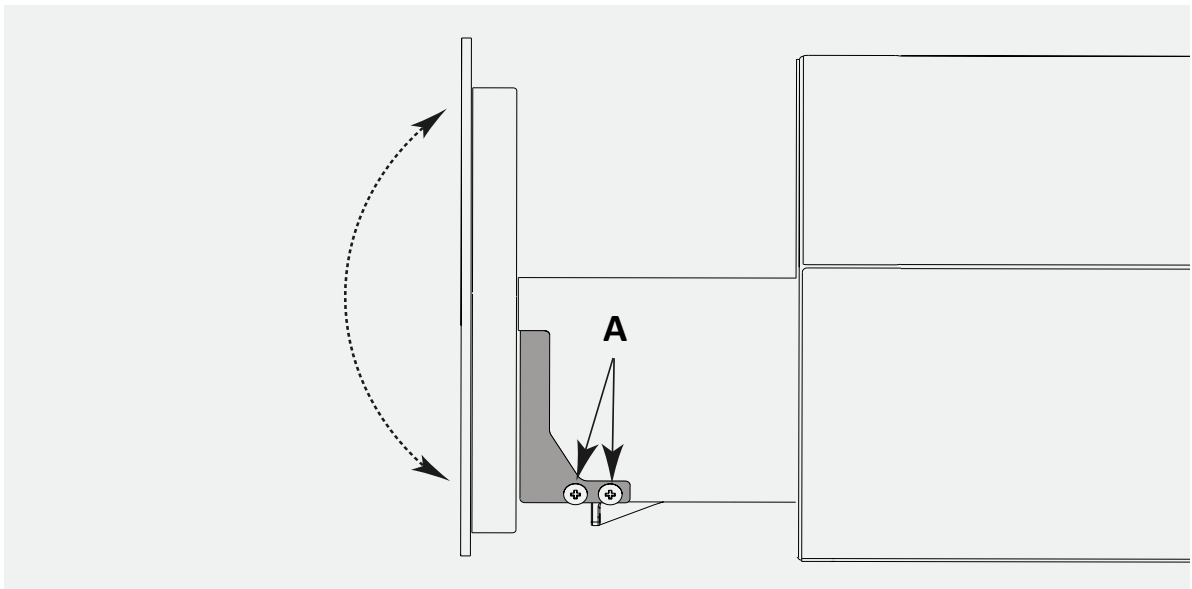


- The angle of the front panel can be adjusted after loosening screws “A”. When the panel is parallel to the cabinet and the front of the matching appliance, tighten screws “A” again until fully secured.

### 6.9 Installation oven + compact oven h45 in column

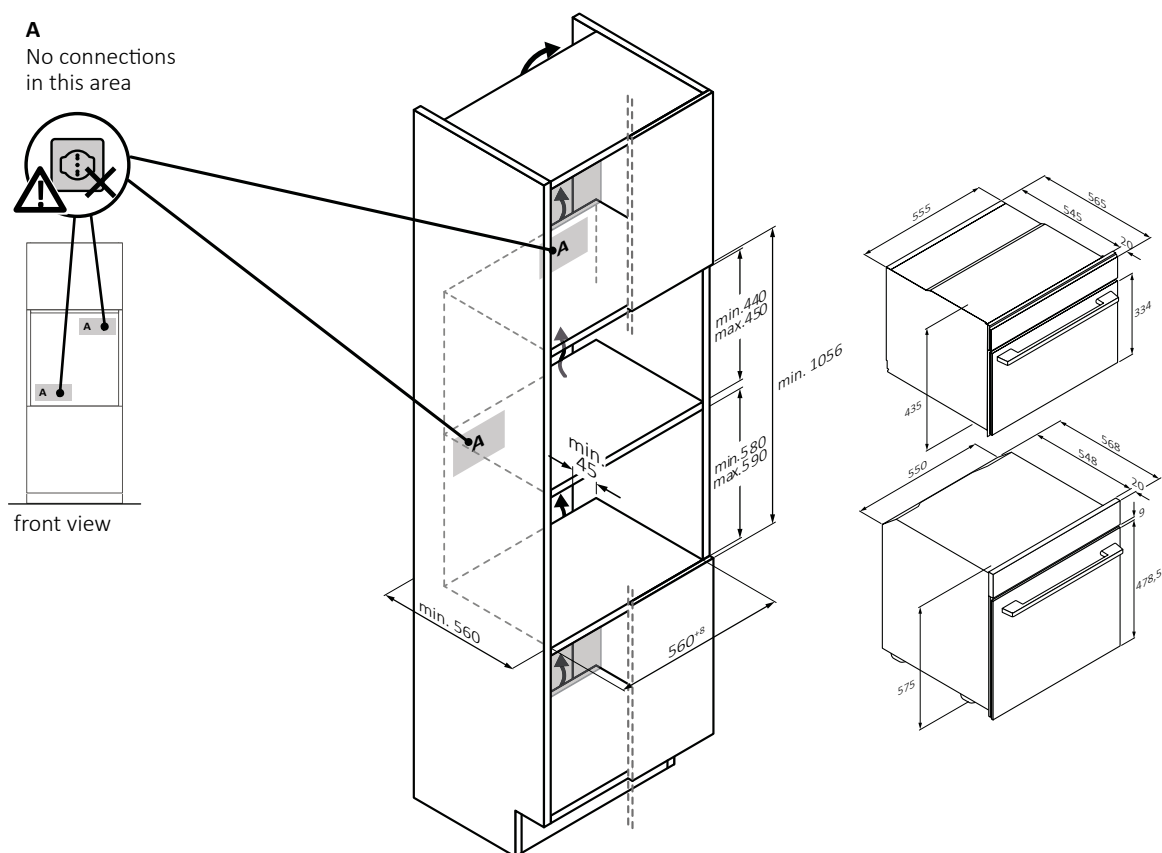

#### Combined products Oven + compact oven h45 side wing opening



Side view

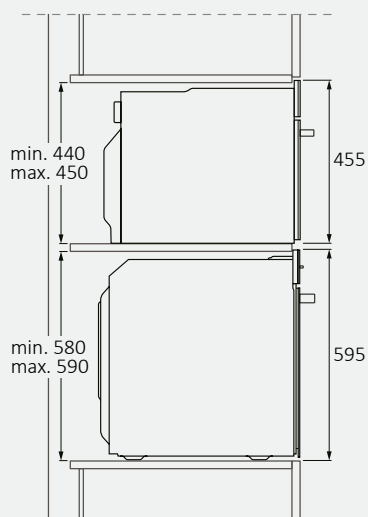



 **Note:** to reduce the gap between machines, we suggest using shims to raise the kiln a few millimeters.

## 6.10 Installation oven + compact oven h38 in column

### Drop down opening in column

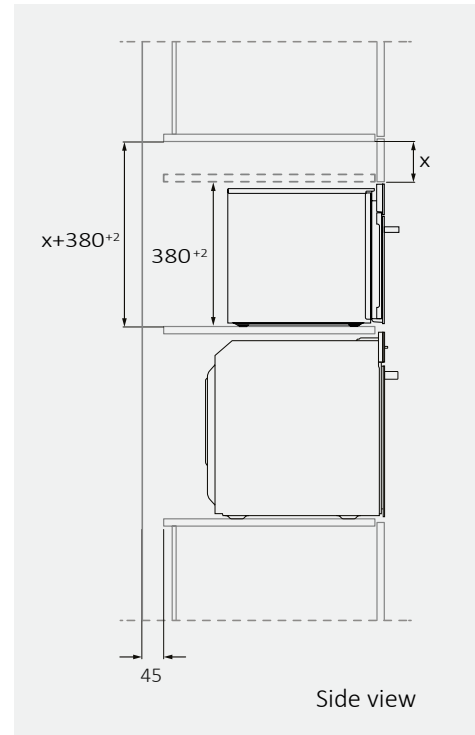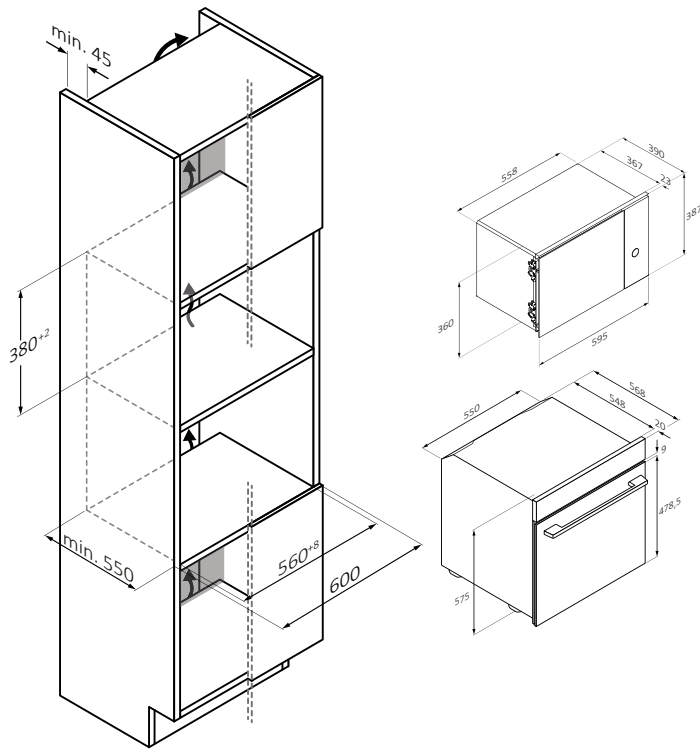

### Side wing opening in column

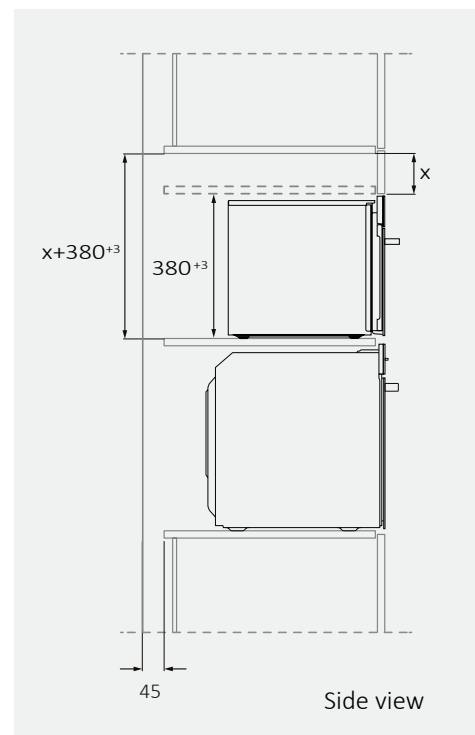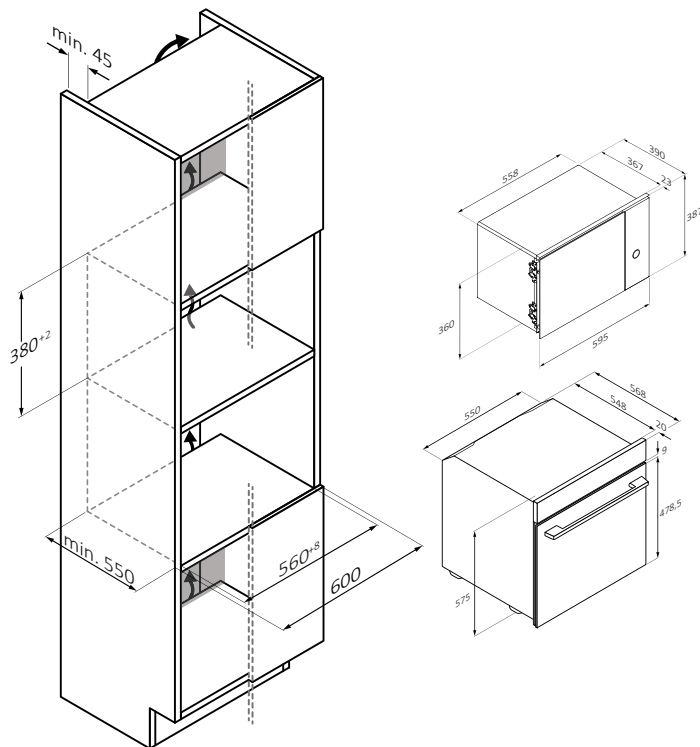

**Note:** to reduce the gap between machines, we suggest using shims to raise the kiln a few millimeters.

### 7.1 Safety warnings

**To carry out the electrical connection of the device safely, observe the following warnings:**

- Any improperly performed repair, installation and maintenance can seriously endanger the user;
- The producer declares that it assumes no liability for direct or indirect damage caused by incorrect installation, maintenance or repair. It is also not liable for damage caused by missing or interrupted grounding pipeline (electric shock);
- Have the oven connected to the power grid only by a qualified technician who knows and complies with local regulations and additional regulations of the local power company;
- The product falls under protection class I and can operate only if it is equipped with a grounding conductor;
- The product must be voltage-free during installation;
- Connect the product using only the supplied cable;
- The product must be connected to a properly made electrical system;
- In case of incorrect installation, tampering with the device and improper connection, the validity of the product warranty will expire;
- If the power cord is damaged, it should be replaced by the manufacturer, a service technician or similarly qualified person to avoid risk. For any repairs, contact customer service only and ask that original spare parts be used;
- For any repairs, contact Customer Service exclusively and request the use of original spare parts;
- Disconnect the product from the power supply before performing any work or maintenance on it;
- To avoid electric shock, make sure the appliance is turned off before replacing the bulb.

 **NOTE:** Because the oven may need servicing, it is advisable to keep another wall outlet available to plug the oven into if it is moved away from the space where it is installed.

## 7.2 Instructions

### Power absorbed

See product data plate.

### Differential circuit breaker (life-saving)

The use of a residual current circuit breaker (earth leakage circuit breaker) with trip current complying with current standards is recommended.

### Separation devices

In the event that it is necessary to use it, the oven must be connected to the power supply via an omnipolar disconnection device that ensures a separation between contacts complying with overvoltage category III. Such a device must withstand the maximum loads connected and comply with current standards.

**⚠ WARNING:** To avoid any danger caused by accidentally resetting the thermal cut-off device, the appliance must not be powered by an external switching device, such as a timer, or be connected to a circuit that is regularly switched on and off. The product is not designed to be operated by an external timer or a separate remote control system.

#### The product can be supplied by the producer:

- A) Unplugged: Direct connection to the mains;**
- B) Without plug: Can be added during installation;**
- C) With plug: Direct connection to the socket;**

### A) Unplugged: Direct connection to the mains

The product is connected directly to the power supply by including an omnipolar switch in the circuit;

The yellow-green ground wire must not be interrupted by the switch;

The omnipolar switch used for connection must be easily accessible when the product is installed;

The connection to the power supply must be made taking into account the polarity of the oven and the power source.

Connect the cables of the network connection respecting the color allocation:

- Green-yellow = ground;
- Blue = neutral;
- Brown = phase.

### B) Without plug: Can be added during installation

 **NOTE:** The appliance can only be connected to a grounded outlet installed according to current standards. If you do not wish to add the plug, follow step A.

#### If you want to add the plug:

- A plug suitable for the loads indicated on the product and complying with current standards must be applied;
- Insert the plug into the grounded outlet. If the product is recessed, the plug of the power cord must be freely accessible after installation. If free access to the plug is not possible, an omnipolar separation device must be installed in the fixed electrical system in accordance with the installation standards;
- The yellow-green ground wire must not be interrupted by the switch;
- The omnipolar switch used for connection must be easily accessible when the product is installed.

### C) With plug: Direct connection to the socket

The product can only be connected to a grounded outlet.

- Insert the plug into the grounded outlet. If the product is recessed, the plug of the power cord must be freely accessible. If free access to the plug is not possible, an omnipolar separation device must be installed in the fixed electrical system in accordance with the installation standards;
- The yellow-green ground wire must not be interrupted by the switch;
- The omnipolar switch used for connection must be easily accessible when the equipment is installed;
- The socket must be suitable for the load indicated on the nameplate and must have the ground contact connected and working;
- In case of incompatibility between the socket and the plug of the appliance, ask a qualified electrician to replace the socket with one of a suitable type. The plug and socket must comply with the standards in force in the country of installation;
- Should the product be supplied with a polarized plug, it should be connected only to a polarized outlet.

### Replacing the power cord

- Do not replace the cable yourself. Contact the authorized service center.

### 7.3 Other advice

The use of any household appliance requires adherence to certain basic rules:

- Do not pull the power cord to disconnect the appliance from the power supply;
- Do not touch the appliance with wet or damp hands or feet;
- In general, the use of adapters, power strips or extension cords is discouraged;
- In case of malfunction and/or drop in performance, turn off the appliance and do not tamper with it.


### 8.1 Important warnings

- For safety reasons, the product should be used only when recessed;
- In order to properly work, the product needs a sufficient amount of fresh air flowing in;
- Make sure that the intermediate shelf on which the product rests does not touch the wall;
- The surfaces in the recessed compartment are resistant to the temperatures required by EN 60335;
- If installing the product below a cooktop, follow the instructions provided by the cooktop manufacturer;

### 8.2 Fixing to the cabinet


- Insert the product all the way in and center it;
- Secure the product with the screws;
- Cover the screws with the caps.

#### Column with handle

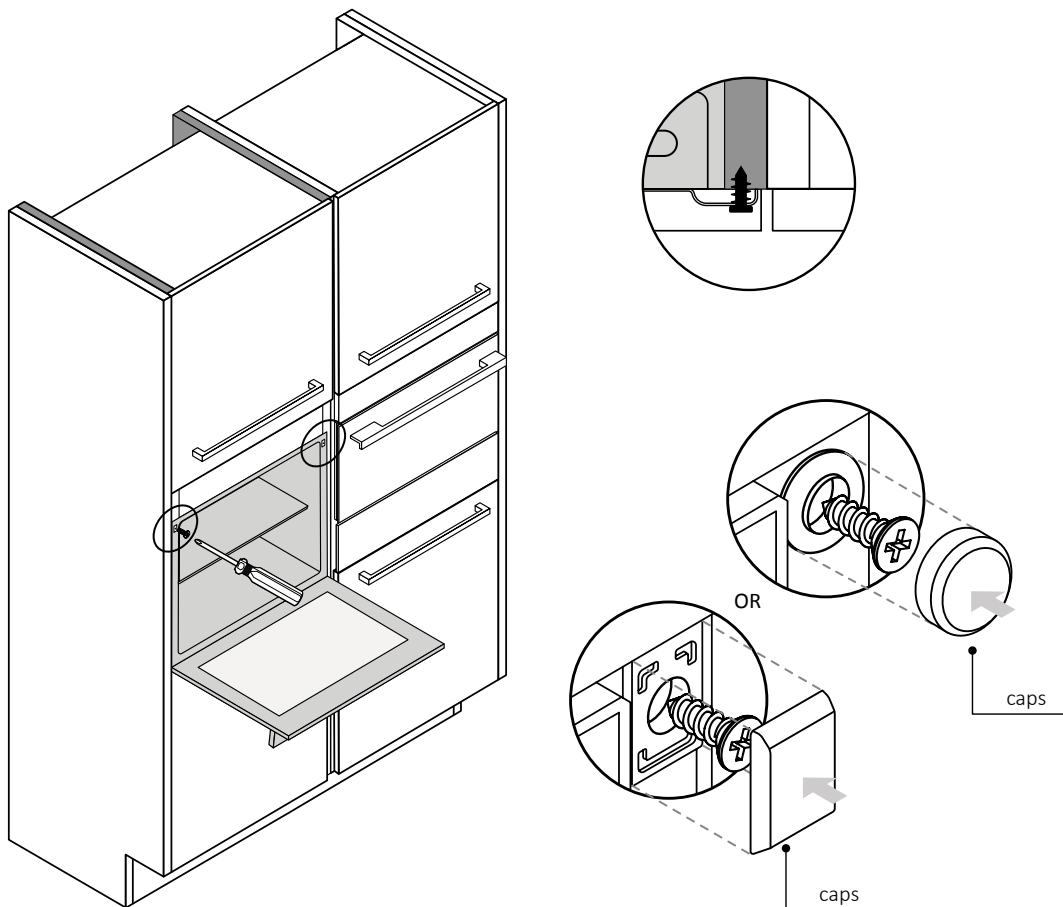

**In case of kitchens with integrated vertical handle (vertical groove):**

- Apply a suitable piece of filler to cover any sharp edges and ensure secure mounting;
- Pre-drill aluminum profiles to make a screw fitting;
- Secure the product with suitable screw (not provided);

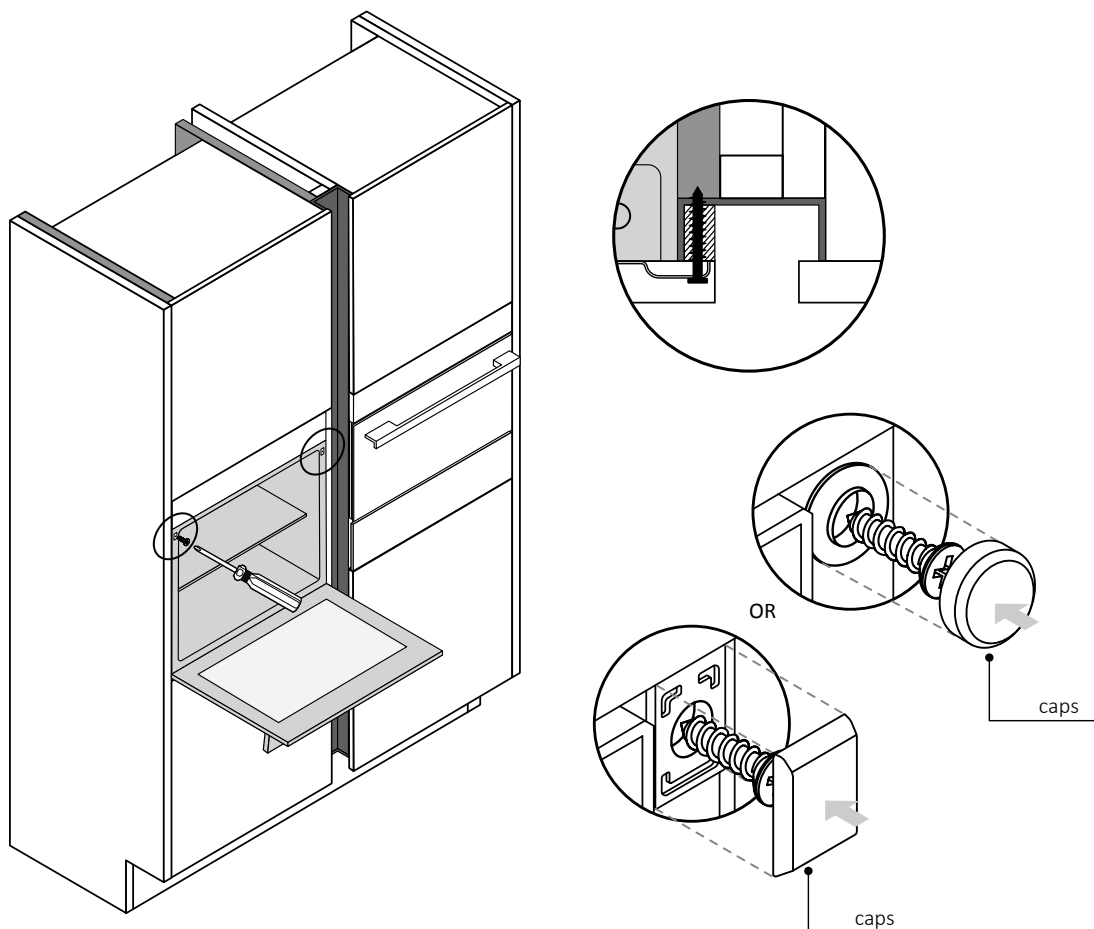**Column with aluminum profile**

### 8.3 Installation step by step

The following pictures show the steps of installing the product in a column.

You can view the product installation video  
by scanning the Qr Code




or by clicking this [link](#)




**1**

Place the product next to the cabinet for embedding;

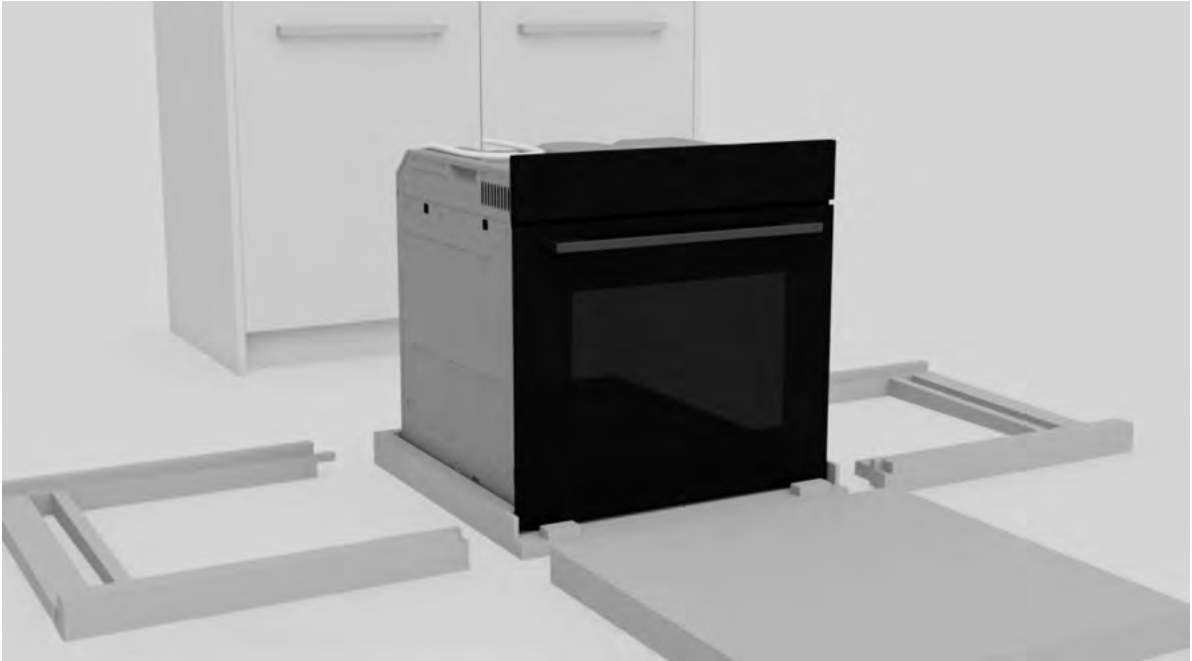
**2**

Remove the packaging using a box cutter, making sure not to damage the product;

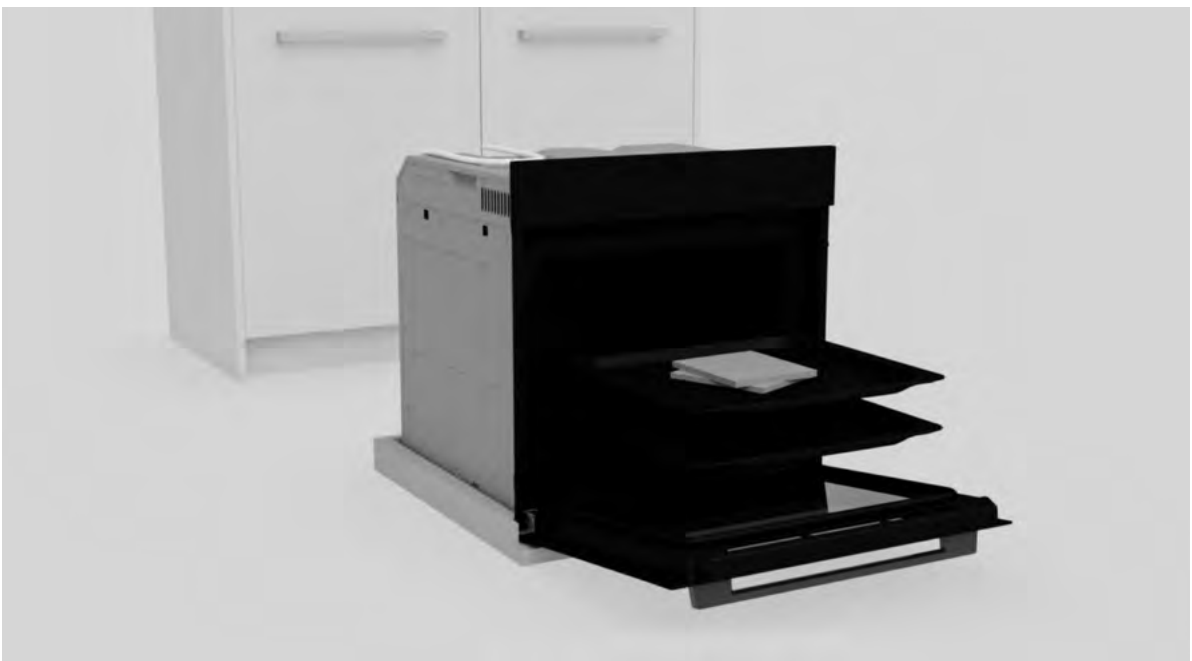**3**

Remove all accessories in the oven and close the door again;

## 8 Instructions for oven installation

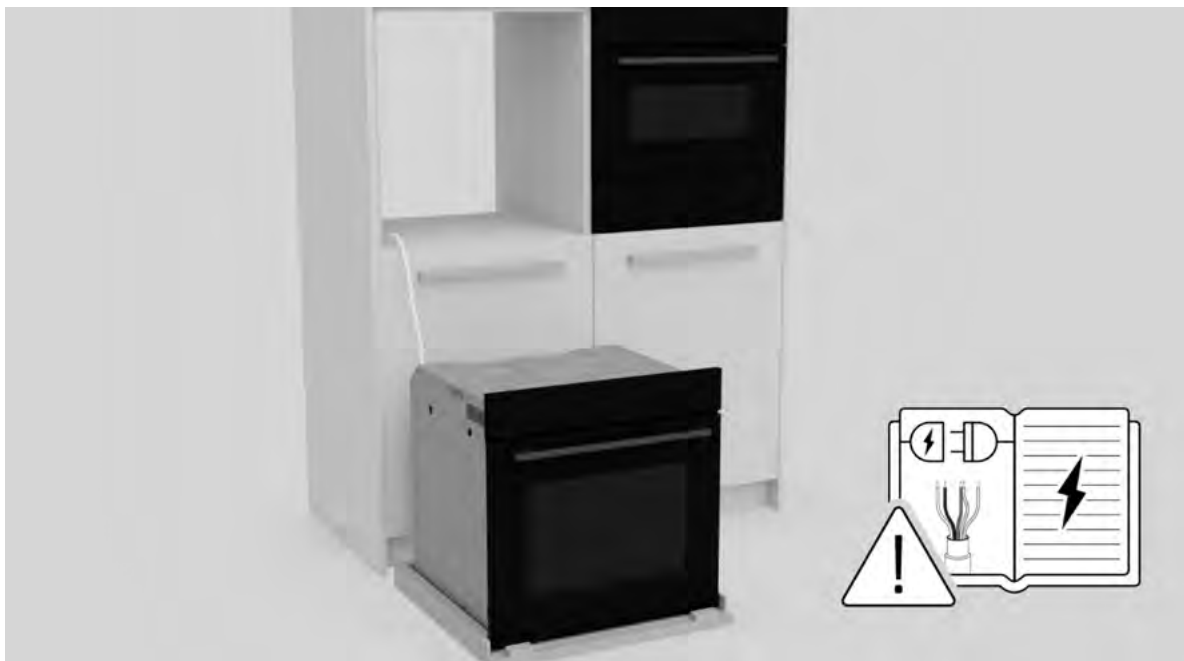

**4**

Position the product close to the cabinet for recessing. After consulting the installation manual, proceed with the electrical connections;



**5**

Lift the product by the side handles using gloves. Do not lift by door handle;

**6**

Insert the product into the recessed compartment;

**7**

Open the door to secure the product to the cabinet. Screw the product to the top ends; cover the screws with the caps provided.

## 9 Delivery to the user

---

At the end of installation:

- Inform the user about essential functions;
- Inform the user about all aspects relevant to safe use and handling;
- Deliver accessories and instructions for use and assembly to the user to be kept with care.

After installation is complete, remove the protective film, tape, and all other packing materials and remove the supplied accessories from inside the oven.

**⚠ WARNING:** The product requires adequate ventilation for normal operation. Do not obstruct the ventilation openings for any reason.

**📄 NOTE:** The actual appearance of the oven depends on the model chosen.

## 10 First startup

---


When the product is preheated for the first time, slight odors and smoke may form when the door is opened. When the product is turned on for the first time, the following settings can be made, if available:

- Set time;
- Select the language;
- Set brightness and volume;
- Set amperage;
- For more information, see the product's user manual.

## 11 Disassembling the product

---


- Disconnect the product from the power supply;
- Unscrew the fixing screws;
- Lift the product slightly and pull it out completely;
- This product will not damage the cabinet, which can also be used with a new appliance.

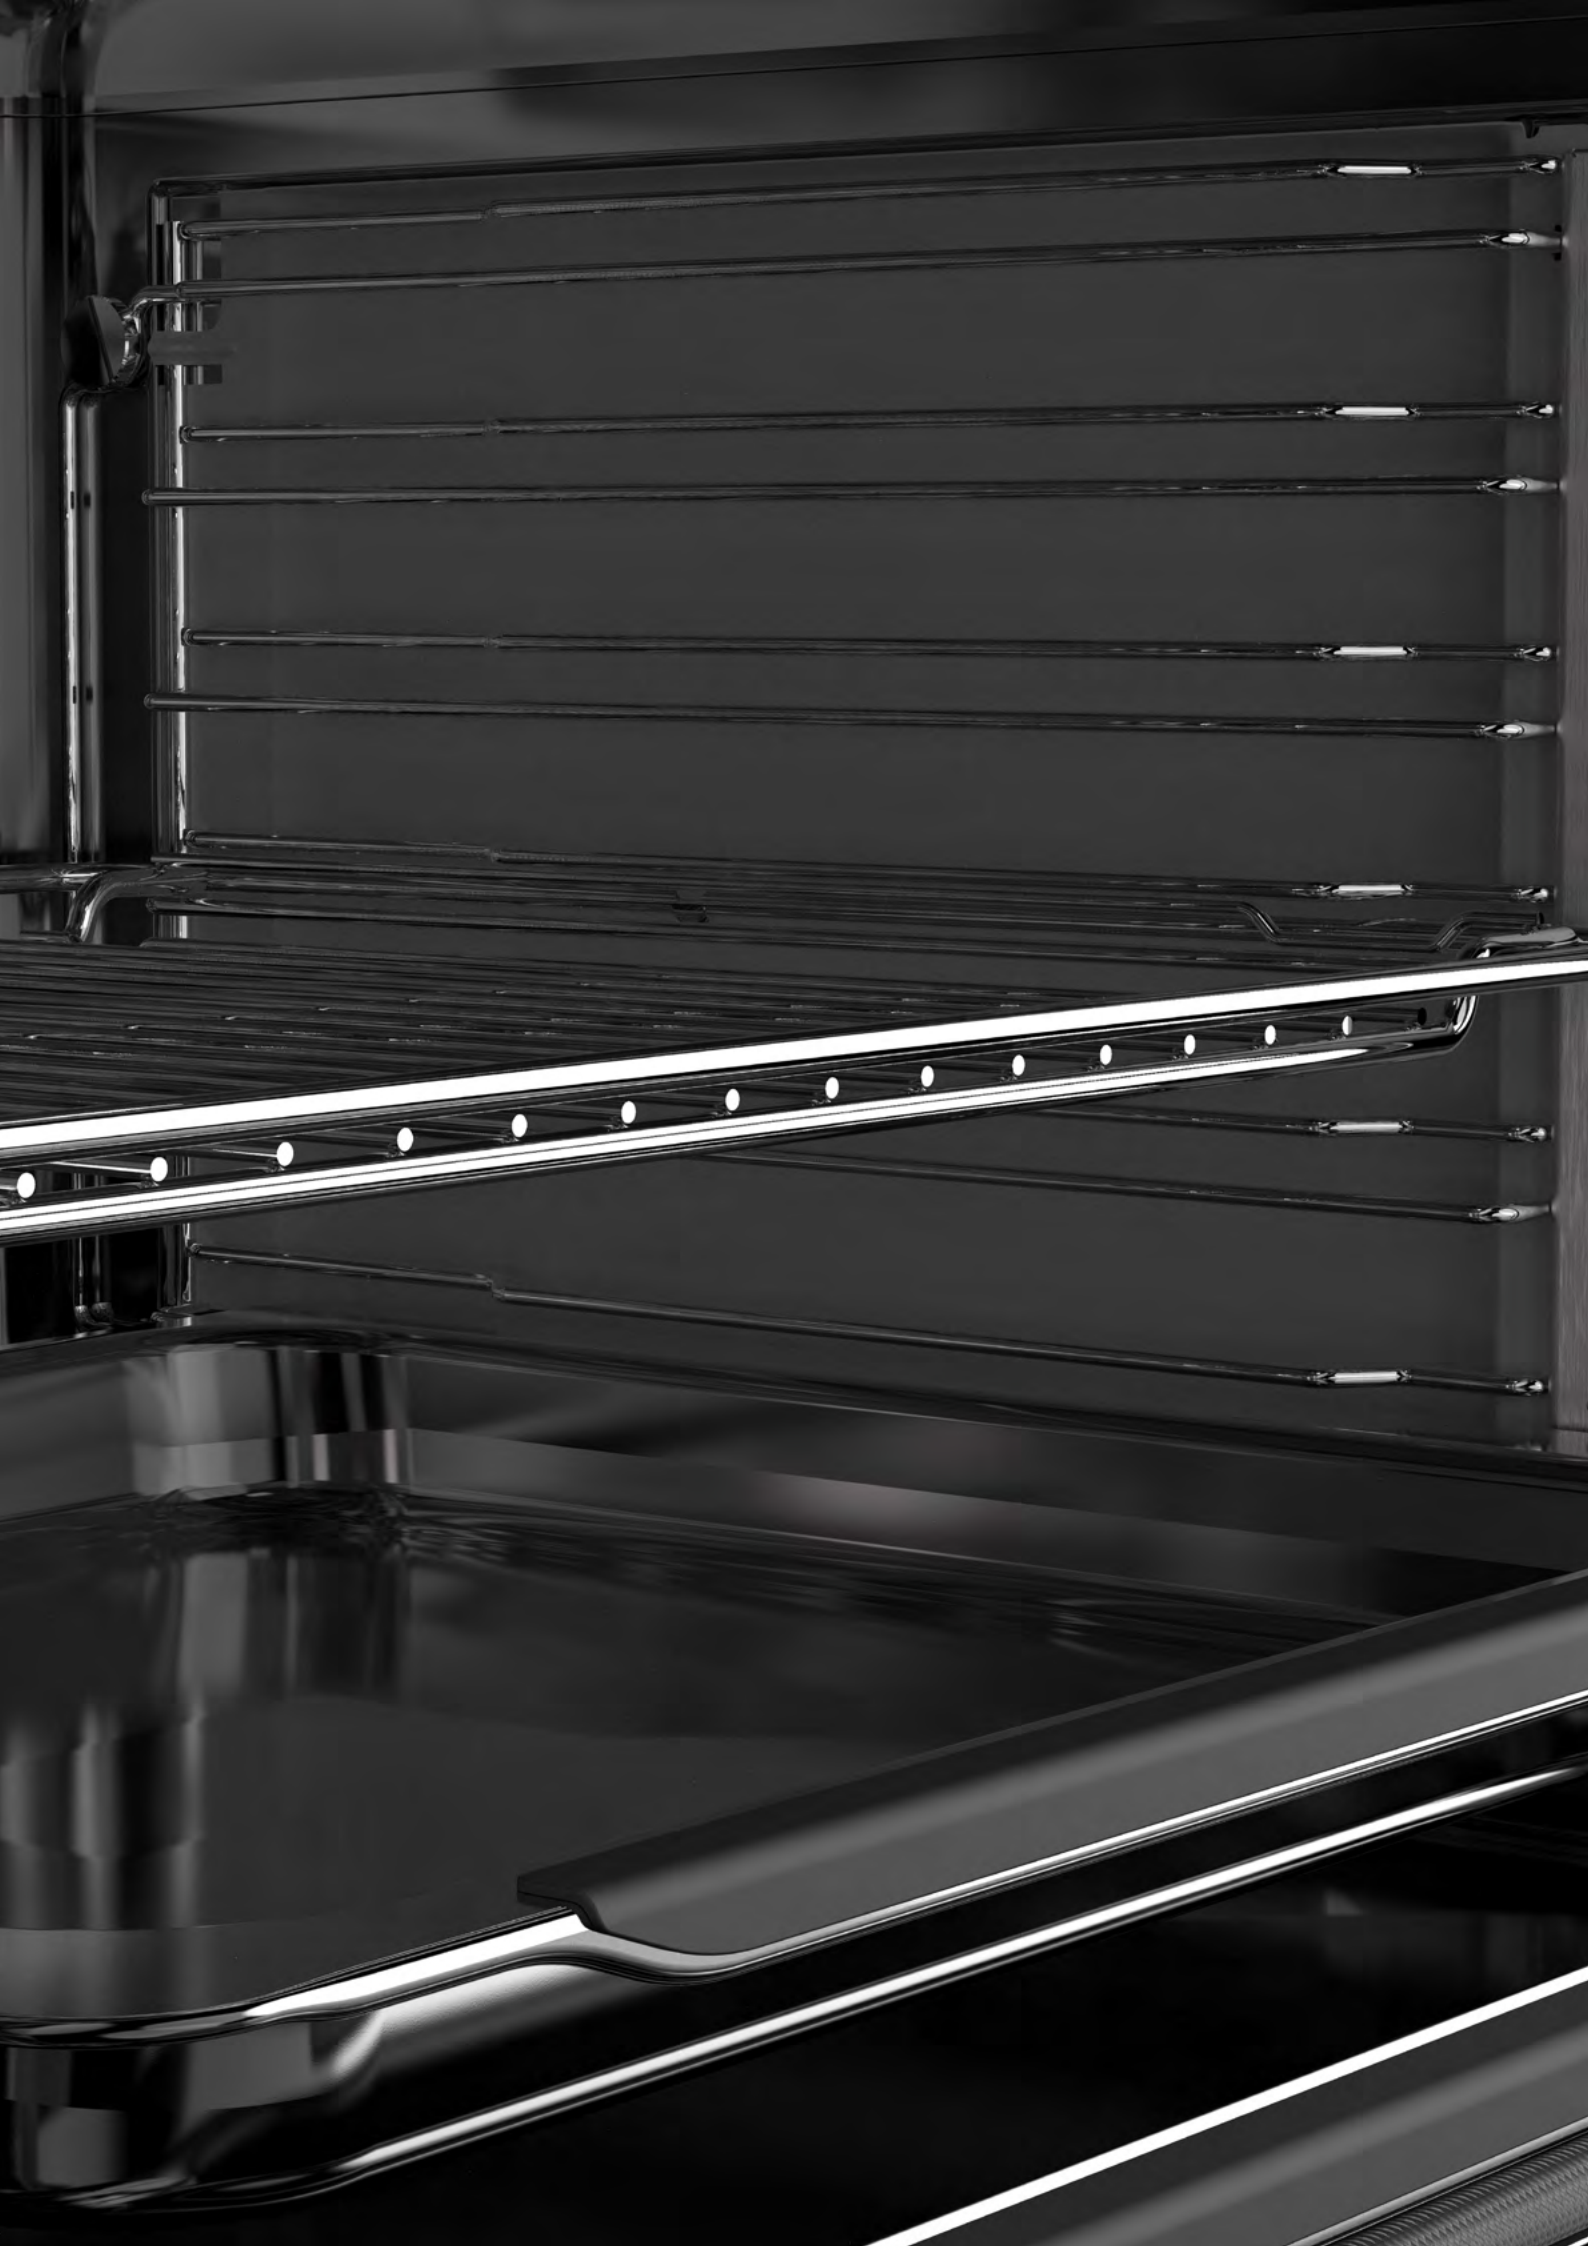


### 3 Dimensioni forno

Dimensioni in **mm**

**Vista assonometrica  
frontale**

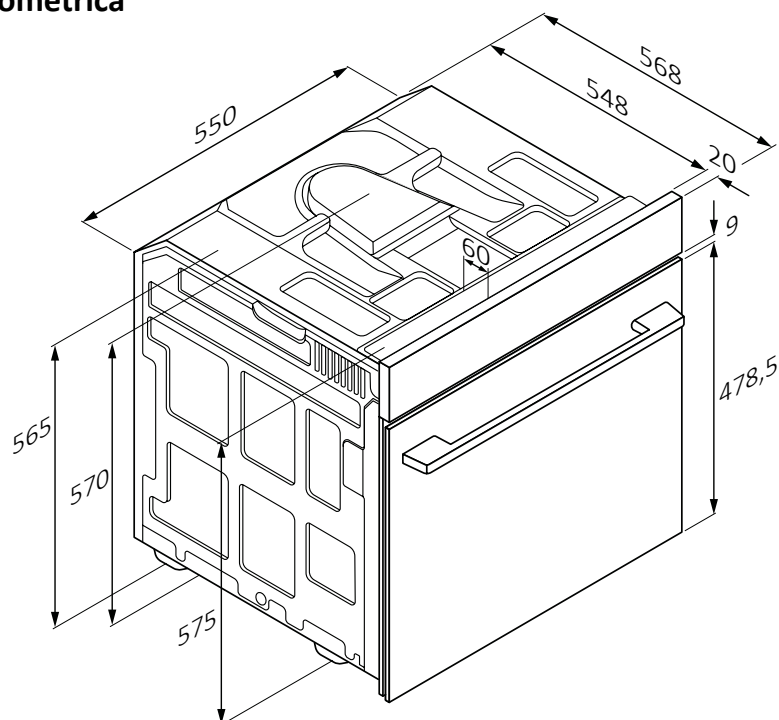


**Vista assonometrica  
posteriore**

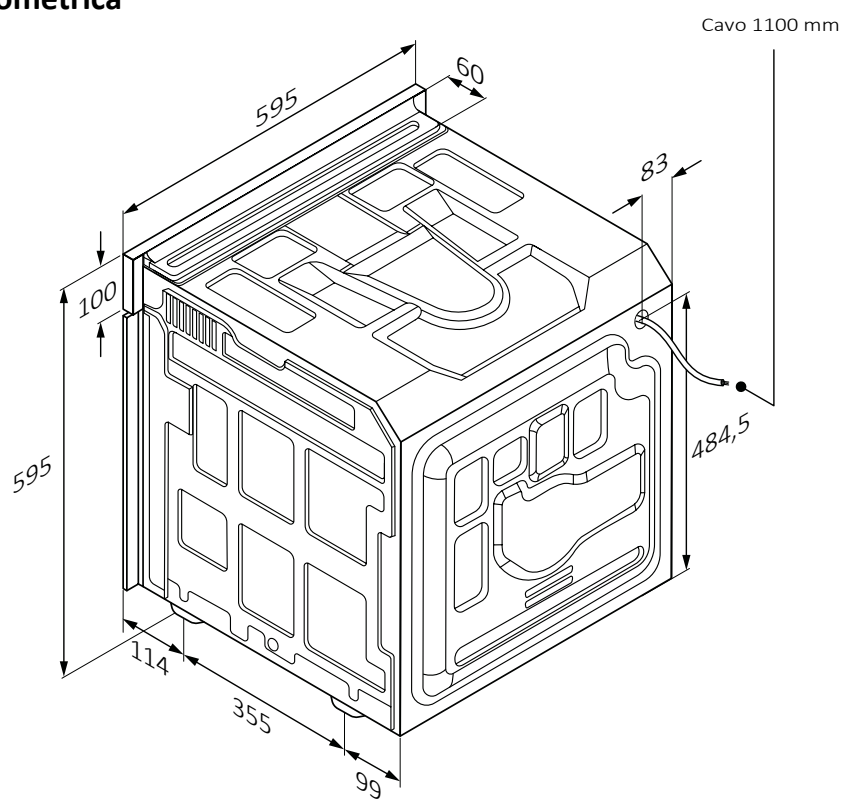


Dimensioni in **mm**

**Vista laterale**

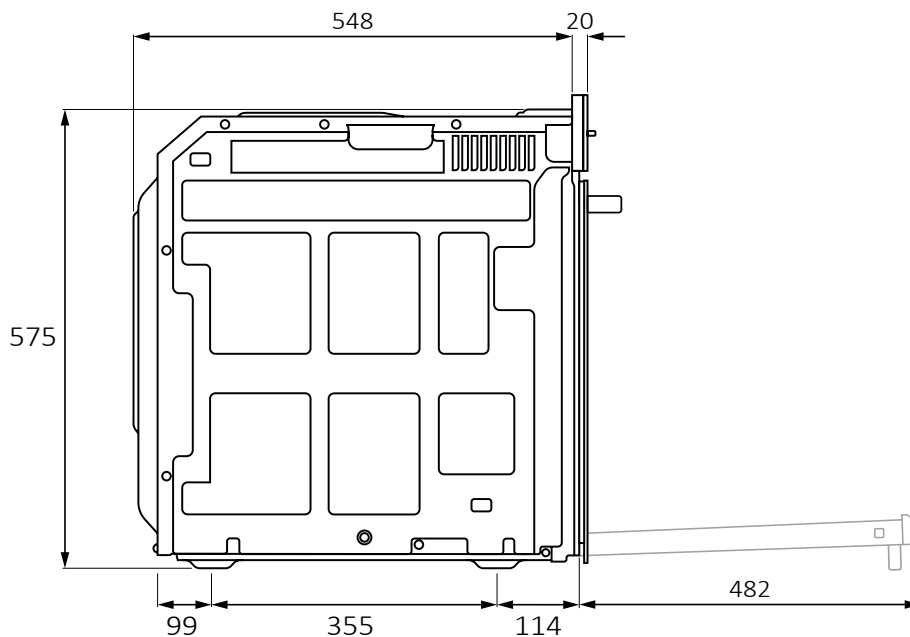

**Vista posteriore**

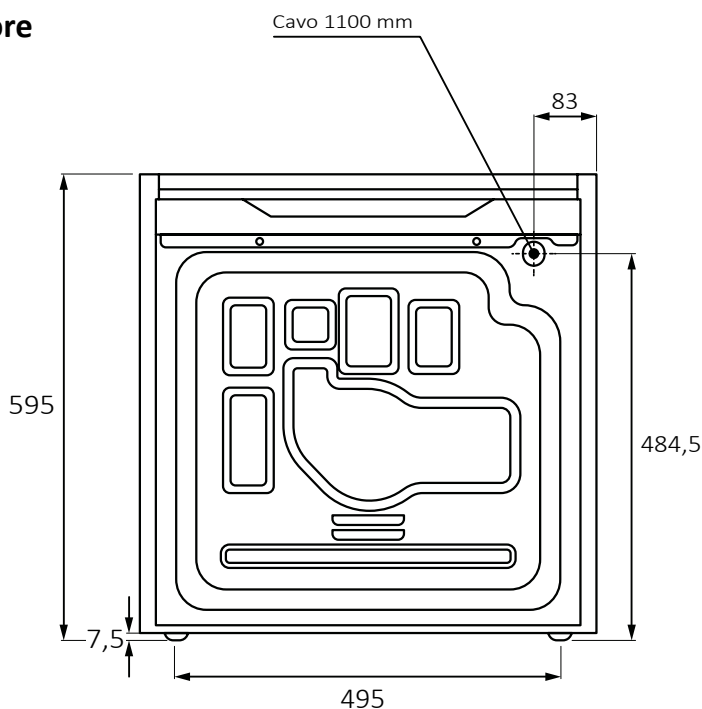

**Codici prodotto**


|               |               |               |               |               |               |               |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| H6 ID23B3HTX  | H6 ID23B4HTB  | H6 ID46G5YTB  | H6 ID66C3HTB  | H6 ID48L5YTB  | H6 ID2P5B3YTX | H6 ID68CSYTB1 |
| H6 ID23B3YTB  | H6 ID25B3LYTB | H6 ID66G5YTB  | H6 ID46C3YTB  | H6 ID48M5HTB  | H6 ID43B3HTB  | H6 ID48M5YTB1 |
| H6 ID25B3LHTX | H6 ID25B4LYTB | H6 ID46G3SHTB | H6 ID66C3YTB  | H6 ID68M5HTB  | H6 ID46C3HTB1 | H6 ID68M5YTB1 |
| H6 ID25G3HTX  | H6 ID46G3HTB  | H6 ID46G3SYTB | H6 ID48C5HTB  | H6 ID48M5YTB  | H6 ID66C3HTB1 | H6 ID48M5HTB1 |
| H6 ID25G3HTB  | H6 ID46G3YTB  | H6 ID46G5SHTB | H6 ID48C5YTB  | H6 ID68M5YTB  | H6 ID46C3YTB1 | H6 ID68M5HTB1 |
| H6 ID25G3YTX  | H6 ID65G3YTB  | H6 ID46G5SYTB | H6 ID68C5YTB  | H6 ID46B3HTB  | H6 ID66C3YTB1 | H6 ID2P5B3YTB |
| H6 ID25G3YTB  | H6 ID46R5YTB  | H6 ID48C5SYTB | H6 ID48C5SYTB | H6 ID2P3T1HTB | H6 ID25G3HTB1 | H6 ID25G5SYTX |
| H6 ID25C3YTX  | H6 ID46G5HTB  | H6 ID46C3HTB  | H6 ID68C5SYTB | H6 ID2P3T1HTX | H6 ID25G3YTB1 | H6 ID66G3SHTB |
| H6 ID23B3HTB  |               |               |               |               |               |               |

## 4 Dimensioni prodotti combinabili


### 4.1 Compatto h45 apertura drop down

Dimensioni in mm

Vista assonometrica  
frontale

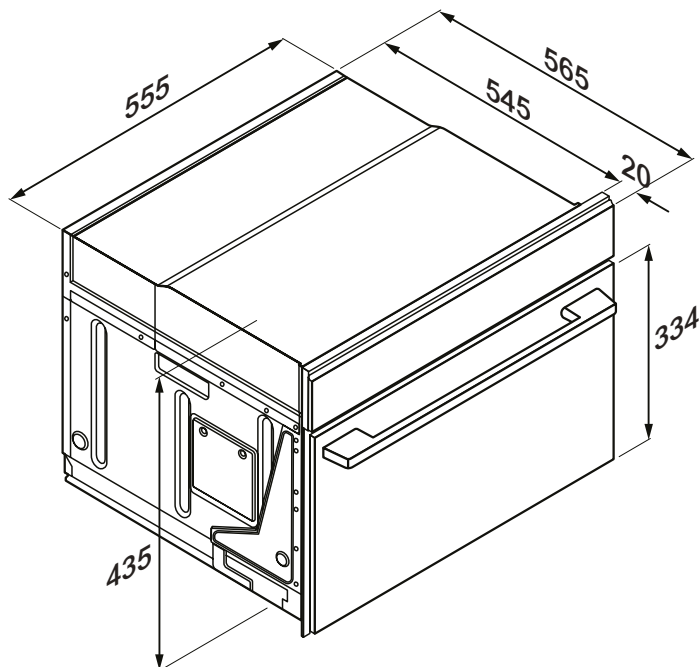


Vista assonometrica  
posteriore

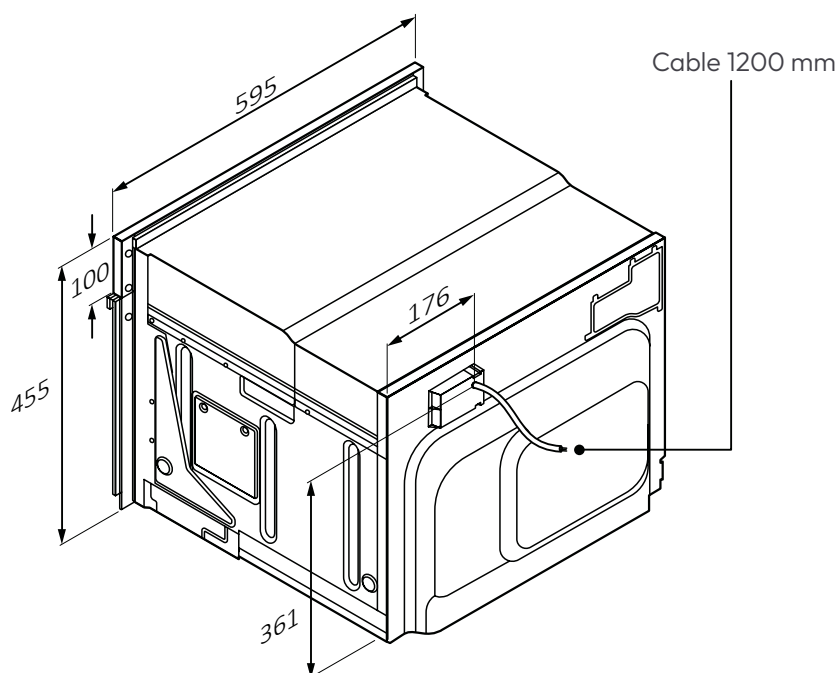


## 4.1 Compatto h45 apertura drop down

Dimensioni in **mm**

### Vista laterale

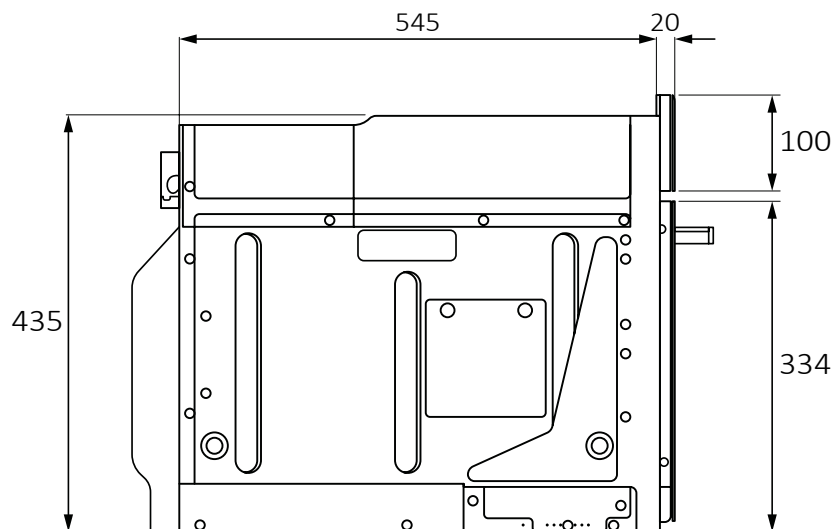

### Vista posteriore

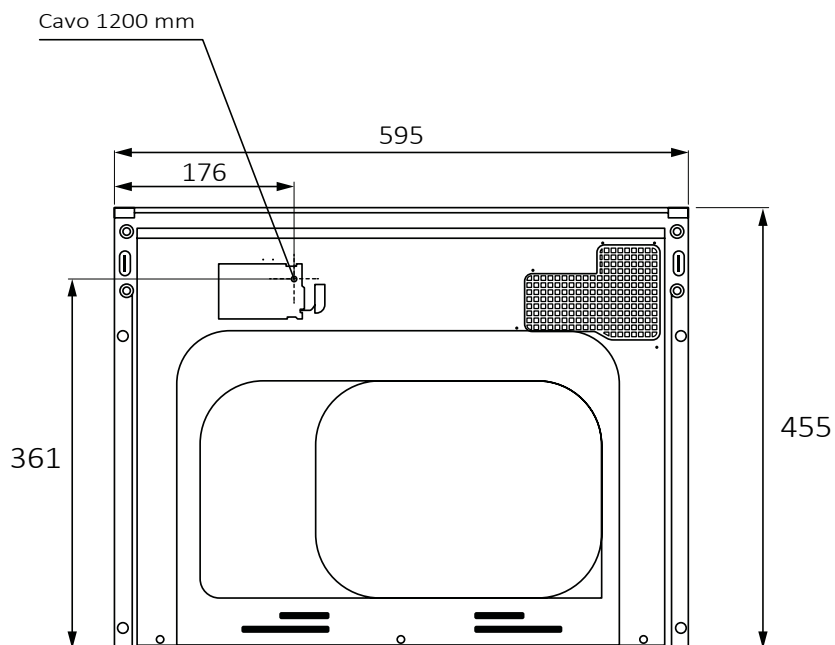


#### Codici prodotto

H4MWID29G6NQB H4MWID49G6NQB H4MWID69G6NQB H4MWID49C6NQB H4MWID69C6NQB H4MWID69P6NQB  
H4MWID49P6NQB


### 4.2 Compatto h38 apertura drop down

Dimensioni in mm

Vista assonometrica  
frontale

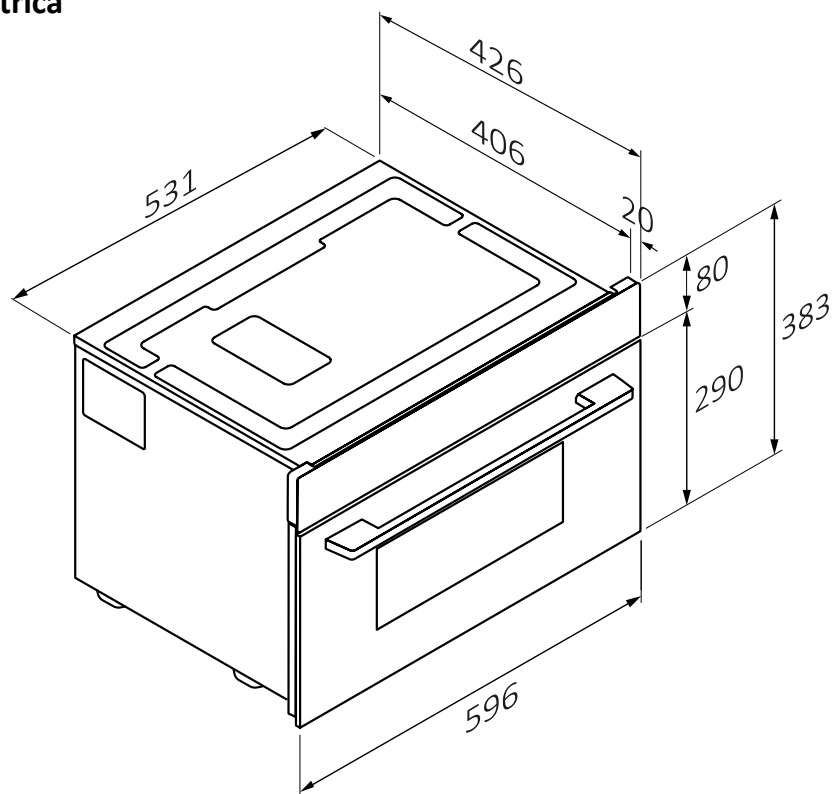


Vista assonometrica  
posteriore

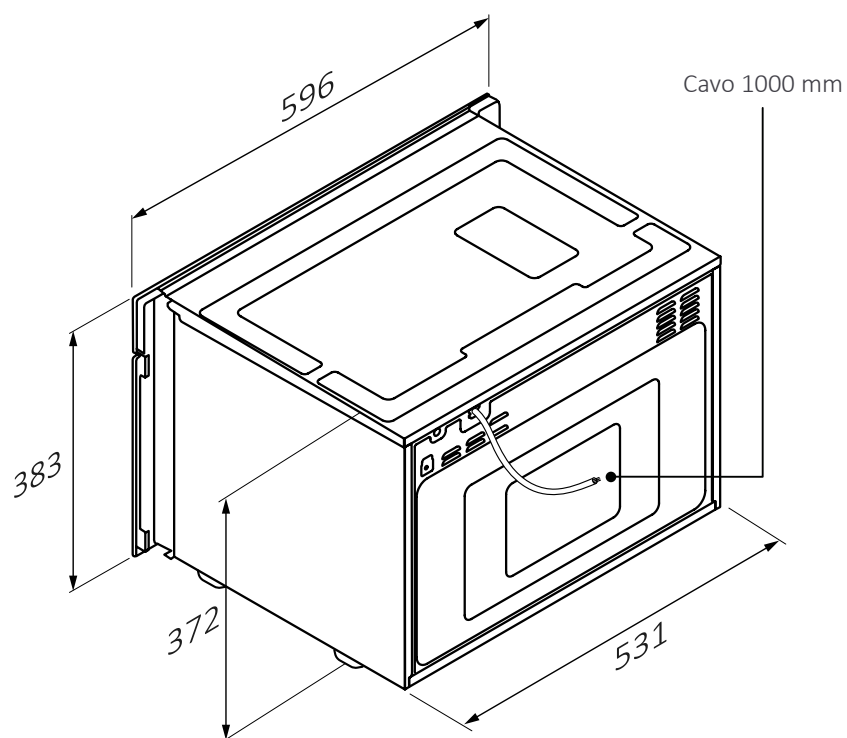


## 4.2 Compatto h38 apertura drop down

Dimensioni in mm

### Vista laterale

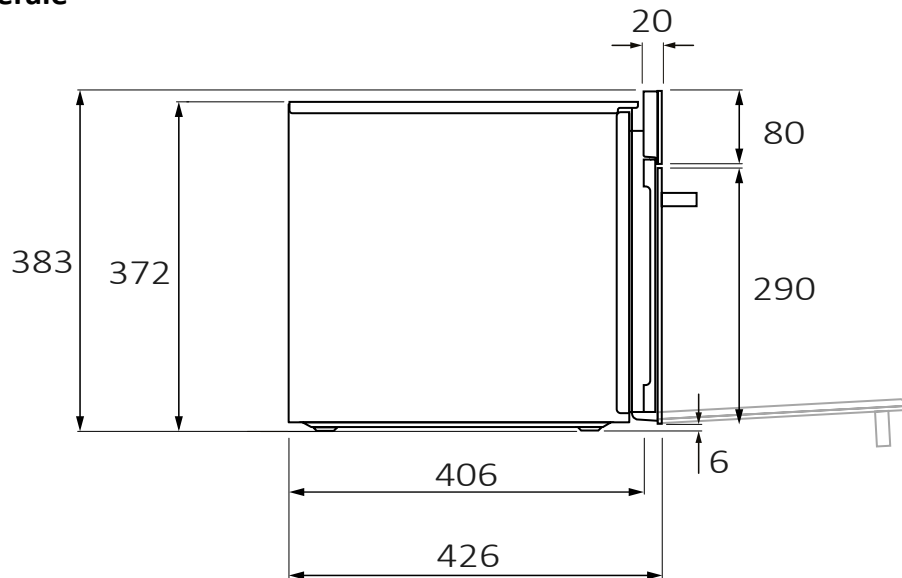

### Vista posteriore

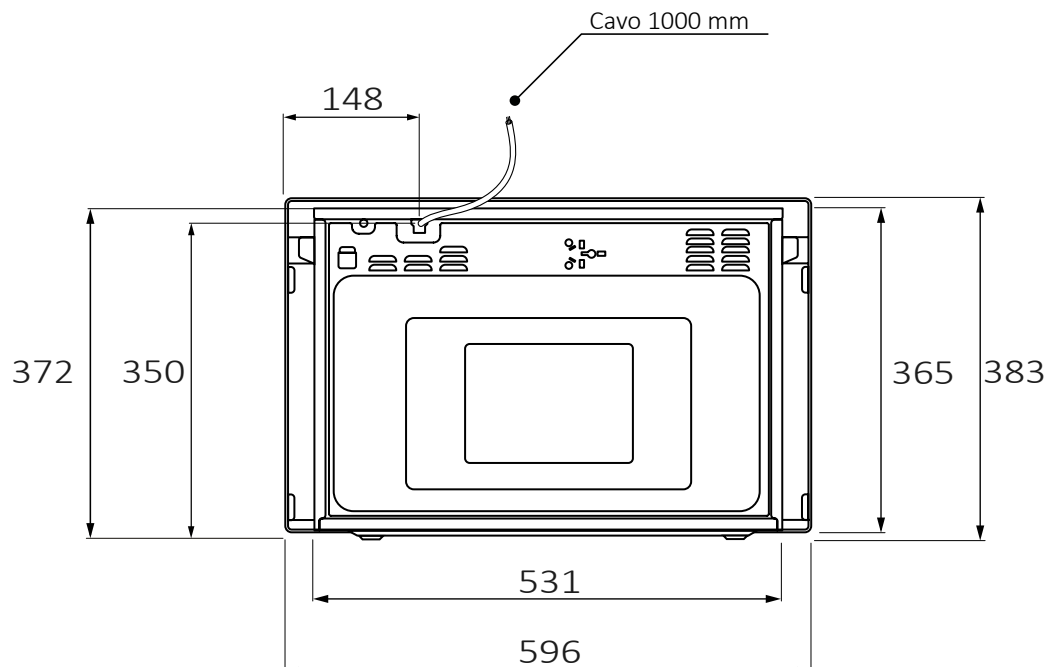


#### Codici prodotto

H38DMWID26NB H38DMWID26NX H38DMWID46NB


### 4.3 Compatto h38 apertura side wing

Dimensioni in mm

Vista assonometrica  
frontale

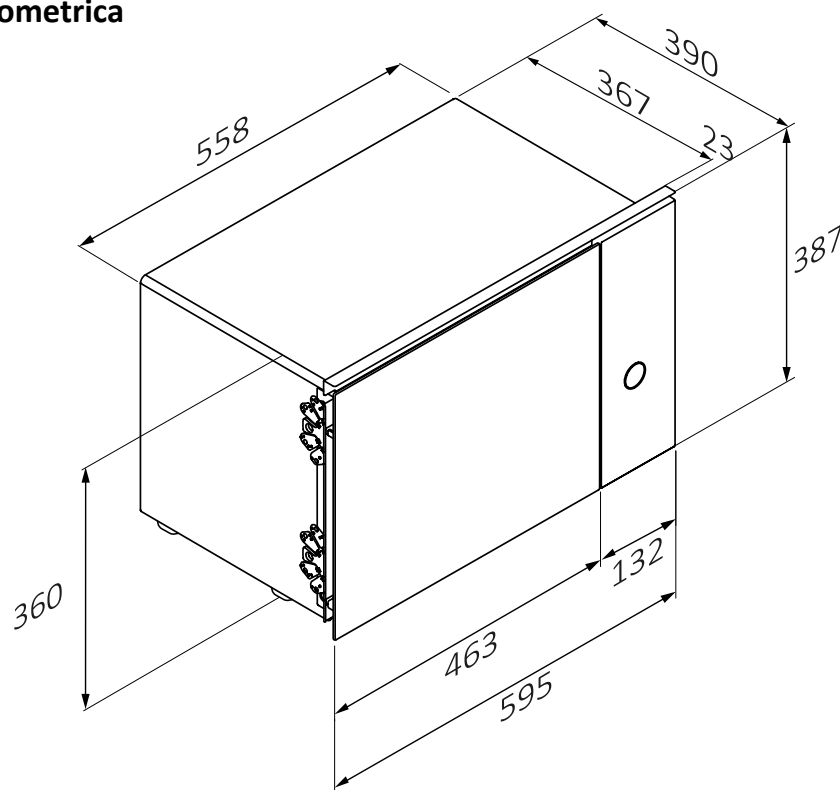


Vista assonometrica  
posteriore

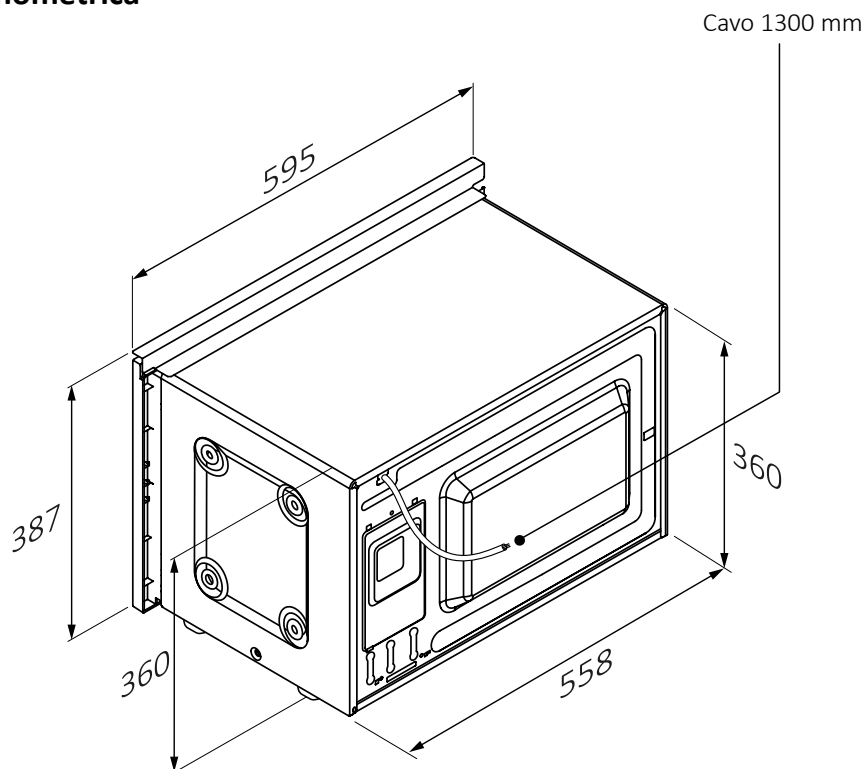


### 4.3 Compatto h38 apertura side wing

Dimensioni in mm

#### Vista laterale

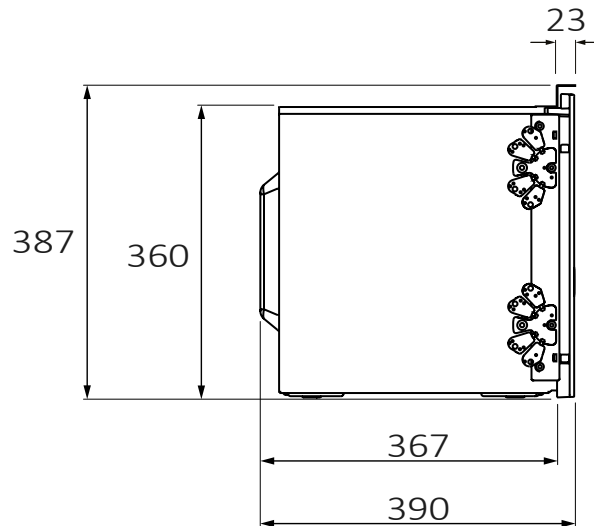

#### Vista posteriore

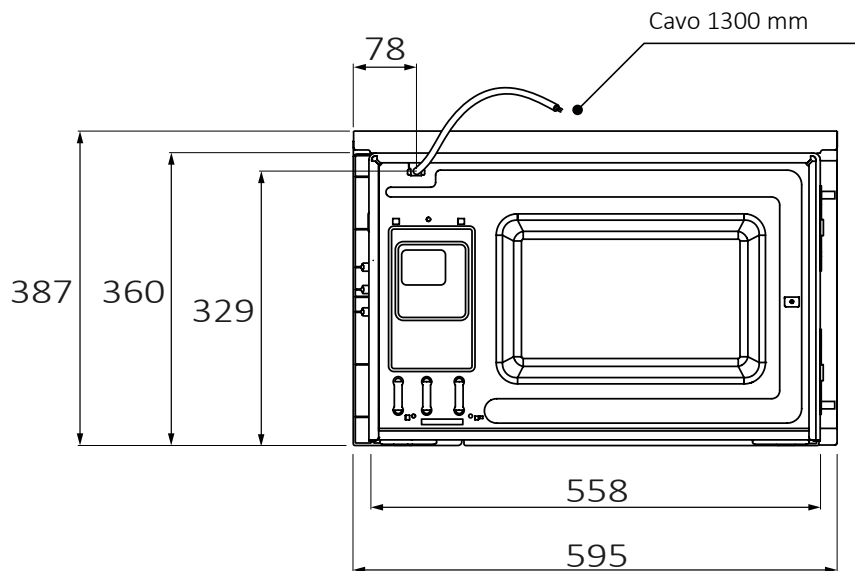


#### Codici prodotto

H38MWID4ID27N H38FMWID627N H38FMWID4ID27N H38FMWID2S7


### 4.4 Cassetto

Dimensioni in **mm**

**Vista assonometrica  
frontale**

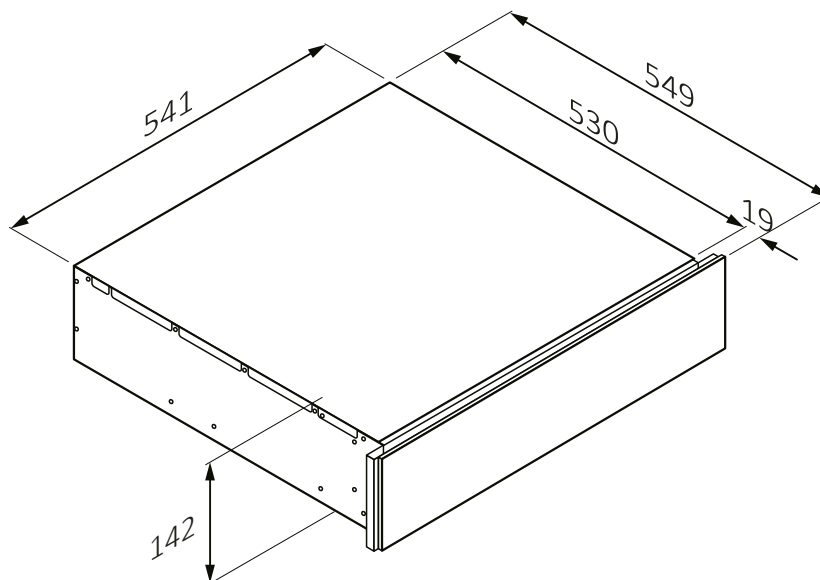


**Vista assonometrica  
posteriore**

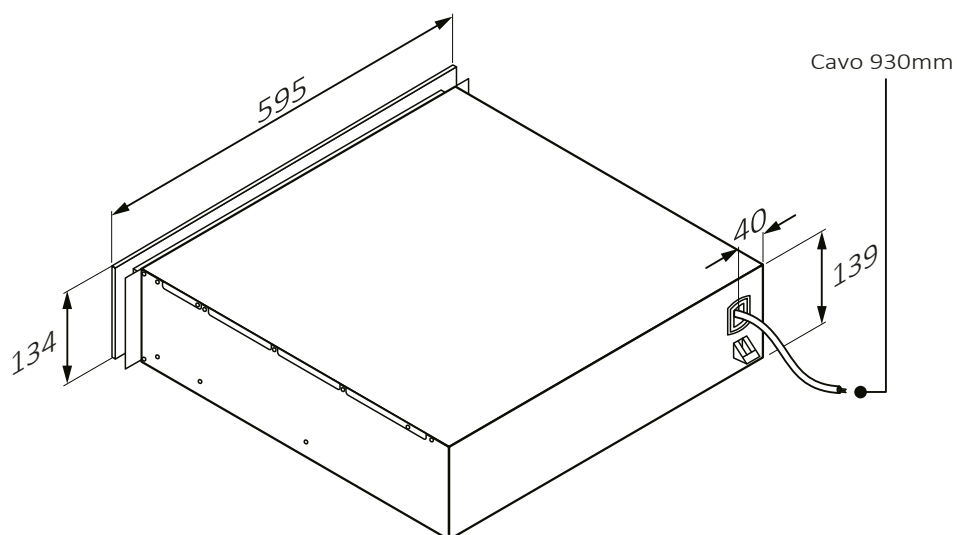


## 4.4 Cassetto

Dimensioni in **mm**

### Vista laterale

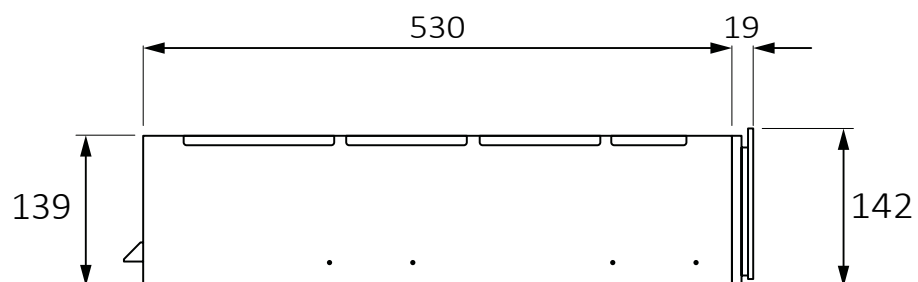


### Vista posteriore

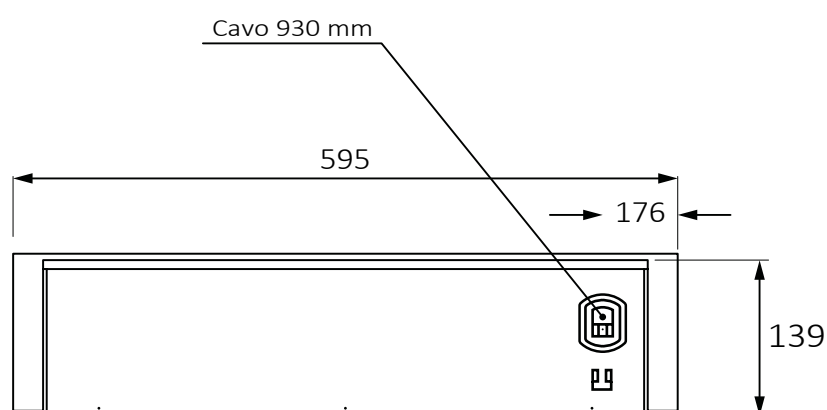

### Codici prodotto


HWD14ID6E    HWD14ID4E


## 6.6 Installazione Compatto in colonna

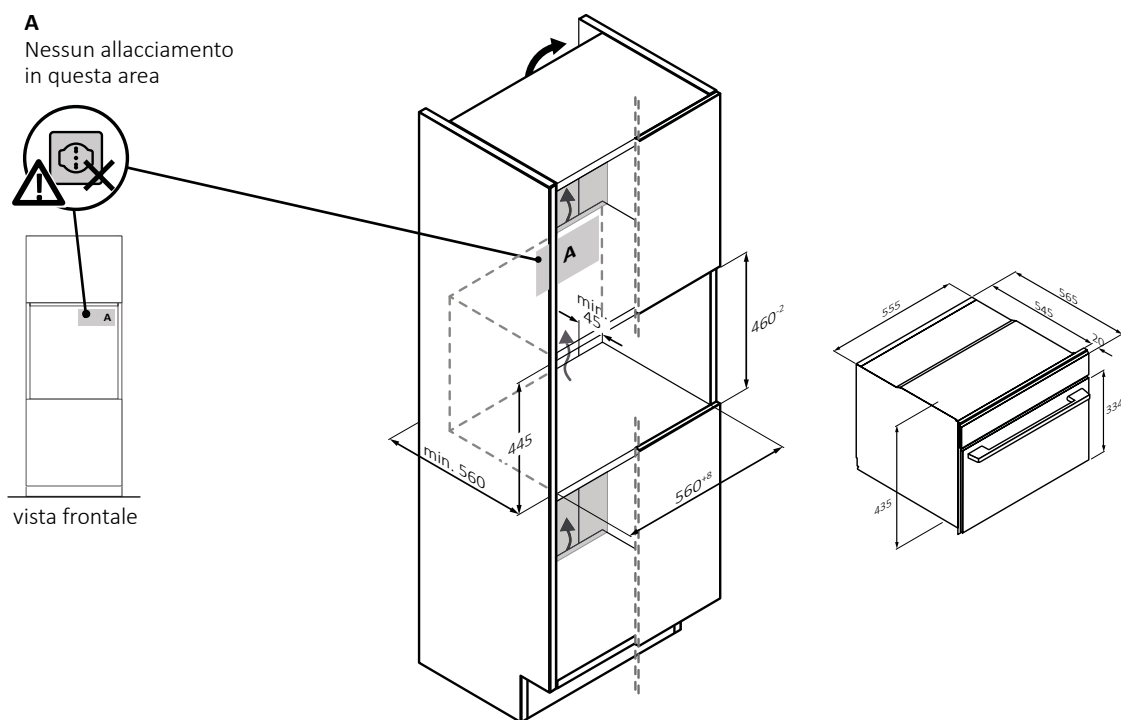


### Incasso singolo

Prospetto laterale

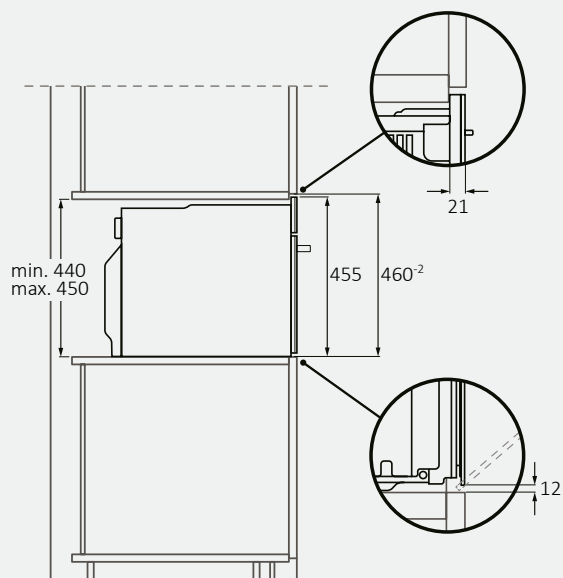

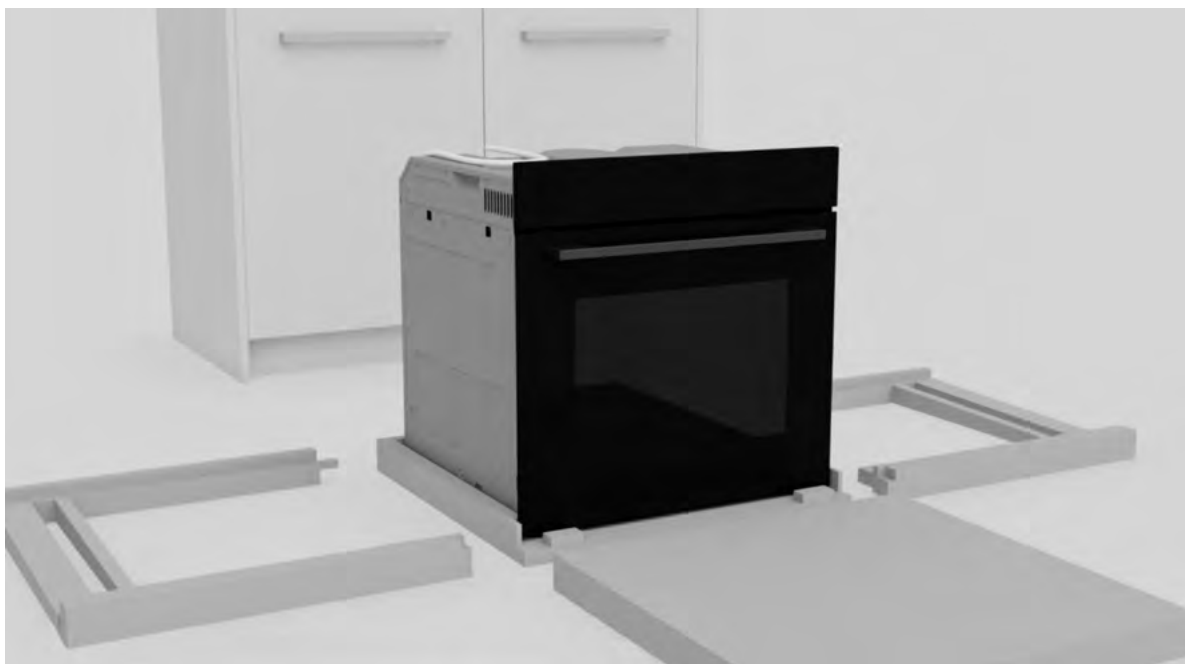**2**


Rimuovere l'imballaggio mediante un taglierino prestando attenzione a non danneggiare il prodotto;

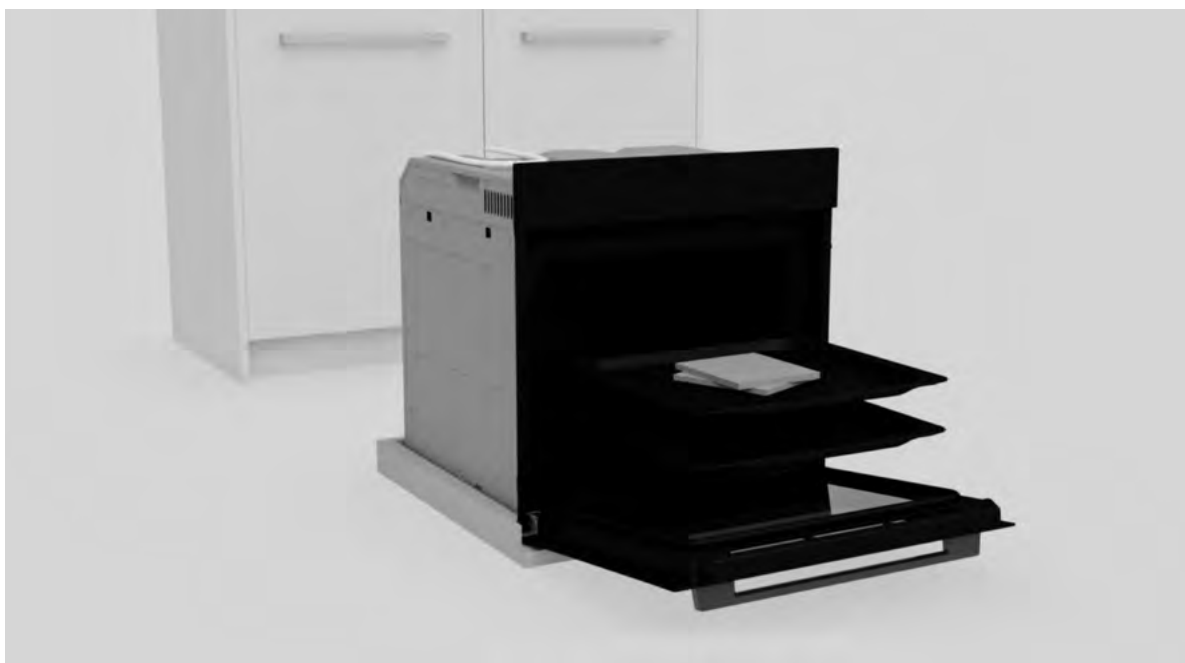**3**


Rimuovere tutti gli accessori presenti nel forno e richiudere lo sportello;

**6**

Inserire il prodotto nel vano di incasso;

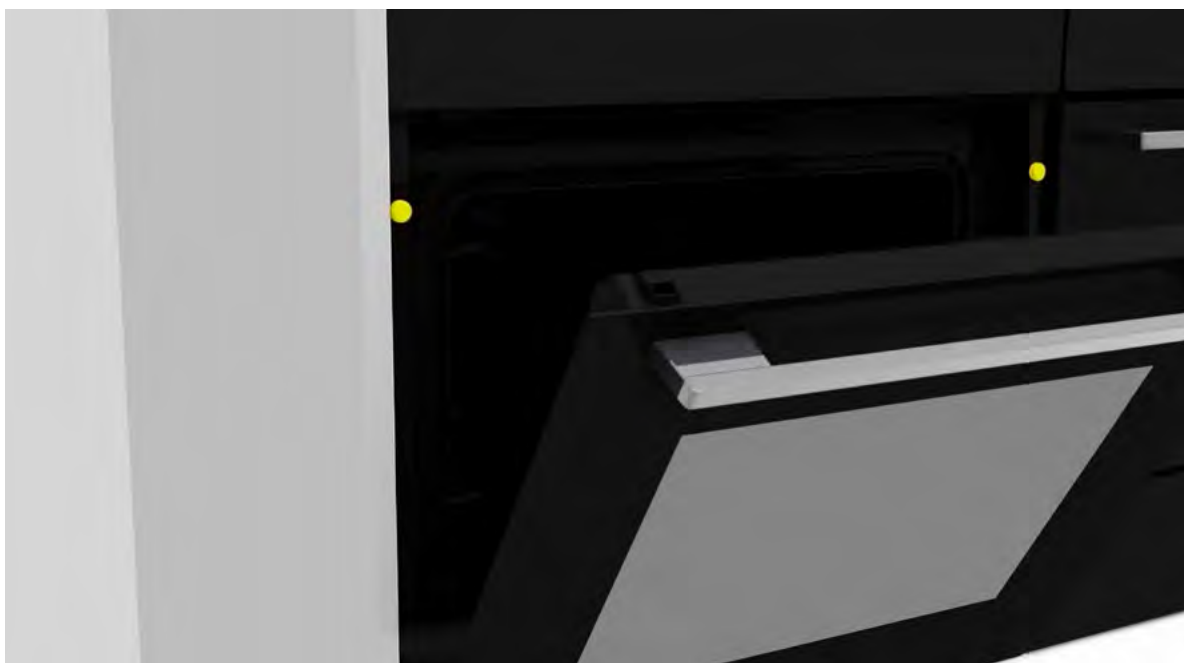**7**

Aprire lo sportello per fissare il prodotto al mobile. Avvitare il prodotto alle estremità superiori; coprire le viti con i tappini forniti.

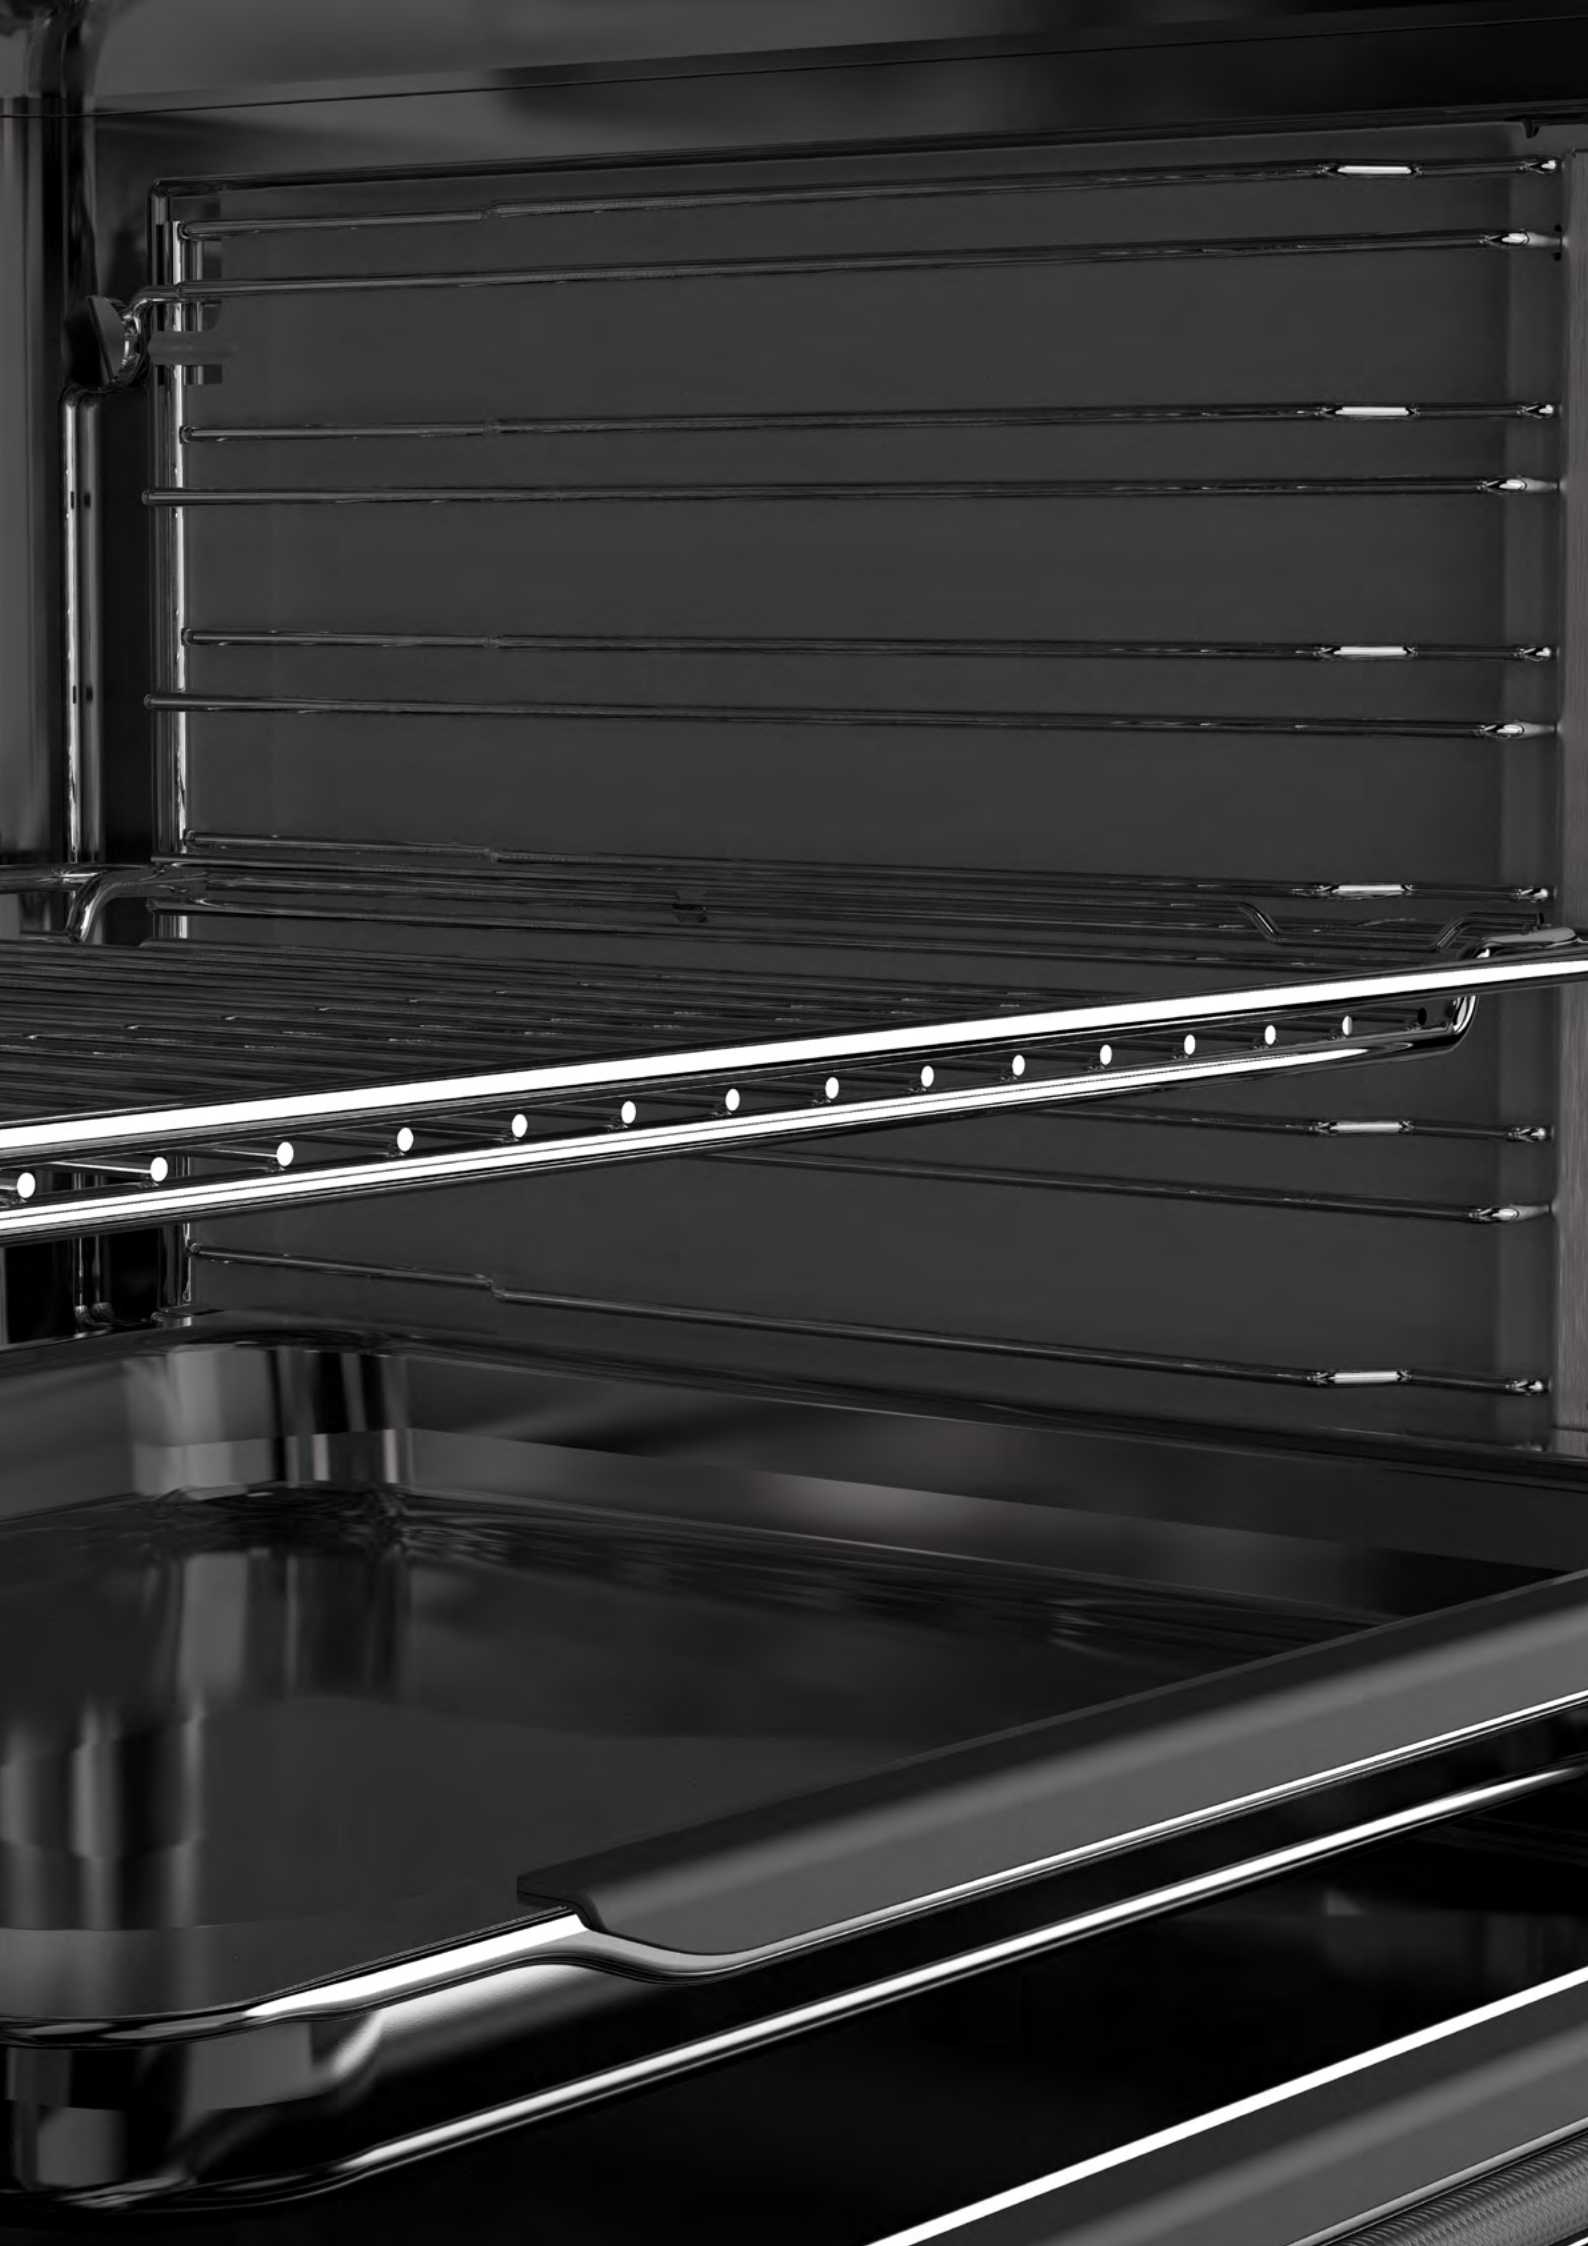

**Haier**