 


Haier

Cooker Hood

Model HAPY72ES6XGG

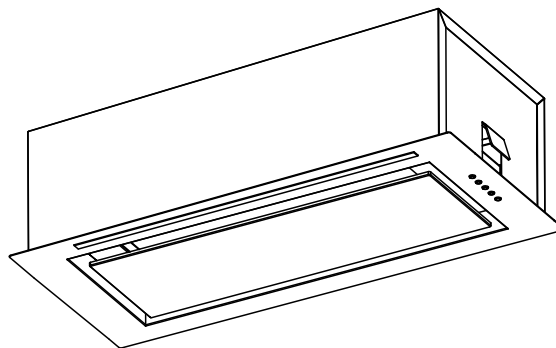

Instruction Book

Information and advice

CAUTION: Accessible parts may become hot when used with cooking appliances.

In certain circumstances electrical appliance may be a danger hazard.

A) There must be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels.

B) Do not check the status of the filters while the cooker hood is operating.

C) Do not touch the light bulb within half an hour after appliance has been use.

D) Do not light a flame under the cooker hood.

E) Avoid opening gasometer when there is no pan on the stove, as it is damaging for the filters and a fire hazard.

F) Constantly check food frying to avoid overheated oil splashing and becoming a fire hazard.

G) Disconnect the electrical plug prior to any maintenance.

H) Regulations concerning the discharge of air have to be fulfilled.

I) When the range hood and appliances supplied with energy Other than electricity are simultaneously in operation. The negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar)

Information and advice

CAUTION: Accessible parts may become hot when used with cooking appliances.

J) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

K) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

L) The range hood is intended to be installed over a hob having no more than four hob elements.

M) Indoor use and household use only

N) When the appliance is not in use and before cleaning, unplug the appliance from the outlet.

O) Attention ! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room

P) There is a fire risk if cleaning is not carried out in accordance with the instructions.

Information and advice

CAUTION: Accessible parts may become hot when used with cooking appliances.

Q) The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).

I) Children should be supervised to ensure that they do not play with the appliance.

 
S) Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

T) The installation height of hood shall not be less than 65cm.

U) The filter screen must be cleaned regularly, otherwise there is a danger of fire.

V) The installation must be carried out according to the screws and positions required by the instructions, which will easily damage the connecting wires.


W) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

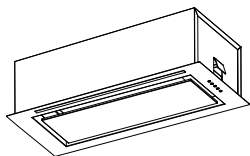

Information and advice

Check the voltage, frequency and power of the rating label on the body.

 1

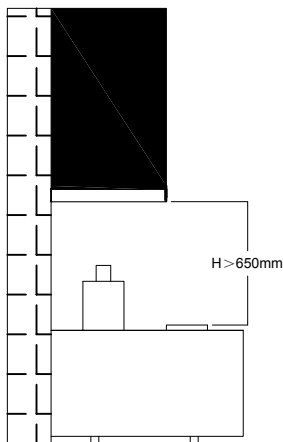


2

We recommend that after installation the bottom of the hood should be no less than 650mm and no more than 750mm above the stove's heating elements and burners.





Information

 
The cooker hood must be installed and connected to flues where other appliances are installed and which run off other energy supplied different to electricity (water heaters boiler cookers (range/gas) etc.). The cooker hood must not be installed above cooker with eye-level grills.

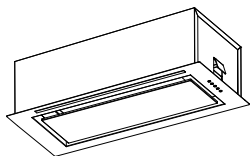



Installation

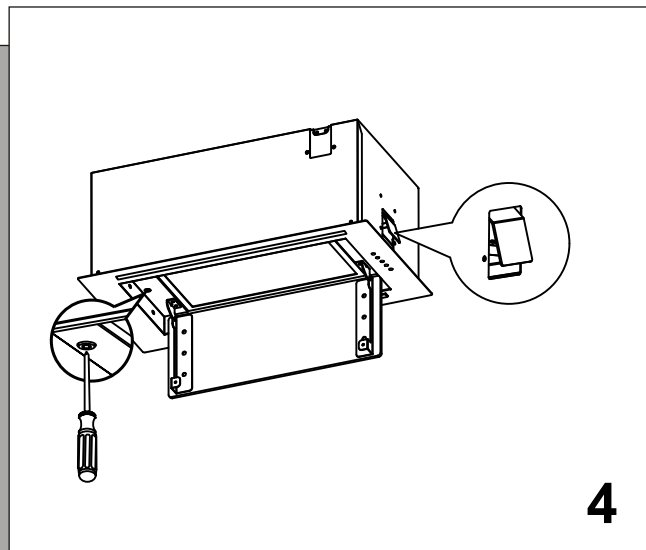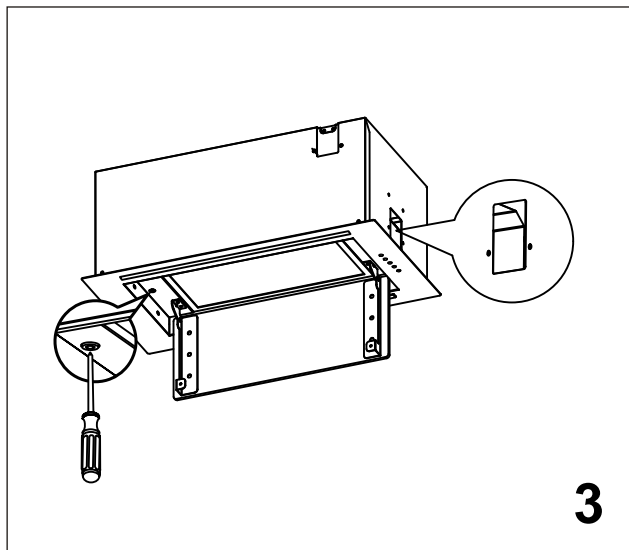  


 Prior to installation, open the oil baffle and turn the bolt clockwise with a screwdriver to loosen it for easy installation. Loosen the mounting structure tightly fitted to the housing with a screwdriver to facilitate the installation of the entire machine.

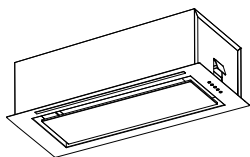


Installation

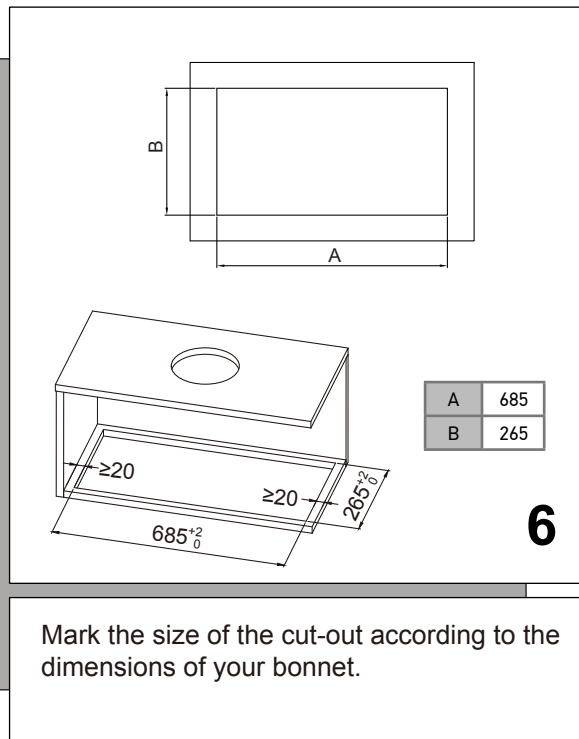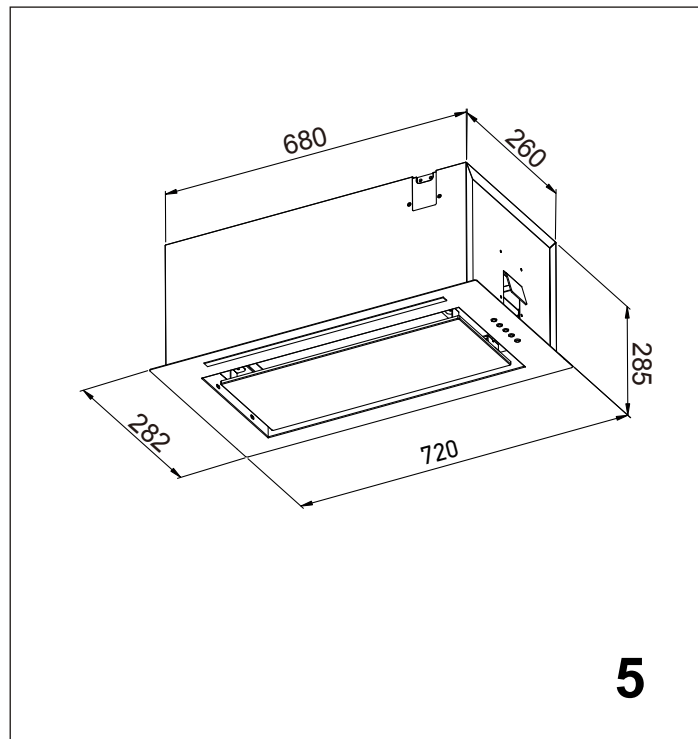  

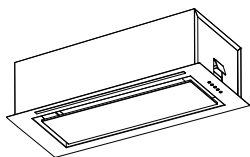 


Installation

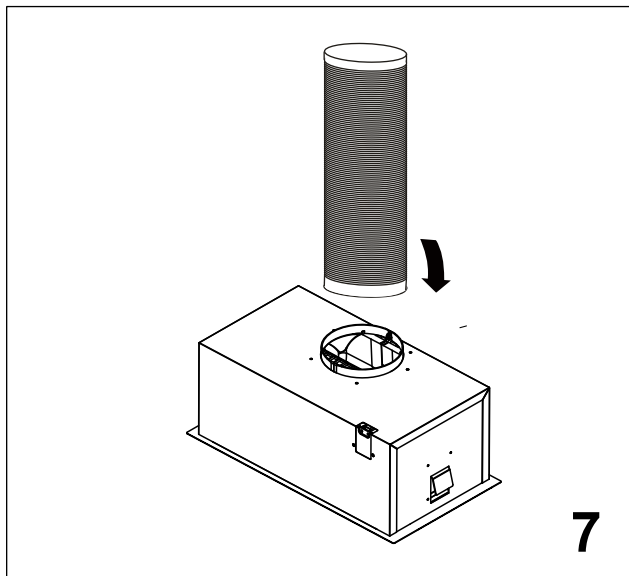 


7

 Attach the exhaust pipe to the pipe adapter and place it over the extractor hood as shown.


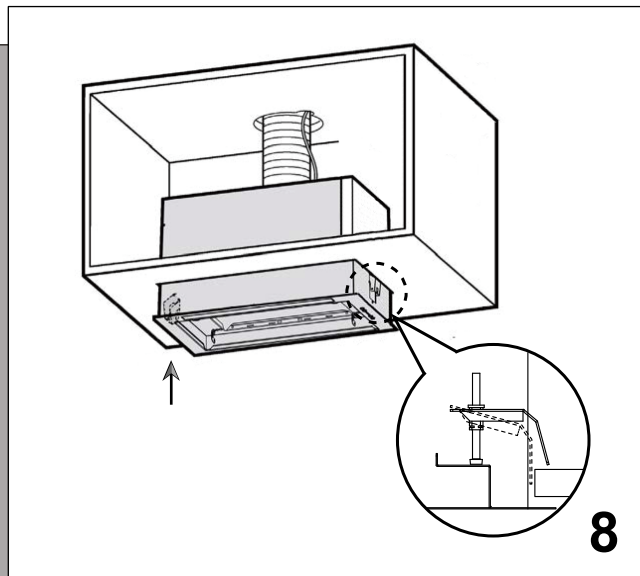


8

 
Insert the extractor hood from the bottom up into the cabinet until the locking bracket rests on the bottom shelf.

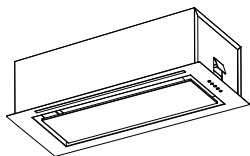

Installation

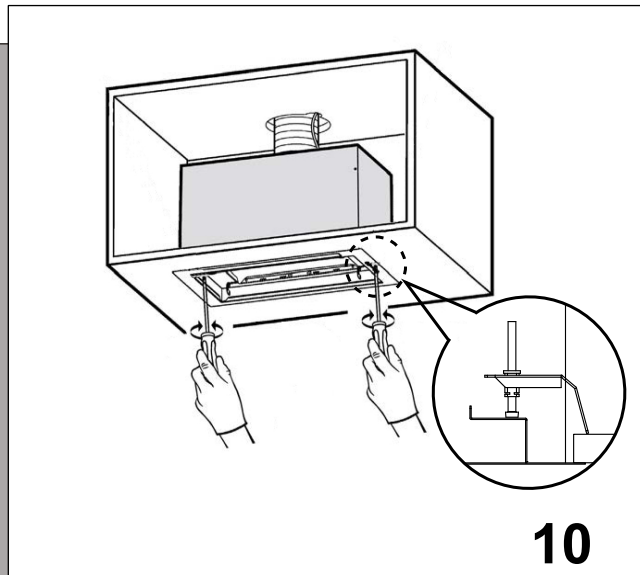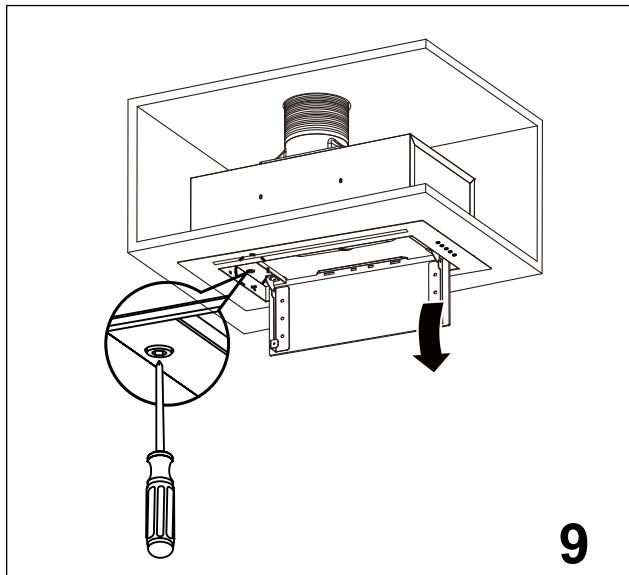  

 Open the grease filter and remove the two fixing screws with a screwdriver. Lift up until it is fully installed in the bottom of the cabinet. Tighten the screws securing the extractor hood.

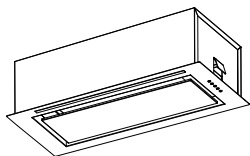

Controls

- ① — Low
- ② — Medium
- ③ — High
- B — Boost
- ☉ — Light

Speed button:

Press any speed button , the hood will work on this speed, press this speed button again, the hood will stop working.

 
When press the B button, the hood will work on Boost state for 5 minutes, then go back to Speed 3.

Delay:

Long press the speed button for 2 seconds, enter to delay state on this speed. The default delay time is 15 minutes. When the delay time is up, turn off directly.

Light:

Press Light button to turn on or off the light.

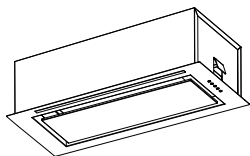

Replacement and maintenance

 
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

 
Replacing lamps

The hood is equipped with a lighting system based on LED technology.




The LEDs guarantee an optimum lighting, a duration up to 10 times as long as the traditional lamps and allow to save 90% electrical energy.

In case of malfunction of the illumination system contact the technical service.

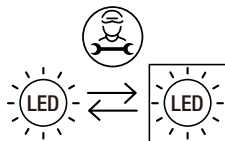

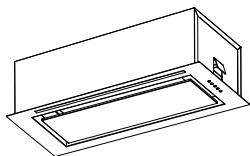

Charcoal filter

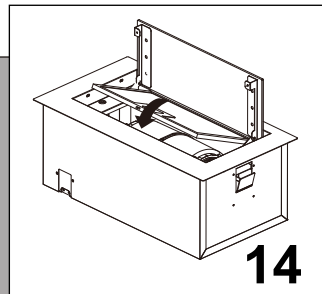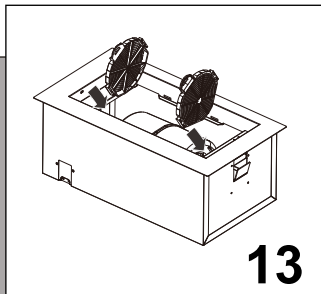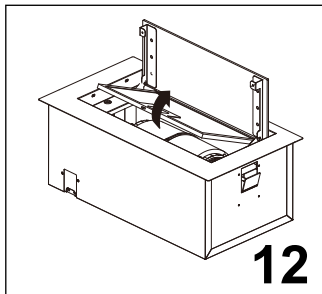   

In re-circulating mode, air is vented back into the kitchen through the opening in the cooker hood.

This method is advised if you are not using your hob intensively.

Re-circulated air requires the use of charcoal filters to remove odours.

To ensure the best performance from your cooker hood, the charcoal filter should be replaced every 3-6 months, dependent on use.

 
To attach a new charcoal filter, follow the steps below:

1. Remove the grease filter.
2. Place the charcoal filter on the centre of the motor support.
3. Replace the grease filter.




Information

This charcoal filter is non-washable and must be replaced as required.

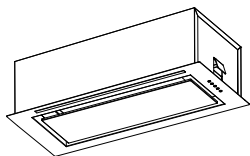

Cleaning grease filters

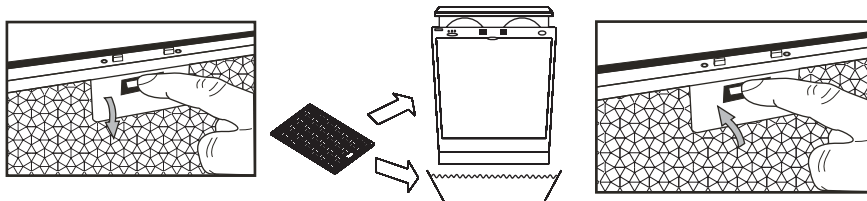 

It is recommendable to clean the metallic filter every three months by carrying out the following instructions:

- Remove the metallic filter from the cooker hood and wash it in a solution of water and neutral liquid detergent, leaving to soak
- Rinse thoroughly with warm water and leave to dry.
- The metallic filter may also be washed in the dishwasher.

The metallic filter may alter in color after several washes.

This is not cause for customer complaint nor replacement of metallic filter.



Information

There is a fire risk if cleaning is not carried out in accordance with the instructions.



This appliance is labelled in accordance with European Directive 2012/19/EU on Waste Electrical and Electronic Equipment Regulations 2013 regarding electric and electronic appliances (WEEE). The WEEE contain both polluting substances (that can have a negative effect on the environment) and base elements (that can be reused). It is important that the WEEE undergo specific treatments to correctly remove and dispose of the pollutants and recover all the materials. Individuals can play an important role in ensuring that the WEEE do not become an environmental problem; it is essential to follow a few basic rules:

- the WEEE should not be treated as domestic waste;
- the WEEE should be taken to dedicated collection areas managed by the town council or a registered company.

In many countries, domestic collections may be available for large WEEEs. When you buy a new appliance, the old one can be returned to the vendor who must accept it free of charge as a one-off, as long as the appliance is of an equivalent type and has the same functions as the purchased appliance.



The manufacturer shall decline all responsibility if the foregoing recommendations and instruction regarding installation, maintenance and use are not observed and respected when using the cooker hood.