



R e p a i r I N S T R U C T I O N S

BULGARIAN	BG ИНСТРУКЦИИ ЗА РЕМОНТ
CZECH	CS POKYNY PRO OPRAVY
GERMAN	DE REPARATURANLEITUNG
GREEK	EL ΟΔΗΓΙΕΣ ΕΠΙΣΚΕΥΗΣ
ENGLISH	EN REPAIR INSTRUCTIONS
SPANISH	ES INSTRUCCIONES DE REPARACIÓN
FRENCH	FR INSTRUCTIONS DE RÉPARATION
CROATIAN	HR UPUTE ZA POPRAVAK
ITALIAN	IT ISTRUZIONI DI RIPARAZIONI
DUTCH	NL REPARATIE-INSTRUCTIES
POLISH	PL INSTRUKCJE NAPRAWY
PORTUGUESE	PT INSTRUÇÕES DE REPARAÇÃO
ROMANIAN	RO INSTRUCTIUNI DE REPARARE
SLOVENIAN	SL NAVODILA ZA POPRAVILO
SLOVAK	SK POKYNY PRE OPRAVY
SERBIAN	SR UPUTSTVO ZA POPRAVAK
TURKISH	TR ONARIM TALİMATLARI



H a n d l e I N S T R U C T I O N S

HANDLE | TOOLS - CROSS SCREWDRIVER



1

Remove the screws that
fix the handle, if needed
remove the screws
protection



Door's gasket

INSTRUCTIONS

DOOR'S GASKET



1 | Open the door



2 | From the corner pull the gasket outside of position



3 | Remove the gasket from the whole door frame



4 | Fit the new gasket pushing it on the frame



Reversing door INSTRUCTIONS

DOOR'S GASKET TOOLS- CROSS SCREWDRIVER-FLAT SCREWDRIVER



1 Remove the upper hinge



2 Remove the fridge door pulling it up



3 Remove the middle hinge



4 Remove the freezer door pulling it up



5 Remove the bottom hinge



6 Remove the protective clips from the opposite side



7 Fix the bottom hinge at the opposite side



8 Put the freezer door in the position



9 Fix the middle hinge



10 Put the door in the position and fix the upper hinge



Internal accessories

INSTRUCTIONS

DRAWER



1 | Open the door



2 | Pull the drawer outside

SHELF



1 | Open the door



2 | Pull the shelf



3 | Remove the shelf keeping it slightly inclined

JARS DOOR RAIL



1 | Open the door



2 | Lift the Jars rail



Internal accessories

I N S T R U C T I O N S

DRAWER



1 | Open the door



2 | Pull the drawer outside