



- evohome**
- Press and hold **SETTINGS** for 3 seconds.
  - Press the green tick
  - Press **ADD ZONE**.
  - Type a name for the new zone and press the green tick
  - Press **RADIATOR VALVE**.
  - If you want to control the zone temperature with the evohome Controller (which needs to be located in that zone) press **YES**, otherwise press **NO**.

- HR9 1**
- Press the binding button for 5 secs.
  - The LED will flash **AMBER** for up to 2 mins whilst binding.
  - Successful binding is confirmed by LED showing permanent **GREEN** for 5 secs.



- evohome**
- You should receive a **SUCCESS** message on the evohome Controller (if not go back and re-bind).
  - Either press the green tick  to add another radiator to the zone or press the red cross  if you don't need to add another radiator to the zone.
- You must repeat these steps for each radiator controller.**