
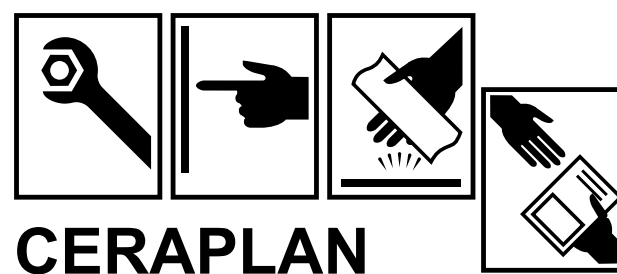
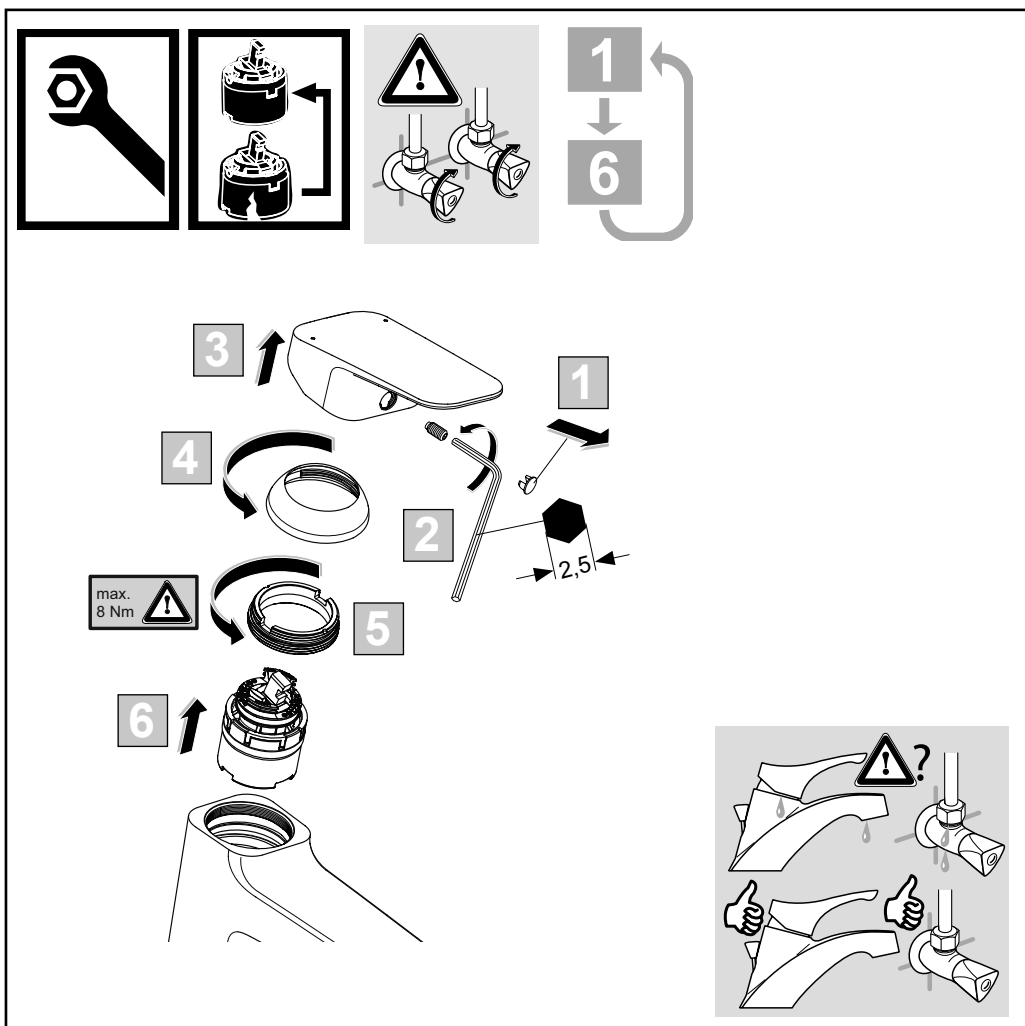


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli


XX = AA, AD,

- 1 - B 961716 XX
- 2 - B 960473 XX
- 3 - B 961438 XX
- 4 - B 961374 NU
- 5 - A 861181 NU
- 6 - A 861156 NU
- 7 - E 960059 NU
- 8 - B 960486 XX
- 9 - A 961625 XX
- 10 - B 960167 XX
- 11 - A 960944 NU
- 12 - A 964520 NU
- 13 - B 960845 NU
- 14 - A 963173 NU
- 15 - B 1364 XX
- 16 - B 960925 XX

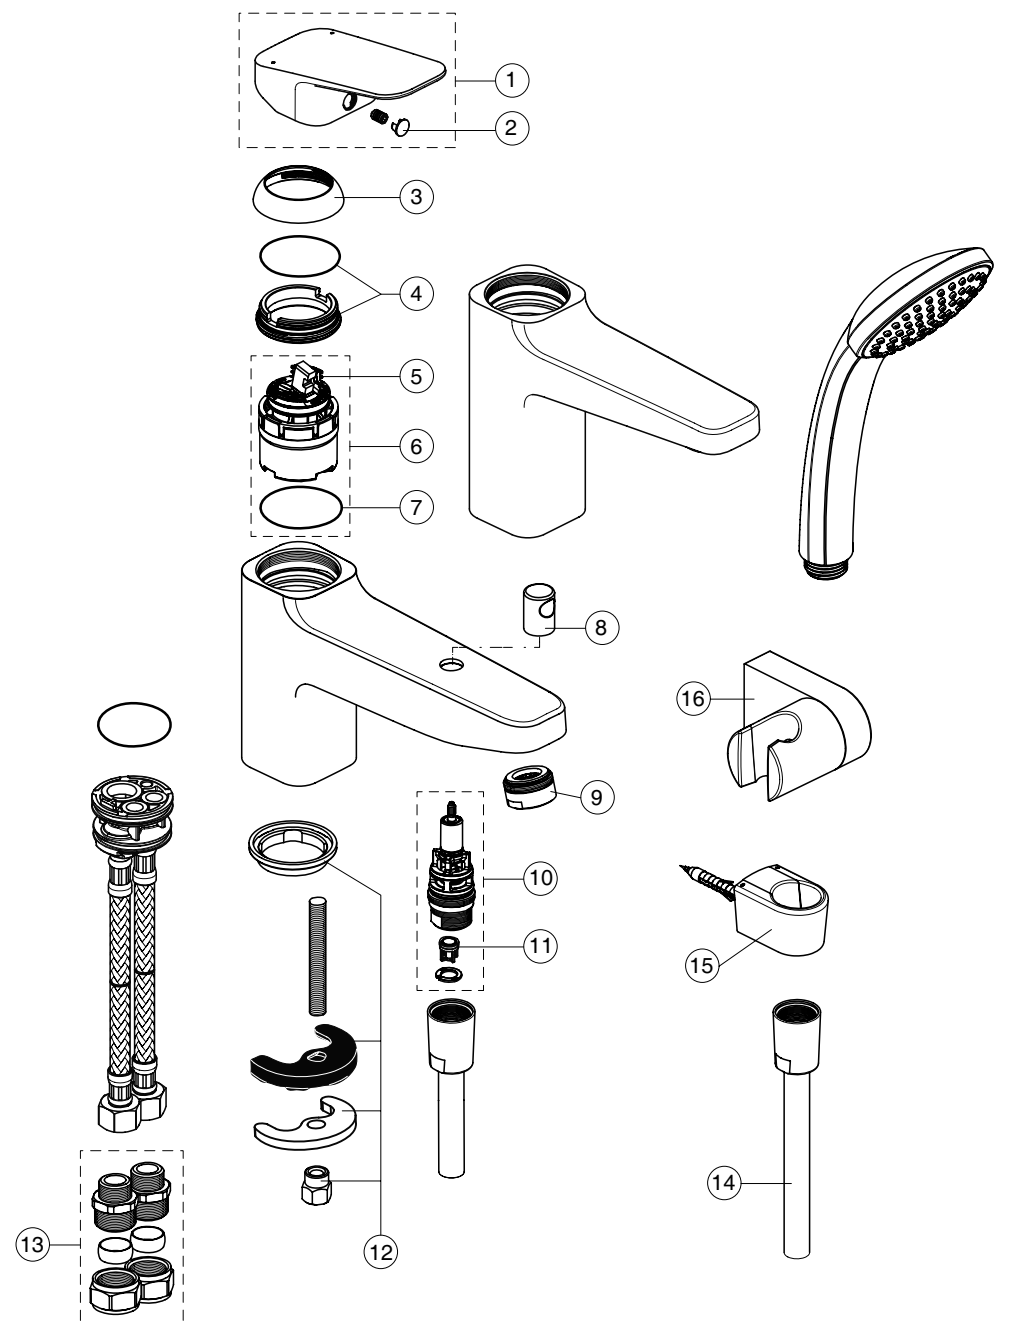


Ideal Standard

05.2021 / B565151

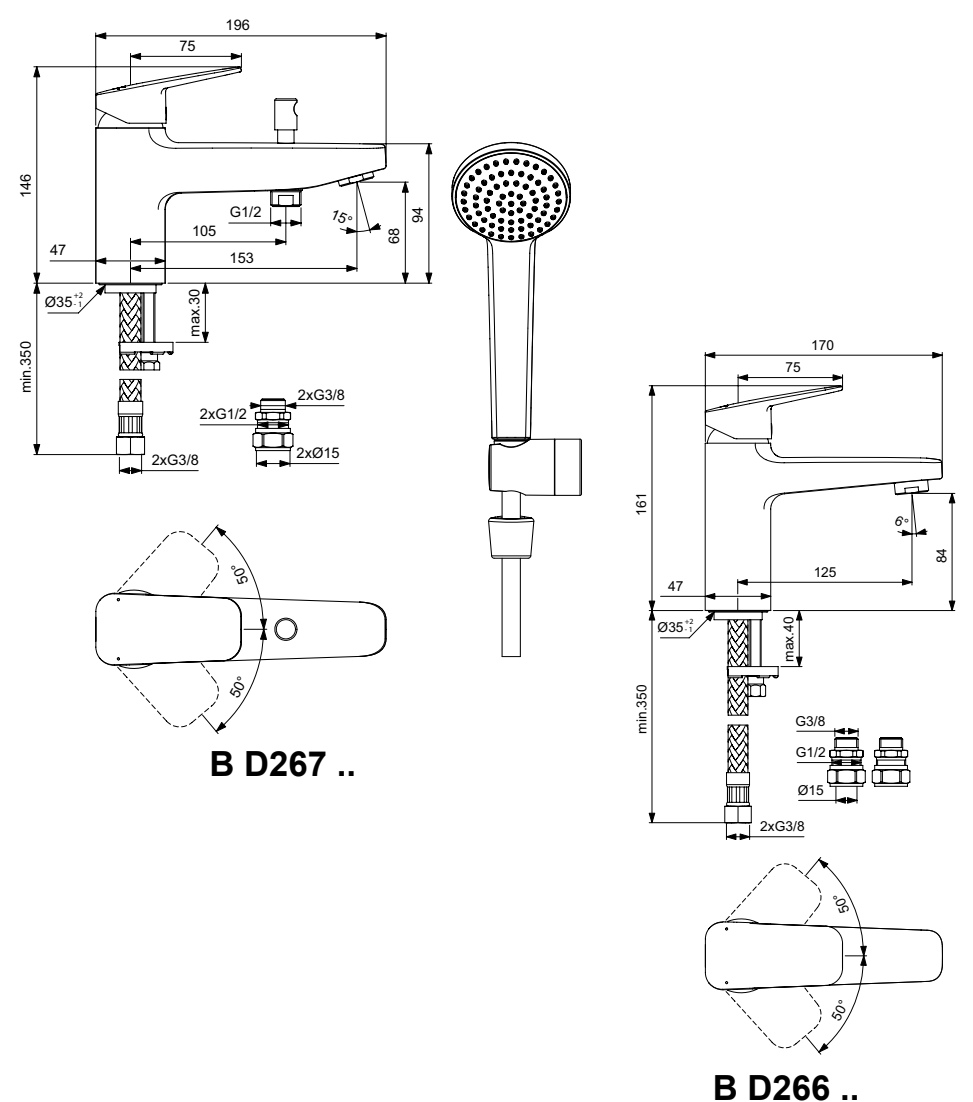

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>

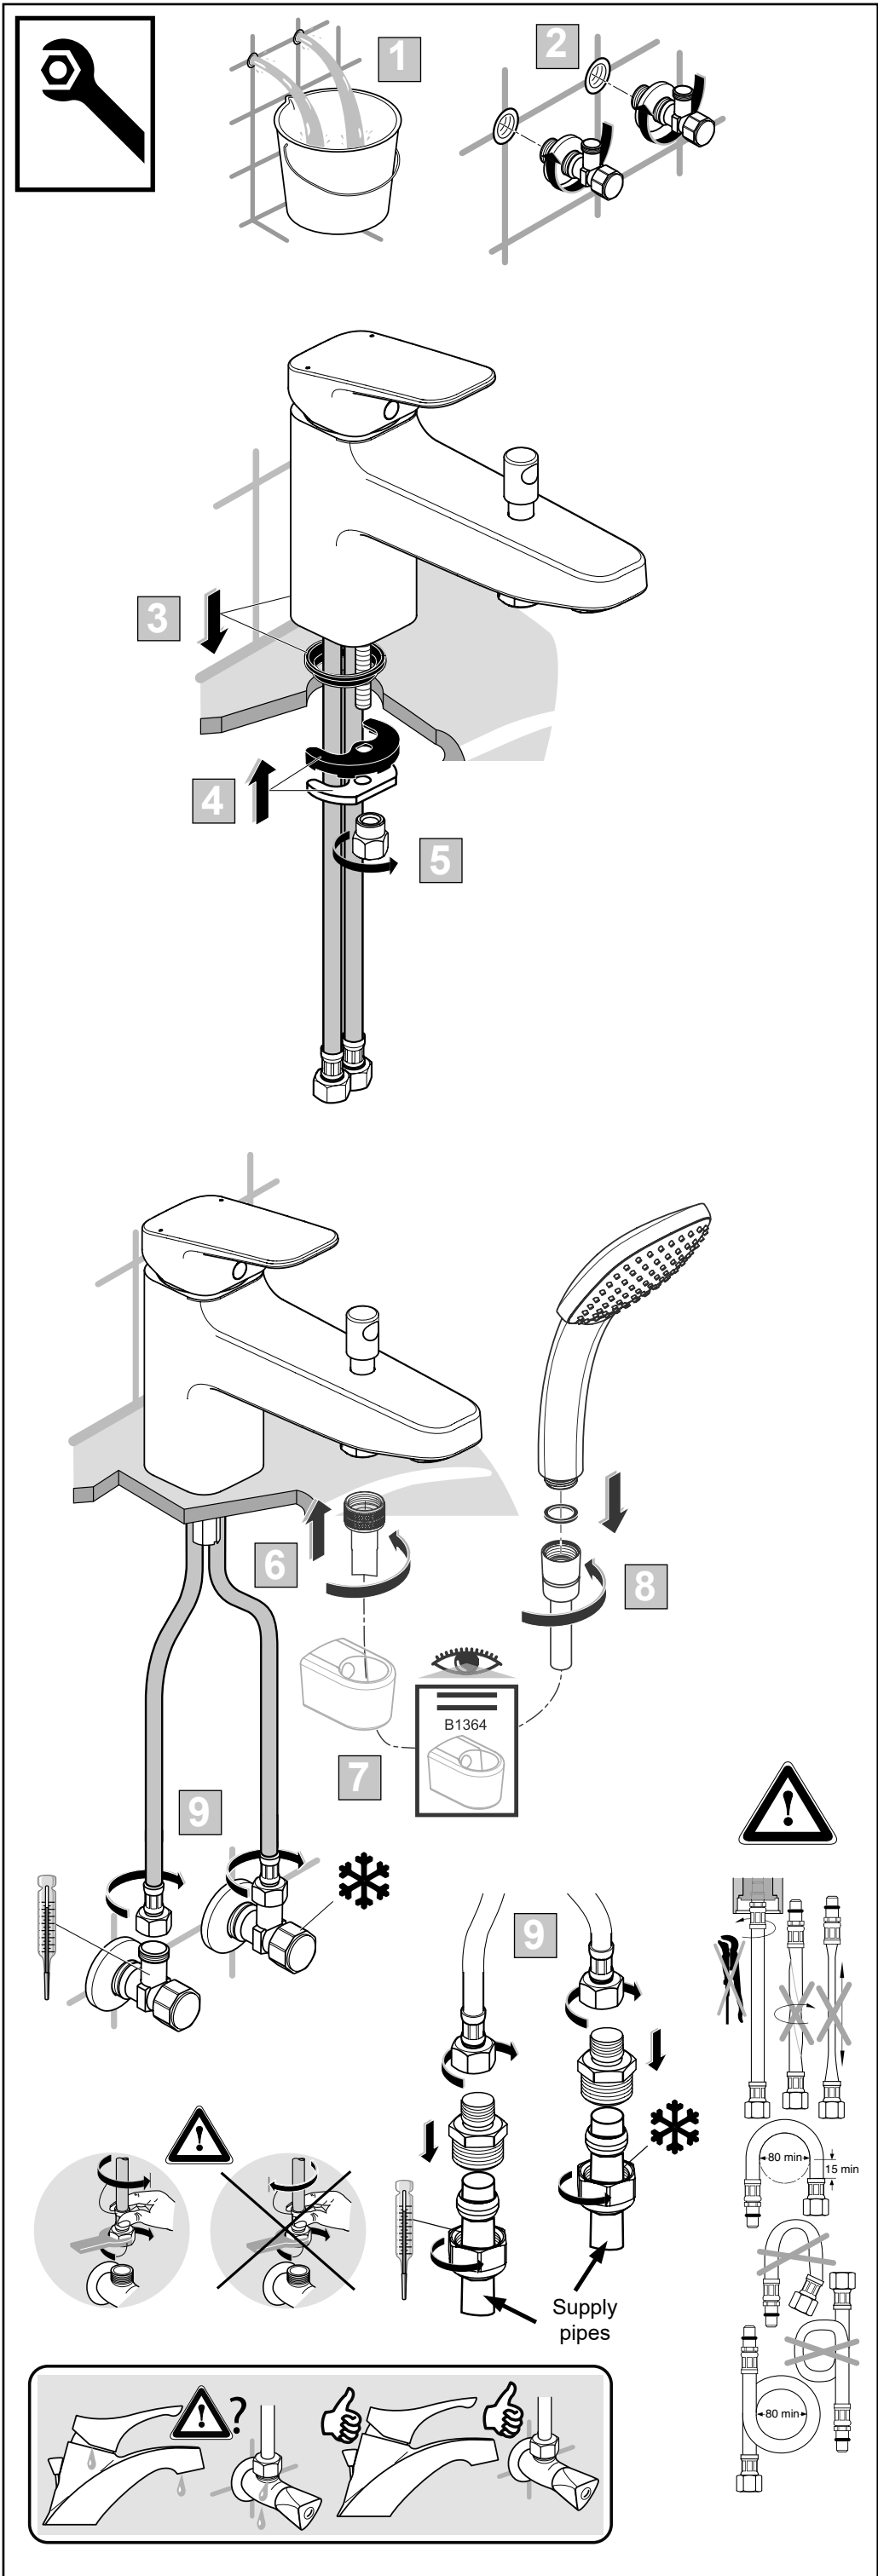

1 Turn the faucet handle to the right.

2 Turn the faucet handle to the left.

Warning: Do not use the faucet for hot water. The maximum temperature is 80°C.

P	T	°C	Q (1 bar)					
			0	1	2	3	4	5
0,3 MPa 3 bar	50°C	15°C	50	49	44	40	35	33
	65°C	15°C	65	63	57	50	44	40
	85°C	15°C	85	83	74	64	56	50

	P	bar		MAX. 10		5			Q	(1 bar)
	T	°C		MAX. 80		65			I/min	
						40			15	8