

WHAT YOU SHOULD KNOW BEFORE YOU BEGIN

- For your satisfaction and safety, read all instructions, cautions and warnings before installing or using this steaming hot water tap.
- Make sure that all electrical wiring and connections conform to local codes.
- A standard, earth (grounded) electrical outlet is required under the sink for the tap's electrical power.
- The wall outlet powering your tap must have electrical power supplied to it continuously.
- This outlet must be fused and should not be controlled by the same wall switch that operates the food waste disposer. Fuse/circuit breaker required is 10 amp for 230 volt (10 amp for 220-240 volt UK) and 15 amp for 120 volt.
- To ensure proper operation, this unit is not intended to be flushed with chlorine. If you suspect elevated levels of chlorine in your water, it is recommended to use our water filtration system.
- In Australia, all plumbing and electrical work must be completed by a qualified tradesperson.
- To prevent damage or unit not operating properly, the water pressure must be between 172 kPa - 862 kPa (1.7 bar - 8.6 bar; 25 psi - 125 psi). Ambient (room) temperature between 10°C and 38°C. In Australia, an Australian water mark approved 350 kPa set pressure limiting valve and dual check valve must be used.
- Moving parts inside the tank causing a rattling noise is normal.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ WARNING

Electric Shock Hazard: Using an ungrounded or improperly connected appliance can result in serious injury or death from electrical shock.

This appliance must be grounded. This steaming hot water tap is equipped with a cord that has a grounding conductor and a grounding pin. The plug must be connected to an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. **DO NOT** modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Check with a qualified electrician or serviceman if you are in doubt as to whether the steaming hot water tap is properly grounded.

⚠ WARNING

Personal Injury/Property Damage: This tank is a non-pressurized tank. **DO NOT** modify this system. **DO NOT** close vent tube or connect other type taps or valves to the tank. Use only the InSinkEerator tap. Use only parts provided. Contact an authorized InSinkEerator Service agent for repairs or replacement components.

⚠ WARNING



Fire Hazard: To minimize possibility of fire, **DO NOT** store flammable items such as rags, paper or aerosol cans near the tank. **DO NOT** store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

⚠ WARNING

Leak Hazard: Regularly inspect dispenser and plumbing fittings for leaks, which can cause property damage and could result in personal injury

A steaming hot water tap, like any water heater, has a limited life and will eventually fail. To avoid possible property damage and personal injury, this steaming hot water tap should be regularly examined for leakage and/or corrosion and replaced when necessary. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage. To check for corrosion, examine the appearance of the dispensed water in a clear glass once every three (3) months. If there is any discoloration or rusty appearance unplug and drain unit. If the water discoloration remains after draining and refilling unit, discontinue use and contact an authorized InSinkEerator service agent.

PARTS INCLUDED

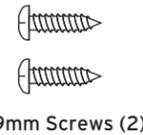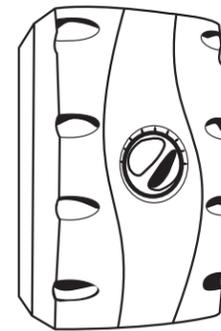

19mm Screws (2)



Snap connect fitting not included. Required when replacing tank manufactured prior to January 2006. Call the AnswerLine® 1-800-558-5700 to order.

⚠ WARNING

- **DO NOT** alter or remove the ground pin from power cord.
- Using an ungrounded appliance can result in serious injury or death from electric shock.
- This appliance must be grounded – the power cord is equipped with an equipment grounding conductor and a grounding pin. The plug must be connected to an appropriate outlet, properly installed and grounded in accordance with all local electrical codes and ordinances.

MOUNT TANK

STEP 1 2 3 4 5




Hang new tank on mounting bracket or screws.

NOTICE


Water must flow from faucet prior to plugging unit into electrical outlet. **DO NOT** plug in yet.

PREPARATION

STEP 1 2 3 4 5

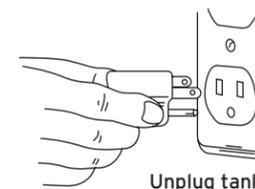

Unplug tank.

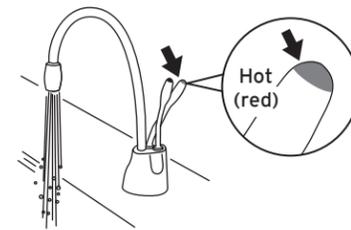


Run water from tank until cool.




Turn off water supply.

CONNECT LINE


STEP 1 2 3 4 5

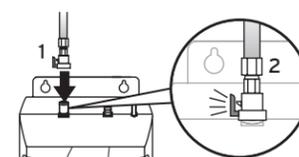

Attach inlet tube.

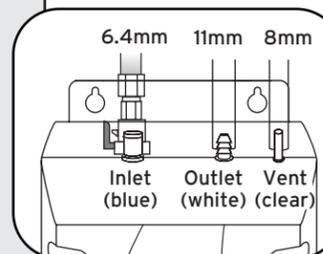

Inlet (blue) Outlet (white) Vent (clear)

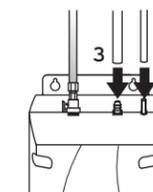


Attach outlet and vent tubes to fittings.

Note: DO NOT plug in yet.


Note: Snap connect fitting not included.

REMOVE LINE/TANK


STEP 1 2 3 4 5

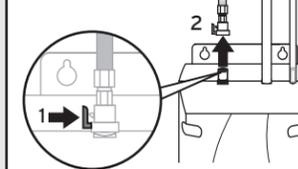


Remove inlet tube.

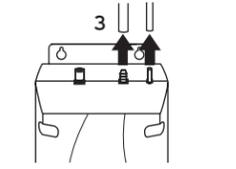

Remove outlet and vent tubes from fittings.

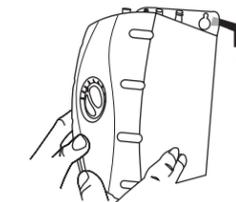

Lift old tank off mounting bracket or screws.

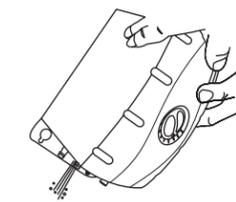

Drain water into empty sink or container.


Note: A minimal amount of water might spill when removing it from the cabinet. Have a towel available for clean-up.

FILL TANK & CONNECT POWER


STEP 1 2 3 4 5



Turn on water supply.

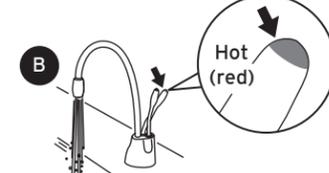

Activate **HOT** handle and hold until water flows from the spout (1-2 min.) To flush lines, run the water for at least 2 min. (both hot and cold handles if applicable).

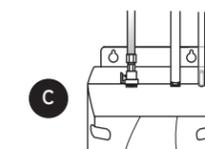


Check for leaks around fittings.



If no leaks, plug in tank.

Note: Gurgling or hissing is normal during initial heating cycle. Allow 12-15 minutes for water to reach desired temperature.

PARTS INCLUDED

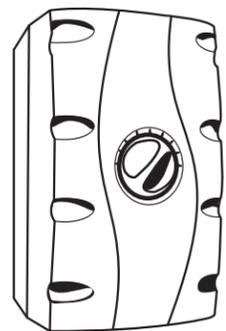

19mm Screws (2)




Snap connect fitting not included. Required when replacing tank manufactured prior to January 2006. Call the AnswerLine® 1-800-558-5700 to order.

WARNING


- **DO NOT** alter or remove the ground pin from power cord.
- Using an ungrounded appliance can result in serious injury or death from electric shock.
- This appliance must be grounded – the power cord is equipped with an equipment grounding conductor and a grounding pin. The plug must be connected to an appropriate outlet, properly installed and grounded in accordance with all local electrical codes and ordinances.

CONNECT LINE

STEP 1 2 3 4 5

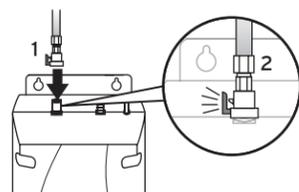

Attach inlet tube.

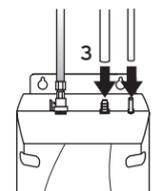

Attach outlet and vent tubes to fittings.

6.4mm 11mm 8mm

Inlet (blue) Outlet (white) Vent (clear)

Note: Snap connect fitting not included.

PREPARATION

STEP 1 2 3 4 5



Turn off water supply.



TANK MUST BE MOUNTED LEVEL TO ENSURE PROPER OPERATION.

Mount tank vertically within 400mm or less of faucet water lines and within 760mm or less of a standard grounded outlet.

Use a pencil to mark locations for two hanging screws.


WARNING

Personal Injurt/Property Damage: Tank must be located within 400mm of faucet and within 760mm or less of a standard grounded outlet. **DO NOT** extend plumbing lines or use an extension cord set with this unit.

MOUNT TANK

STEP 1 2 3 4 5


Leave 6.4mm for hanging tank

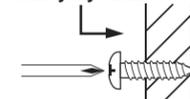

Screws provided are for use in wood only. Use wall anchors (not supplied) for installation into drywall.

Pre-drill 3mm pilot holes.

Install screws leaving 6.4mm exposed.

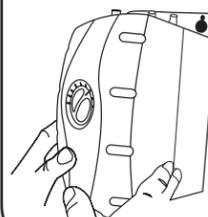

Hang tank on screws.

Tighten screws 1/2 turn clockwise.

DO NOT overtighten screws.

NOTICE


Water must flow from faucet prior to plugging unit into electrical outlet. **DO NOT** plug in yet.

FILL TANK

STEP 1 2 3 4 5




Turn on water supply.

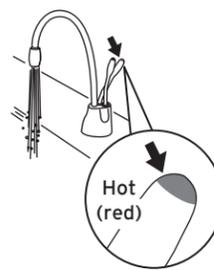


Activate the **HOT** handle and hold it until water flows from the spout (approximately 1 to 2 minutes).

Run the water for at least 2 minutes to flush lines (both the hot and cold handles independently if applicable).

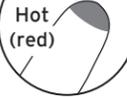


CONNECT POWER

STEP 1 2 3 4 5

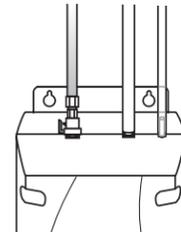

Check for leaks around fittings.

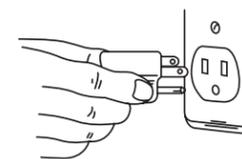

If no leaks, plug in tank.

Note: For tap installation, refer to "Installation" section in the Use and Care manual included with the tap.

Note: Gurgling or hissing is normal during initial heating cycle. Allow 12-15 minutes for water to reach desired temperature.

WARRANTY

HWTf (tank used with filter):	2-year warranty
HWTank (tank used without filter):	1-year warranty
HWT-1H:	1-year warranty

This warranty is provided by InSinkErator, a business unit of Emerson Electric Co., ("InSinkErator" or "Manufacturer" or "we" or "our" or "us") to the original consumer owner of the InSinkErator product with which this warranty is provided (the "InSinkErator Product"), and any subsequent owner of the residence in which the Product was originally installed ("Customer" or "you" or "your").

InSinkErator warrants to Customer that your InSinkErator Product will be free from defects in materials and workmanship, subject to the exclusions described below, for the "Warranty Period", commencing on the later of: (a) the date your InSinkErator Product is originally installed, (b) the date of purchase, or (c) the date of manufacture as identified by your InSinkErator Product serial number. You will be required to show written documentation supporting (a) or (b). If you are unable to provide documentation supporting either (a) or (b), the Warranty Period commencement date will be determined by Manufacturer, in its sole and absolute discretion, based upon your InSinkErator Product serial number.

What is Covered

This warranty covers defects in materials or workmanship, subject to the exclusions below, in InSinkErator Products used by a consumer Customer for residential use only, and includes all replacement parts and labor costs. YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE INSINKERATOR PRODUCT.

What is not Covered

This limited warranty does not extend to and expressly excludes:

- Losses or damages or the inability to operate your InSinkErator Product resulting from conditions beyond the Manufacturer's control including, without limitation, accident, alteration, misuse, abuse, neglect, negligence (other than Manufacturer's), failure to install, maintain, assemble, or mount the InSinkErator Product in accordance with Manufacturer's instructions or local electrical and plumbing codes.
- Wear and tear expected to occur during the normal course of use, including without limitation, cosmetic rust, scratches, dents or comparable and reasonably expected losses or damages.

In addition to the above exclusions, this warranty does not apply to InSinkErator Products installed in a commercial or industrial application.

No Other Express Warranty Applies

This warranty is the sole and exclusive warranty provided to the Customer identified above. No other express warranty, written or verbal, applies. No employee, agent, dealer, or other person is authorized to alter this limited warranty or make any other warranty on behalf of Manufacturer. The terms of this warranty shall not be modified by the Manufacturer, the original owner, or their respective successors or assigns.

What we will do to Correct Problems

If your InSinkErator Product does not operate in accordance with the documentation provided to you, or you have questions concerning your InSinkErator Product or how to determine when service is needed, please see attached Service Agency List.

The following information must be provided as part of your warranty claim: your name, address, phone number, your InSinkErator Product model and serial number, and if necessary, upon request, written confirmation of either: (a) the date shown on your installation receipt, or (b) the date shown on your purchase receipt.

Manufacturer or its authorized service representative will determine, in its sole and absolute discretion, if your InSinkErator Product is covered under this warranty. You will be given the contact information for your closest authorized InSinkErator Service Center. Please contact your InSinkErator Service Center directly to receive in home warranty repair or replacement service. Only an authorized InSinkErator service representative may provide warranty service. InSinkErator is not responsible for warranty claims arising from work performed on your InSinkErator Product by anyone other than an authorized InSinkErator service representative.

If a covered claim is made during the Warranty Period, Manufacturer will, through its authorized service representative, either repair or replace your InSinkErator Product. Cost of replacement parts or a new InSinkErator Product, and cost of labor for repair or installation of the replacement InSinkErator Product are provided at no cost to you. Repair or replacement shall be determined by Manufacturer or its authorized service representative in their sole discretion. All repair and replacement services will be provided to you at your home. If Manufacturer determines that your InSinkErator Product must be replaced rather than repaired, the warranty on the replacement InSinkErator Product will be limited to the unexpired term remaining in the original Warranty Period.

Limitation of Liability

TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL MANUFACTURER OR ITS AUTHORIZED SERVICE REPRESENTATIVES BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING ANY ECONOMIC LOSS, WHETHER RESULTING FROM NONPERFORMANCE, USE, MISUSE OR INABILITY TO USE THE INSINKERATOR PRODUCT OR THE MANUFACTURER'S OR ITS AUTHORIZED SERVICE REPRESENTATIVE'S NEGLIGENCE. MANUFACTURER SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY DELAY IN PERFORMANCE AND IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER SORT OR OTHERWISE), SHALL MANUFACTURER'S LIABILITY TO YOU EXCEED THE PRICE PAID BY THE ORIGINAL OWNER FOR THE INSINKERATOR PRODUCT.

The term "consequential damages" shall include, but not be limited to, loss of anticipated profits, business interruption, loss of use or revenue, cost of capital or loss or damage to property or equipment.

Check out our full range of Kitchen Products

Kitchen Sinks

Stainless Steel Kitchen Sinks

Granite Composite Kitchen Sinks

Glass Kitchen Sinks

Ceramic Kitchen Sinks

Franke Kitchen Sinks

Kitchen Taps

Contemporary Kitchen Taps

Traditional Kitchen Taps

Franke Kitchen Taps

Pull out Rinser Kitchen Taps

Instant Boiling Water Taps

Insinkerator Waste Disposal Units

plumbworld
Big brands, small prices.