 
 
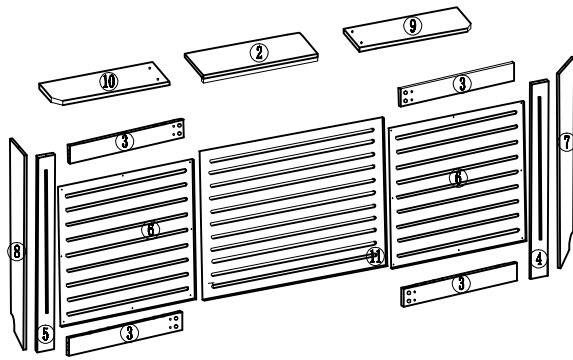 



# Instruction Manual

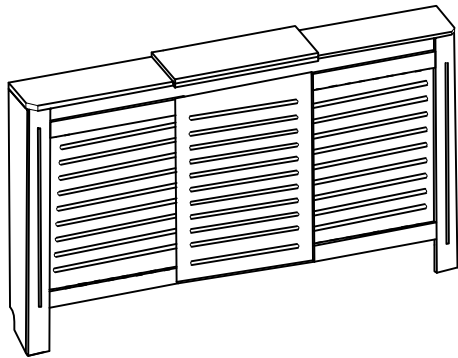

## Tools needed

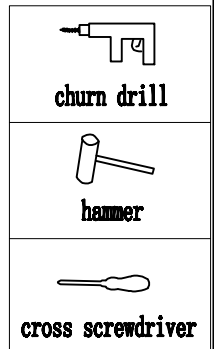

 Please note that there is no No.1 panel !

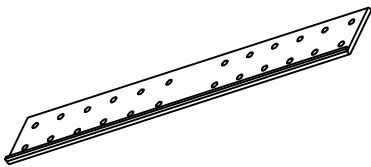

② x1 850\*205\*24mm



 
③ x4 550.5\*105\*12mm




④ x1 803\*110\*12mm




⑤ x1 803\*110\*12mm

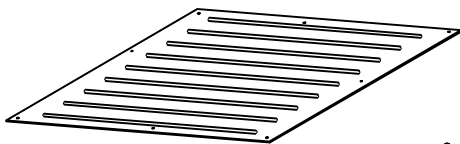


⑥ x2 540\*479\*5mm

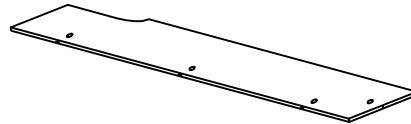 


⑦ x1 803\*168\*12mm

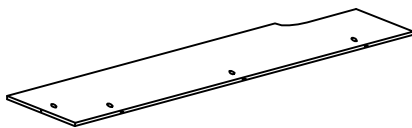 


⑧ x1 803\*168\*12mm

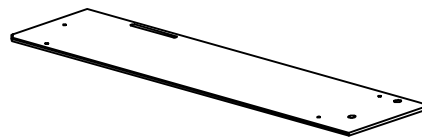 

⑨ x1 691\*190\*12mm

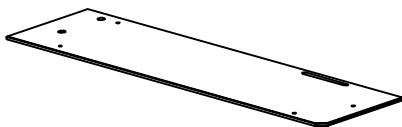 

⑩ x1 691\*190\*12mm

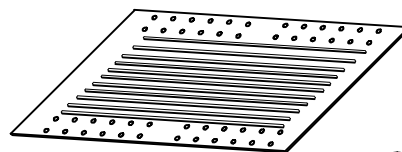 

⑪ x1 850\*649\*12mm



Ax2



Bx14



Cx14



Dx8



Ex14



Fx4



Gx4



Hx2



Ix8





Jx12







Kx1



 
 
Using a screwdriver, screw in the #B screws securely. Please do not over tighten as it may cause wood to splinter. The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel. Use screwdriver to tighten securely, but avoid over tightening, screws may protrude through the panel.





1 2

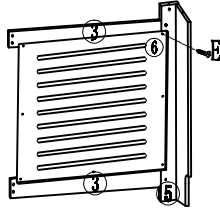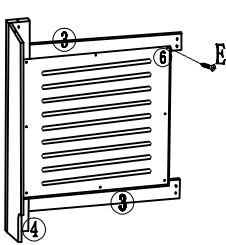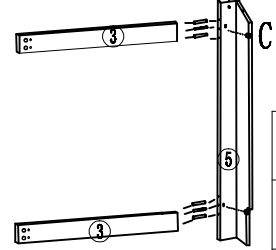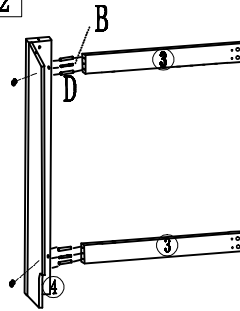    



3 4

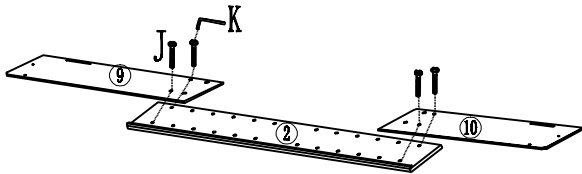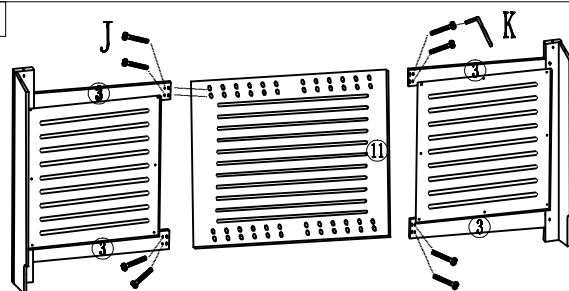  

5 6

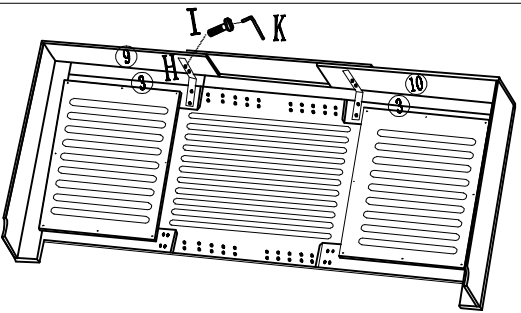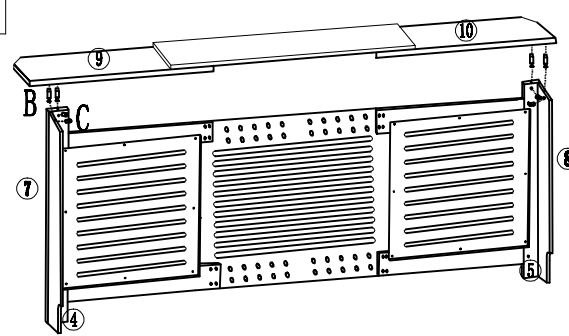  

7 8

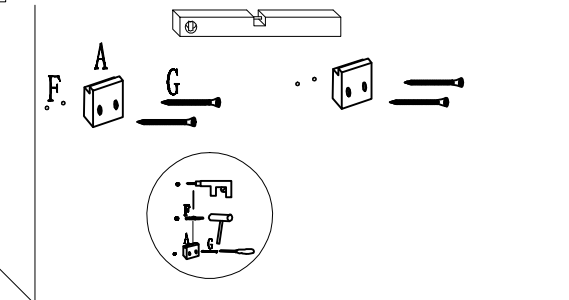  

9

