

Attention!

Maximum operating pressure 6 Bar.

Maximum operating temperature 120 °C

Please ensure that the PH of the heating system water is 6-8.

Sentinel x100 or Fernox F1 or similar products which can be used to balance the heating system PH.

Please follow the guidelines listed above to ensure that your product does not void its warranty

Installation Instructions.

« Ensure that all the parts are listed before starting to install your radiator.

* Valves not provided.

« This radiator is designed for use on closed central heating systems only.

* Minimum 12cm from floor to bottom of radiator.

« Minimum 10cm from alcove or shelf from top of radiator.

o Minimum 2.5cm from back of radiator to wall.

«+ Please ensure that there are no hidden wires or pipes before drilling holes for brackets.

« Please make sure that you are using the correct plug for your wall.

The ones supplied are suitable only for hard masonry walls.

« Noting the distance between bracket centres mark out the position of the brackets on the wall.

« Screw mounting bracket 1 to the wall then guide mounting bracket 2 into mounting bracket 1.

« Attach the cap to the bracket at the front of the towel rail.

« Connect the water flow using the appropriate 1/2inch BSP valves sealed with PTFE tape on the threads.

« Fill the towel rail and expel any trapped air using the bleed valve at the top of the radiator.

» Wipe down the radiator using a clean damp cloth. Never use scourers or abrasives as these will damage the finish.