


# PUREAIR SENSE

Bathroom Fan with Odour Sense Technology

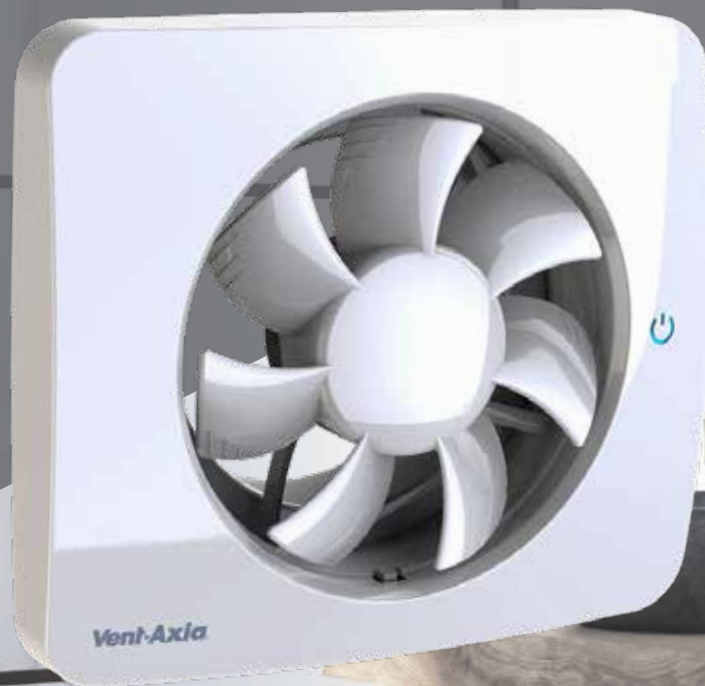


Vent-Axia Connect App User Guide

A product by  
**Vent-Axia**

This guide is designed to aid in the simple set-up and demonstration of the Vent-Axia PureAir Sense Bathroom Fan with the Vent-Axia Connect App.


The Vent-Axia PureAir Sense fan can also be used without the app and can revert to factory settings if preferred.

A product by  
**Vent-Axia**

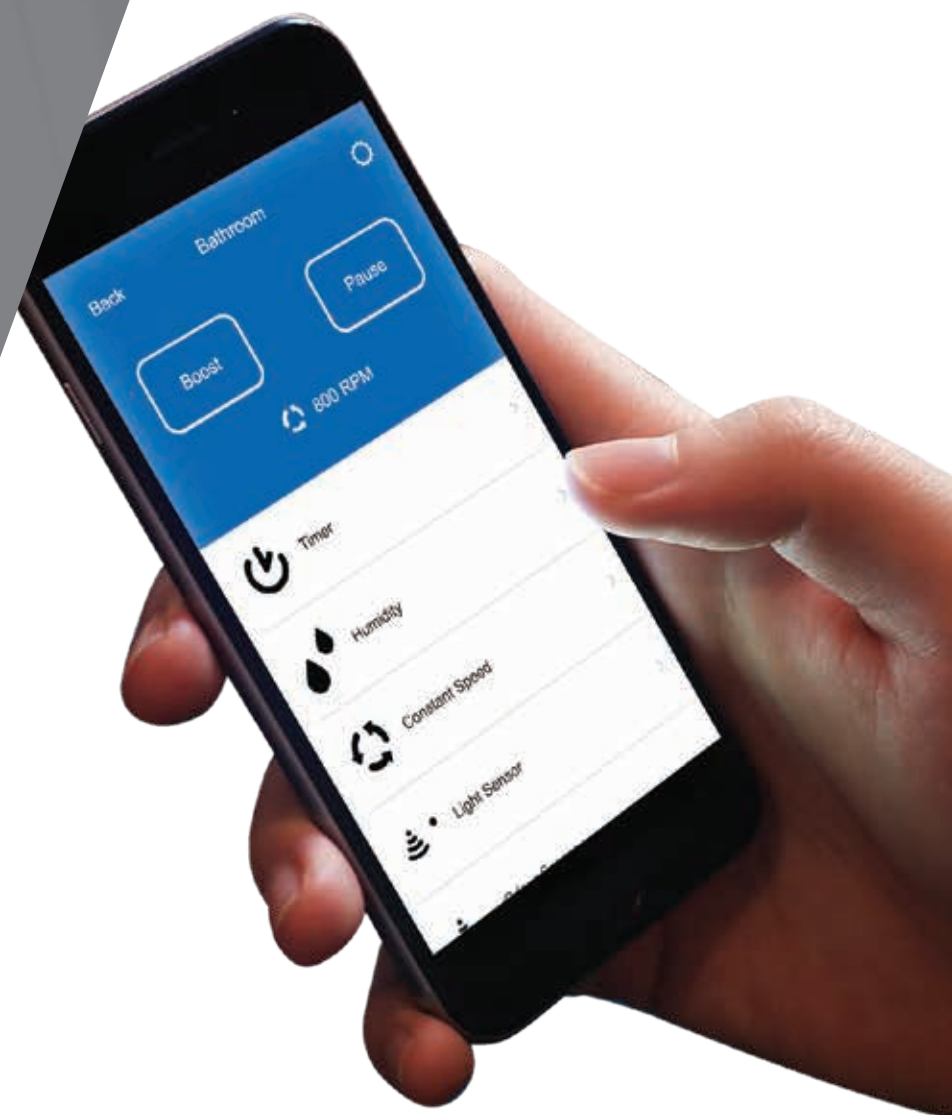

1. Once you have downloaded the app, simply start by pressing the  symbol in the top right hand corner of the app to add your new fan.

A product by  
**Vent-Axia**<sup>®</sup>

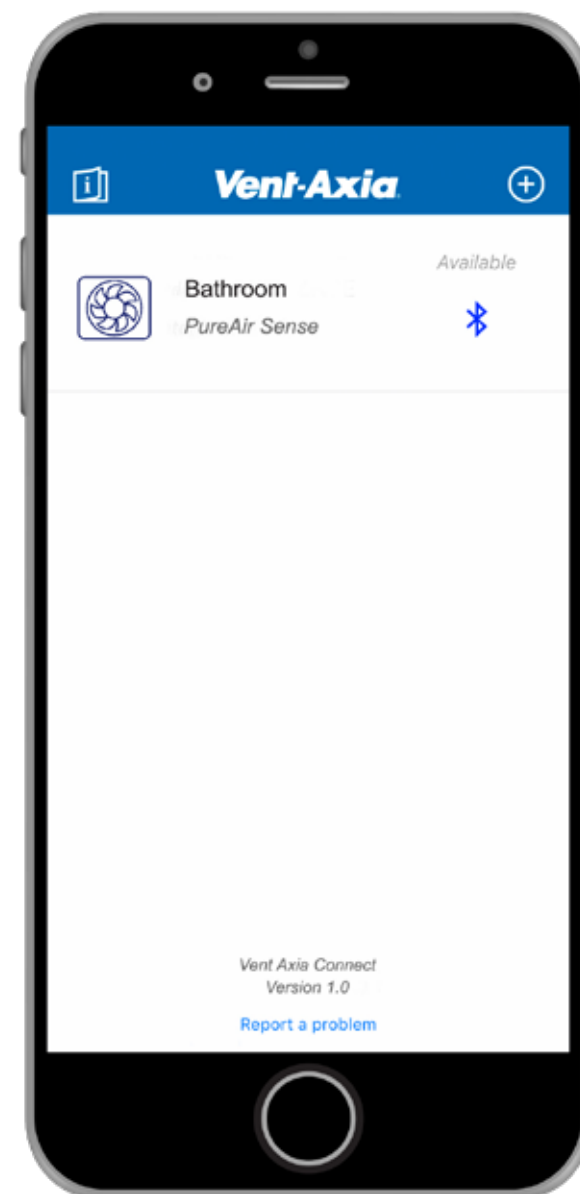

A product by  
**Vent-Axia**

2. With your fan switched on, press the **Function (Power)** symbol in the middle of the fan's touch panel to illuminate all the available functions in blue.

3. Then press and hold the **Connectivity** icon at the bottom of the touch panel.

Once the symbol flashes, the app and fan are connected.




Function

Connectivity

4. The fan will automatically connect to the app, with no need to input passwords or pin numbers.

Click the **Finalise Set Up** button to finish.

A product by  
**Vent-Axia**

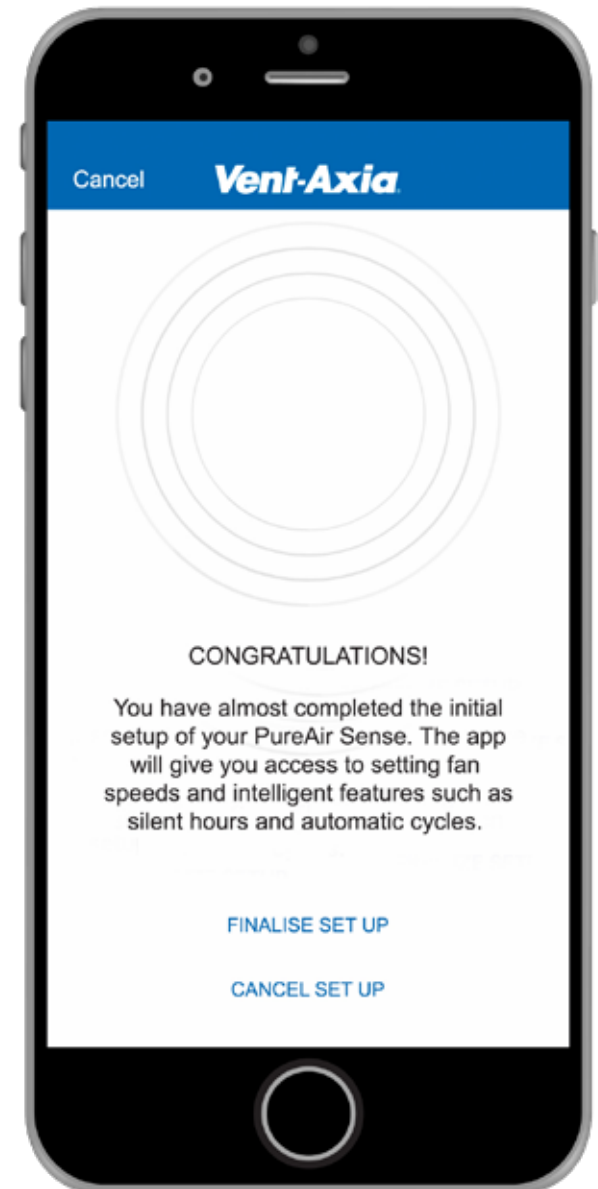

5. Give a name to your fan and click **Done**.

If you have more than one fan, you can name the fans to suit such as:

- Family Bathroom
- En-Suite 1
- En-Suite 2
- Spare Room
- Utility Room
- Kitchen

A product by  
**Vent-Axia**




A product by  
**Vent-Axia**


6. Select your newly named PureAir Sense fan to bring up the main Function menu.

As well as a selection list of all the fan's available functions (Odour Sensor, Timer, Humidity, Constant Speed, etc.) quick access **Boost** and **Pause** buttons can also be selected.


The fan's current Speed setting (RPM) is also displayed just below.

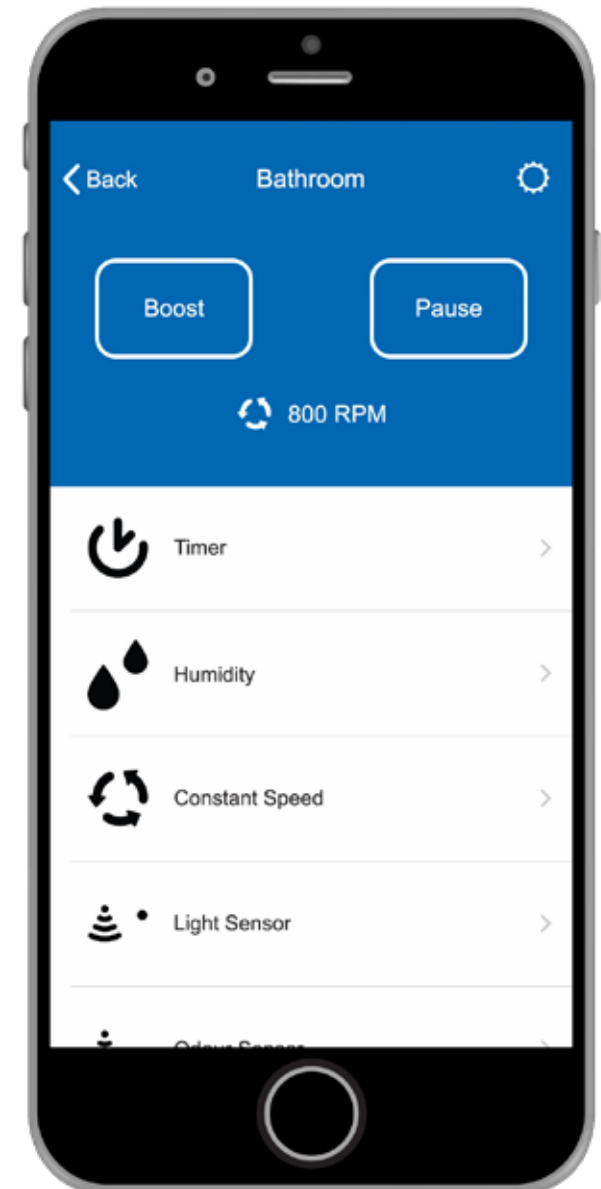

A product by  
**Vent-Axia**


7. Select the  **Timer** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM, the Running Time and the Delay Start settings.

Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

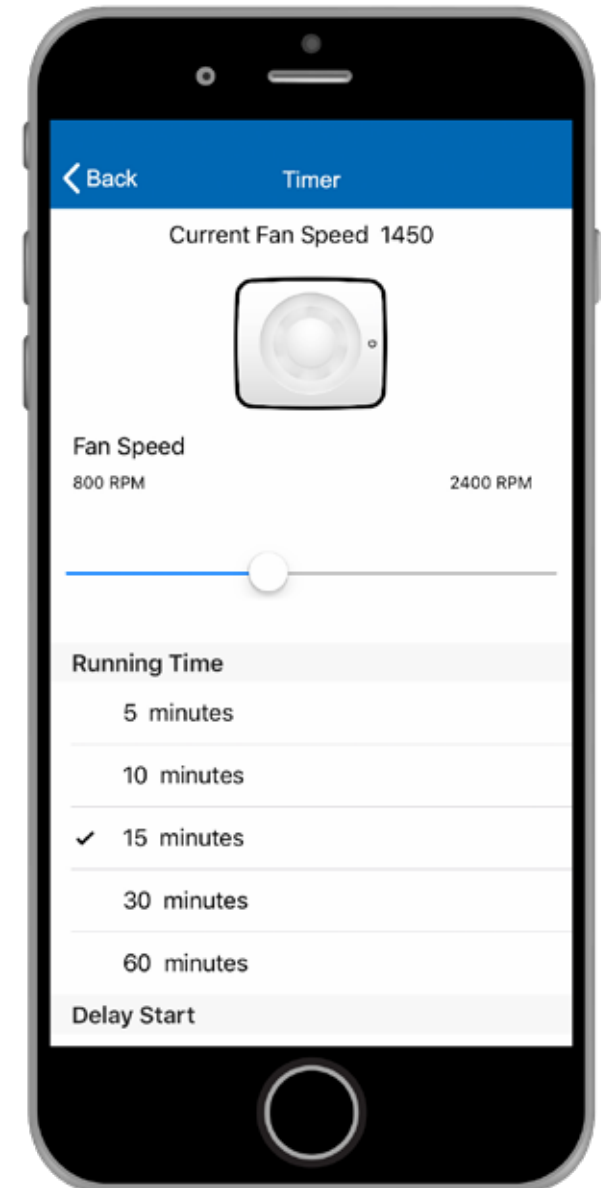




A product by  
**Vent-Axia**

8. Select the  **Humidity** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM, along with the fan's humidistat sensitivity level between **No Detection**, **Low Detection**, **Medium Detection** and **High Detection**.

Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

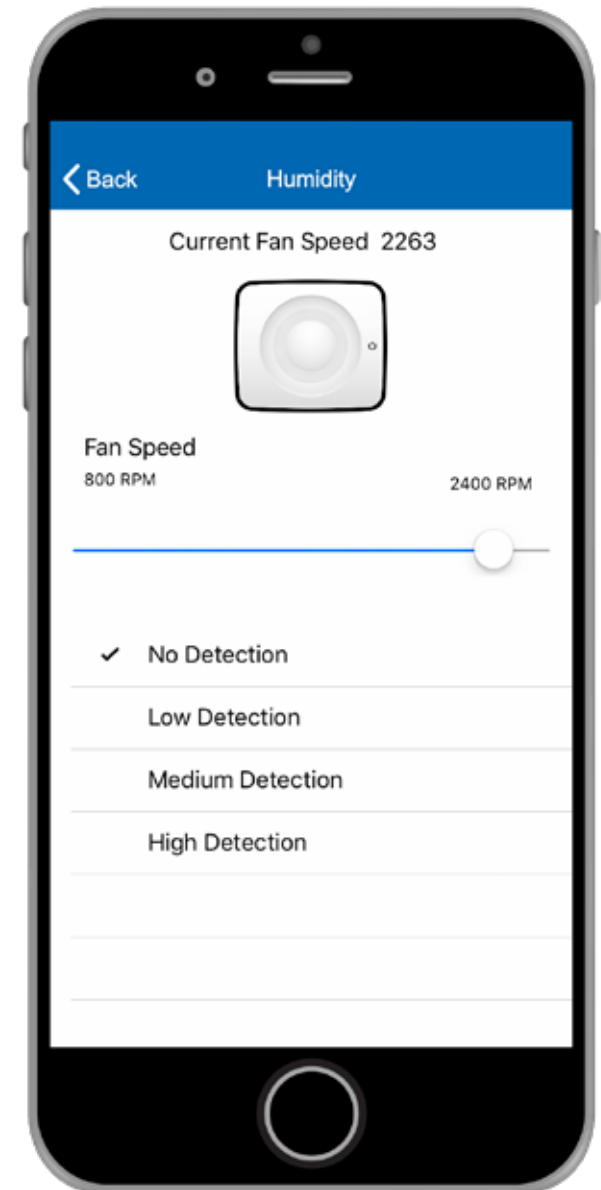


A product by  
**Vent-Axia**

9. Select the  **Constant Speed** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM.

You can also set the fan to intermittent or continuous running by selecting the **Disabled** or **Activated** option in the Constant Speed Mode menu.

Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

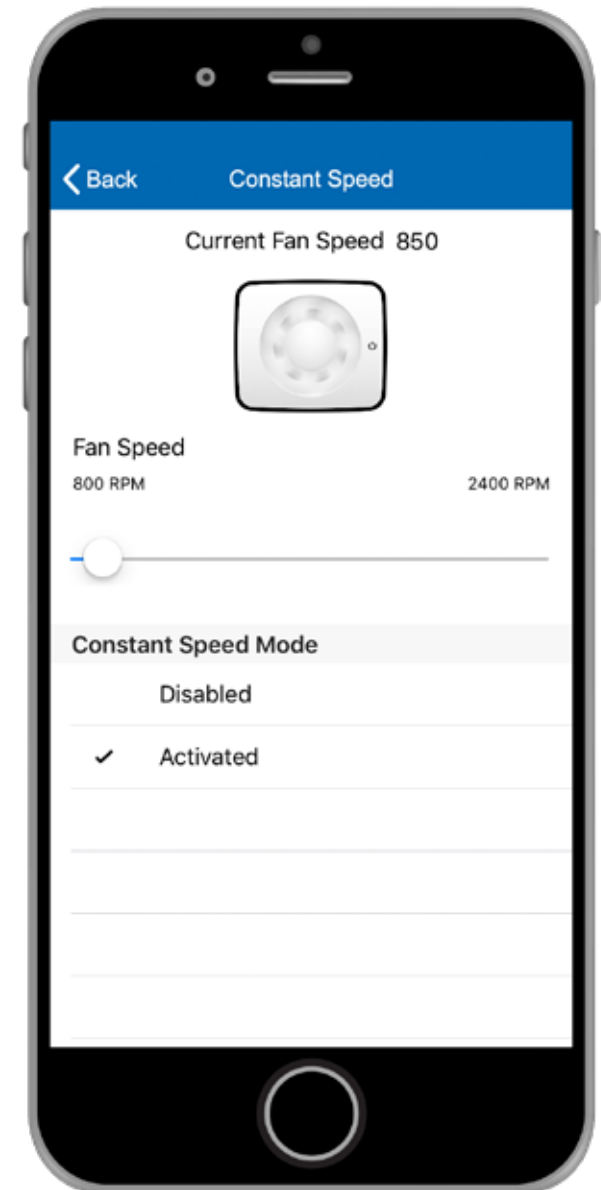


A product by  
**Vent-Axia**


10. Select the  **Light Sensor** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM.

You can also adjust the sensitivity of the sensor between **No Detection**, **Low Detection**, **Medium Detection** and **High Detection**.

Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

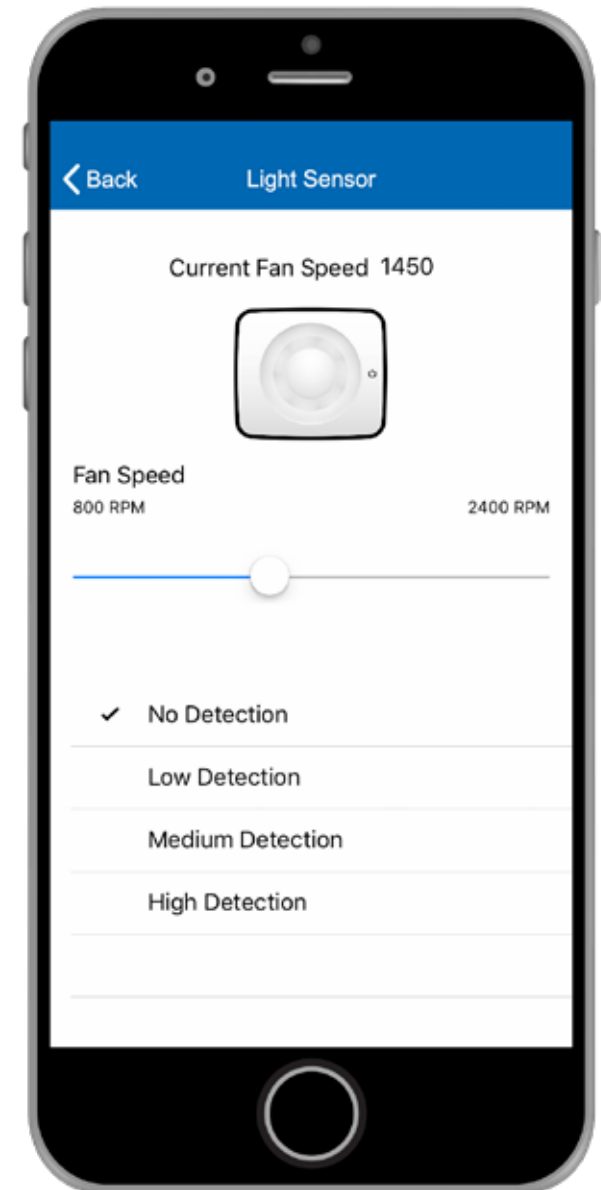


A product by  
**Vent-Axia**


11. Select the . **Odour Sensor** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM.

You can also adjust the sensitivity of the sensor between **No Detection**, **Low Detection**, **Medium Detection** and **High Detection**.

Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

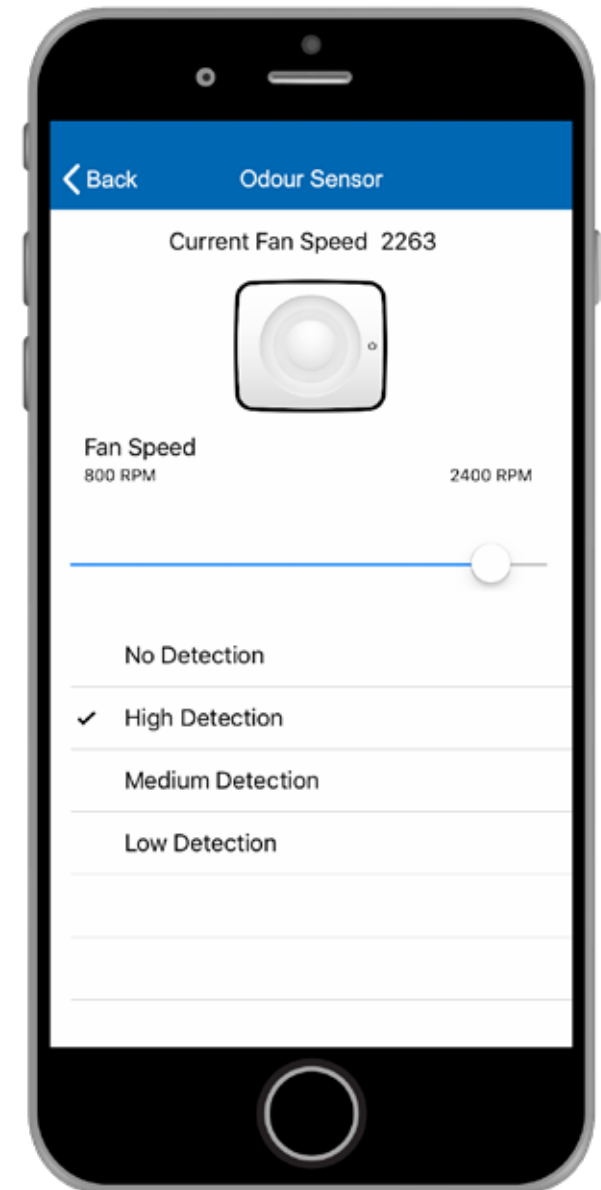


A product by  
**Vent-Axia**

12. Select the  **Airing** function in the Function menu to customise the Fan Speed on this setting between 800 and 2400 RPM.

You can also customise active Airing Settings from **Not Active** up to 120 minutes.


Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

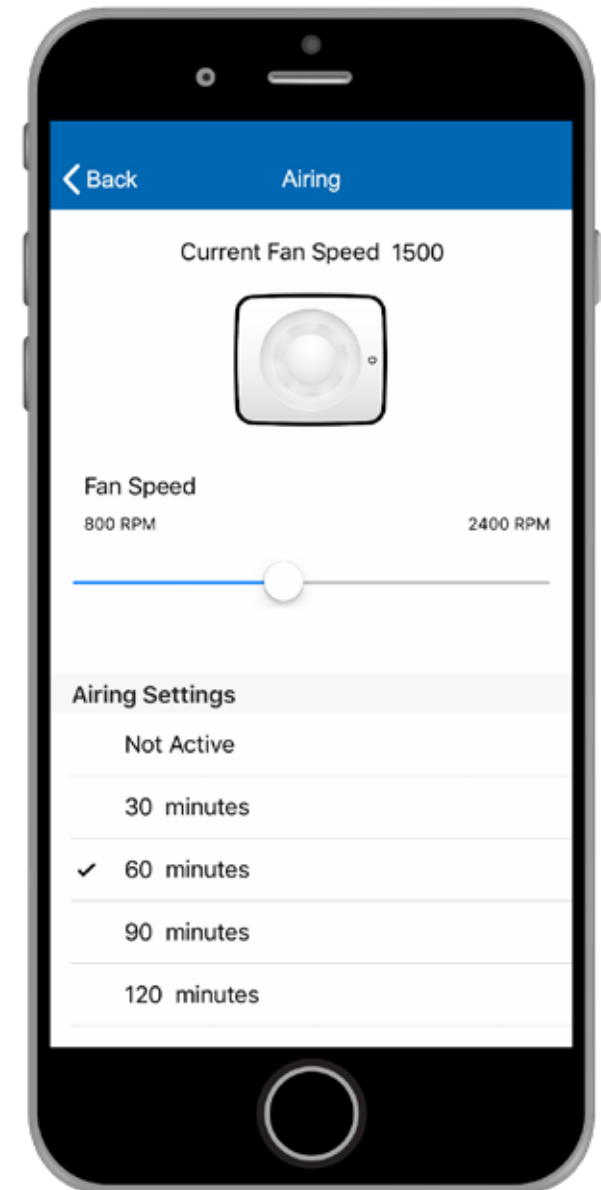

A product by  
**Vent-Axia**

13. You can also select the **|| Pause** function at the bottom of the Function menu to customise the Pause button timing settings from **30 minutes** up to **120 minutes**.


Select the **<Back** arrow in the top left of the screen to head back to the main Function menu.

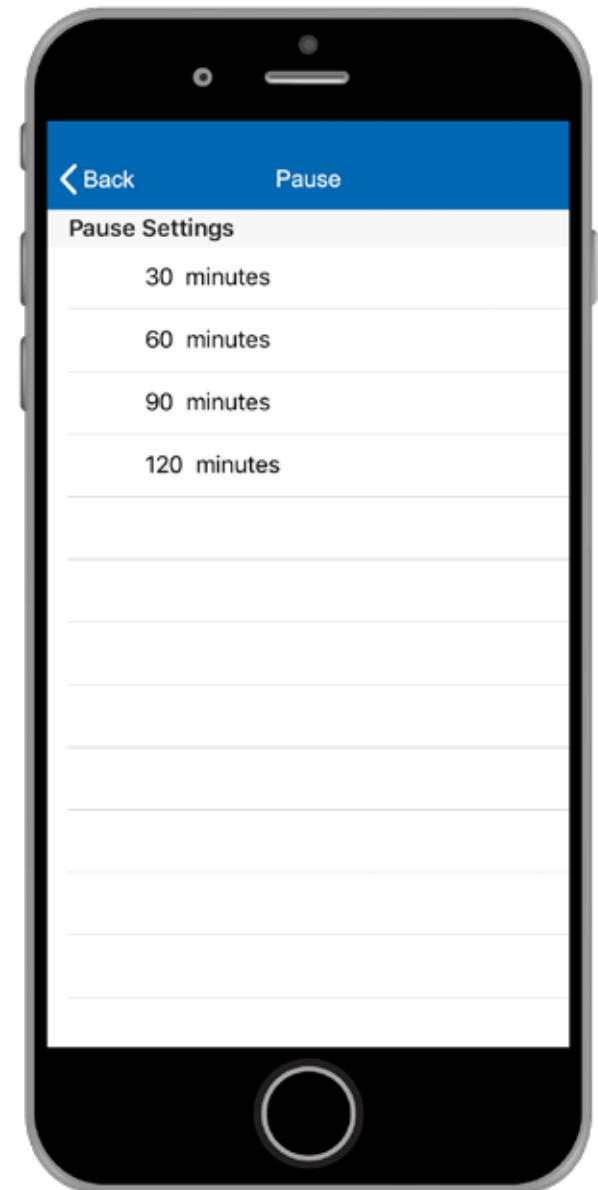

A product by  
**Vent-Axia**


14. If at any time you want to change the name of the product or delete it from the app completely, simply select the **Settings wheel**  in the top right hand corner of the app menu.

Select the **<Back** arrow in the top left of the screen to head back to the previous menu.

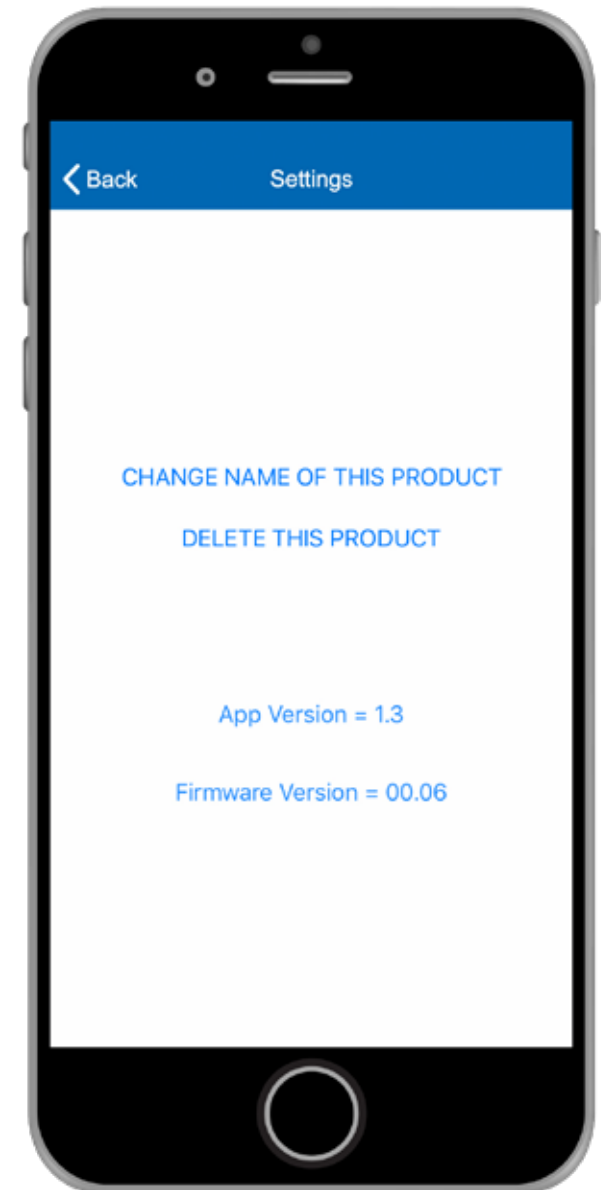

15. In addition to the Settings menu, if you want to delete your fan from the app you can also head back to the main home screen using the <Back arrow and simply swipe left on the fan product name.

A product by  
**Vent-Axia**

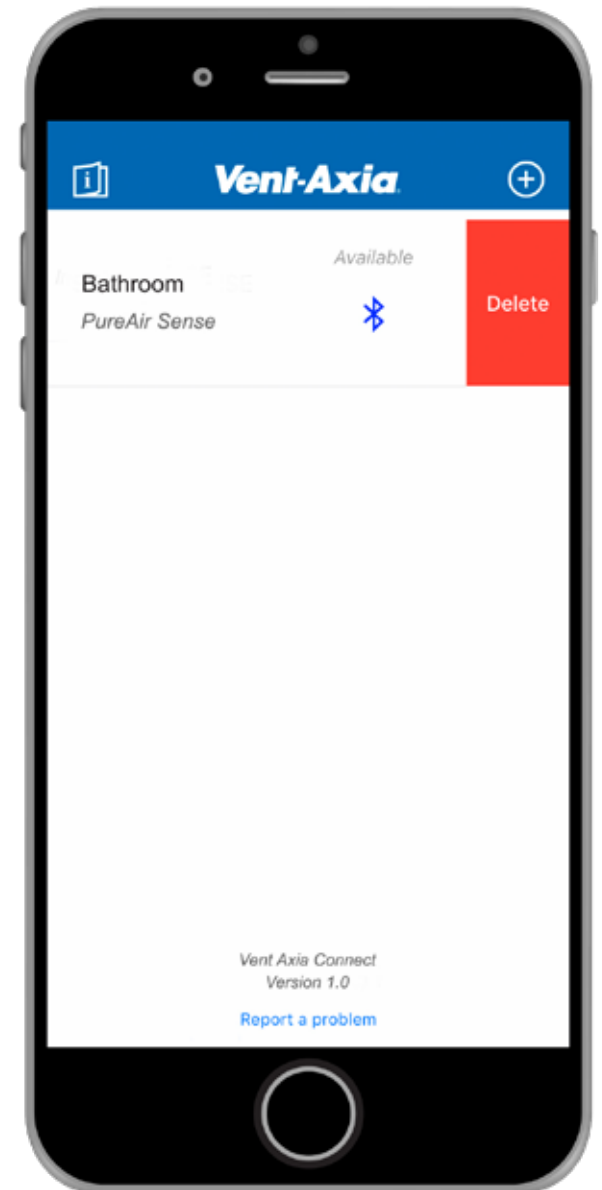



The Vent-Axia Connect App can be downloaded to Android and IOS devices. The app allows for simple connection with all Vent-Axia connected products.

See the Vent-Axia website for detailed information on all fan functions with and without the app: [www.vent-axia.com](http://www.vent-axia.com)



**Vent-Axia**<sup>®</sup>

**Head Office:**

Fleming Way, Crawley, West Sussex, RH10 9YX

**Sales Enquiries:**

Tel: 0844 8560590 Fax: 01293 565169

**Technical Support:**

Tel: 0344 8560594 Fax: 01293 532814