

4iE

Smart WiFi Thermostat

Installation Manual




For technical help
warmupsmart.com
0345 345 2288

Warmup


Pack Contents	3
Mounting/Positioning.....	4
Wiring Connections	5
Assembling the 4iE.....	7
Getting Started.....	8
Registration	9
Welcome	11
Programming.....	12
Energy Monitoring.....	16
Troubleshooting	17
Settings.....	22
Technical Specifications.....	23

4iE

Smart WiFi Thermostat

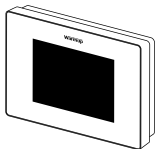

Thermostat Face

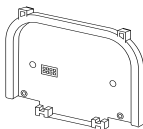

Back Plate



Floor Sensor

IMPORTANT INFORMATION: Installation should only be carried out by a qualified and competent electrician. The 4iE requires a permanent 230V supply from a 30mA RCD protected circuit in accordance with the current edition of the BS7671 Wiring Regulations.

The 4iE and its power supply should be isolated from the mains supply throughout the installation process. Ensure that wires are fully inserted into the terminals and secured. Any free strands should be trimmed, as they could otherwise cause a short-circuit.

Electrical installation to be in accordance with latest edition of BS7671 Wiring Regulations

4iE


Step 1 - Install Back Plate

Before making any permanent fixtures Warmup recommends identifying your preferred location for the 4iE. It should be located in an area with good ventilation. It should not be beside a window/door, in direct sunlight or above another heat generating device (e.g. radiator or TV).

Ensure the distance from your router to the 4iE is not too great. This will ensure the wireless connection is not subject to range or interference issues once installed.


BATHROOM INSTALLATIONS: When installing a 4iE within a bathroom it **MUST** be mounted outside of Zone 2 in accordance with the Wiring Regulations. If it is not possible to identify a suitable location outside of Zone 2 within the bathroom, then it is recommended that the 4iE is installed in the adjacent room and set to control the heating by floor temperature only. When installed in this way, it is not possible to directly control the heating based on the room air temperature, only the floor surface temperature.

1

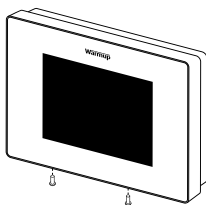

Loosen both screws at the bottom of the 4iE and remove the Back Plate

2

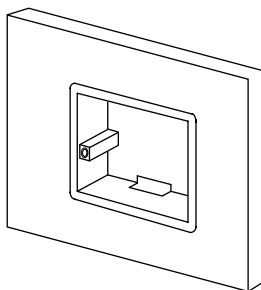


Install a 35mm deep electrical back box in your preferred thermostat location


4iE

Step 2 - Wiring Connections

Electric Underfloor Heating

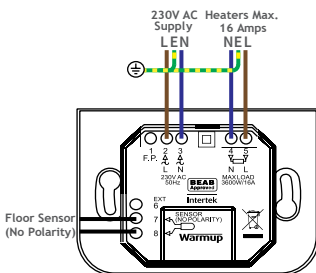

Master/Relay Function

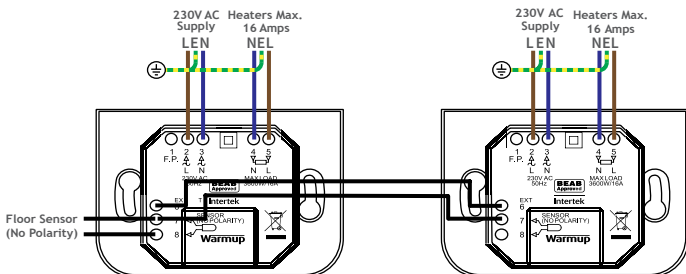

Master/relay function: Used to control loads greater than 16A. Heaters will be split across two 4iE's, one being the master and the other being the relay (slave). Only one floor sensor is required, wired into terminals 7 & 8 of the Master 4iE.

Wiring Connections: Use low voltage electrical cables to link terminals 6 & 7 of the Master and Relay.


Thermostat Setup: Settings > Adv. settings > Heater setting > Ext output

NOTE: Set the relay 4iE to relay first


4iE

Step 2 - Wiring Connections

Hydronic Underfloor Heating

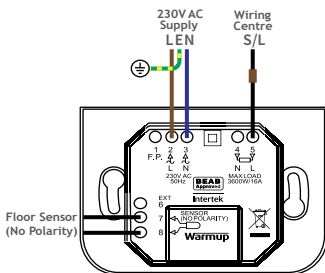

Central Heating

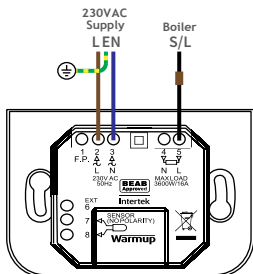

For extra low voltage or volt-free systems a contactor must be used.


Connecting the 4iE directly to extra low voltage or volt-free boilers may cause damage to the boiler circuit.



Isolate the thermostat from the mains supply throughout the installation process

4iE

Step 3 - Reattach 4iE Face

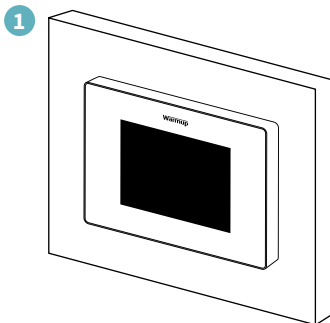


Reattach the 4iE face to the Back Plate and tighten both screws to secure. You may now restore power to the thermostat and begin setup.

4iE

Step 4 - Getting Started

Depending on who has installed your 4iE, you will have one of the following screens visible. If you have anything other than the screens below, please press the standby button on the underside of **Thermostat Face**.

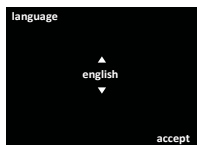

Language

If you have this screen present, the **Thermostat** has not been connected to a WiFi network.

Please follow the on-screen instructions to connect it to WiFi



 No WiFi

If you have this screen present, the **Thermostat** must be connected to a WiFi network.

> **Settings**
> **Network**



 No Server

If you have this screen present, the **Thermostat** is connected to a WiFi network and you can continue to device registration.

Registration can be completed via the MyHeating App or by visiting my.warmup.com

4iE

Step 5 - Download 'MyHeating' App

App Download

The **MyHeating** App is available for iOS and Android devices via the App Store or Google Play. If you have not done so already, download the **MyHeating** App to your tablet or smartphone.


Search 'MyHeating by Warmup'



Device Number

When first registering and setting up your location on **MyHeating**, you will need the device number of the **Thermostat**. Your installer should have recorded it below, if not it can be found in the **Thermostat** menu:

> Settings > Advanced settings > About > Info

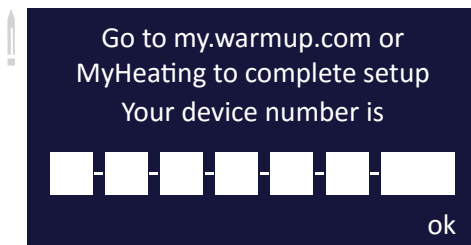

4iE

Step 6 - Registering your device

Registration

Once the App has been successfully downloaded and device number recorded you will need to set up your MyWarmup account. The **Thermostat** can be registered via the **MyHeating** App or by visiting **my.warmup.com**

Below shows the menu structure to follow, when first registering with the **MyHeating** App or **my.warmup.com**

Location

A location needs to be setup before a room can be configured and the 4iE device registered. Creating a location is user friendly and easy to follow, it is advised to have details of your current energy tariff and pricing to hand, as these will be required for the energy monitoring features.

Room

With a location now setup, the next step is to register a room. When creating a new room, the following options are available to select:

Location	(Select the newly setup location)
Room name	(Description, e.g. Upstairs Bathroom)
Room type	(Select the room type e.g. Bathroom)
Floor type	(Select the floor type e.g. Tile/ stone)
Device number	(See page 9)
System type	(Select e.g. 'Electric Underfloor')
System power	(Size of heat source e.g. 1000W)
Power source	(Energy source e.g. gas/electricity)



*Floor temperature will not be displayed when the 4iE is set to central heating mode

Once setup has been completed the thermostat will display the home screen. If you do not press any button for 1 minute the 4iE screen will dim and go into standby. To wake the 4iE just tap the screen or press the lock icon.


Press the button on the bottom of the device to put the thermostat in/out of standby mode. Hold the button for 3 seconds to turn the heating off.

The icons at the bottom of the screen are your WarmApps. These can be set up on my.warmup.com to show things like traffic and weather alerts.

Custom Program


Setting a Custom Program allows you to set comfort temperatures at set times throughout the day.

1

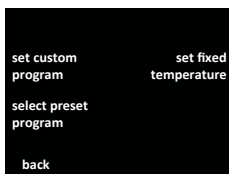


Press menu > Program > Set program > Set custom program

2

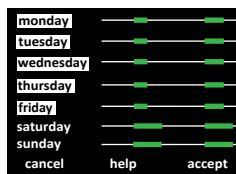

Select days of the week you wish to program

3

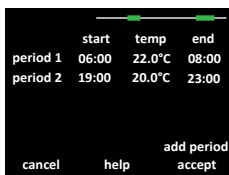

Select period 1 to begin programming

4



Program the times and target temperatures of your custom schedule and press accept. Repeat for additional periods

Setback Temperature - The setback temperature is defaulted to 16°C. To alter the setback Press Menu > Program > Set setback temperature.

Preset Program


Select a Preset Program created by Warmup. See the summary of the Preset Programmes below.

1



Press menu > Program
> Set program > Select
preset program

2

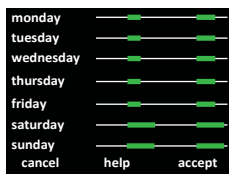


Press accept

	Bathroom		Living Room		Bedroom		Kitchen	
	Time	Temp.	Time	Temp.	Time	Temp.	Time	Temp.
Mon-Fri	06:00	22 °C			06:00	21 °C	06:00	21 °C
	08:00	16 °C			08:00	16 °C	08:00	16 °C
	19:00	20 °C	18:00	23 °C	20:00	20 °C	18:00	21 °C
	23:00	16 °C	21:30	16 °C	23:00	16 °C	22:00	16 °C
Sat-Sun	07:00	22 °C			06:00	21 °C	07:00	21 °C
	11:00	16 °C			08:00	16 °C	11:00	16 °C
	18:00	20 °C	08:00	21 °C	20:00	20 °C	18:00	21 °C
	23:00	16 °C	21:30	16 °C	23:00	16 °C	22:00	16 °C

Fixed Temperature


Set a fixed temperature for the thermostat to reach and maintain until you revert back to program mode or switch the heating off.

1

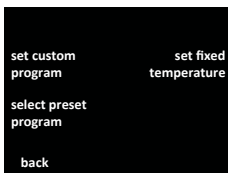

Press menu > Program > Set program > Set fixed temperature

2

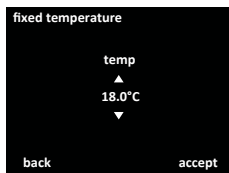

Set the target temperature and press accept

Temporary Override

Set a temperature you would like the thermostat to reach and the length of time you want this override to last.

1



Press the temperature in the middle of the home screen.

Alternatively press menu > Temperature > Override.

2




Set the target temperature, duration of override and press accept.

Holiday Mode


Holiday Mode allows you to override your schedule with a lower fixed temperature over a set time to save energy.

1

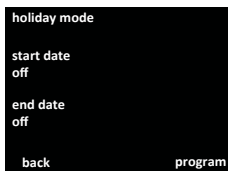


Press menu > Program
> Holiday mode >
Program

2

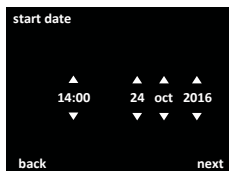

Set the holiday start
time and date and
press next

3

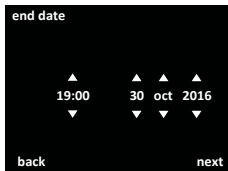

Set the holiday end
time and date and
press next

4



Set the holiday target
temperature and press
accept

Frost Protect

Select Frost Protect to set your heating to a constant 7°C to protect your home from frost. Press menu > Temperature > Frost protection.

MyHeating App & MyWarmup Portal


You can also program your 4iE with your tablet or smartphone using the MyHeating App or by visiting my.warmup.com

Energy Monitoring

The 4iE learns how you use your system and how your house reacts to the heating and weather. It can give you an estimate of your energy usage and the running cost of your system.

On initial set up, [Step 5](#), you will have entered the power (wattage) of your system and the cost per kilowatt hour charged by your energy provider. The 4iE will use this information to calculate the running cost of your system.

When you've set up the Energy Monitor you can view the estimated usage or cost over a selected time period. If you have a standard/low energy tariff, the amount and cost of energy used during the standard period will be displayed in dark green and the amount used in the low period will be displayed in light green.

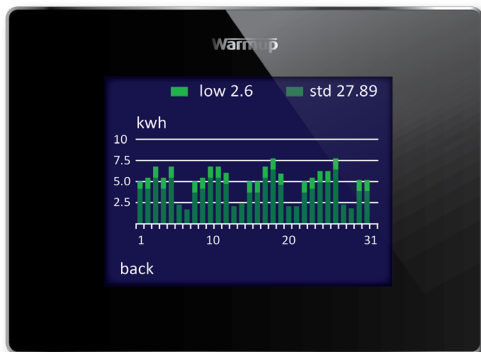

4iE

Troubleshooting

Display is blank	1. Check that the display/standby brightness is not on the lowest settings '0'. 2. (Electrician Required) Electrician required to verify power is going to the 4iE and that it is correctly wired.
"er1" or "er2" is displayed	1. (Electrician Required) Electrician required to verify that the floor sensor has been wired correctly. If it is correctly wired the electrician will need to check the resistance of the floor sensor using a multi meter. For temperatures between 20°C and 30°C the resistance of the floor sensor should measure between 8K ohms and 12K ohms. If the electrician finds a fault, and the 4iE is in the room to be heated then it can be set into "Air Mode".
Heating is coming on earlier than the pre-programmed times	1. The 4iE "Early Start" function is on. This means that the heating will come on early to achieve the set temperature at the set time.
I cannot to set above a certain temperature	1. Delicate floor coverings need to have their temperatures limited. If the finished floor is set for wood, laminate, vinyl etc. you are unable to set the temperature above 27°C.


4iE

WiFi Troubleshooting

Before following the troubleshooting guide below please check the following:


1. SSID is less than 11 characters
2. Password is less than 10 characters
3. The password is WPA2 protected
4. The router is set to a 2.4 GHz band (802.11 b, g, n, b/g mixed, b/g/n mixed)

NOTE: If you need to change any of the items listed above, please contact your ISP.

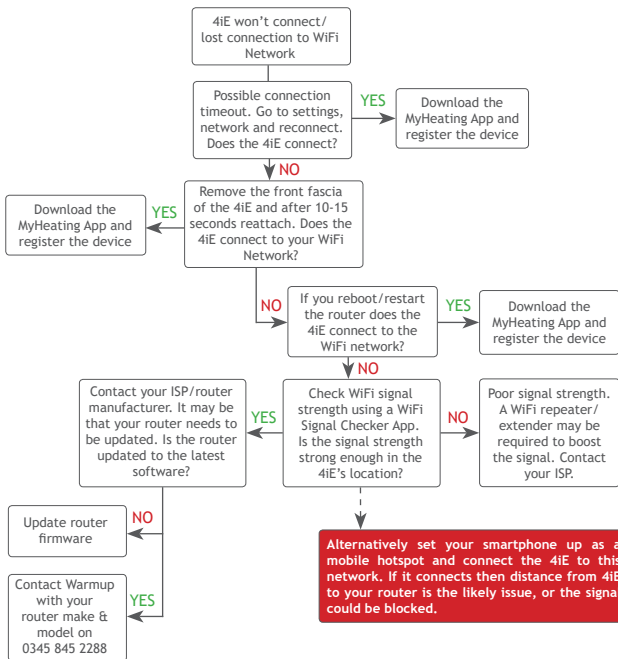

4iE

Server Troubleshooting

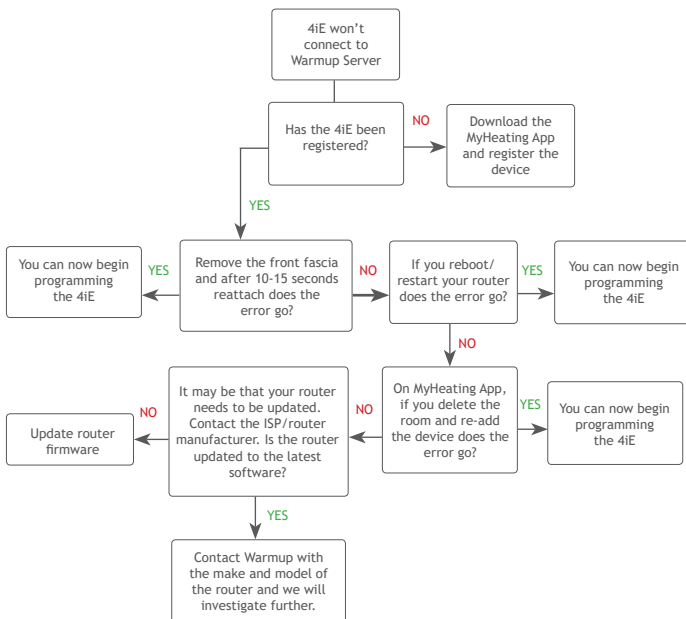

[illegible]

[illegible]

Settings

Time

Set time

manually set time

Set date

manually set date

Daylight savings

set daylight savings
(europe/n.america/australia/off)

Heating preference

Temperature format

celsius/fahrenheit

Control air/floor

use air or floor sensor as heating target

Early Start

starts heating early so it's up to temperature at the right time

Display/Audio

Background

change the background screen (upload your own via MyHeating App or by visiting my.warmup.com)

Home screen style

choose a theme for the main screen

Display brightness

change the screen brightness for normal use and standby

Lock

set a lock code

Audio

Feedback turn the 'click' sound on/off

Network

Choose a WiFi network

Advanced Settings

Heater Settings

Heating Limits

set the temperature limits for your floor type. User Defined lets you set custom limits

Regulator

controls the heating in 10 minute cycles. The number you enter is the number of minutes in a 10 minute cycle that the heating will be on. This is a feature specifically for France. This allows one thermostat to control another

Fil Pilote

Ext Output

Probes

Set the specification of the probes or set to 'none' to hide the probe on the homescreen

Probe application

Choose if the floor probe is being used as a Floor or Amb (ambient) sensor

Offset

Set the offset of the sensors to improve accuracy

Reset

This will restore all the factory default settings

4iE

Technical Specifications

Dimensions (Assembled with 4iE face)	90 x 120 x 18mm
Screen size	3.5in
IP Rating	IP33
Sensors	Air & Floor (Ambient)
Sensor Type	NTC10k 3m Long (Can Be Extended To 50m)
Max. Load	16A (3680W)
Installation Depth	35mm Back Box
Compatibility	Electric, Hydronic Underfloor Heating (up to 16A.) Central Heating Systems (Combi & system boilers with switch live ,230V AC, input)
Er-P Class	IV
Warranty	3 Year with optional Lifetime Upgrade
Approvals	BEAB

NOTE: This product is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC. The Declaration of Conformity may be consulted by visiting: <http://www.warmupsmart.com/declarations-of-conformity/4ie-declaration-of-conformity/>

Contact Us

UK

0345 345 2288

702 & 704 Tudor Estate
Abbey Road
Park Royal
London
NW10 7UW

Warranty

Warmup plc warrants this product, to be free from defects in the workmanship or materials, under normal use and service, for a period of three (3) years from the date of purchase by the consumer. If at any time during the warranty period the product is determined to be defective, Warmup shall repair or replace it, at Warmup's option. If the product is defective, please either,

- (i) return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it, or
- (ii) contact Warmup. Warmup will determine whether the product should be returned, or replaced.

This warranty does not cover removal or re-installation costs, and shall not apply if it is shown by Warmup that the defect or malfunction was caused by failure to follow the instruction manuals, incorrect installation or damage which occurred while the product was in the possession of a consumer.

Warmup's sole responsibility shall be to repair or replace the product within the terms stated above.

WARMUP SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. THIS WARRANTY IS THE ONLY EXPRESS WARRANTY WARMUP MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE THREE-YEAR DURATION OF THIS WARRANTY.

This Warranty does not affect your statutory rights.

Check out our full range of Bathroom Accessories

Bathroom Accessory Sets

Heated Towel Rails

Bathroom Extractor Fans

Bathroom Lighting

Shower Seats

Grab Rails

Shower Curtains

Toilet Brushes

Bathroom Cleaning Products

Wall Mounted Bathroom Accessories

Robe Hooks

Bathroom Tumblers

Toilet Roll Holders

Soap Dishes

Towel Rings

Shower Caddies

Bathroom Mirrors

Standard Bathroom Mirrors

LED Bathroom Mirrors

Shaving Mirrors

plumbworld
Big brands, small prices.