




BATHROOM FURNITURE CARE AND MAINTENANCE INSTRUCTIONS

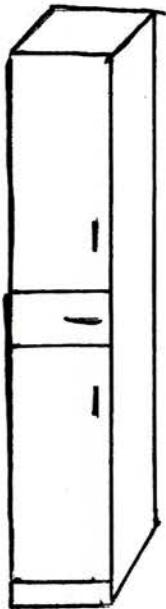


TALL BOY

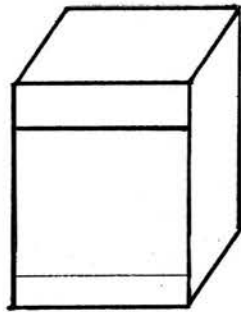

WCUNIT

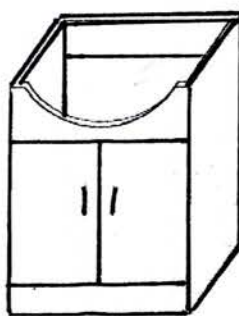

BASIN UNIT

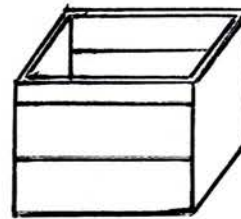

WALL HUNG BASIN UNIT

- Floor mounted units must be retained back to the wall using screws and brackets (not supplied)
- Wall mounted units must be secured to the wall using "L" brackets (not supplied) and screwed back to the wall through the batten at the back of the unit
- Basin units should be secured as above and also secured using Fischer Fixings through the fixing points under the basin (on no account should the units support the basins alone).
- The hinge on the laundry basket can be adjusted by tightening and slackening the screw on the side of the sliding bar
- Where fixing to stud or panelled walls, appropriate frame work should be installed to support the basins and units.
- Where units or worktops have to be cut out for services cut edges MUST be sealed against water ingress.
- Surfaces should only be cleaned using a soft damp cloth only (do not use detergents or abrasive cleaning products).

plumbworld
Big brands, small prices.

Pdf Supplied By <http://www.plumbworld.co.uk/>