



Aluminium Mirror Fitting Instructions

Thank you for purchasing this CDX product. Please follow the fixing and care instructions to ensure that your mirror is fitted safely and that it retains its high quality finish. **Please retain this leaflet for future reference.**


Fixing Pack Contents and Wall Bracket

Fixing screws x 2
Wall plugs x 2
Wall fixing bracket x 1



For details of the other items in the CDX range please visit our website:
www.cdxcollection.co.uk

Croydex Limited, Central Way, Andover, Hants, SP10 5AW, UK.



Tools Required

Drill
6mm masonry drill bit
6mm ceramic drill bit (optional)
Cross head screwdriver
Pencil
Spirit level
Tape measure

KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN

Home Safety Advice

Always take care when using an electric drill, particularly in the bathroom. Always check for hidden cables and pipework before drilling and take extreme care if there is any water in the working area.

It is advisable to use a residual current circuit breaker (RCCB).


Please remember to wear suitable eye protection when drilling.

If the product is to be fitted on a ceramic tiled wall, a ceramic drill bit should be used. Always ensure that the drill hole passes through the central tiled area rather than through the grouted area. To prevent surface damage to the tile from drill slippage, mask the hole area with tape before drilling.

Do not strike the product with hard or sharp objects.

It is recommended that two people fit the mirror to ensure that it is fitted safely.

Fixing Instructions

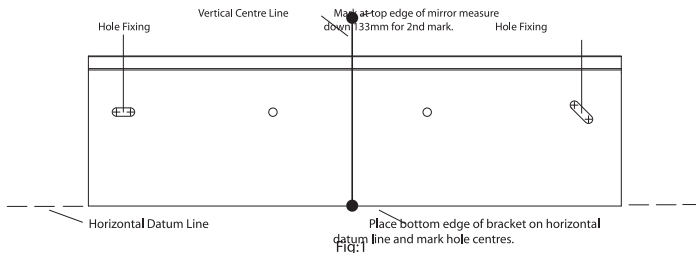

1. Position the mirror in the desired location.
2. While one person holds the mirror in place, the other person should mark a point on the wall, midway between both sides of the mirror, using the top edge of the frame as a guide. Remove the mirror from the wall. See figure 1.
3. Using a tape measure, measure down 133mm below the point marked on the wall and mark the wall at this point also. See figure 1.
4. Using a spirit level draw a horizontal line through the lower second point marked on the wall. See figure 1.
5. While one person places the bottom edge of the bracket onto the horizontal line, ensuring that the vertical line passes through the centre of the bracket (see figure 1), the other person can then mark the hole centres in the positions shown in figure 1.
6. Using a 6mm masonry drill, drill the holes in marked position to a depth of 50mm. If drilling through tiles, please pre-drill using a ceramic drill bit.
7. Insert the wall plugs to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.
8. Insert the screws through the wall bracket and screw into the wall plugs. Using a spirit level ensure that the wall bracket is level and adjust if necessary.
9. Hang the mirror centrally on the wall bracket.

Product Care

To retain the best quality finish, clean product regularly with a soft cloth and mild detergents. Do not use abrasive or chemical cleaners as these will damage the product.

Do not position glass components in close contact with a heat source.

plumbworld
Big brands, small prices.

Pdf Supplied By <http://www.plumbworld.co.uk/>