


WHITE

Universal BasinSeal profile from Plumbworld

**BASIN
SEAL**

Part No. 1m - BASW001
Part No. 2m - BASW002

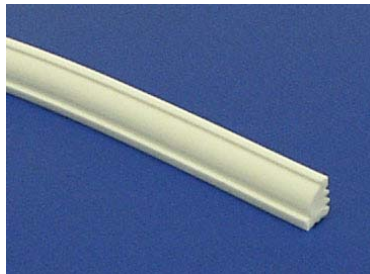

Complete kit fully seals in your hand basin and matches the our BathSeal Profile


Tools required



- Stanley Knife or scissors
- Kitchen roll to wipe fingers

Installation Information.

- Remove any existing silicone sealant with a sharp knife and clean with alcohol wipe.
- Lay BasinSeal profile along your basin and cut to length using a sharp knife / scissors.
- Immediately wipe the BasinSeal profile with the alcohol wipe provided.
- Open the silicone sealant supplied and squeeze a uniform amount of sealant along the length of your basin where it meets the wall / tiles.
- Gently offer up the BasinSeal to the wall / silicone and push gently into place.
- wipe away any excess sealant with finger and leave to set for 3 hours.

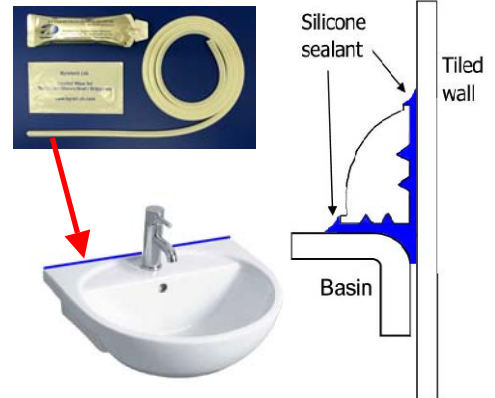

Note. Plumbworld recommends that all black mould in the bathroom is removed prior to fitting its products.

plumbworld

www.plumbworld.co.uk Ltd
Units 2 Millenium Court
Enterprise Way, Evesham
Worcs, WR11 6GA
E-mail tech@plumbworld.co.uk
Web www.plumbworld.co.uk

plumbworld
Big brands, small prices.

Pdf Supplied By <http://www.plumbworld.co.uk/>