


SHOWER ULTRA 10 SEAL

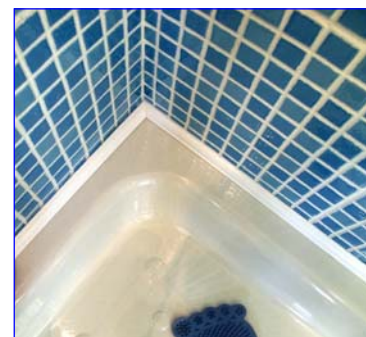

**Guaranteed no mould
For 10 Years**



**Suitable for all shower
trays with maximum
Dimensions of 1m x 1.5m**





Tools required to complete the installation.

- Stanley Knife or similar 
- **Byretech sealant Removal tool** 
- Tape measure 
- Sealant gun 
- **Fugi II Silicone applicator** 
- Kitchen roll to wipe fingers
- Fugi II and Silicone removal tool available from www.byretech.com



Installation instructions

- Clear away old sealant from shower tray with knife and scraper and carefully measure internals of tray as per diagram opposite. Use the cleaning wipe provided to clean the area where the profile will sit. (wall, tray, profile)
- Transfer the trays internal measurements to **ShowerSeal** profiles taking care **not to cut the shaped ends**.
- Cut the profiles to length and place them inside the shower tray to check they fit OK. They will fit over one another if fitted correctly.
- Remove the profiles and take the sealant with the **large nozzle** and infill the edges of the tray with sealant. It is important that enough sealant is used to completely fill the gaps between the tray and wall.
- Apply sealant to each end of the profiles before fitment. This will ensure no water can sit in the corners of the tray when in use.
- Place the profiles one by one into the wet sealant.
- **Gently** push the profile into place onto your shower tray.
- Immediately wipe away with your finger any excess sealant that has squeezed out from above or below the profile.
- Change the coarse sealant nozzle to the **fine nozzle** and infill carefully the top and bottom edges and corners of the newly installed profile.
- Once complete, wipe with a wet finger to smooth the sealant and remove any excess. This operation ensures a complete seal and once done there is no where for the water to sit on the profile.
- Leave for two hours minimum and **ShowerSeal** is ready for use.

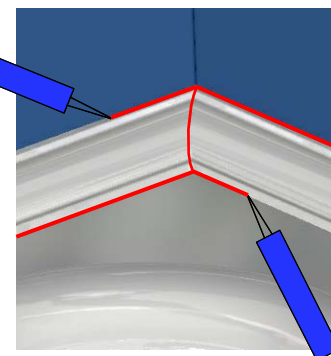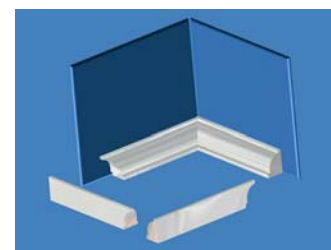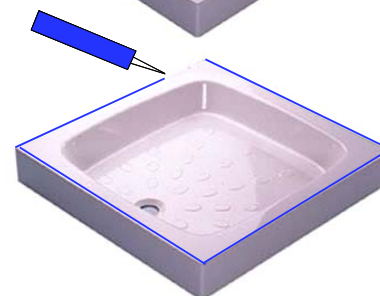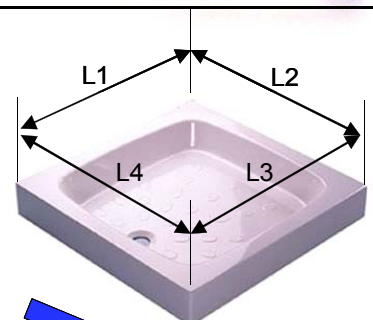

See our website for more installation pictures - www.byretech.com

plumbworld

Note. Manufacturer recommends that all black mould in the bathroom is removed prior to fitting its products.

Note. NO MOULD GUARANTEE

If Forever White discolours or stains due to mould growth within 10 years of application simply return pack and receipt of purchase to Everbuild and we will refund you the silicone and postage costs. CAUTION: This guarantee is only valid providing regular cleaning has been carried out. Microban helps prevent the growth of mould, mildew and bacteria that can stain and degrade silicone, however it is not a substitute for regular cleaning as excessive deposits of soap can cause secondary mould growth. Everbuild address on silicone tube pack. Nothing in this statement does or will affect your statutory rights.

www.plumbworld.co.uk Ltd
Units 2, 3 and 4 Millenium Court
Enterprise Way, Evesham
Worcs, WR11 1GA
E-mail tech@plumbworld.co.uk
Web www.plumbworld.co.uk