

# Fitting the Monaco/Capri

The fitting of the bath feet and installation of the bath will be seen as acceptance of quality. We strongly recommend that you use a suitably qualified installer. Instructions must be adhered to. We cannot accept responsibility of incorrect installation.

## Installation away from walls


- A. Position bath on floor and mark the centre of the waste outlet directly onto the floor.
- B. Trace the inside edge of the bath onto the floor using the rear aperture at the base.



- C. Mark centre of the waste hole on the floor. Remove bath and position waste pipe approximately 300mm from the trap outlet. It may be necessary to cut a small hole in the floor to accommodate the p-trap that must be used.
- D. Secure the four supplied wooden blocks to the floor along the inside edge of the tracing - two to both the front and rear straight edges.




- E. Generously apply silicon to the outside vertical faces of the wood and lower the bath into position, ensuring proper contact with the blocks.

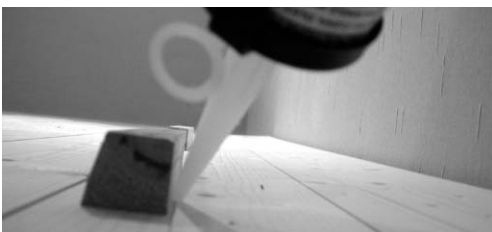

- F. Fit the appropriate waste kit and connect the plumbing.
- G. For the ultimate finish, we recommend applying a white silicon bead around the base of the bath. See bottom right.

## Installation against the wall

- A. Position bath on floor and mark the centre of the waste outlet directly onto the floor.
- B. Trace the inside edge of the bath onto the floor using the rear aperture at the base.
- C. Mark centre of the waste hole on the floor. Remove bath and position waste pipe approximately 300mm from the trap outlet. It may be necessary to cut a small hole in the floor to accommodate the p-trap that must be used.
- D. Secure the four supplied wooden blocks to the floor along the inside edge of the tracing - two to both the front and rear straight edges.
- E. Reposition the bath and tilt forward. Connect a 500mm length of flexible waste pipe to the p-trap and check the whole assembly for leaks.

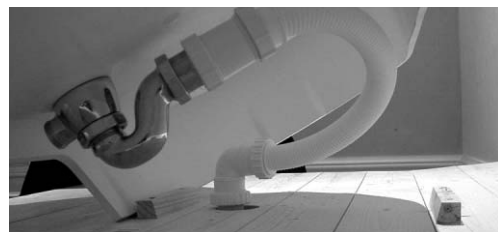

- F. With the bath tilted forward, generously apply silicon to the sides of the wooden blocks and lower the bath into position.
- G. For the ultimate finish, we recommend applying a white silicon bead around the base of the bath.



**plumbworld**  
**Big brands, small prices.**

Pdf Supplied By <http://www.plumbworld.co.uk/>