


SHOWER ULTRA 10 SEAL

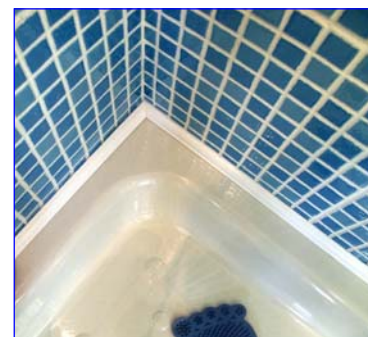






**Guaranteed no mould
For 10 Years**



**Suitable for all shower
trays with maximum
Dimensions of 1m x 1.5m**

Tools required to complete the installation.

- Stanley Knife or similar 
- **Byretech sealant Removal tool** 
- Tape measure 
- Sealant gun 
- **Fugi II Silicone applicator** 
- Kitchen roll to wipe fingers

• Fugi II and Silicone removal tool available from www.byretech.com



Installation instructions

• Clear away old sealant from shower tray with knife and scraper and carefully measure internals of tray as per diagram opposite. Use the cleaning wipe provided to clean the area where the profile will sit. (wall, tray, profile)

• Transfer the trays internal measurements to **ShowerSeal** profiles taking care **not to cut the shaped ends**.

• Cut the profiles to length and place them inside the shower tray to check they fit OK. They will fit over one another if fitted correctly.

• Remove the profiles and take the sealant with the **large nozzle** and infill the edges of the tray with sealant. It is important that enough sealant is used to completely fill the gaps between the tray and wall.

• Apply sealant to each end of the profiles before fitment. This will ensure no water can sit in the corners of the tray when in use.

• Place the profiles one by one into the wet sealant.

• **Gently** push the profile into place onto your shower tray.





• Immediately wipe away with your finger any excess sealant that has squeezed out from above or below the profile.

• Change the coarse sealant nozzle to the **fine nozzle** and infill carefully the top and bottom edges and corners of the newly installed profile.

• Once complete, wipe with a wet finger to smooth the sealant and remove any excess. This operation ensures a complete seal and once done there is no where for the water to sit on the profile.

• Leave for two hours minimum and **ShowerSeal** is ready for use.

See our website for more installation pictures - www.byretech.com

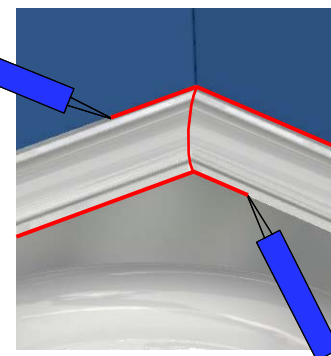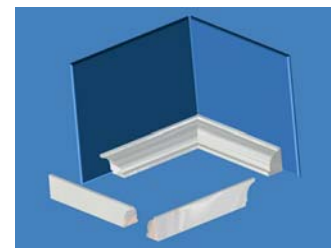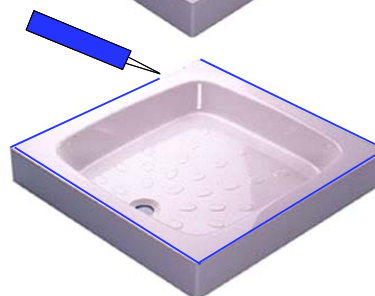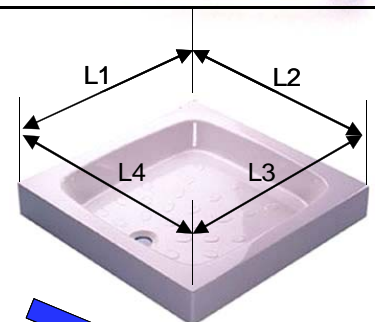

Check out our full range of Bathroom Accessories

Bathroom Accessory Sets

Heated Towel Rails

Bathroom Extractor Fans

Bathroom Lighting

Shower Seats

Grab Rails

Shower Curtains

Toilet Brushes

Bathroom Cleaning Products

Wall Mounted Bathroom Accessories

Robe Hooks

Bathroom Tumblers

Toilet Roll Holders

Soap Dishes

Towel Rings

Shower Caddies

Bathroom Mirrors

Standard Bathroom Mirrors

LED Bathroom Mirrors

Shaving Mirrors

plumbworld
Big brands, small prices.