

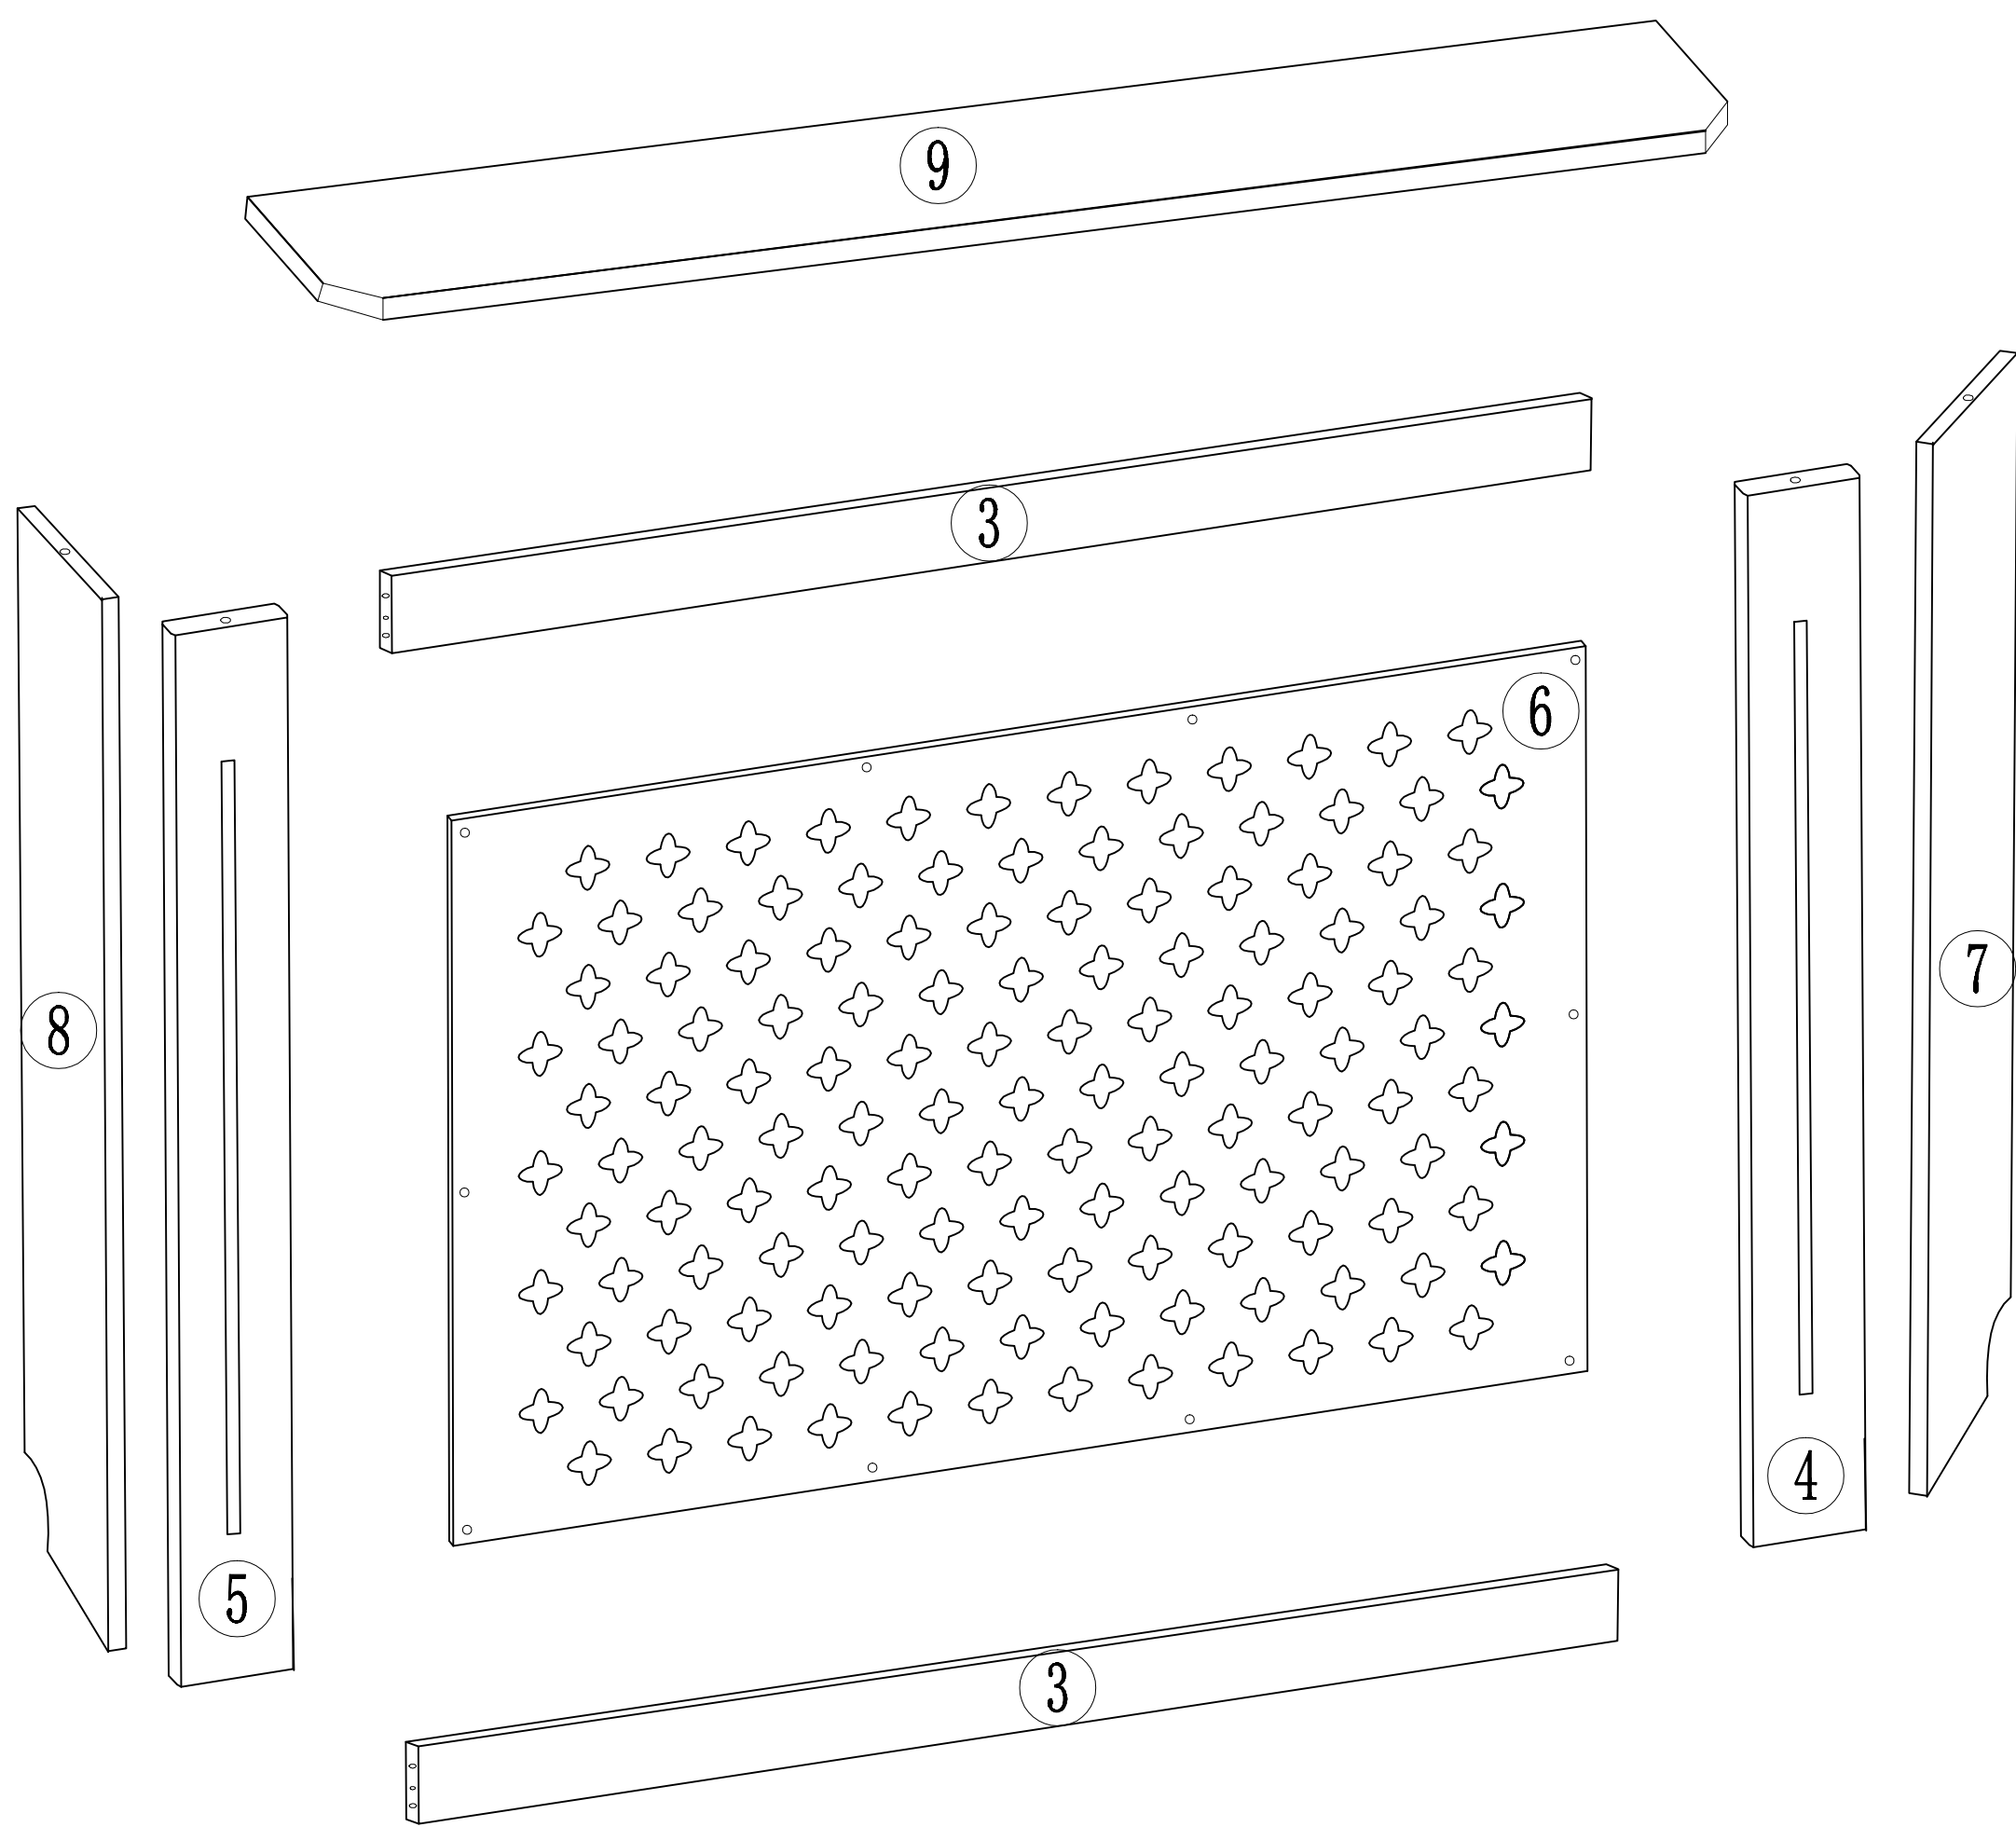



Instruction Manual

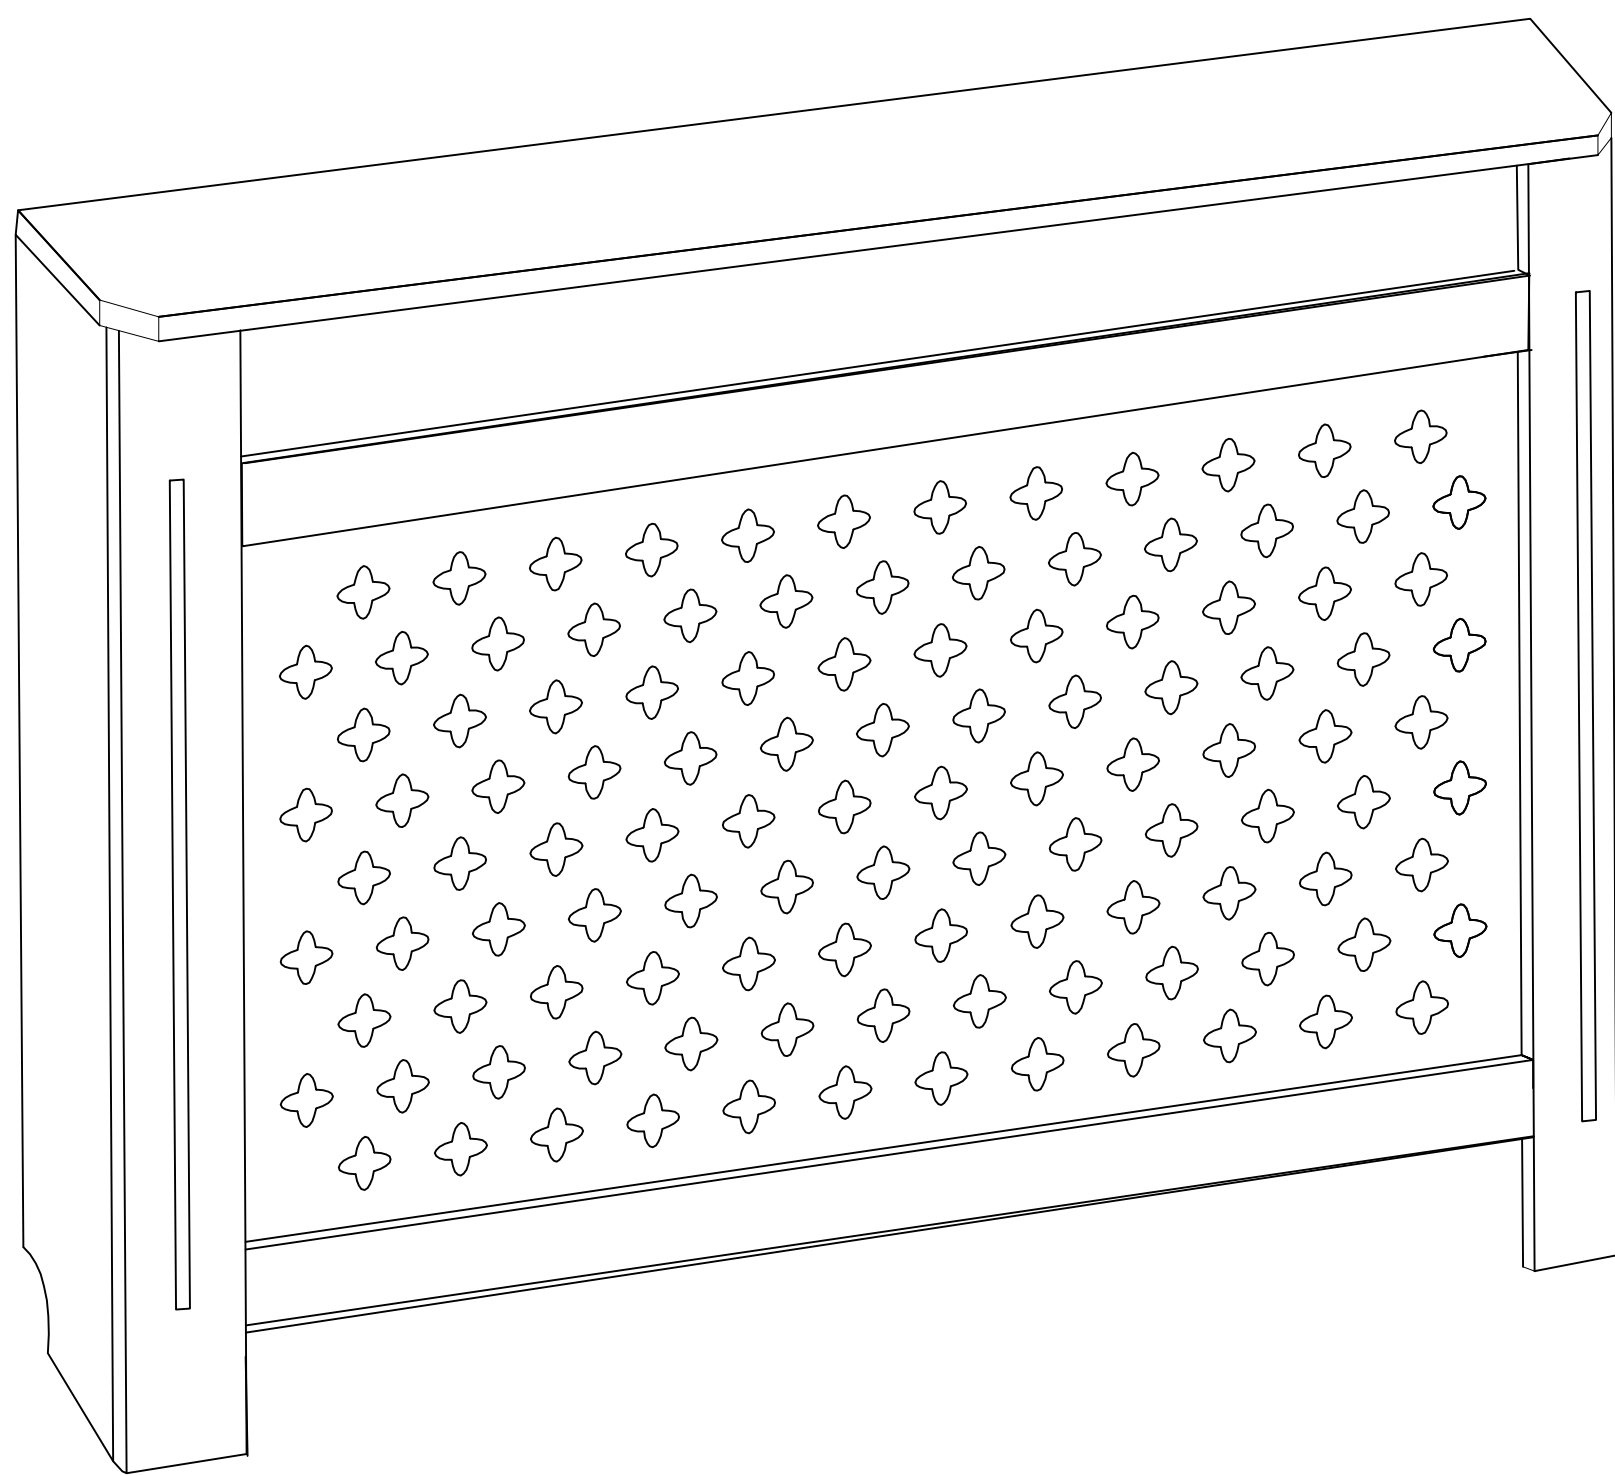


Tools needed

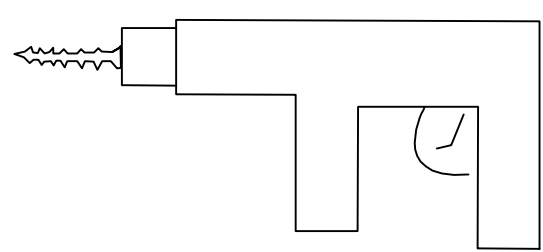

churn drill

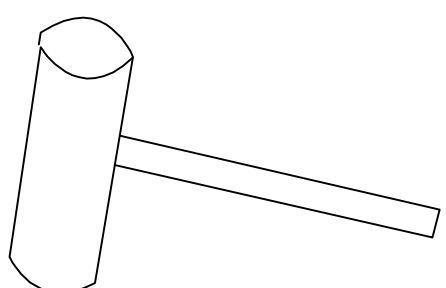


hammer




cross screwdriver


Please note that there is no No.1 and No.2 panel !

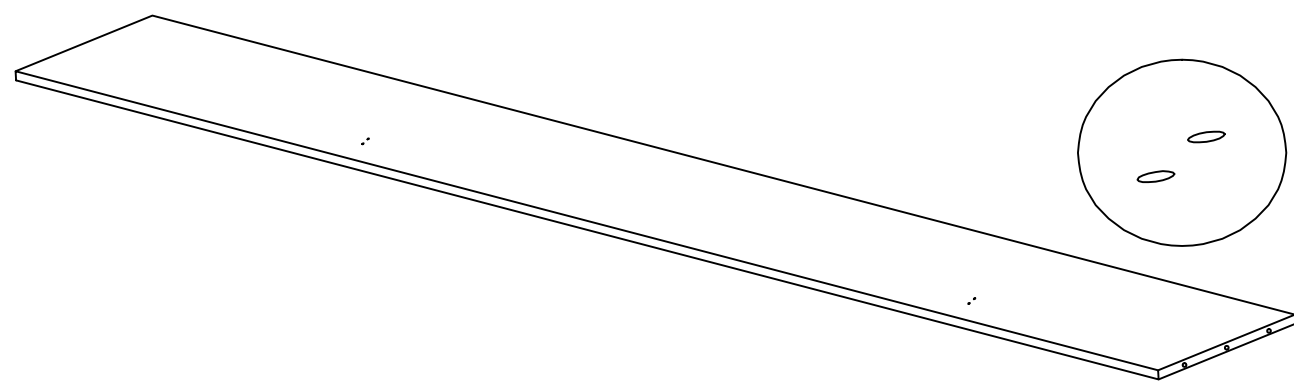


③ x2 872*105*12mm

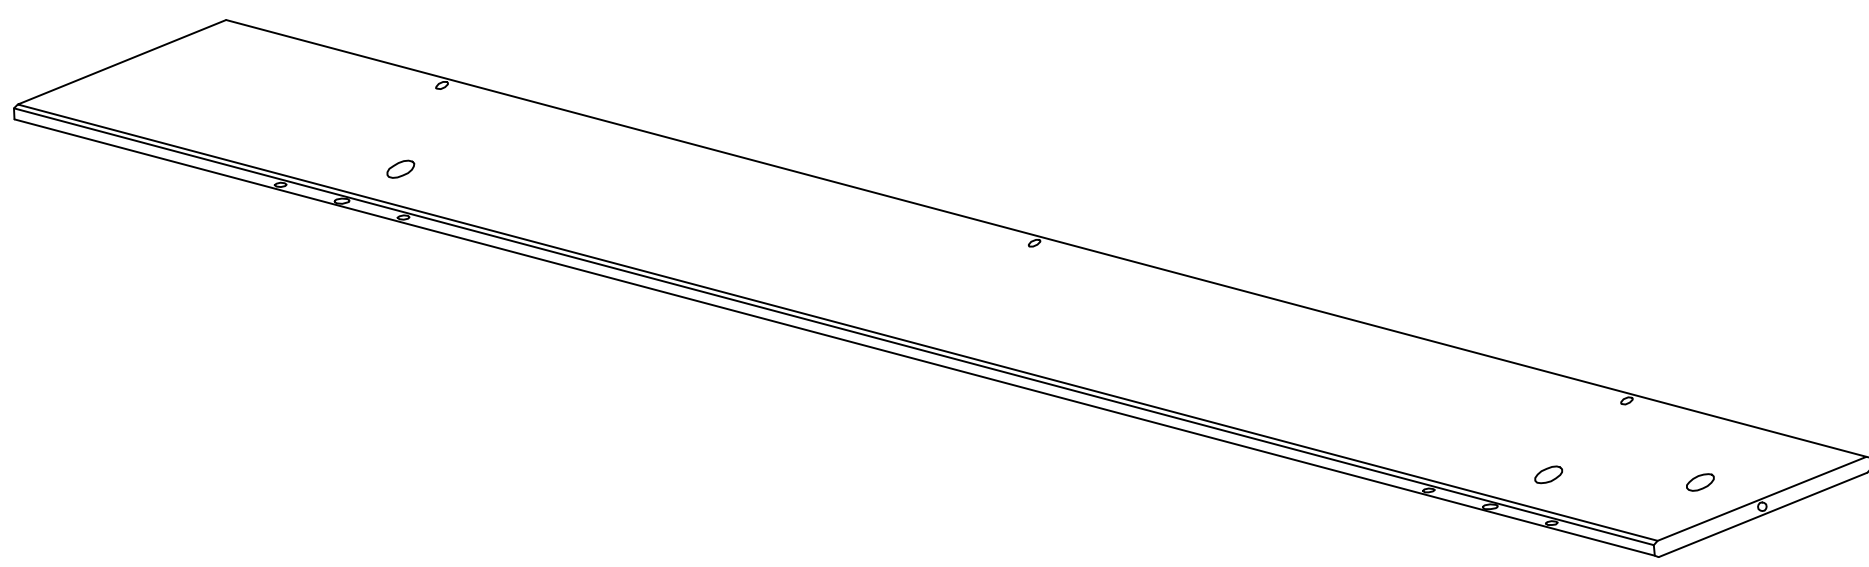


④ x1 803*110*12mm

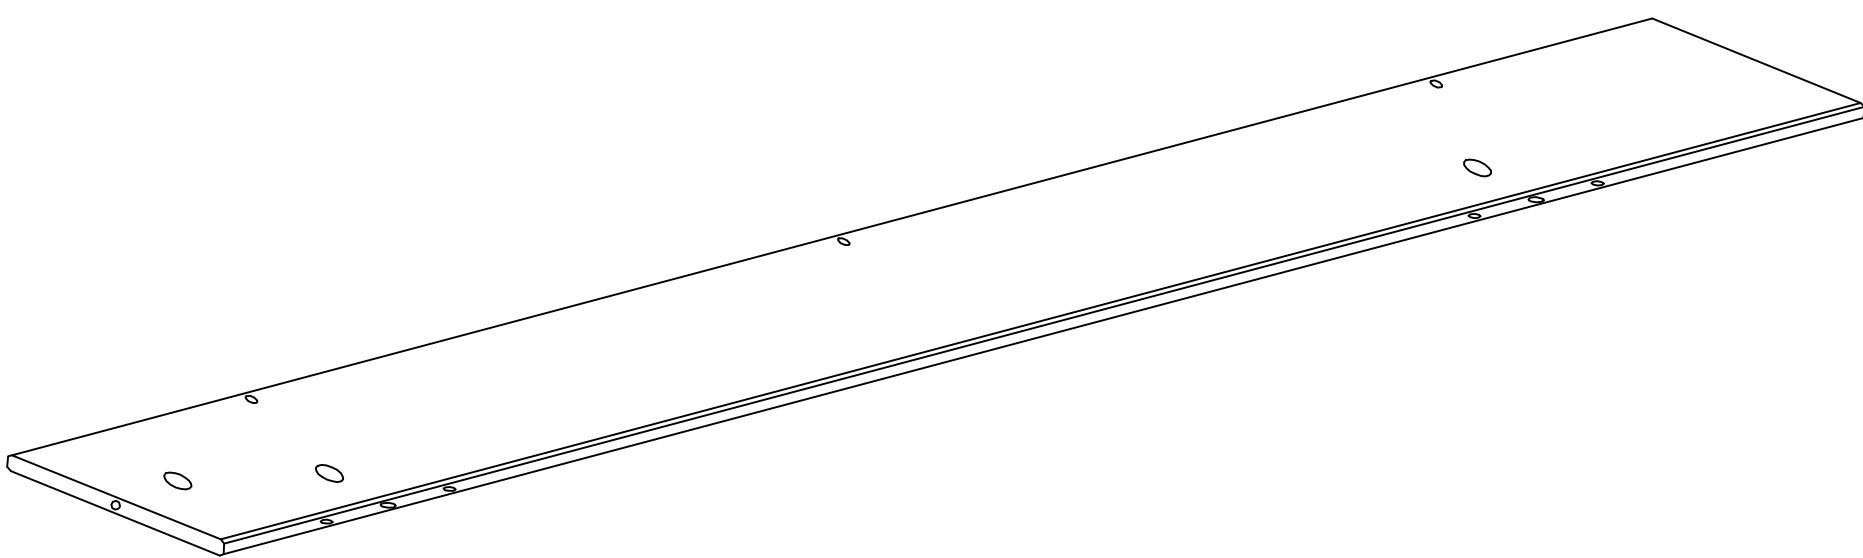


⑤ x1 803*110*12mm

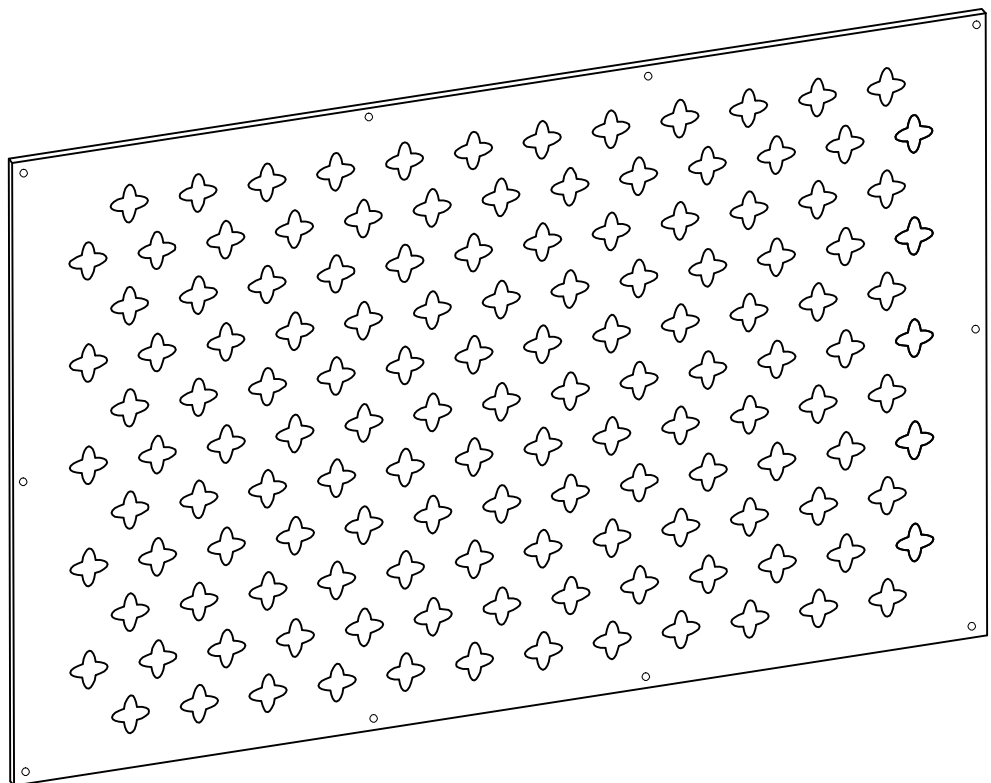


⑥ x1 910*479*3mm

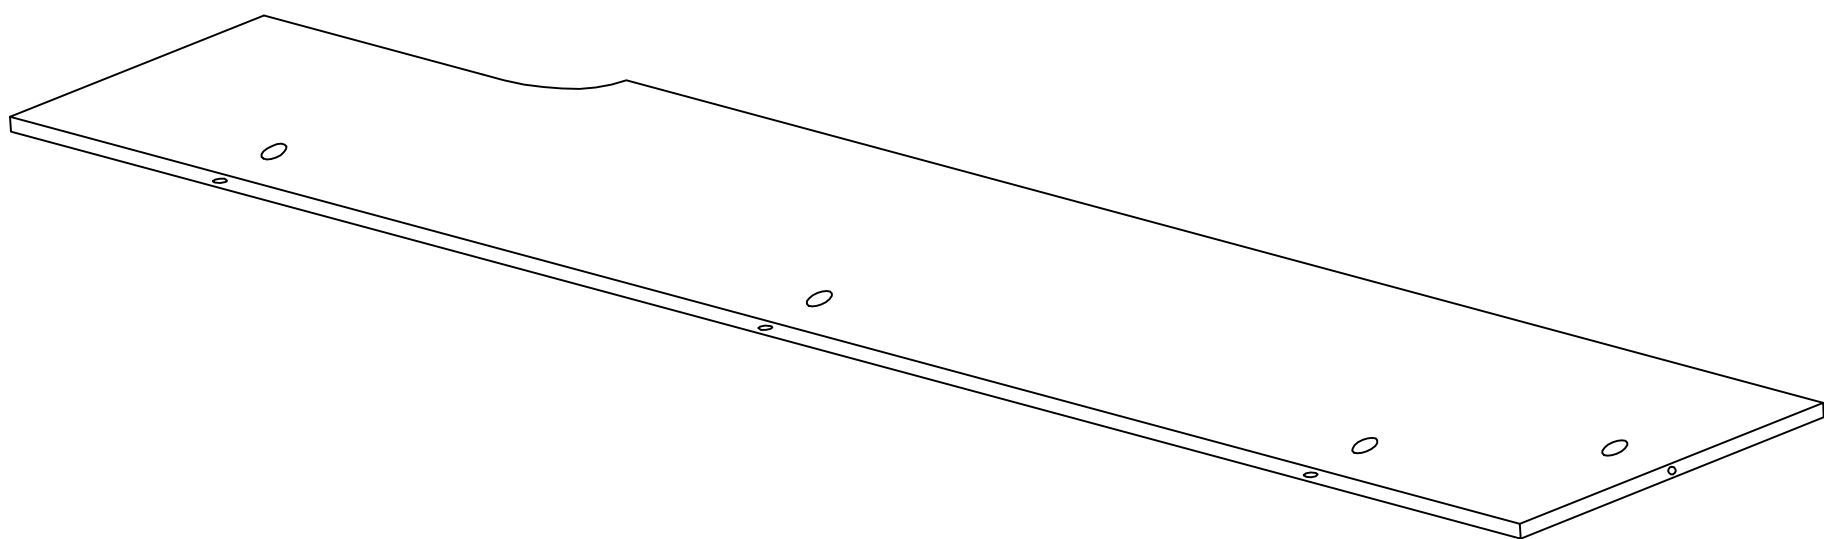


⑦ x1 803*168*12mm

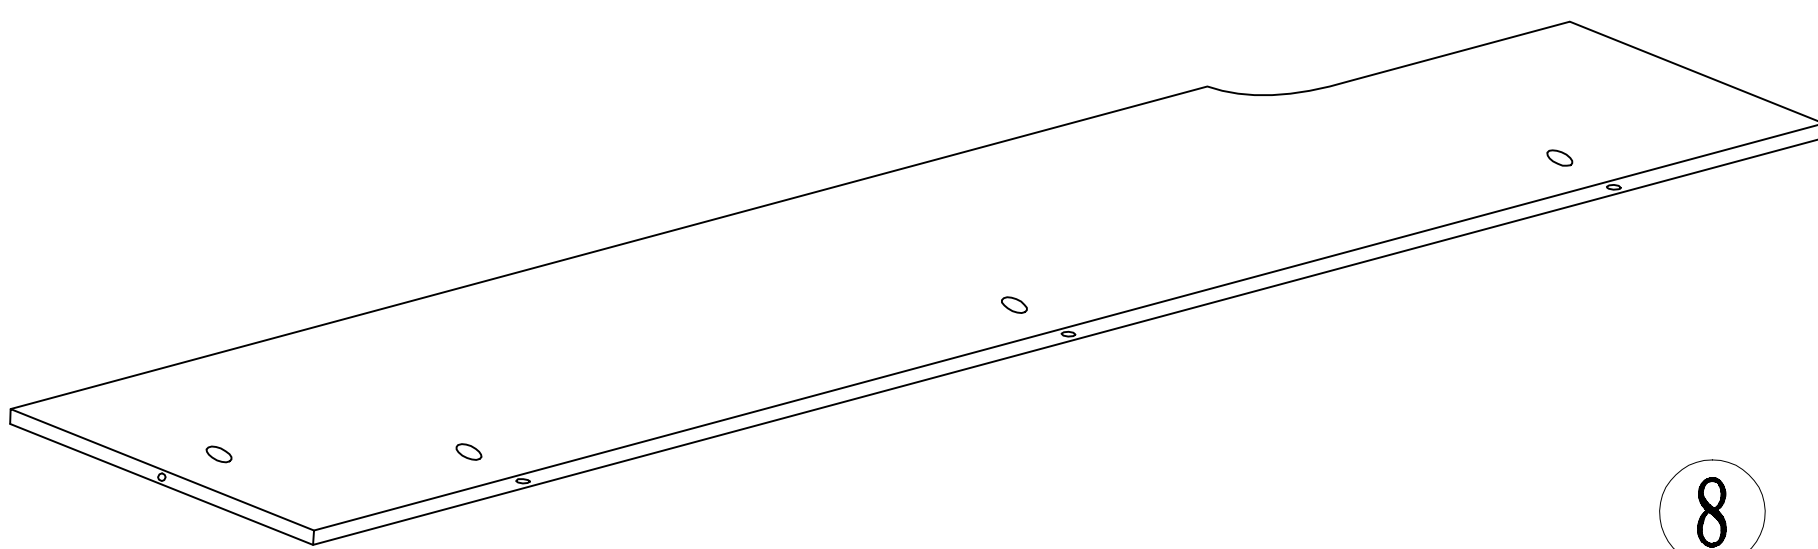


⑧ x1 803*168*12mm

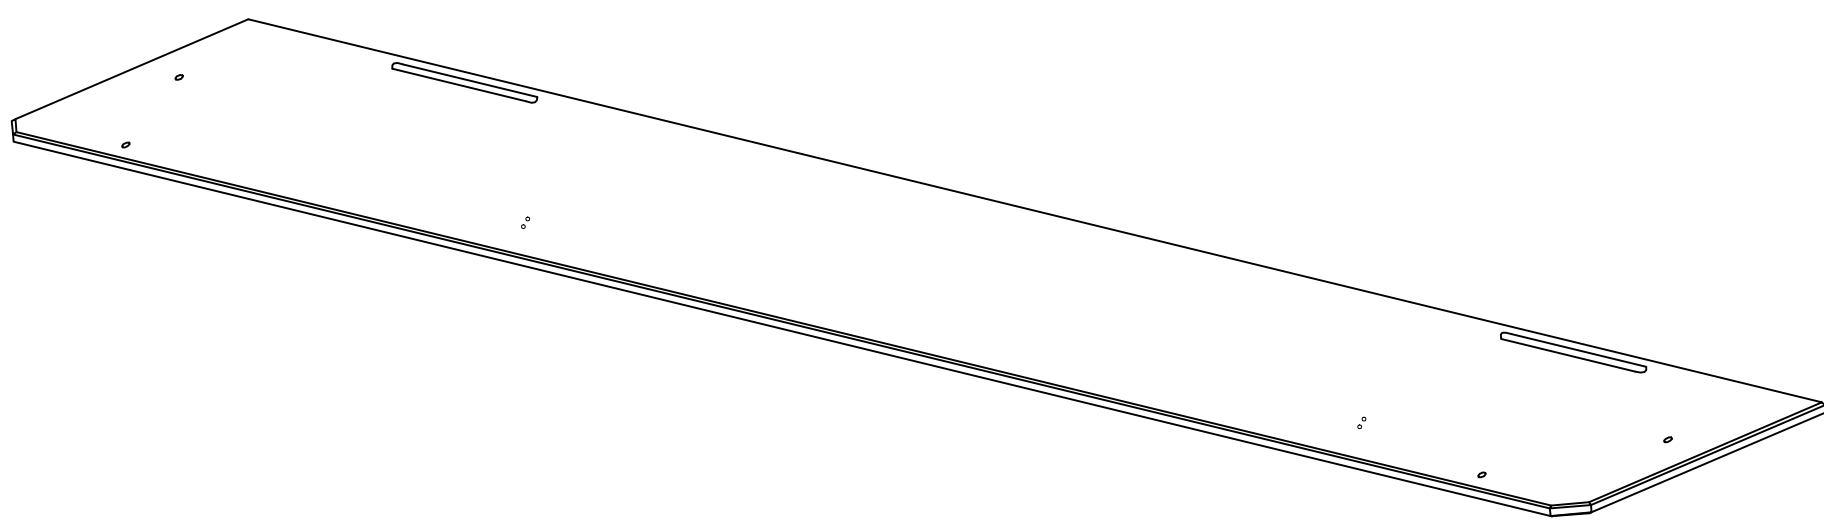


⑨ x1 1120*190*12mm

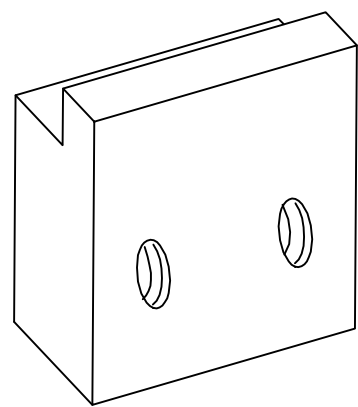


Ax2

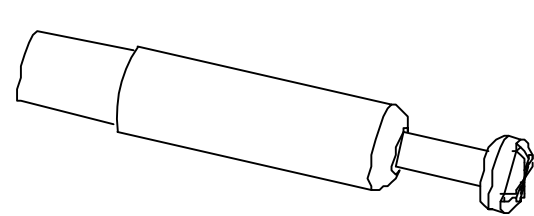


Bx14

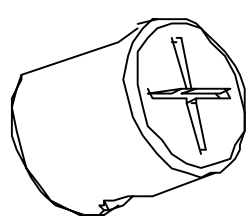


Cx14

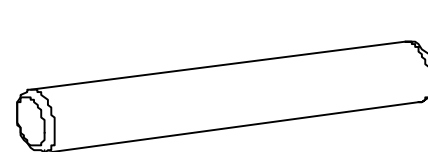


Dx8

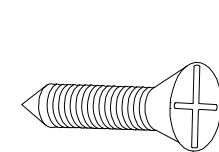


Ex10




Fx4



Gx4

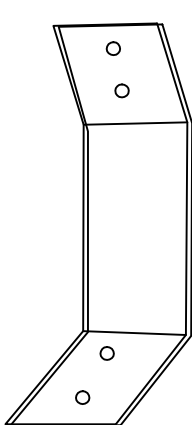


Hx2







Ix8







Using a screwdriver,screw in the #B screws securely.Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely,but avoid over tightening,screws may protrude through the panel.

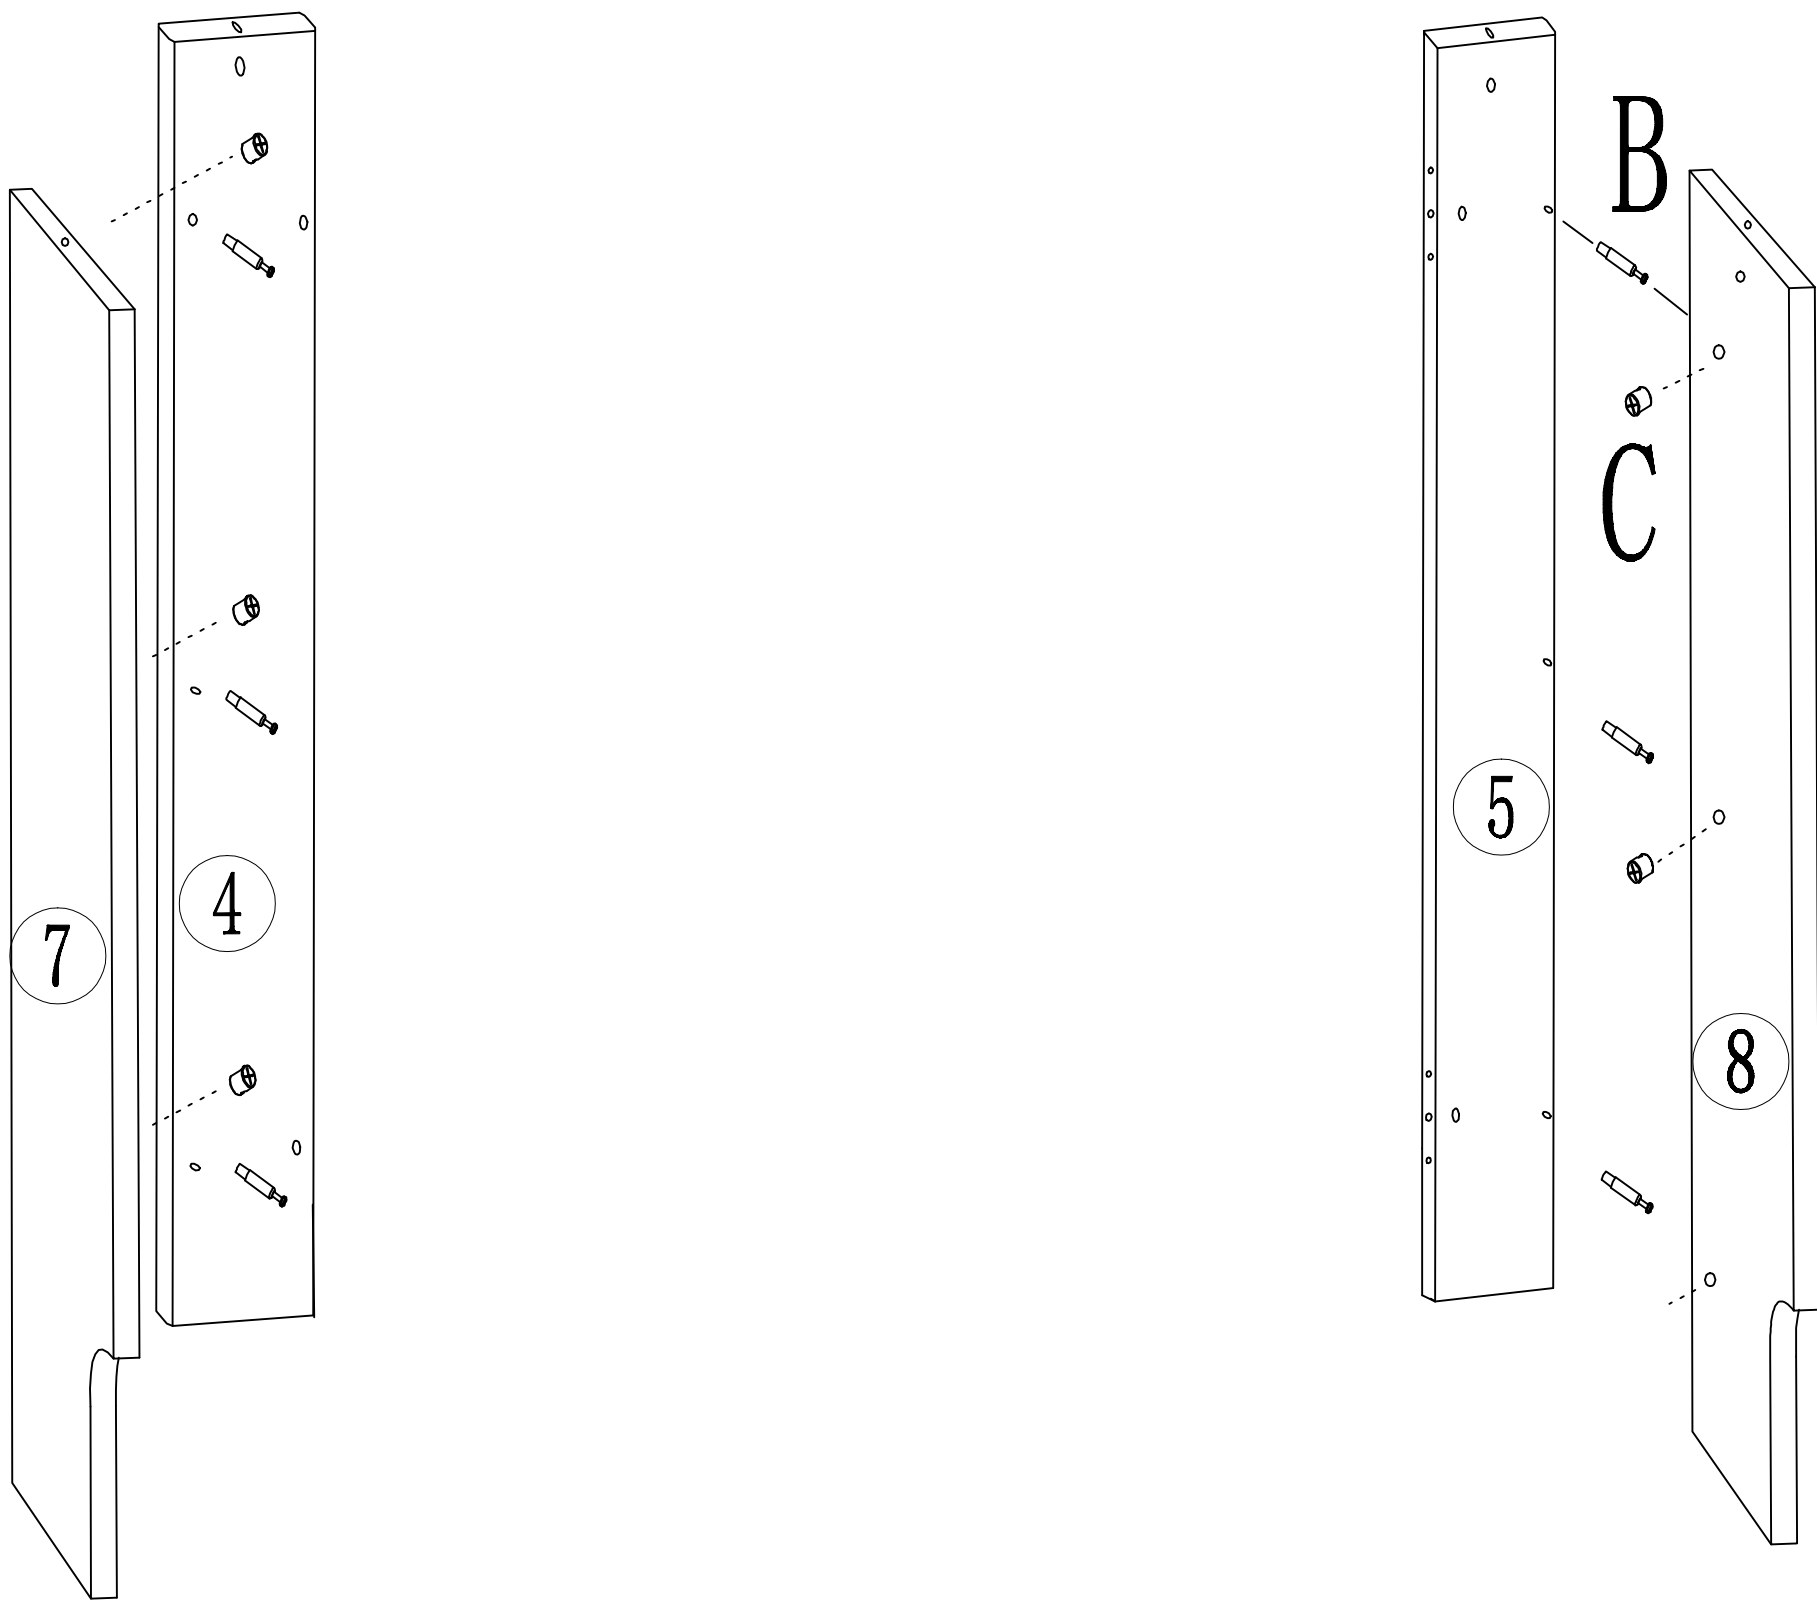





1 2

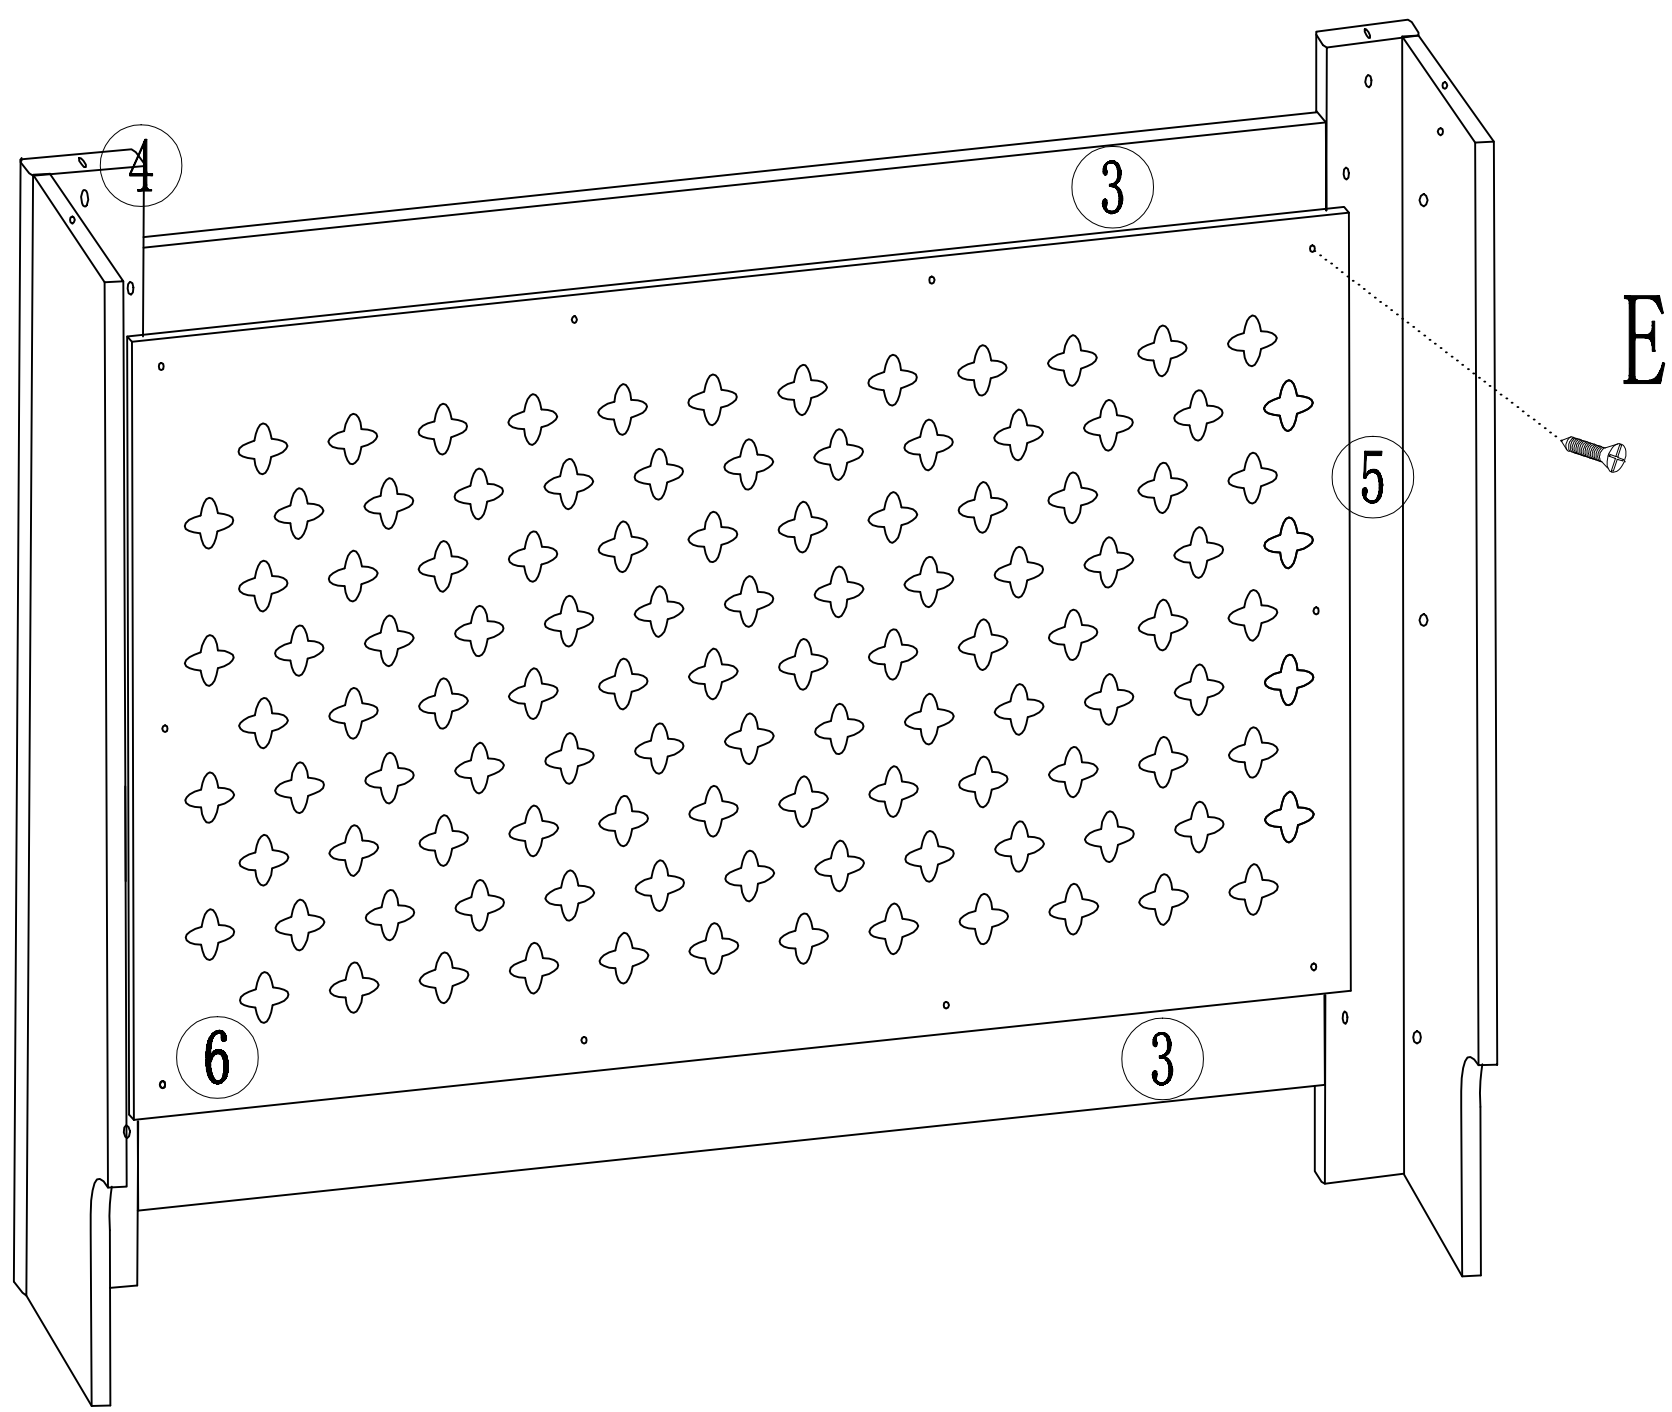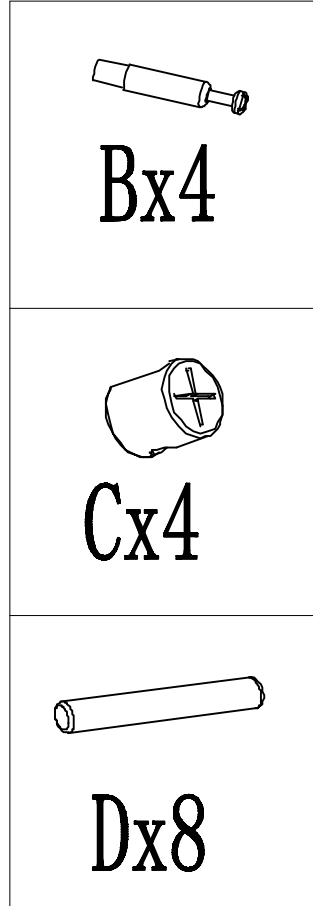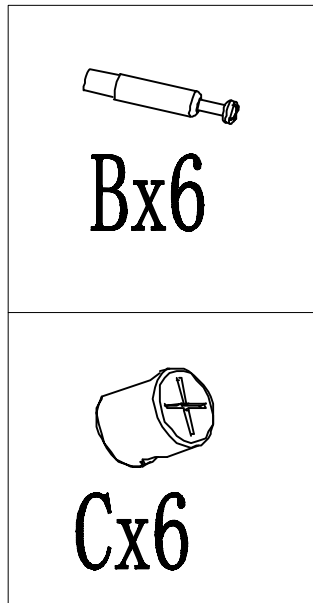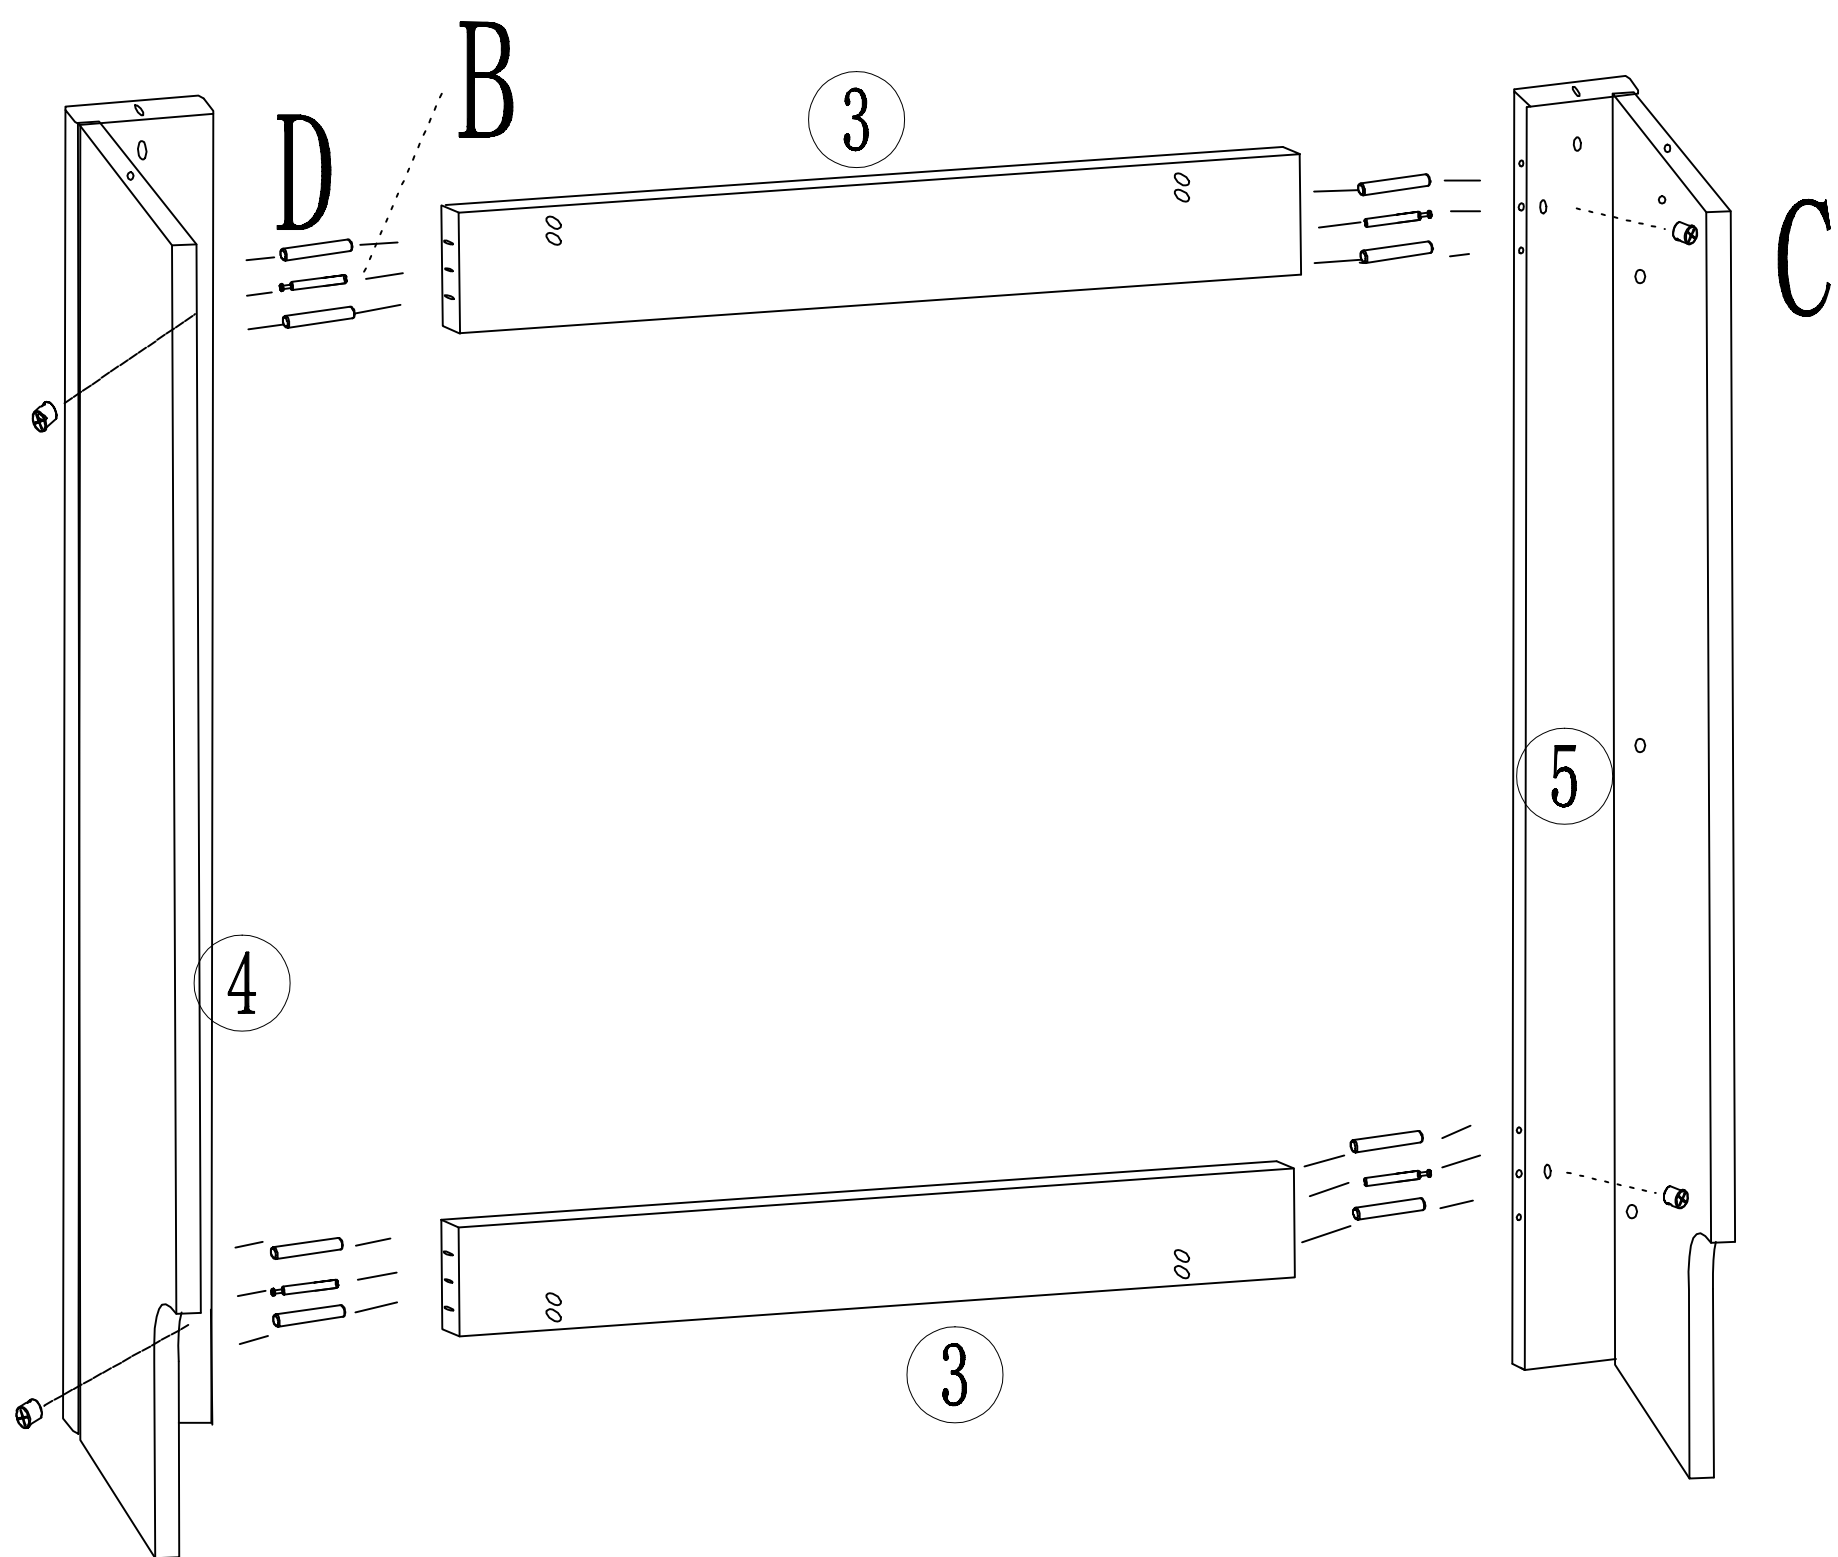

3 4

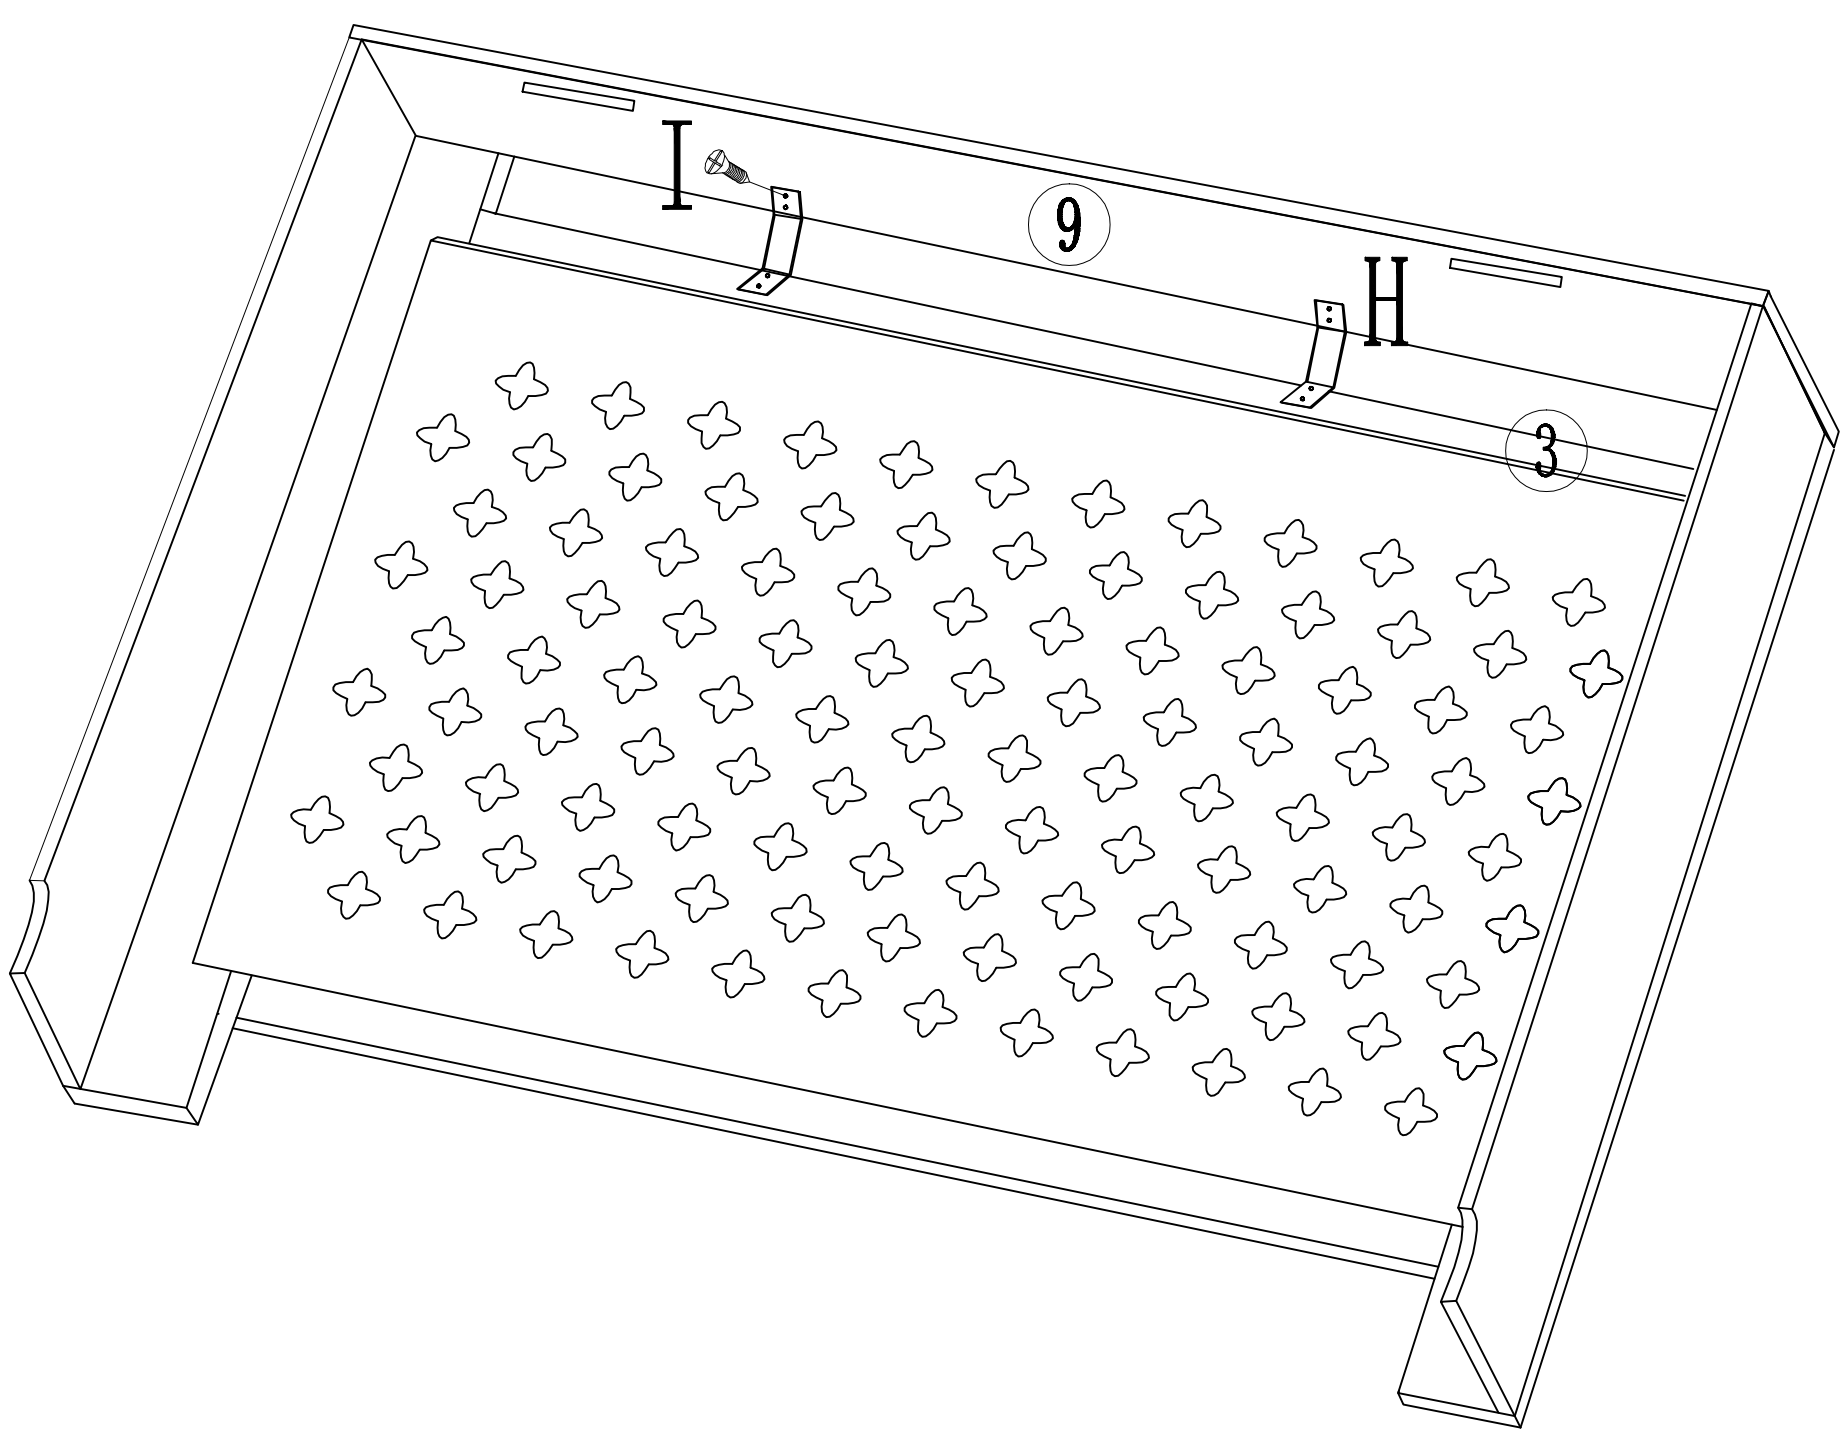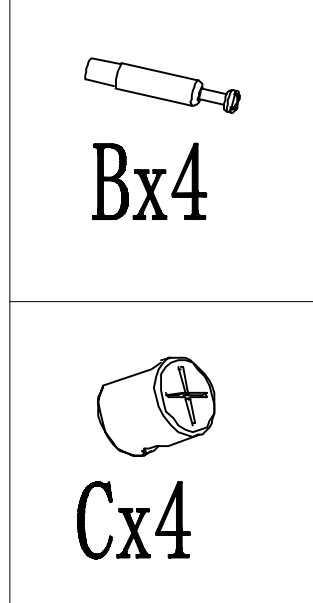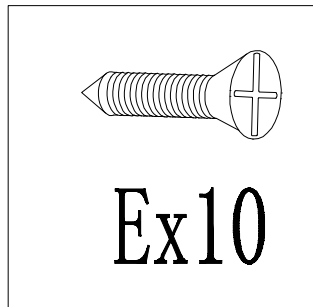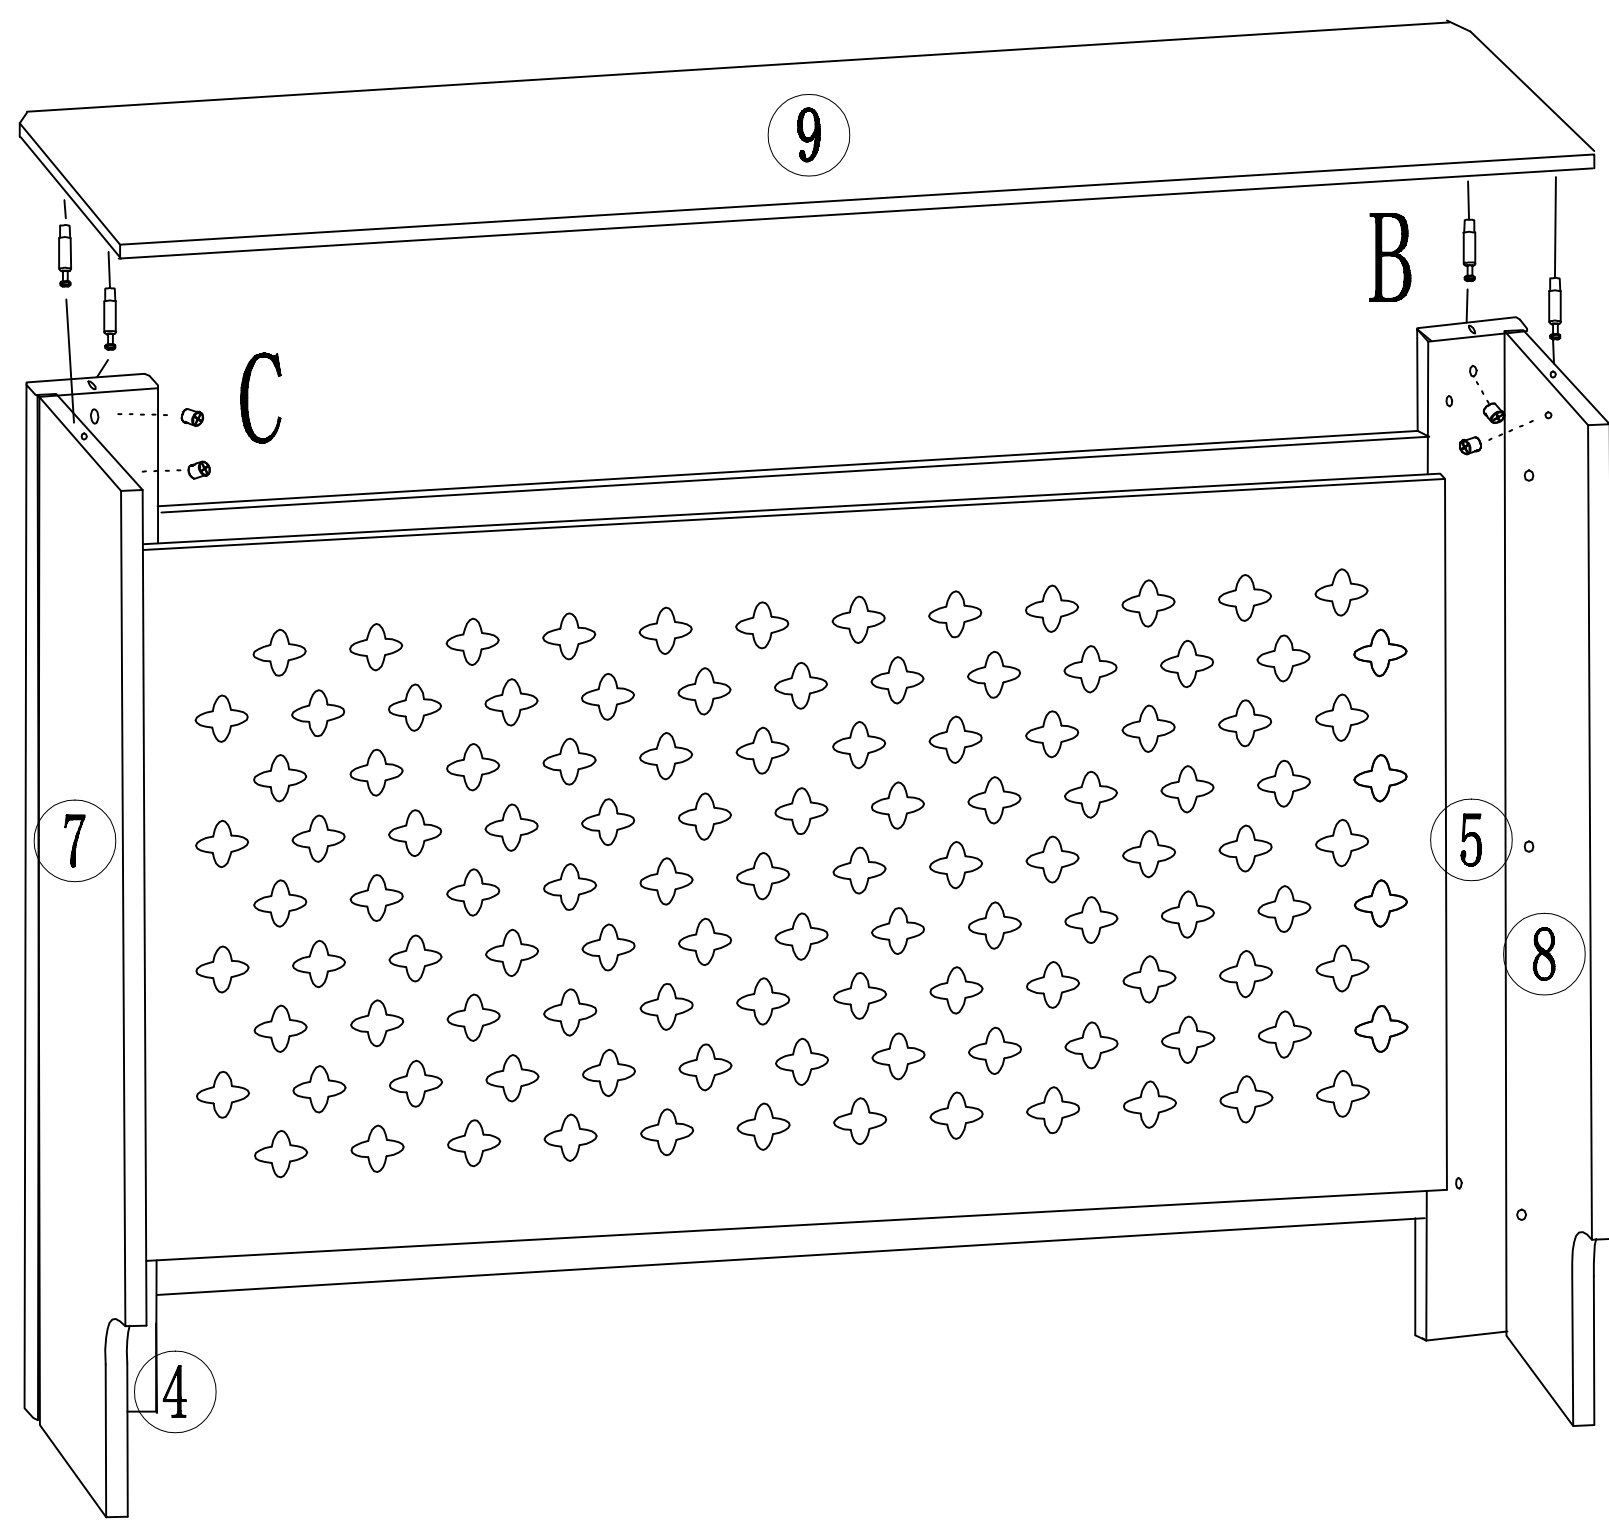

5 6

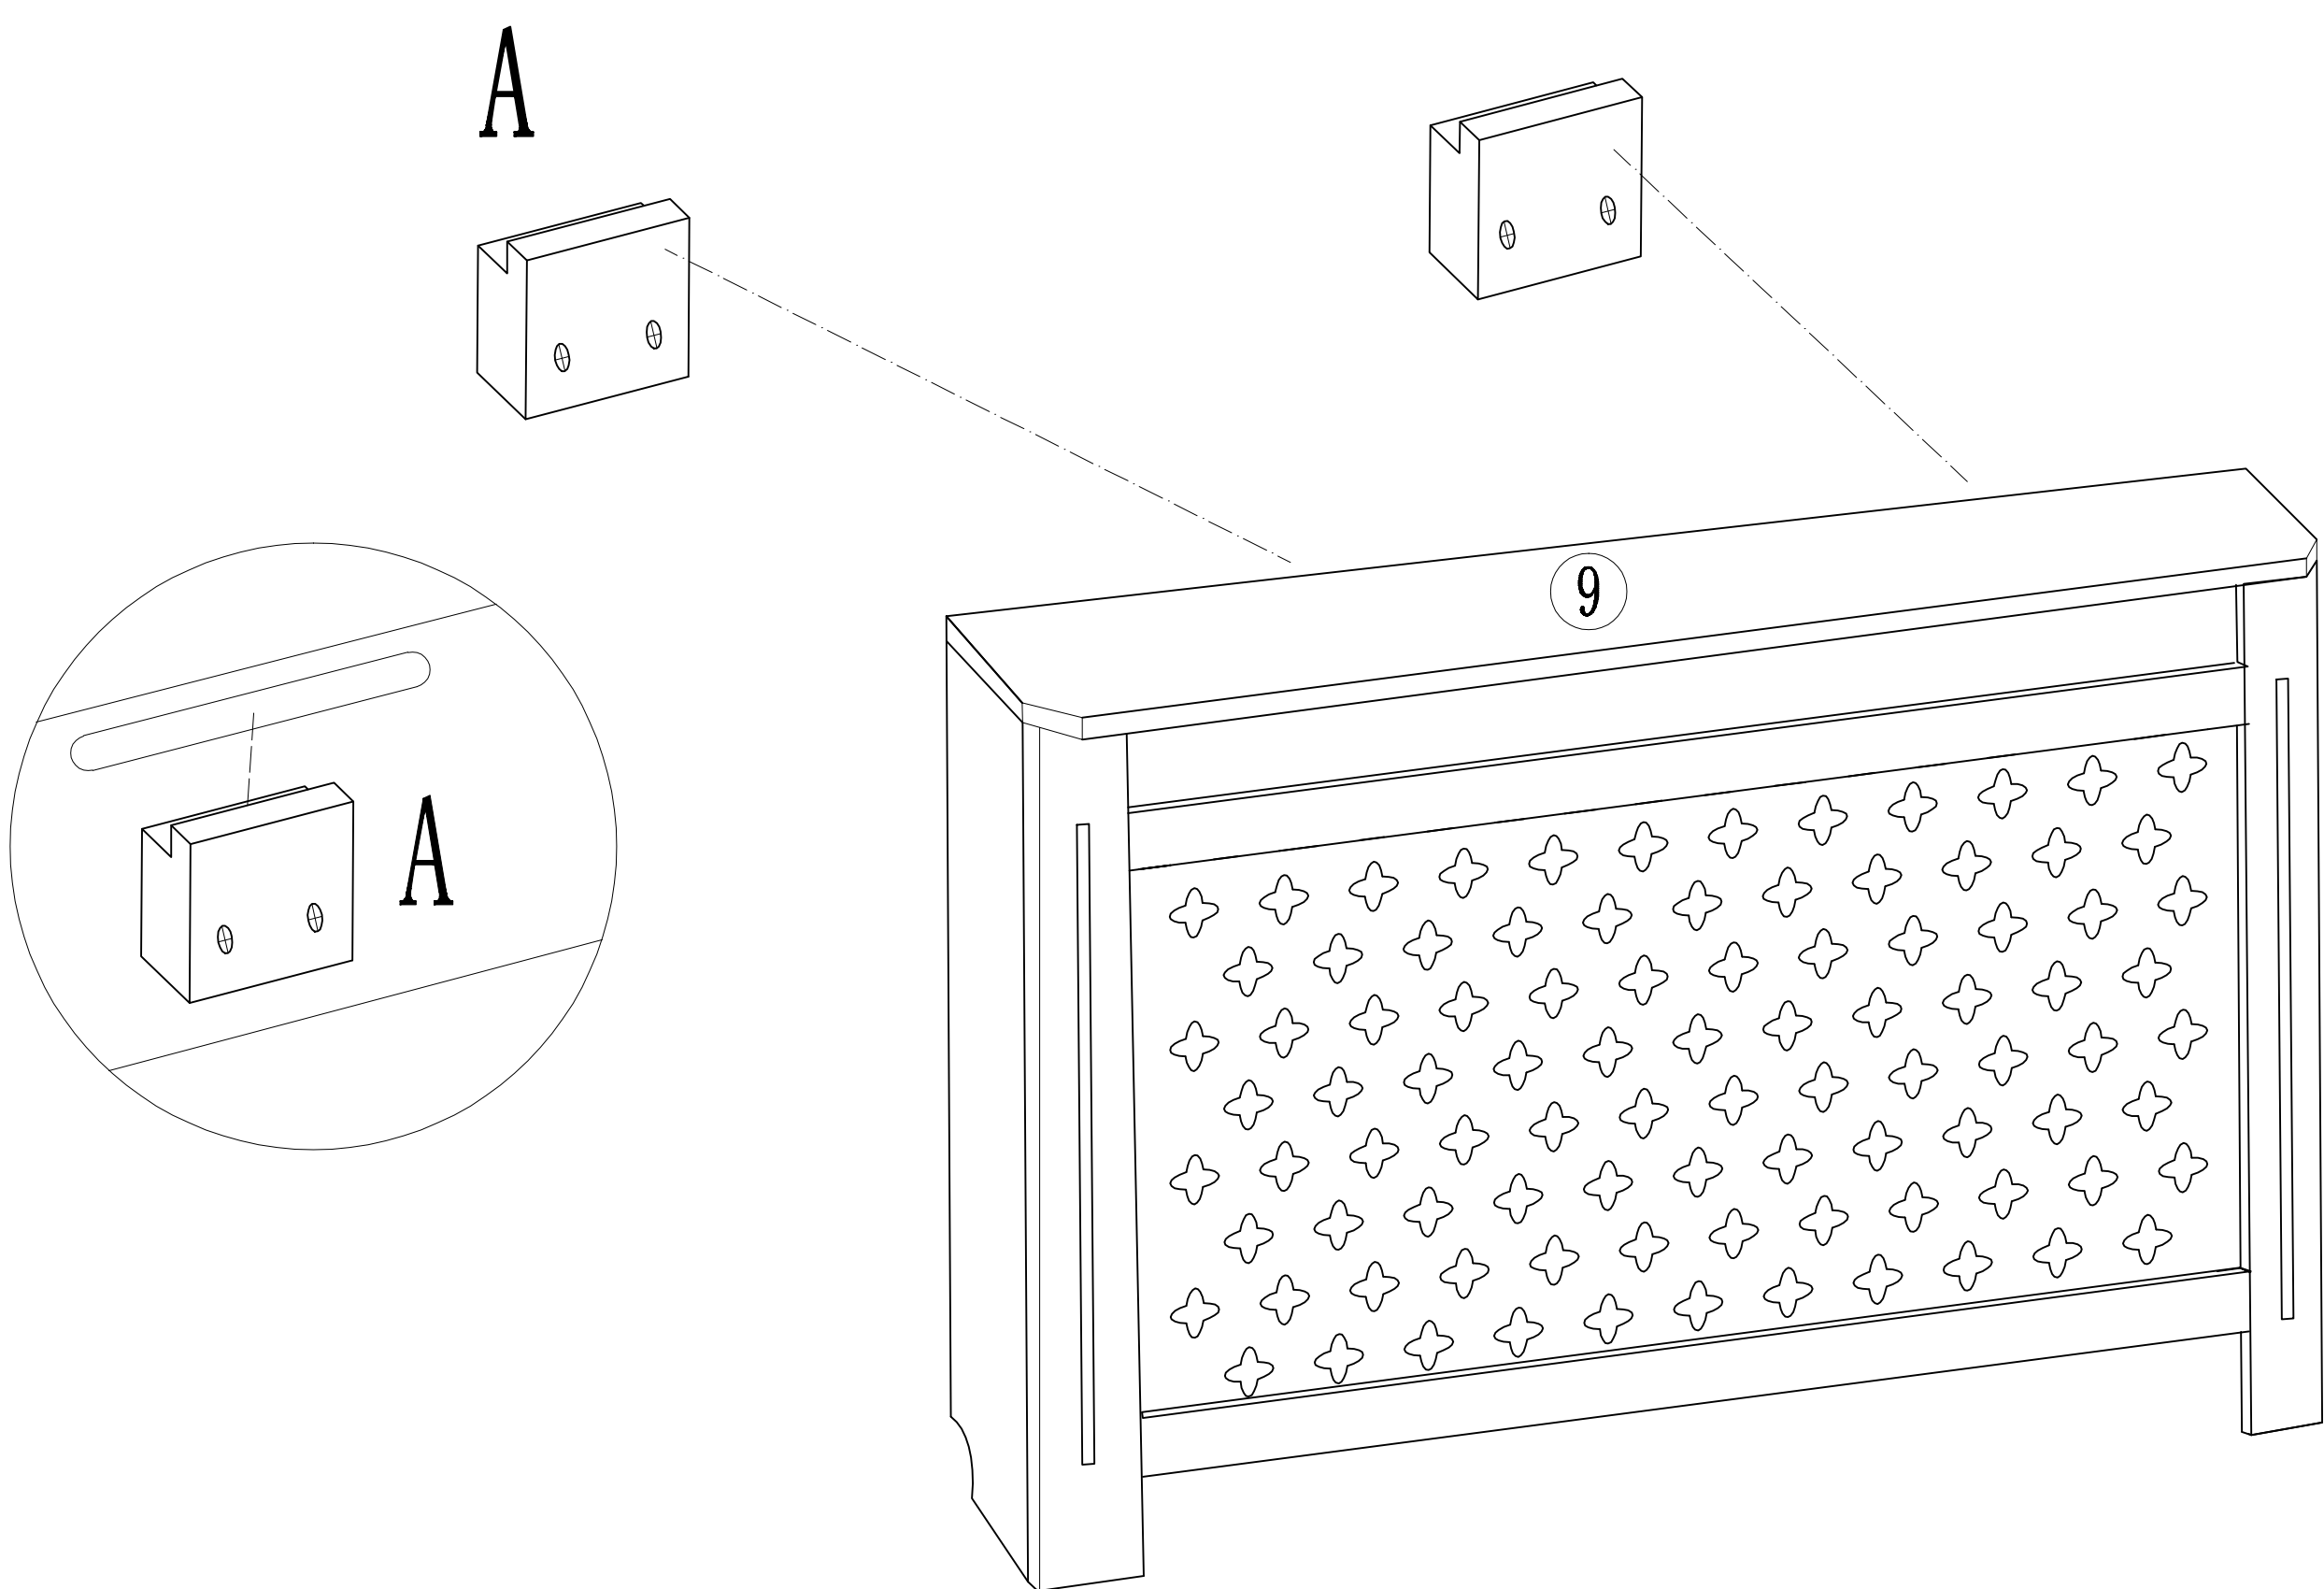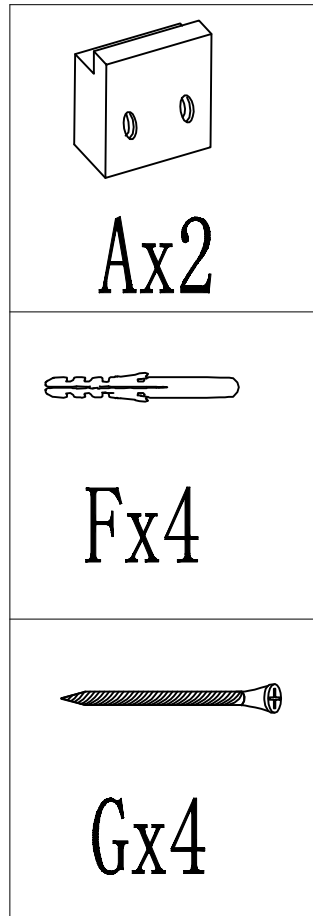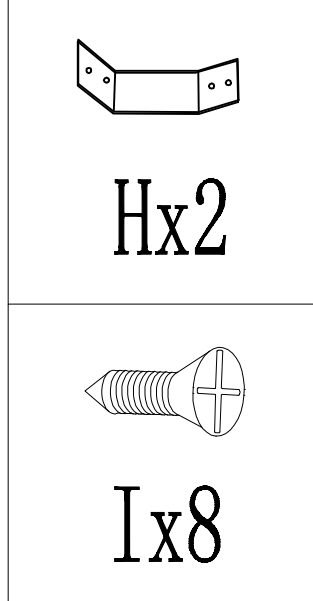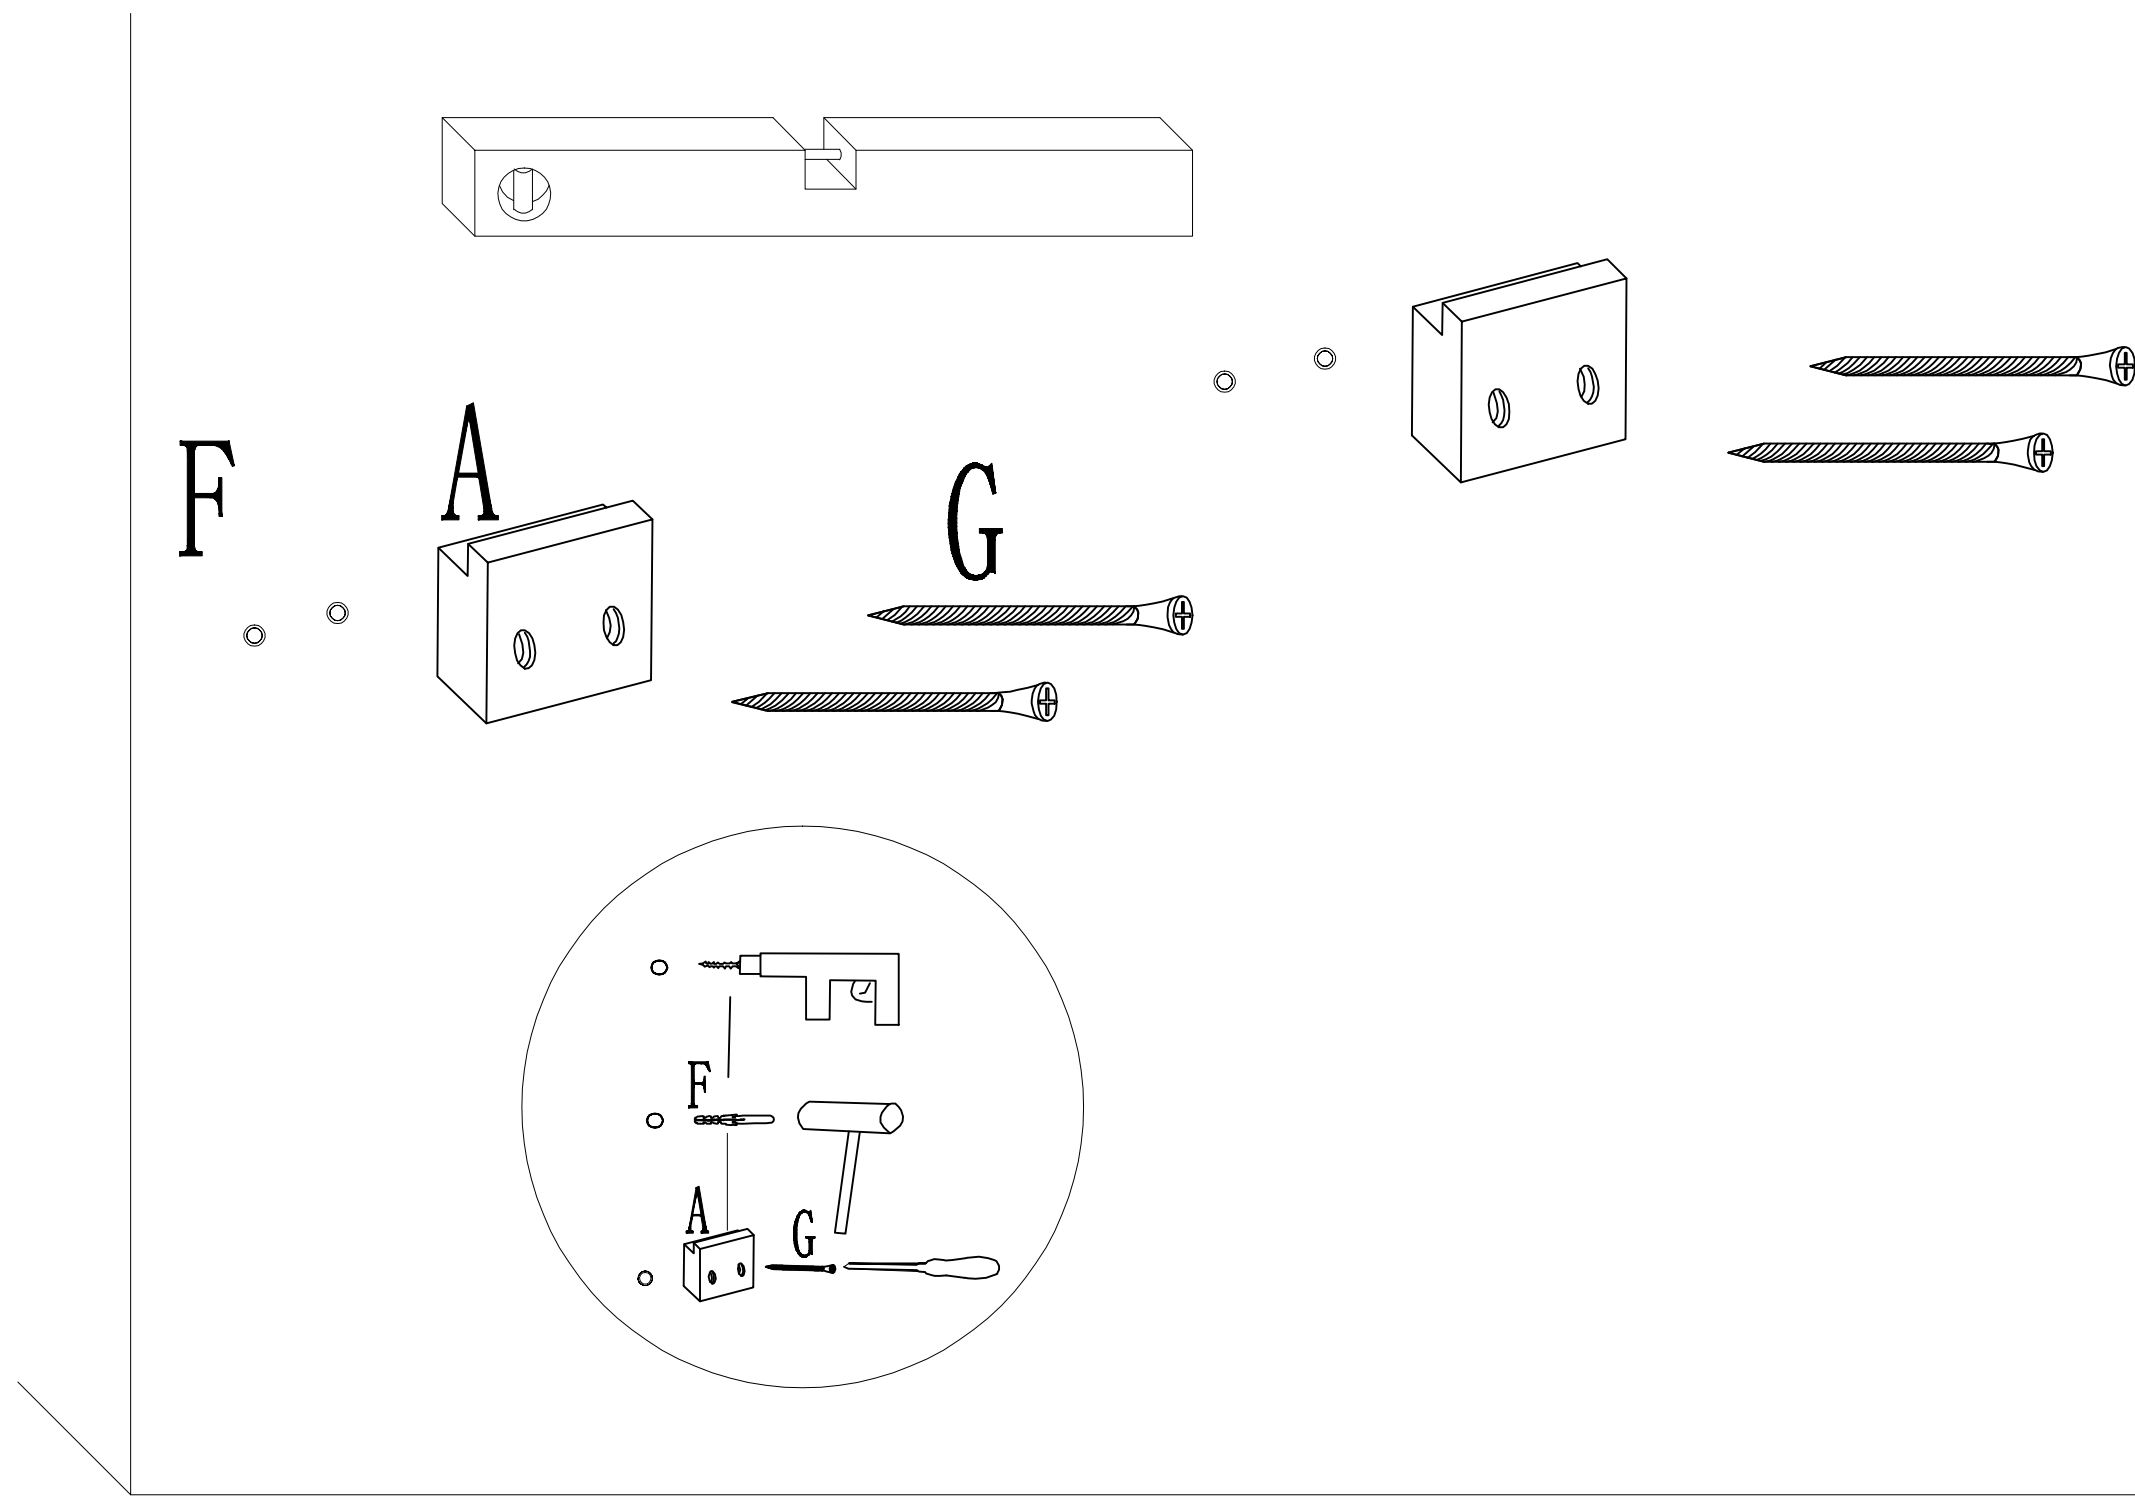

7