



Instruction Manual

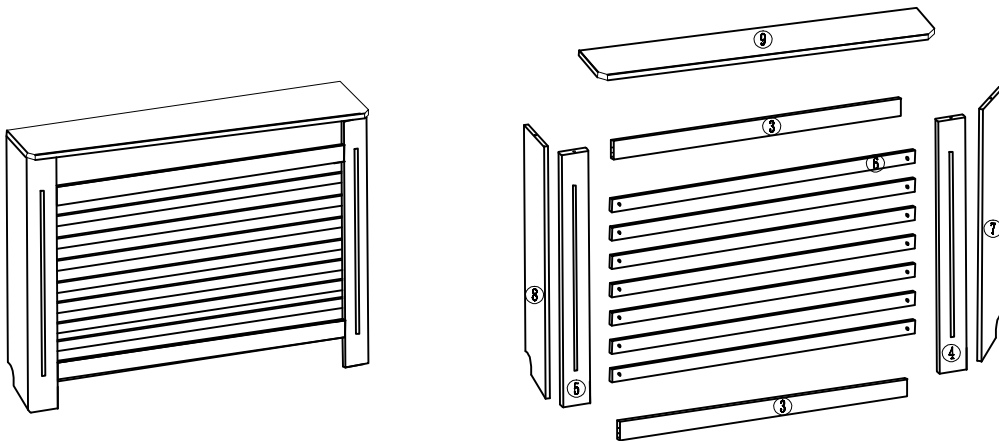


Tools needed




churn drill




hammer




cross screwdriver

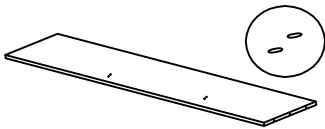

③ x2 872*105*12mm




④ x1 803*110*12mm




⑤ x1 803*110*12mm




⑥ x7 932*37*9mm

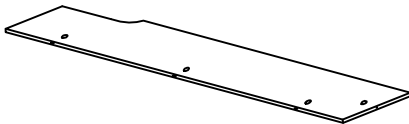

⑦ x1 803*168*12mm

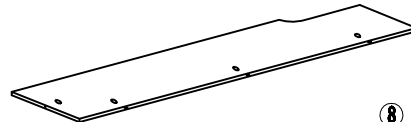

⑧ x1 803*168*12mm

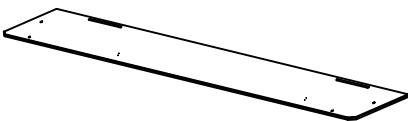

⑨ x1 1120*190*12mm



Ax2



Bx14




Cx14



Dx8



Ex14



Fx4



Gx4



Hx2






Ix8





Using a screwdriver,screw in the #B screws securely.Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely,but avoid over tightening,screws may protrude through the panel.



1 2

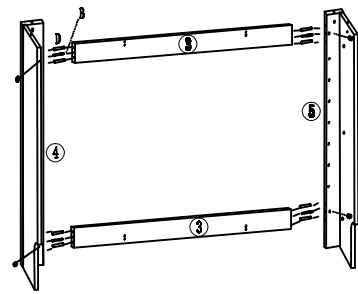

3 4

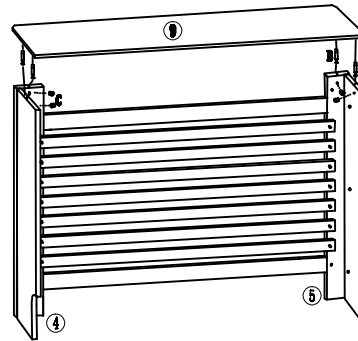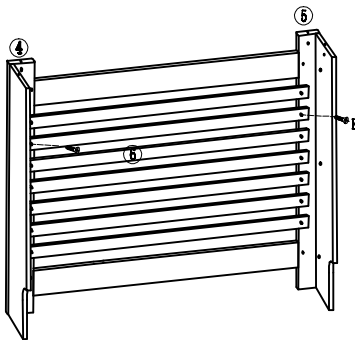

5 6

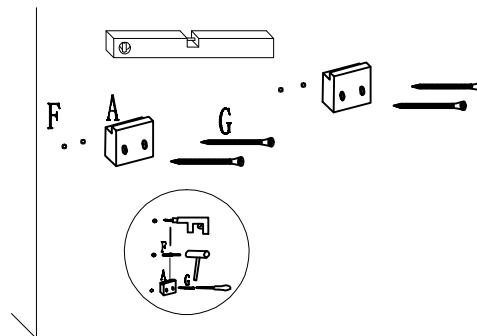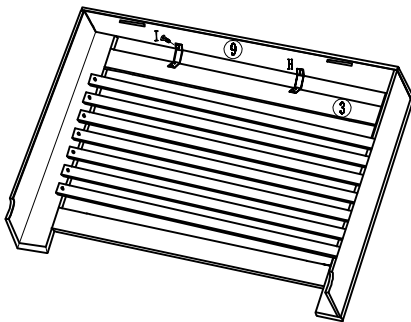

7

