
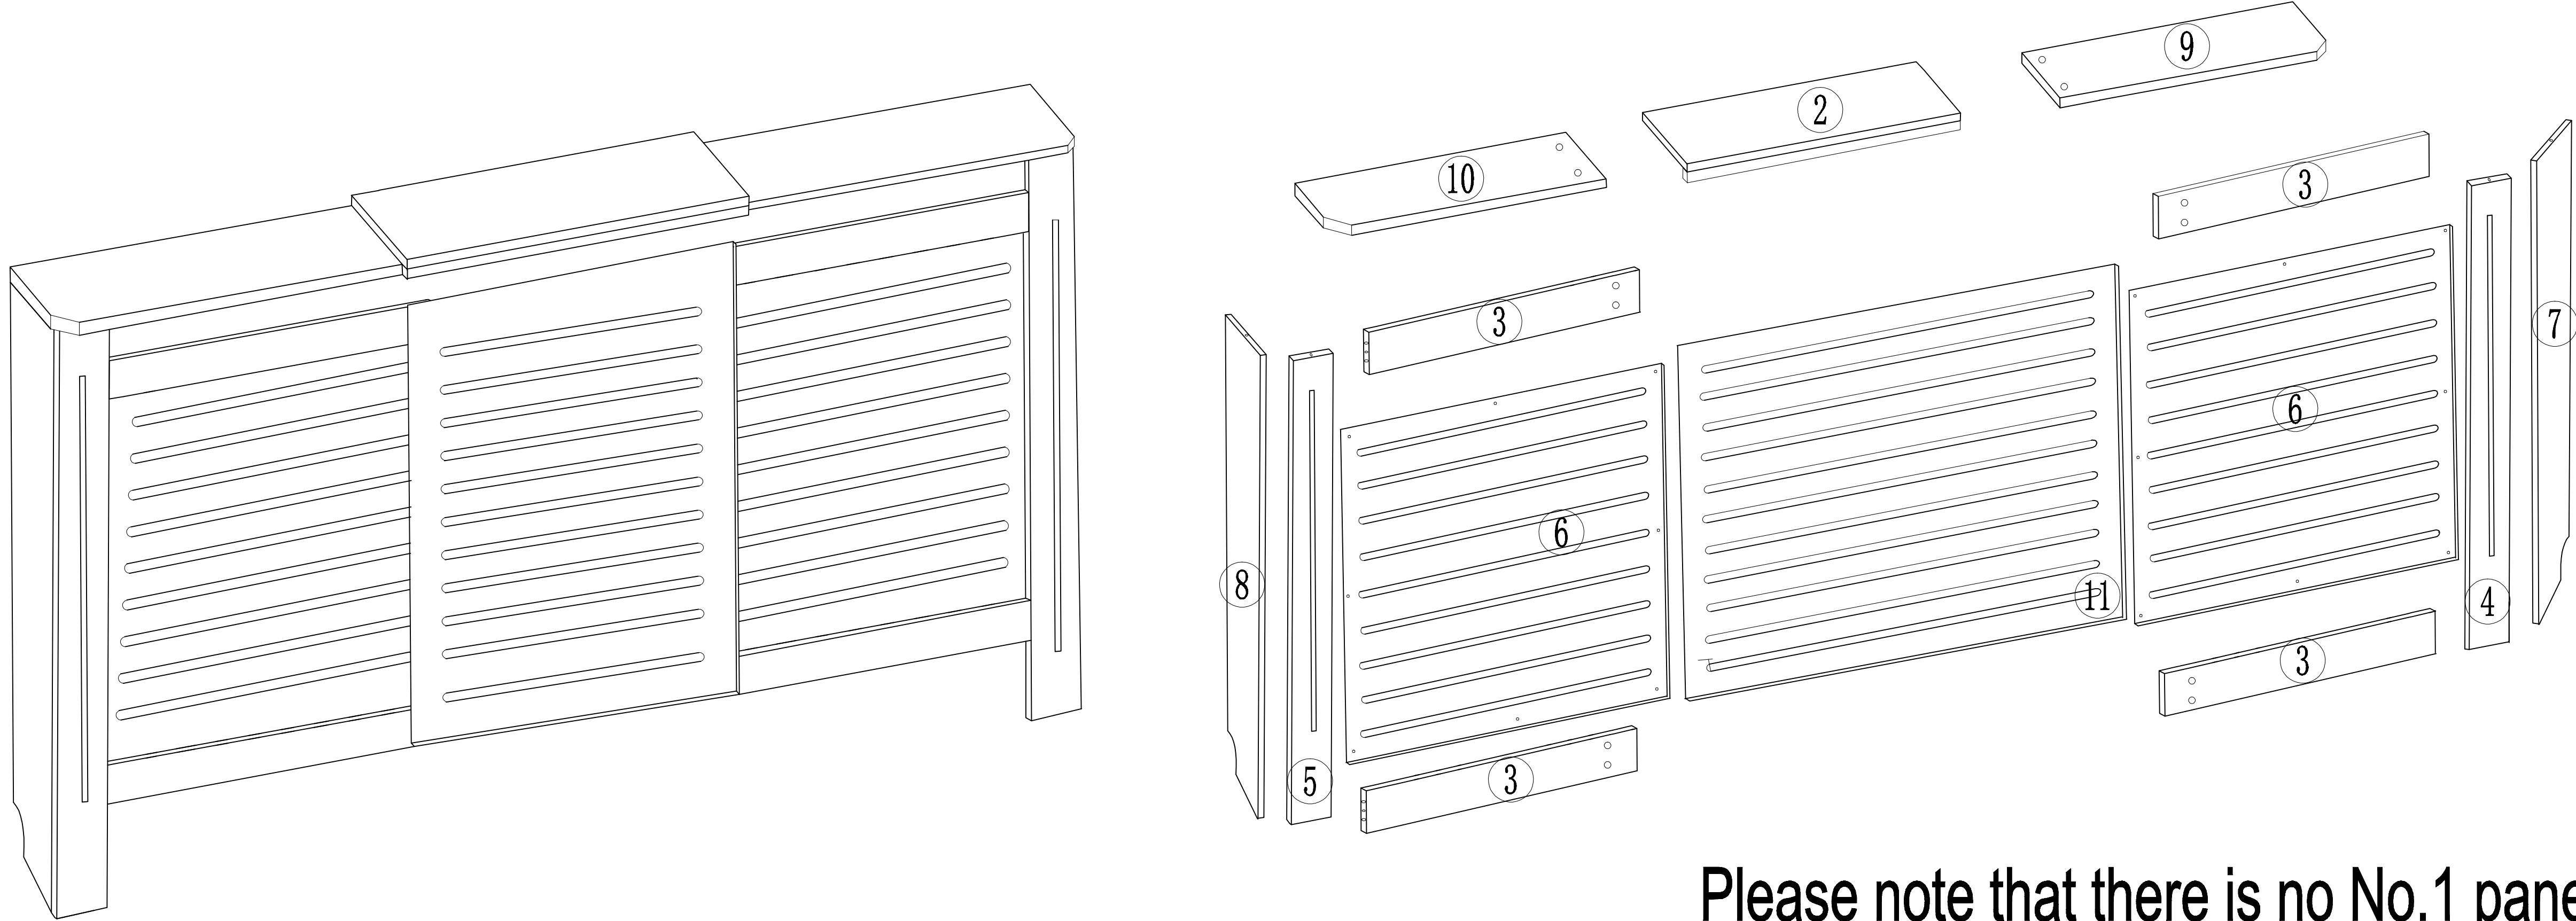
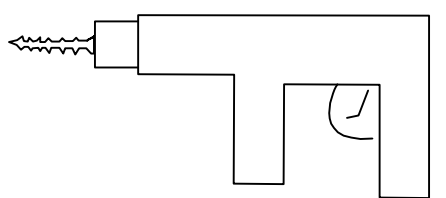
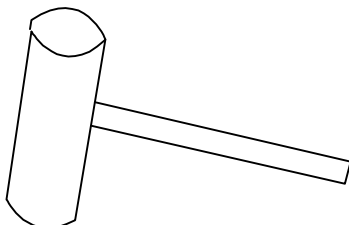



Instruction Manual




Tools needed


churn drill

hammer

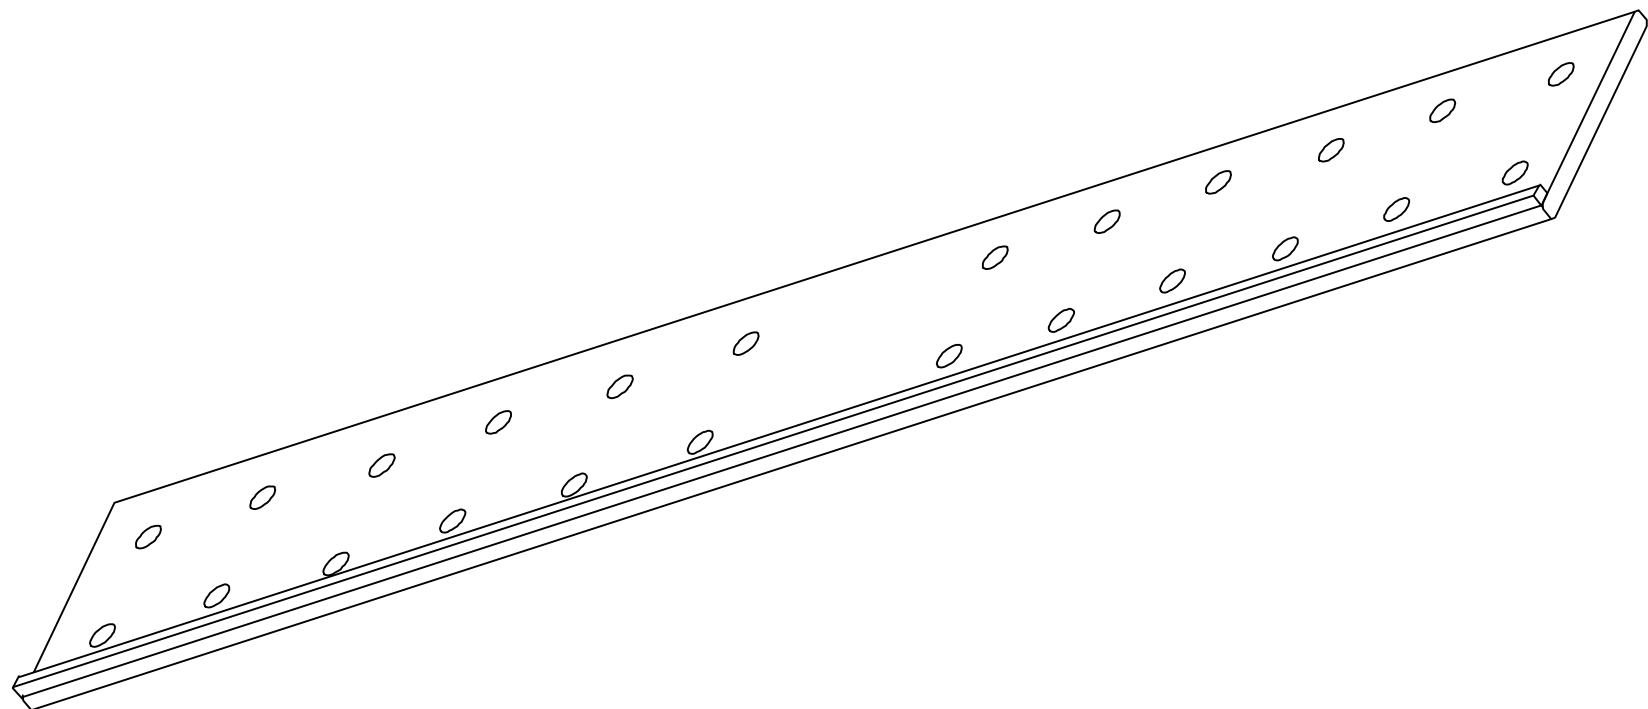cross screwdriver


Please note that there is no No.1 panel !

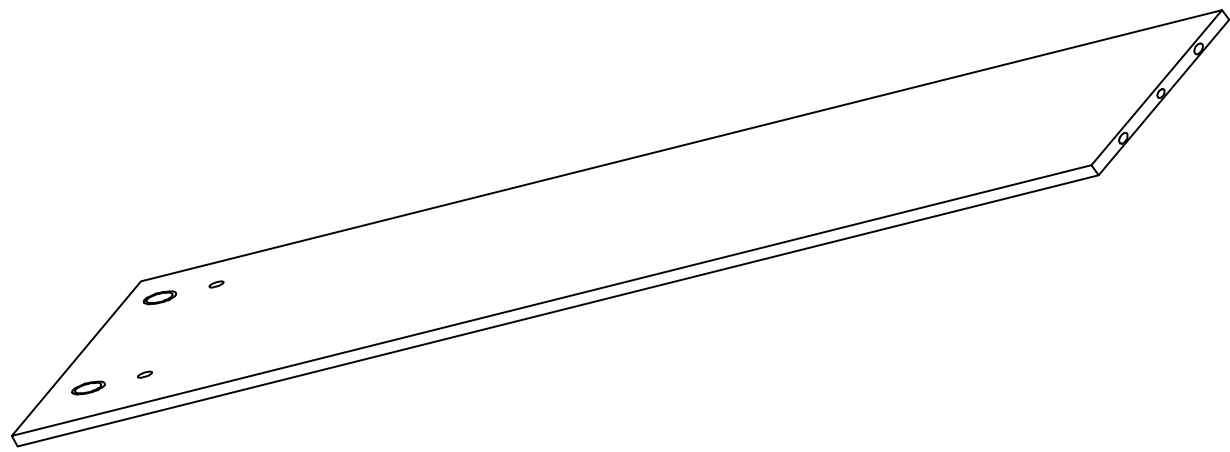


② x1 850*205*24mm




③ x4 550.5*105*12mm

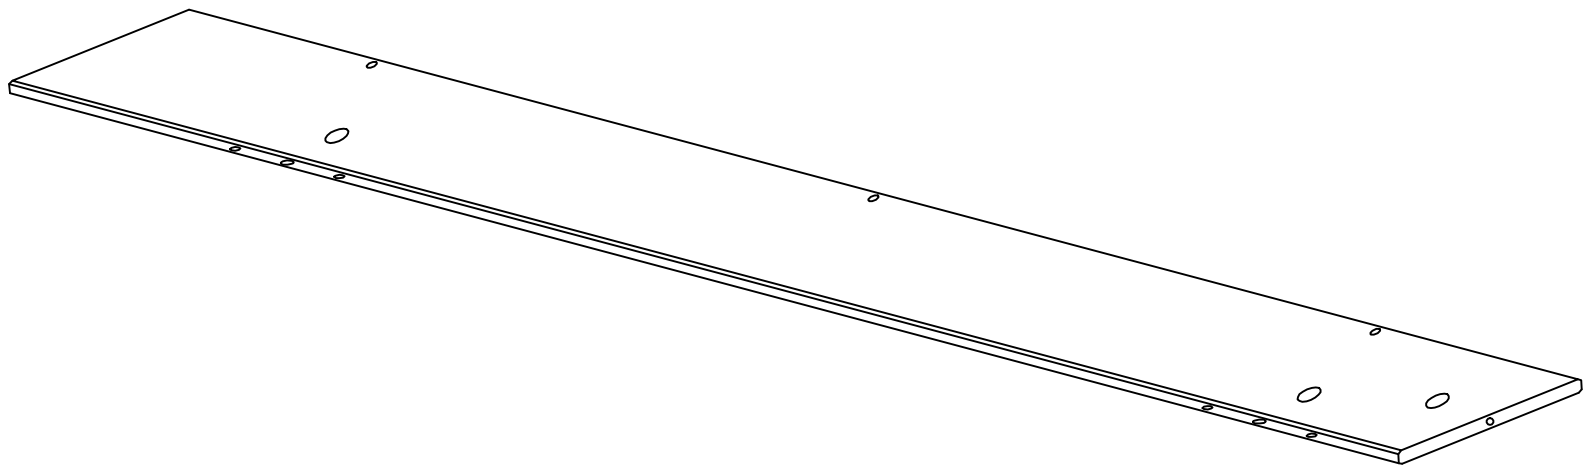


④ x1 803*110*12mm

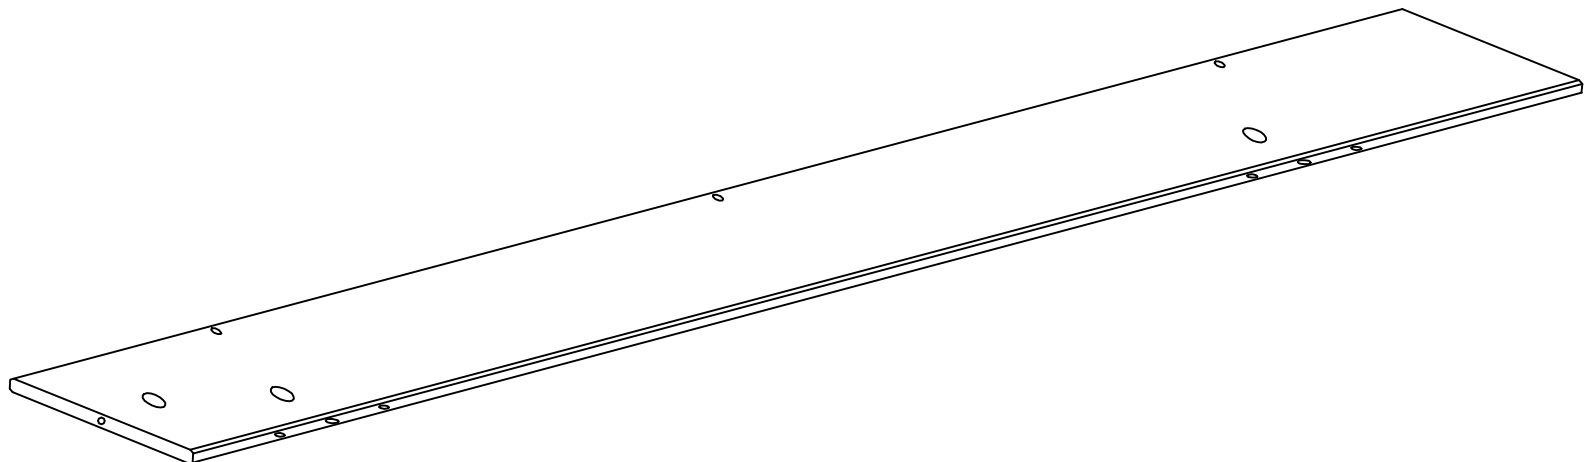


⑤ x1 803*110*12mm

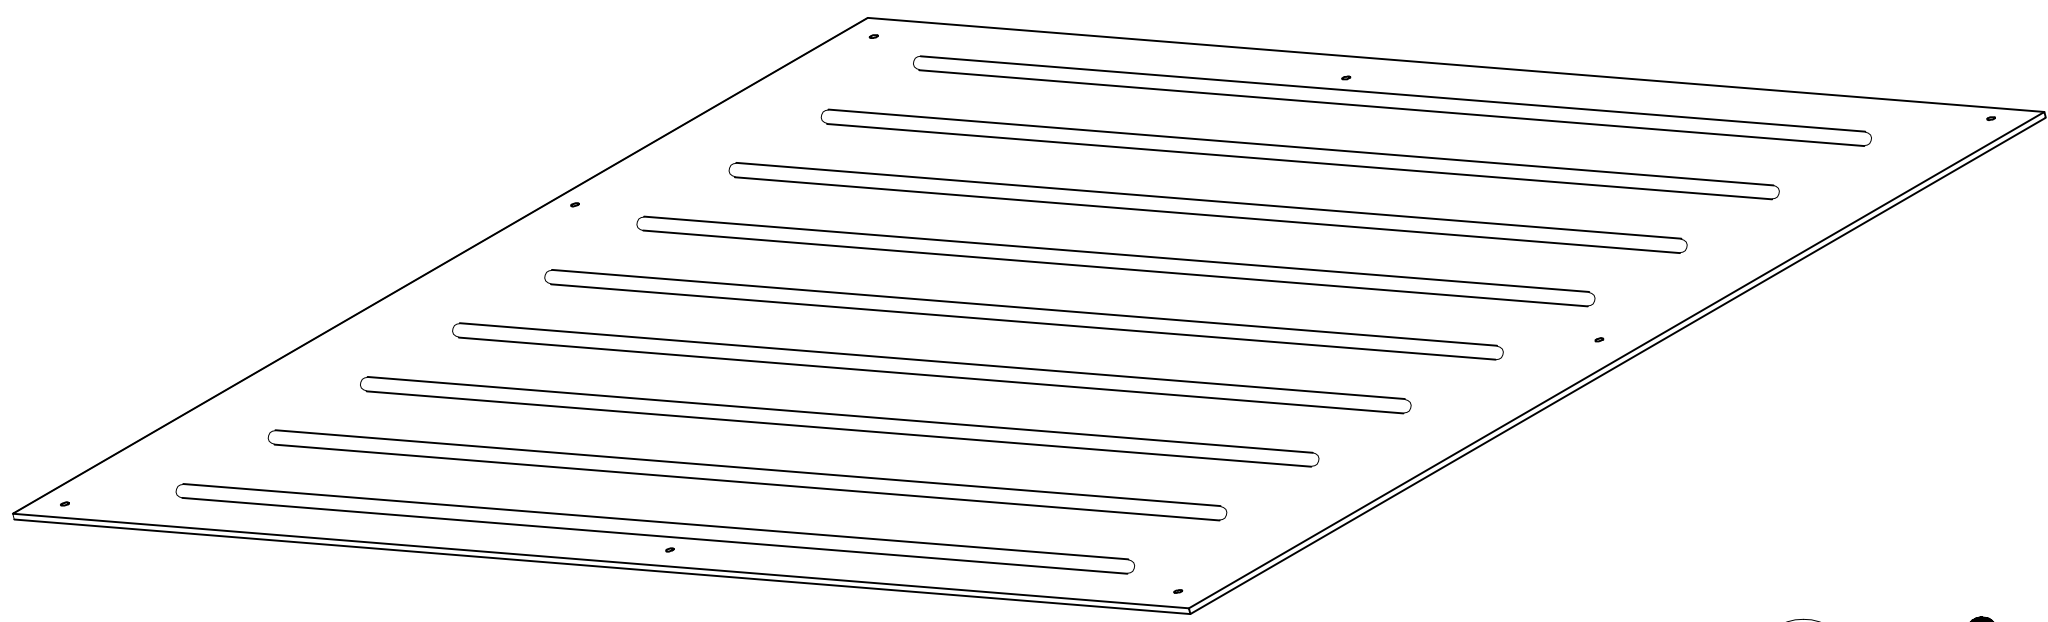


⑥ x2 540*479*5mm

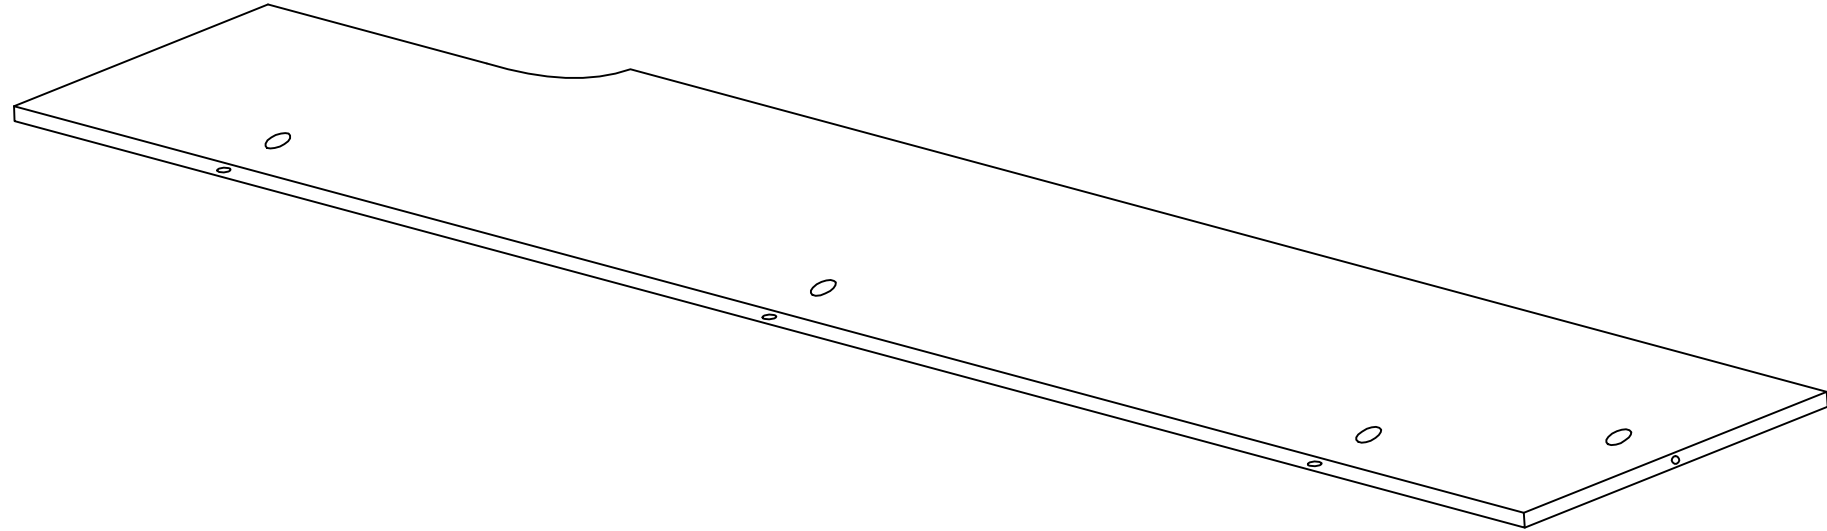


⑦ x1 803*168*12mm

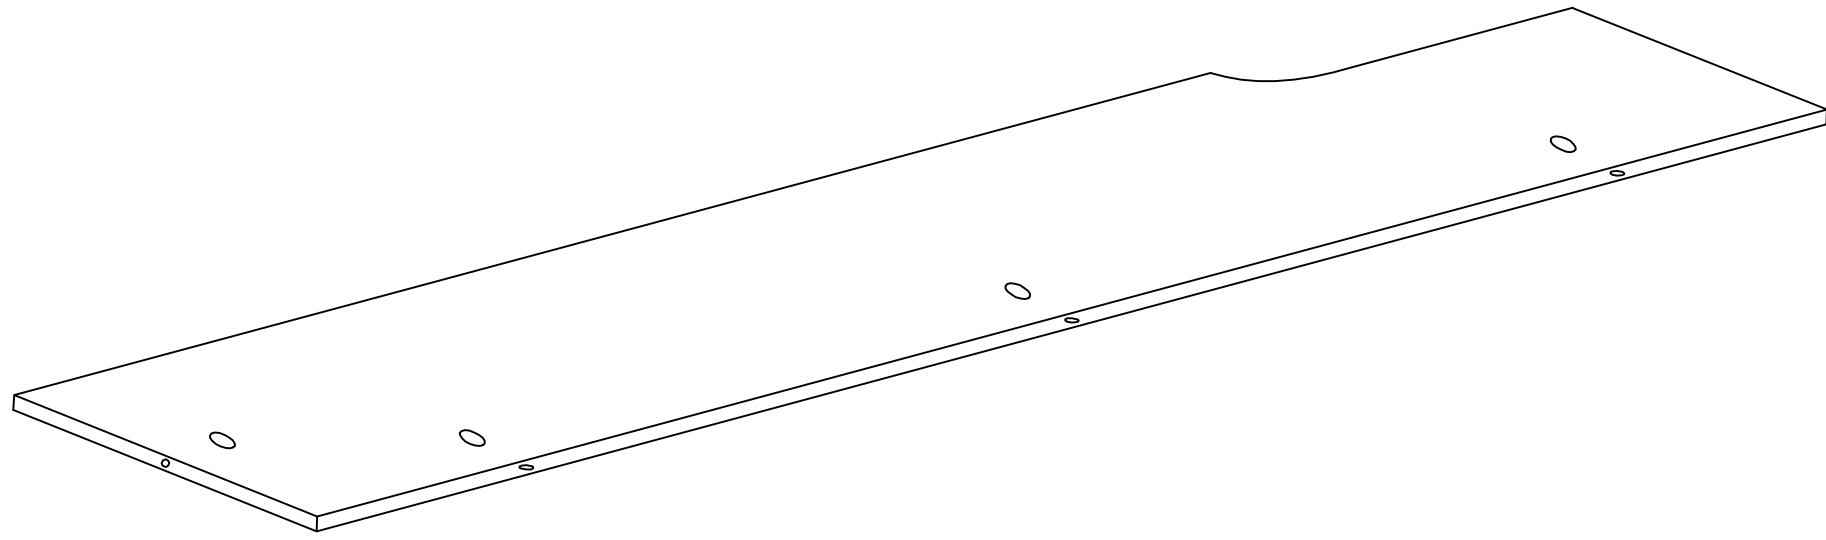


⑧ x1 803*168*12mm

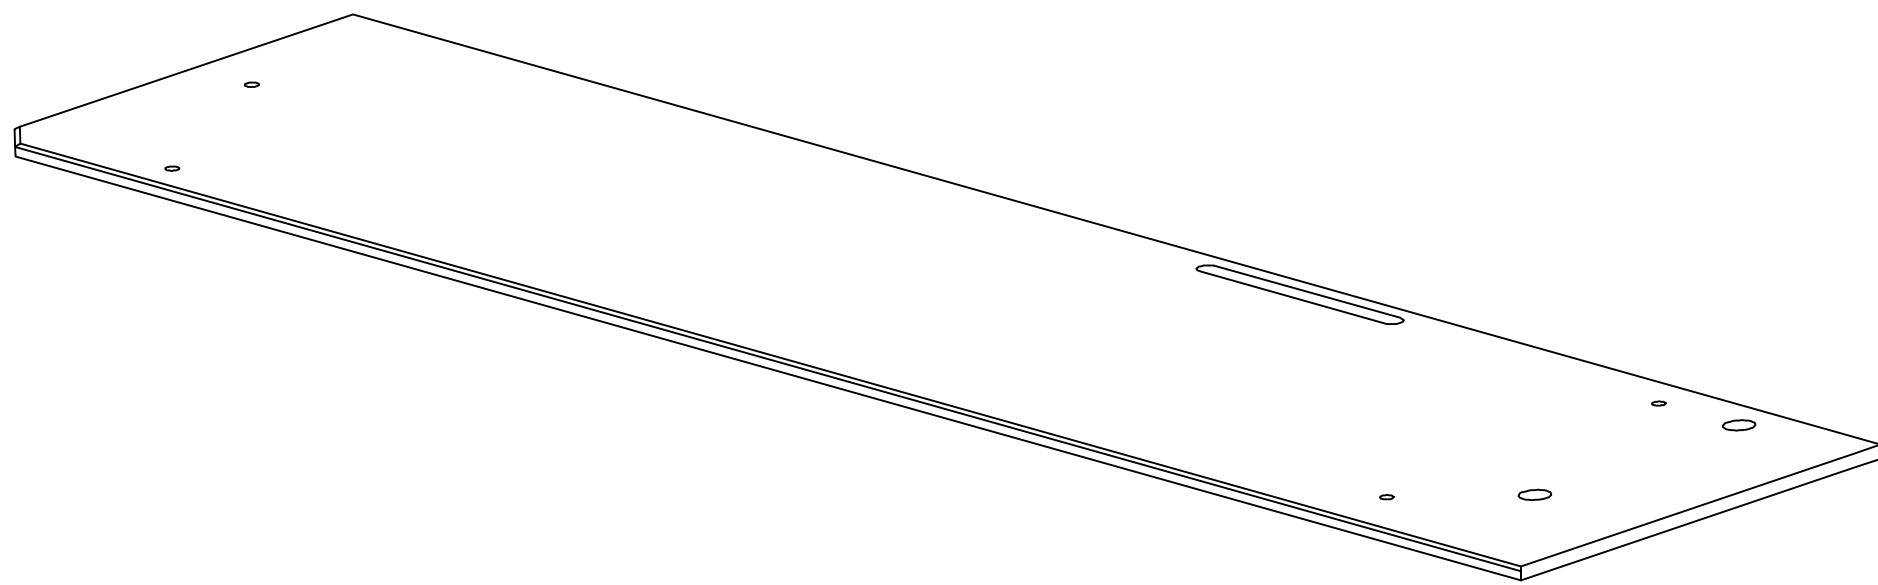


⑨ x1 691*190*12mm

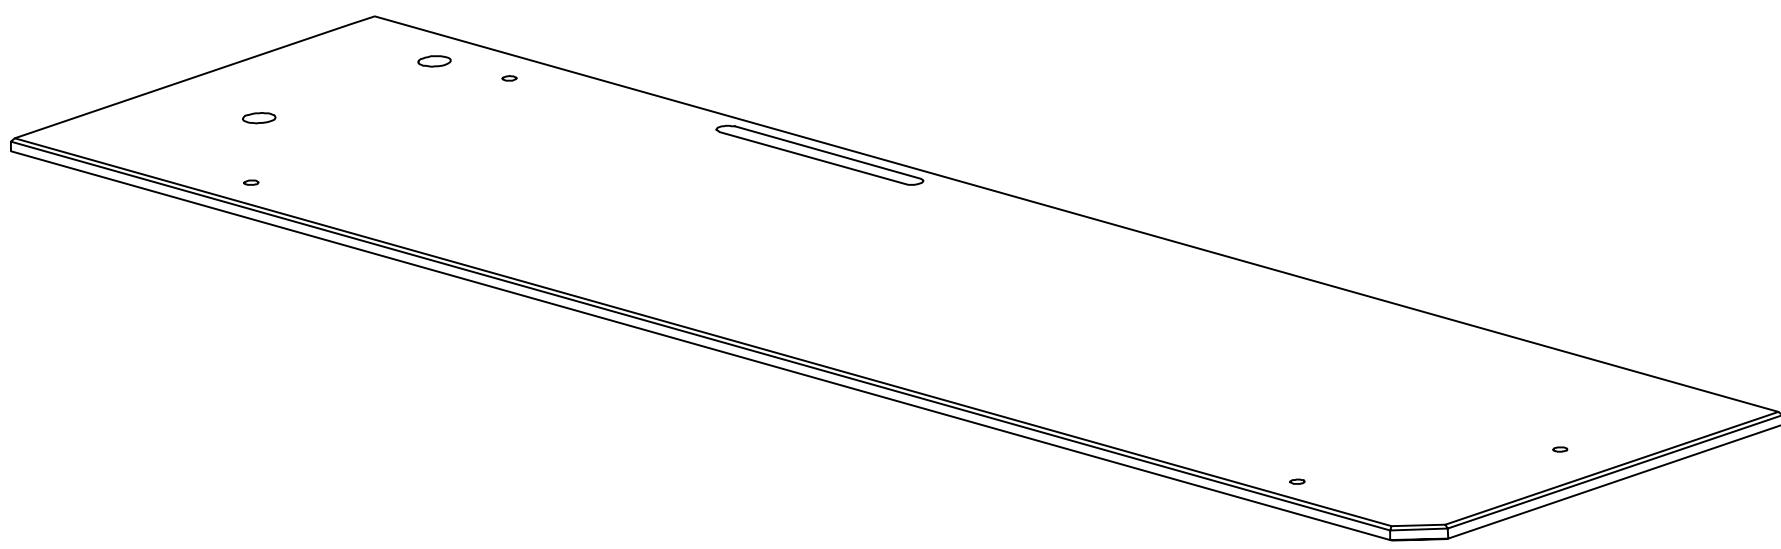


⑩ x1 691*190*12mm

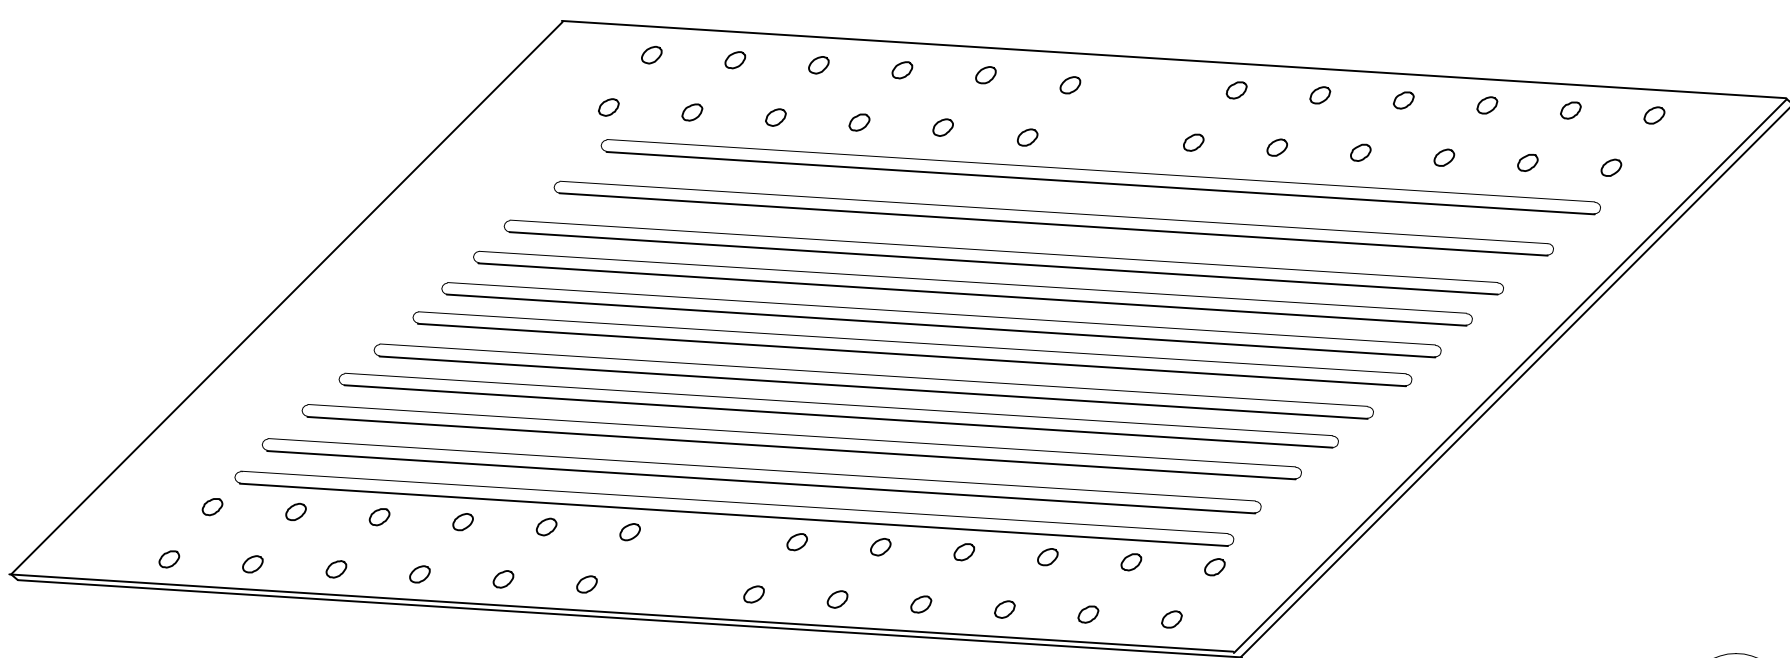


⑪ x1 850*649*12mm

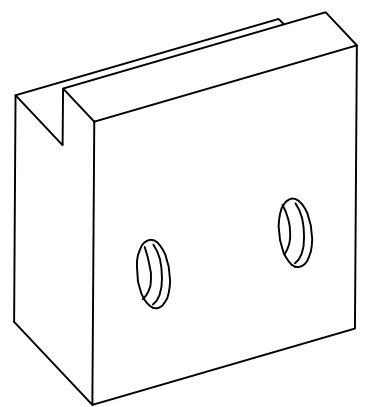


Ax2

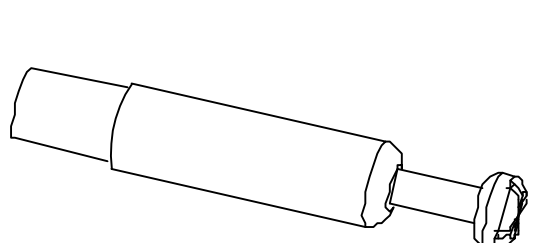


Bx14

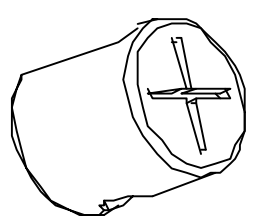


Cx14

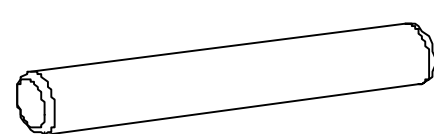


Dx8




Ex14




Fx4




Gx4

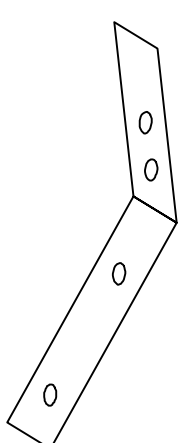


Hx2



Ix8

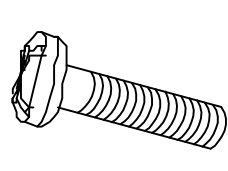

Jx12

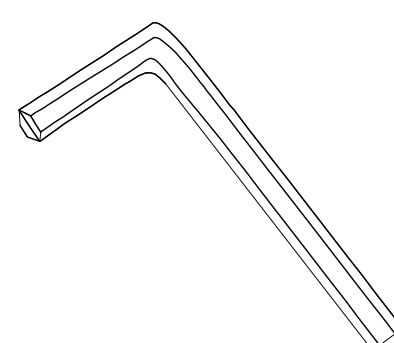

Kx1



Using a screwdriver,screw in the #B screws securely.Please do not over tighten as it may cause wood to splinter.
The small arrow on the #C Cam Locking Screw should be facing the #B screws extending from the panel.
Use screwdriver to tighten securely,but avoid over tightening,screws may protrude through the panel.

	1 2 Bx6 Cx6		Bx4 Cx4 Dx8
	3 4 Ex14		Jx8 Kx1
	5 6 Jx4 Kx1		Bx4 Cx4
	7 8 Hx2 Ix8 Kx1		Ax2 Fx4 Gx4
	9		