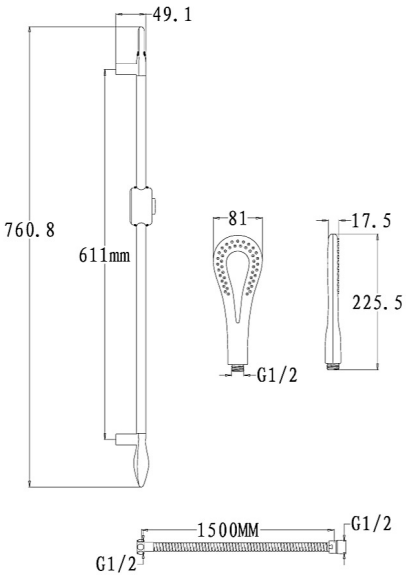
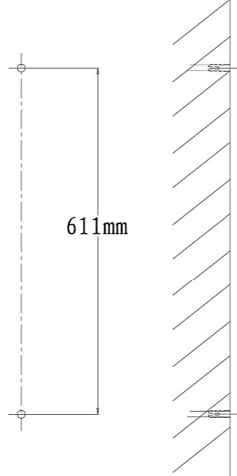
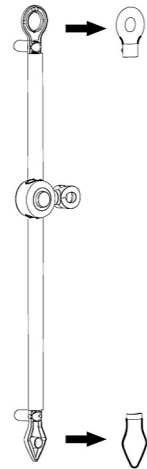

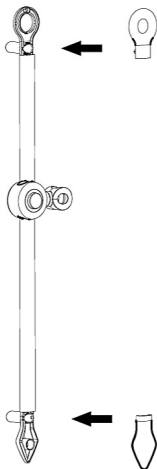
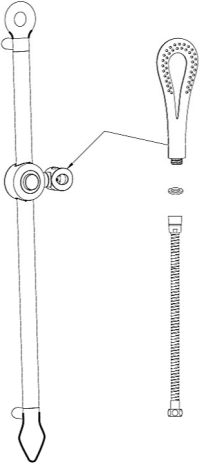
 <p>Sliding bar Hand shower</p> <p>Shower hose</p> <p>Washers</p> <p>Screws</p> <p>Plugs</p>	 <p>760.8</p> <p>49.1</p> <p>611mm</p> <p>81</p> <p>17.5</p> <p>225.5</p> <p>G1/2</p> <p>1500mm</p> <p>G1/2</p>	<p>1. Mark the hole of the screw hole on the wall, and push the expansion screw into the wall.</p>  <p>611mm</p>	<p>2. Take off the cover of the upper and down wall bracket.</p> 
<p>3. Fix the upper and down wall bracket into the wall.</p> 	<p>4. Cover the upper and down wall bracket.</p> 	<p>5. Connect the hand shower with hose, connect the tap at the other end.</p> 	<p>6. Finish.</p> 