





Pencil



Ruler

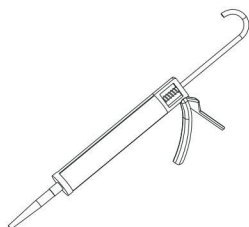


Silicone Sealant.

Tools & Materials:

Step 1:

According to the product size, open of build the wall holes.

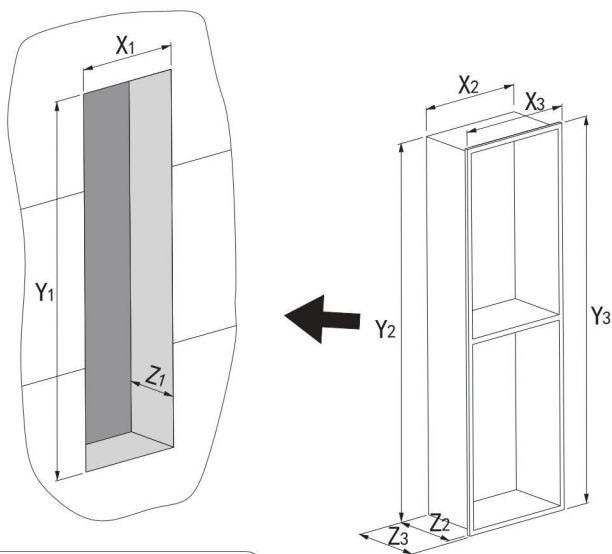

Edge mounted type installation size:

$X_2 \leq X_1 < X_3$;

$Y_2 \leq Y_1 < Y_3$;

$Z_2 \leq Z_1$.

Embedded type installation size:


$X_1 = X_3$;

$Y_1 = Y_3$;

$Z_1 = Z_3$.

Step 2:

The bottom of the wall hole to be smooth to ensure shower niche is aligned and level. If there is a forward tilt and gaps in the frame, smooth the bottom according to the situation and ensure that the frame tightly fits the wall

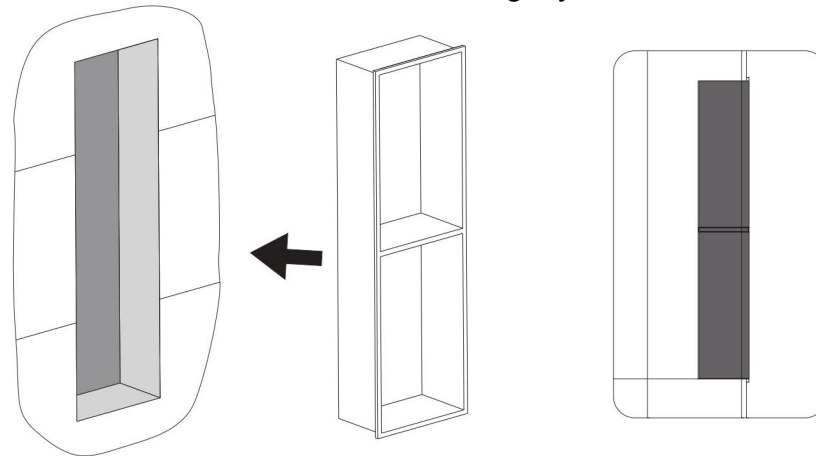

Step 3:

Apply silicone sealant all the way along the frame without missing any areas to ensure firmly adhesive the niche. The adhesive used should be mildew resistant, waterproof, and high temperature resistant. Immediately wipe away any excess sealant with a damp cloth.

