
## **Basin Mixer Installation Guide**

- Step 1 Insert metal spigots into tap
- Step 2 Insert flexi tails into the tap. Only hand tighten. Do not let the flexi tails coil. Do not loop them. Do not over tighten.
- Step 3 Place the tap on the basin. Make sure the baseplate and 'o'ring are situated correctly to seal around the tap hole.
- Step 4 On the underside of the basin place the rubber horseshoe, metal horseshoe then the brass nuts on to the spigots.
- Step 5 Tighten the brass nuts using an appropriate box spanner or adjustable spanner.
- Step 6 Connect hot feed to hot tail and tighten using spanners.
- Step 7 Do the same for the cold side (the tap from front on cold is right, hot is left.)
- Step 8 Turn the water on to test for leaks.

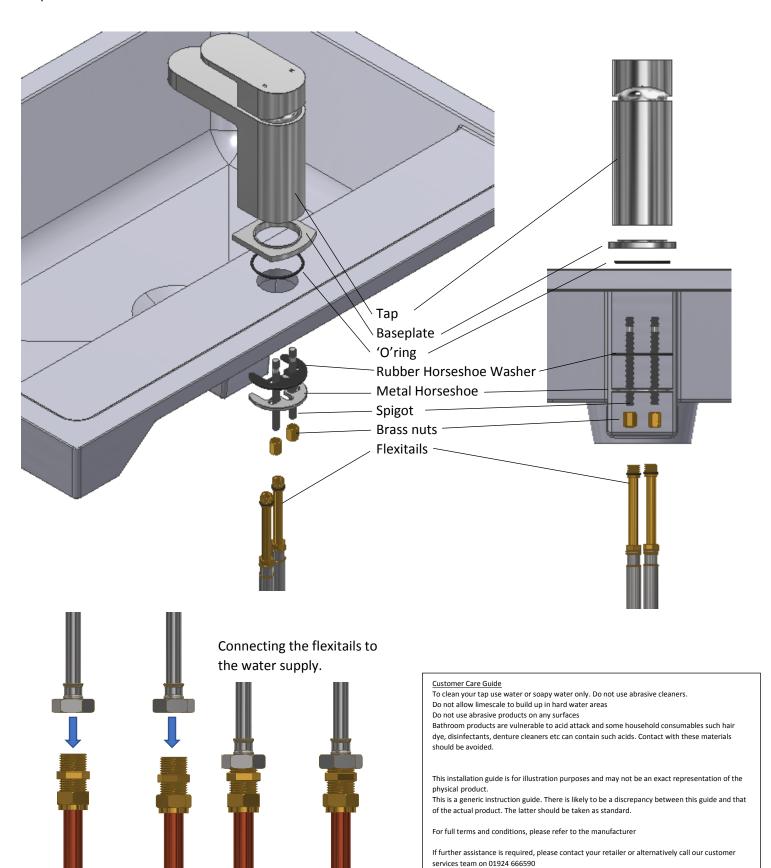

## **Check out our full range of Bathroom Taps**

Contemporary Bathroom Taps
Traditional Bathroom Taps
Waterfall Bathroom Taps
Pagin Taps

**Basin Taps** 

**Bath Taps** 

**Bidet Taps** 

## **Luxury Mira Aspects Taps**

Mira Honesty

Mira Evolve

Mira Precision

Mira Comfort

Mira Revive

Mira Fluency

## Don't forget these amazing tap cleaning and care products

Cramer Tap Cleaner

Cramer Chrom Star Chrome Polish

