


INSTALLATION GUIDE TO SCREWS




1) Installation Fittings



2) Put the semi pedestal on wall and mark the installation sites

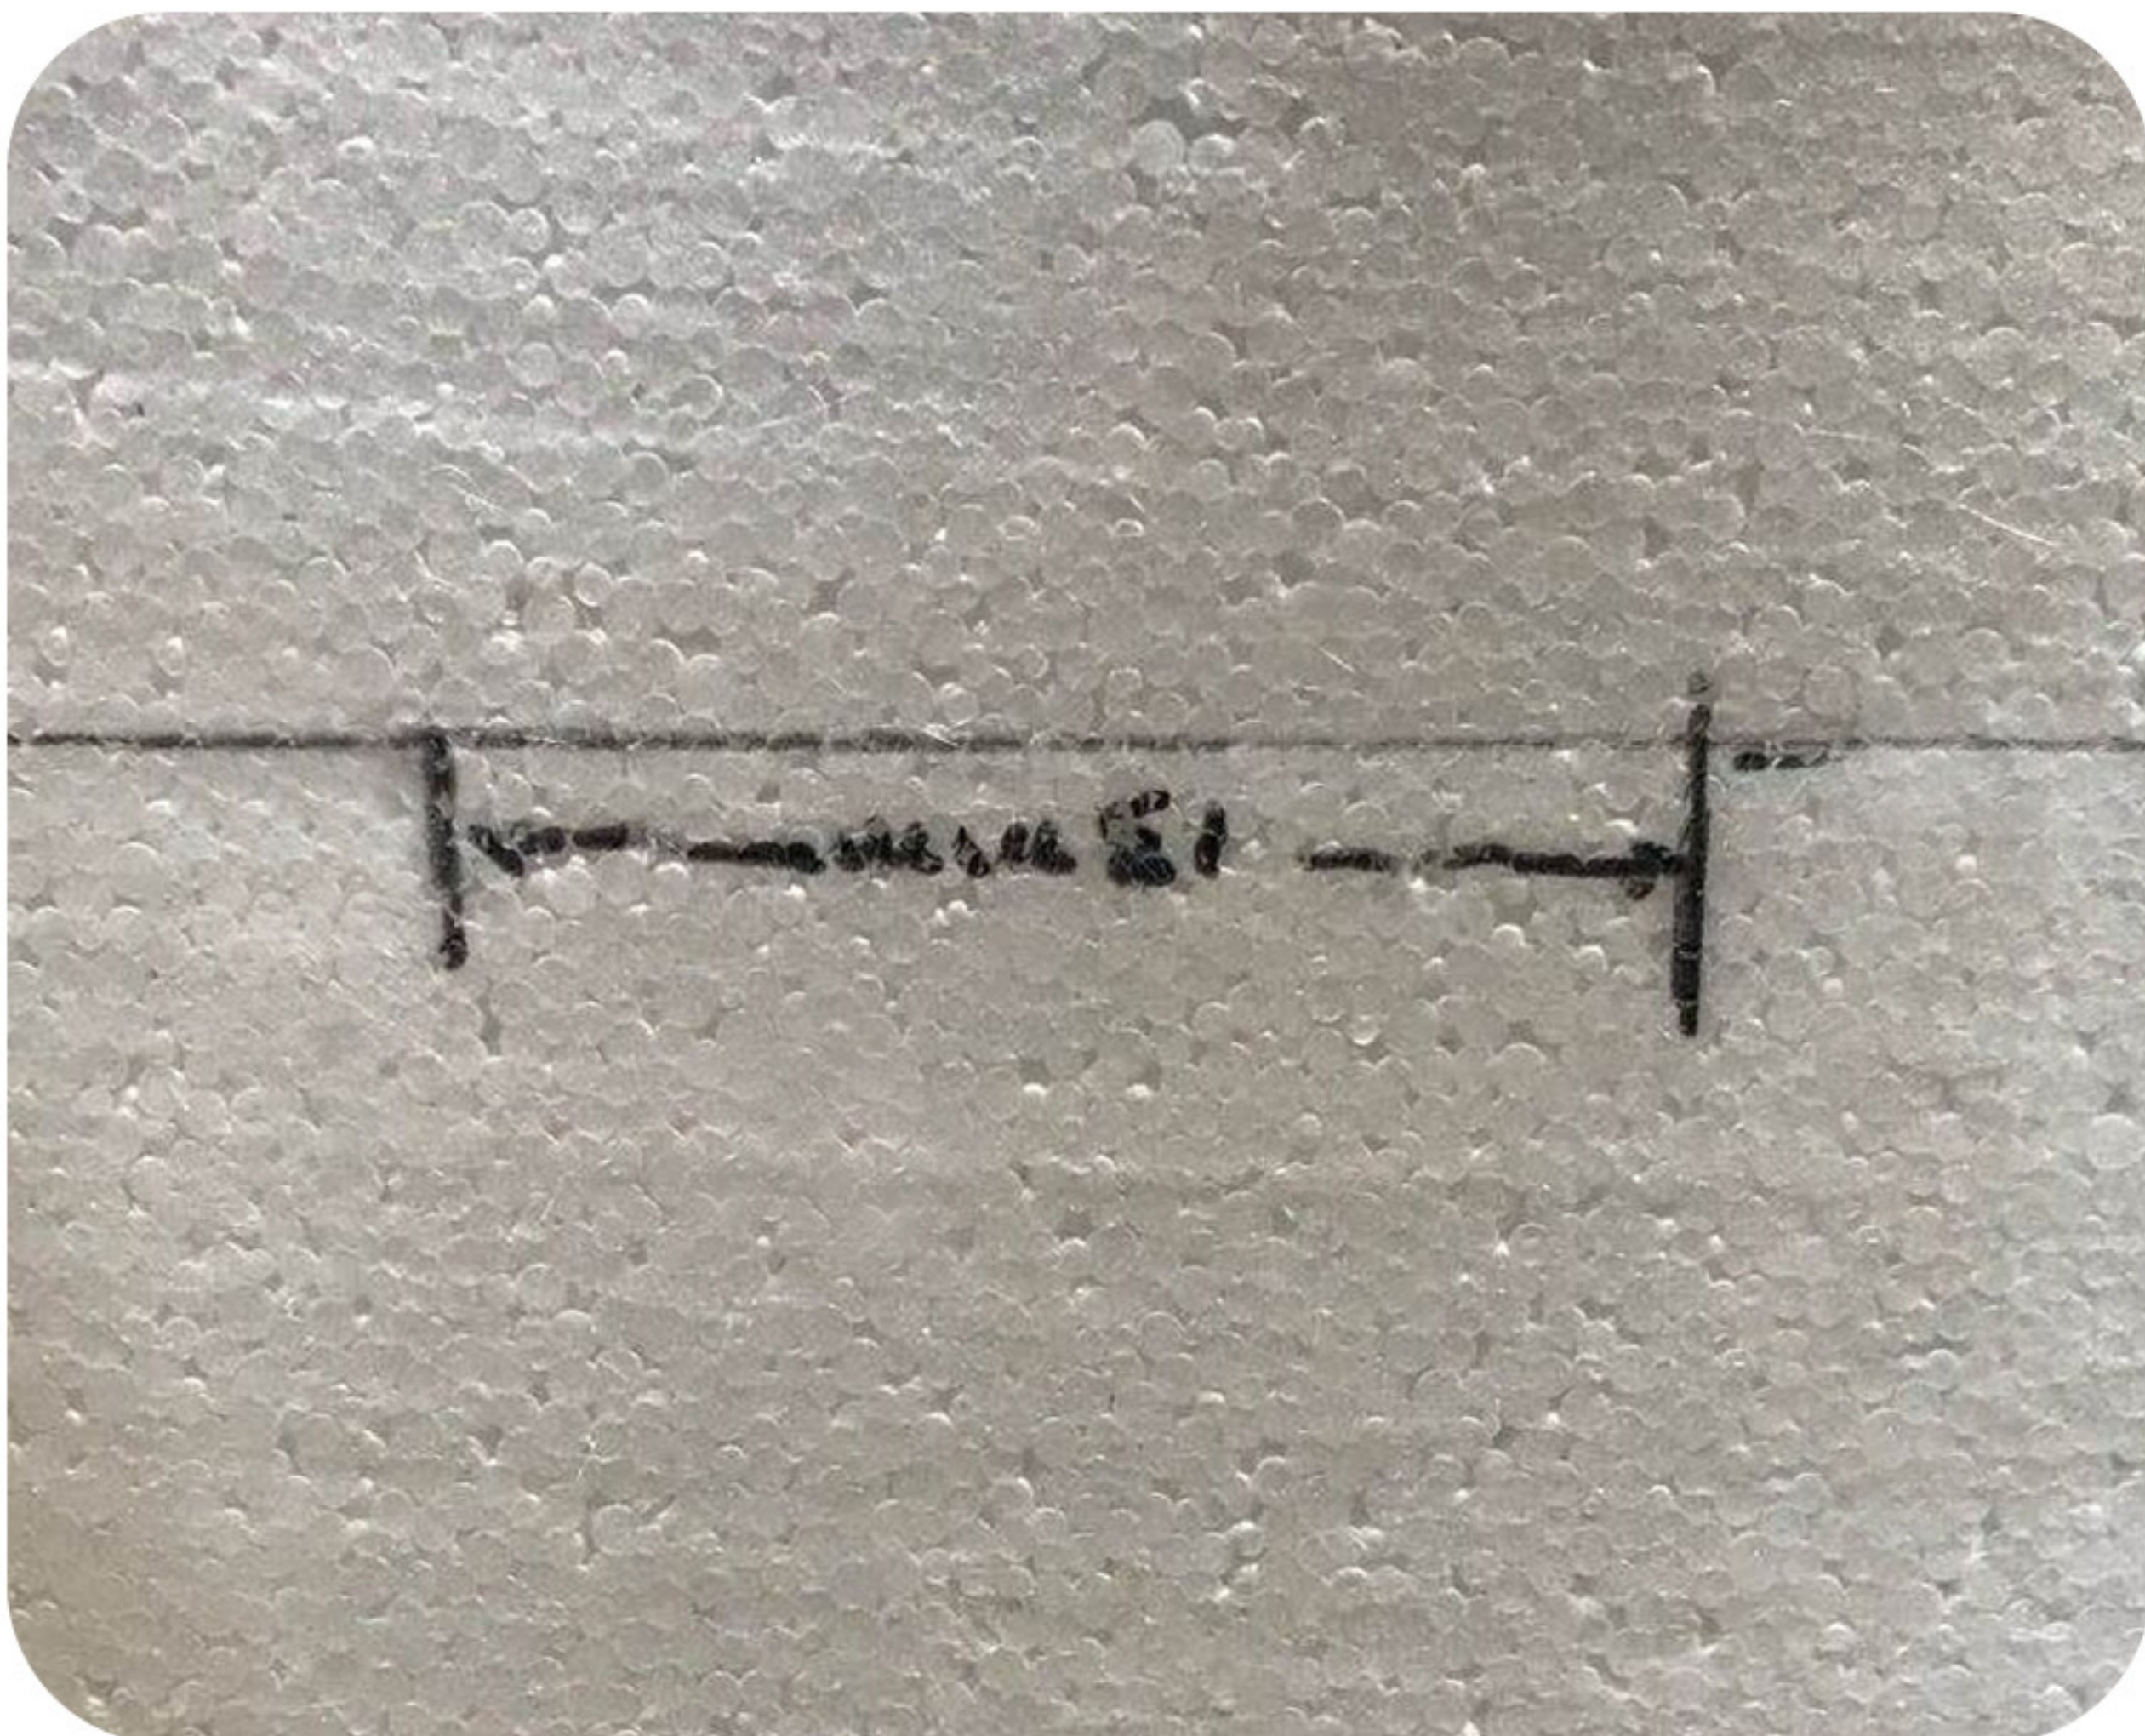


2) Put the semi pedestal on wall and mark the installation sites

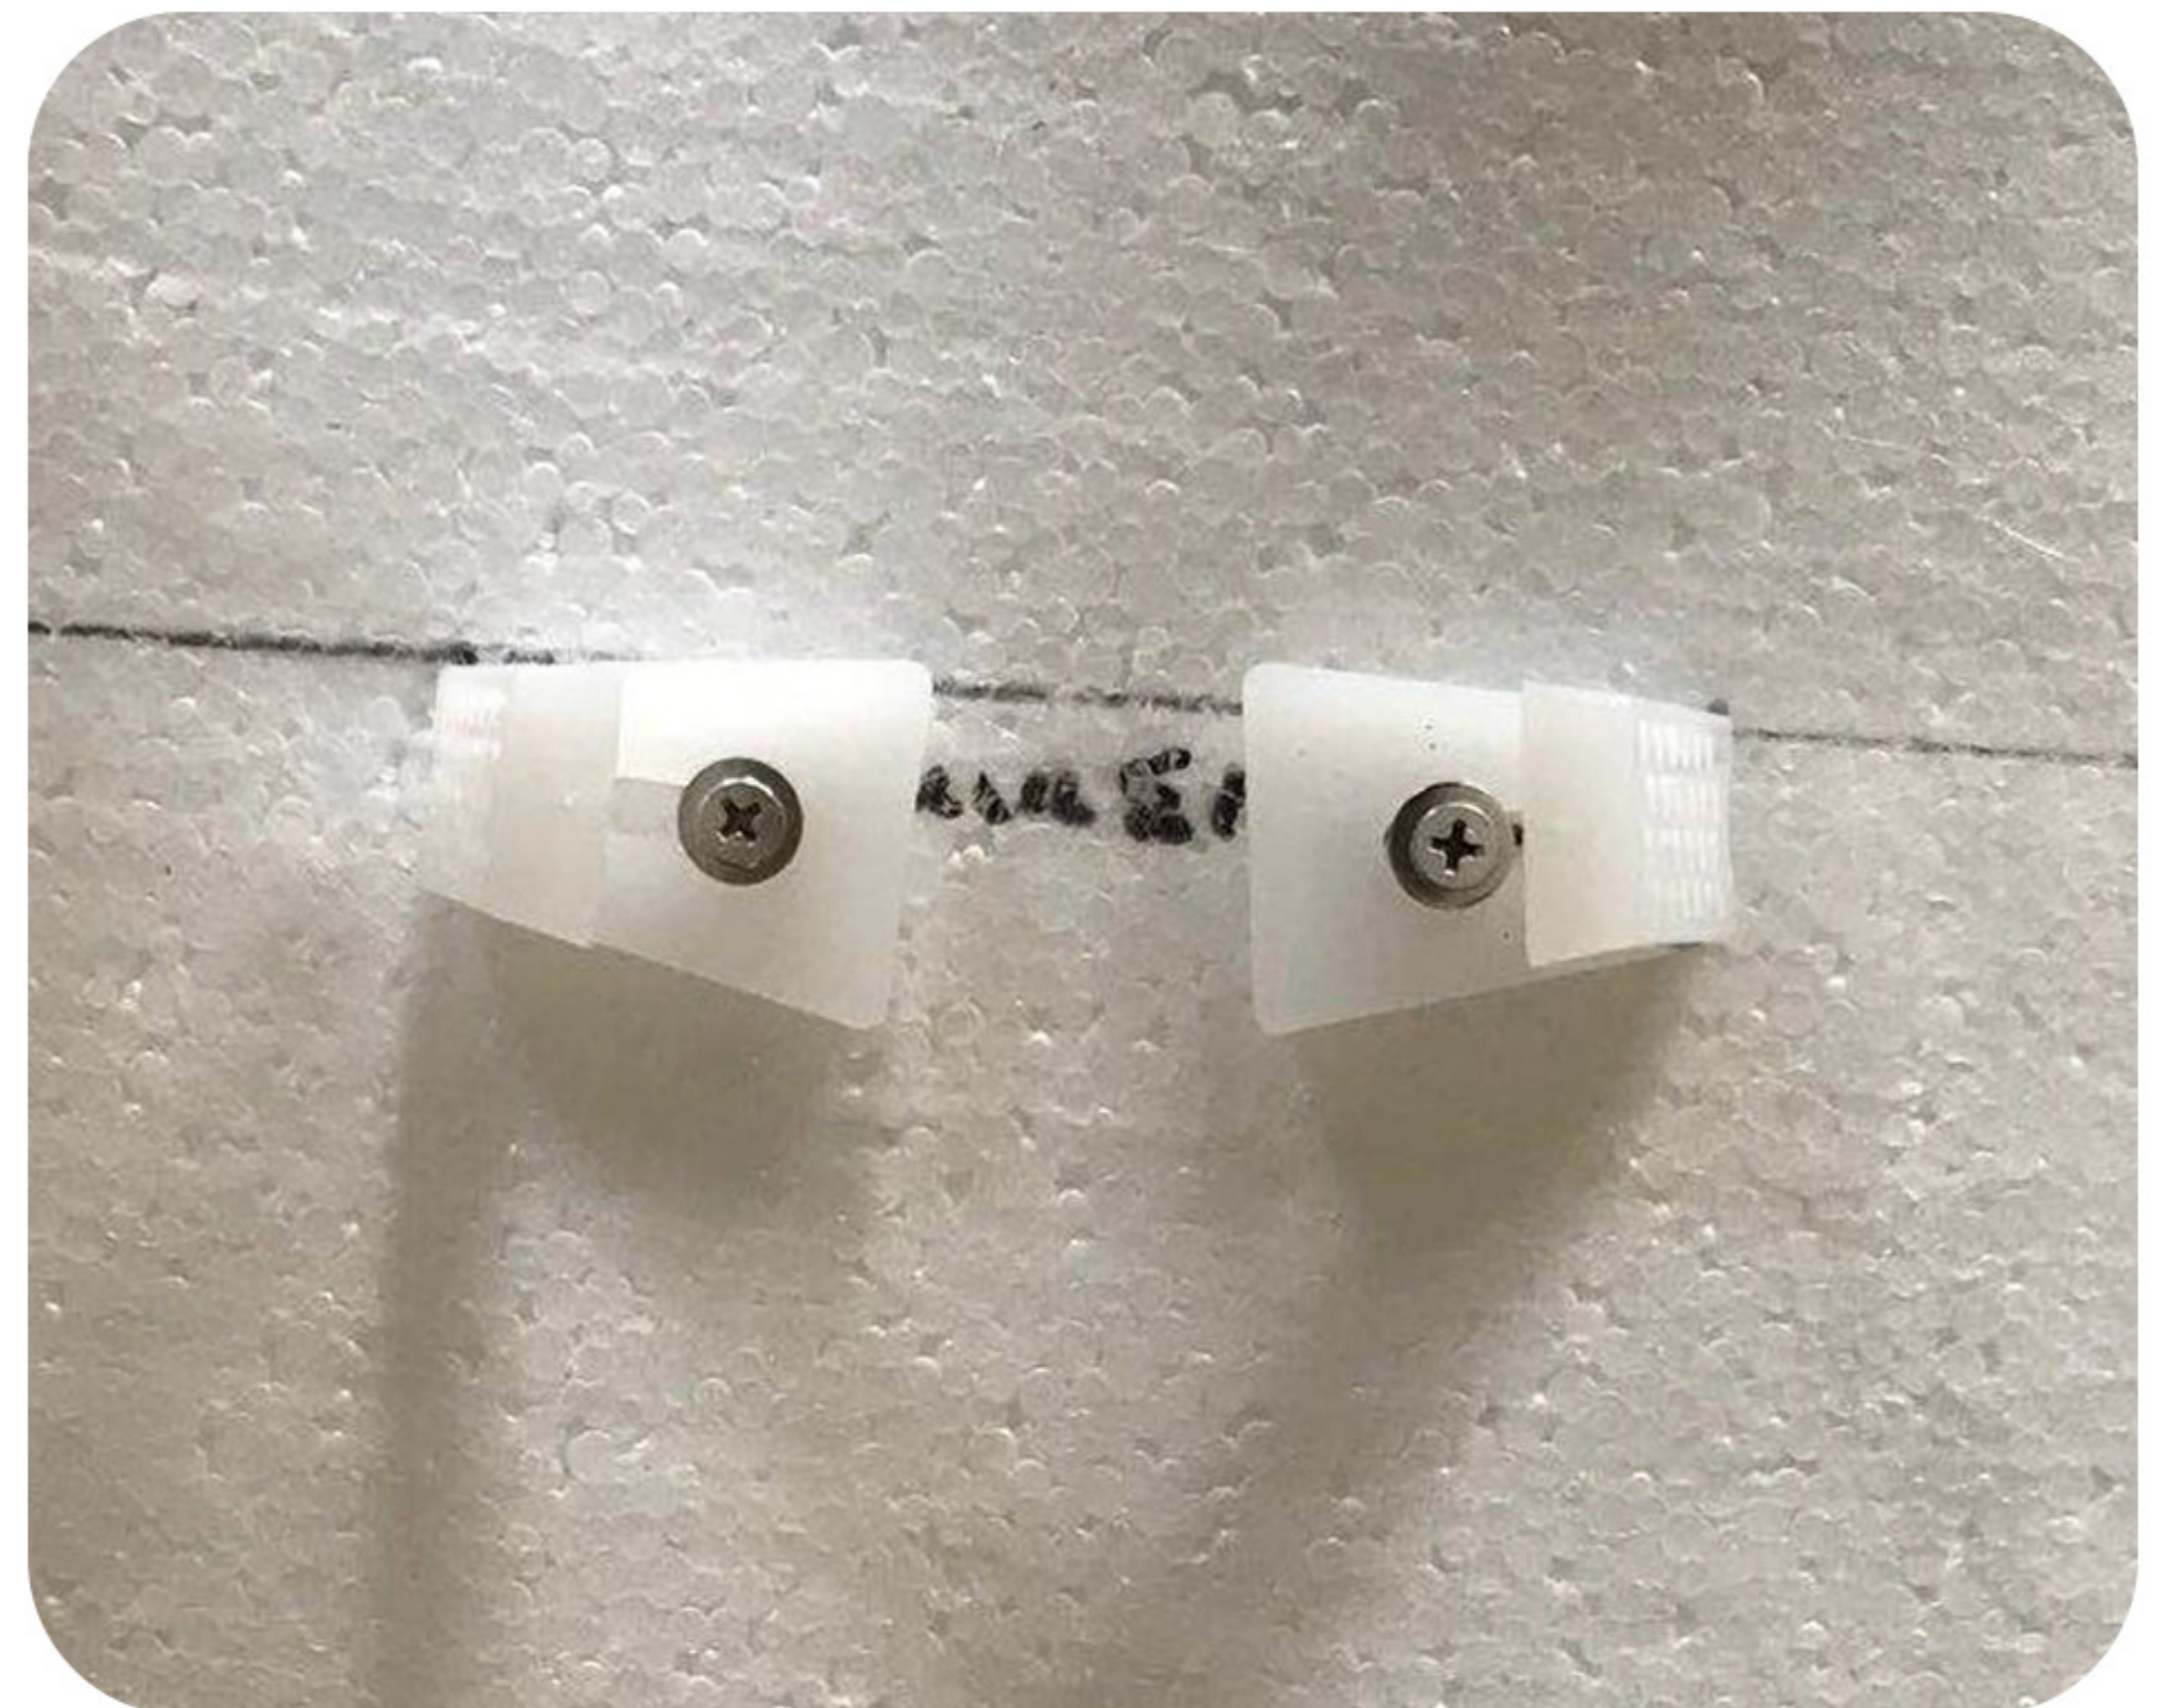

3) Installed the fittings on the marked positions



4) Installed the semi pedestal

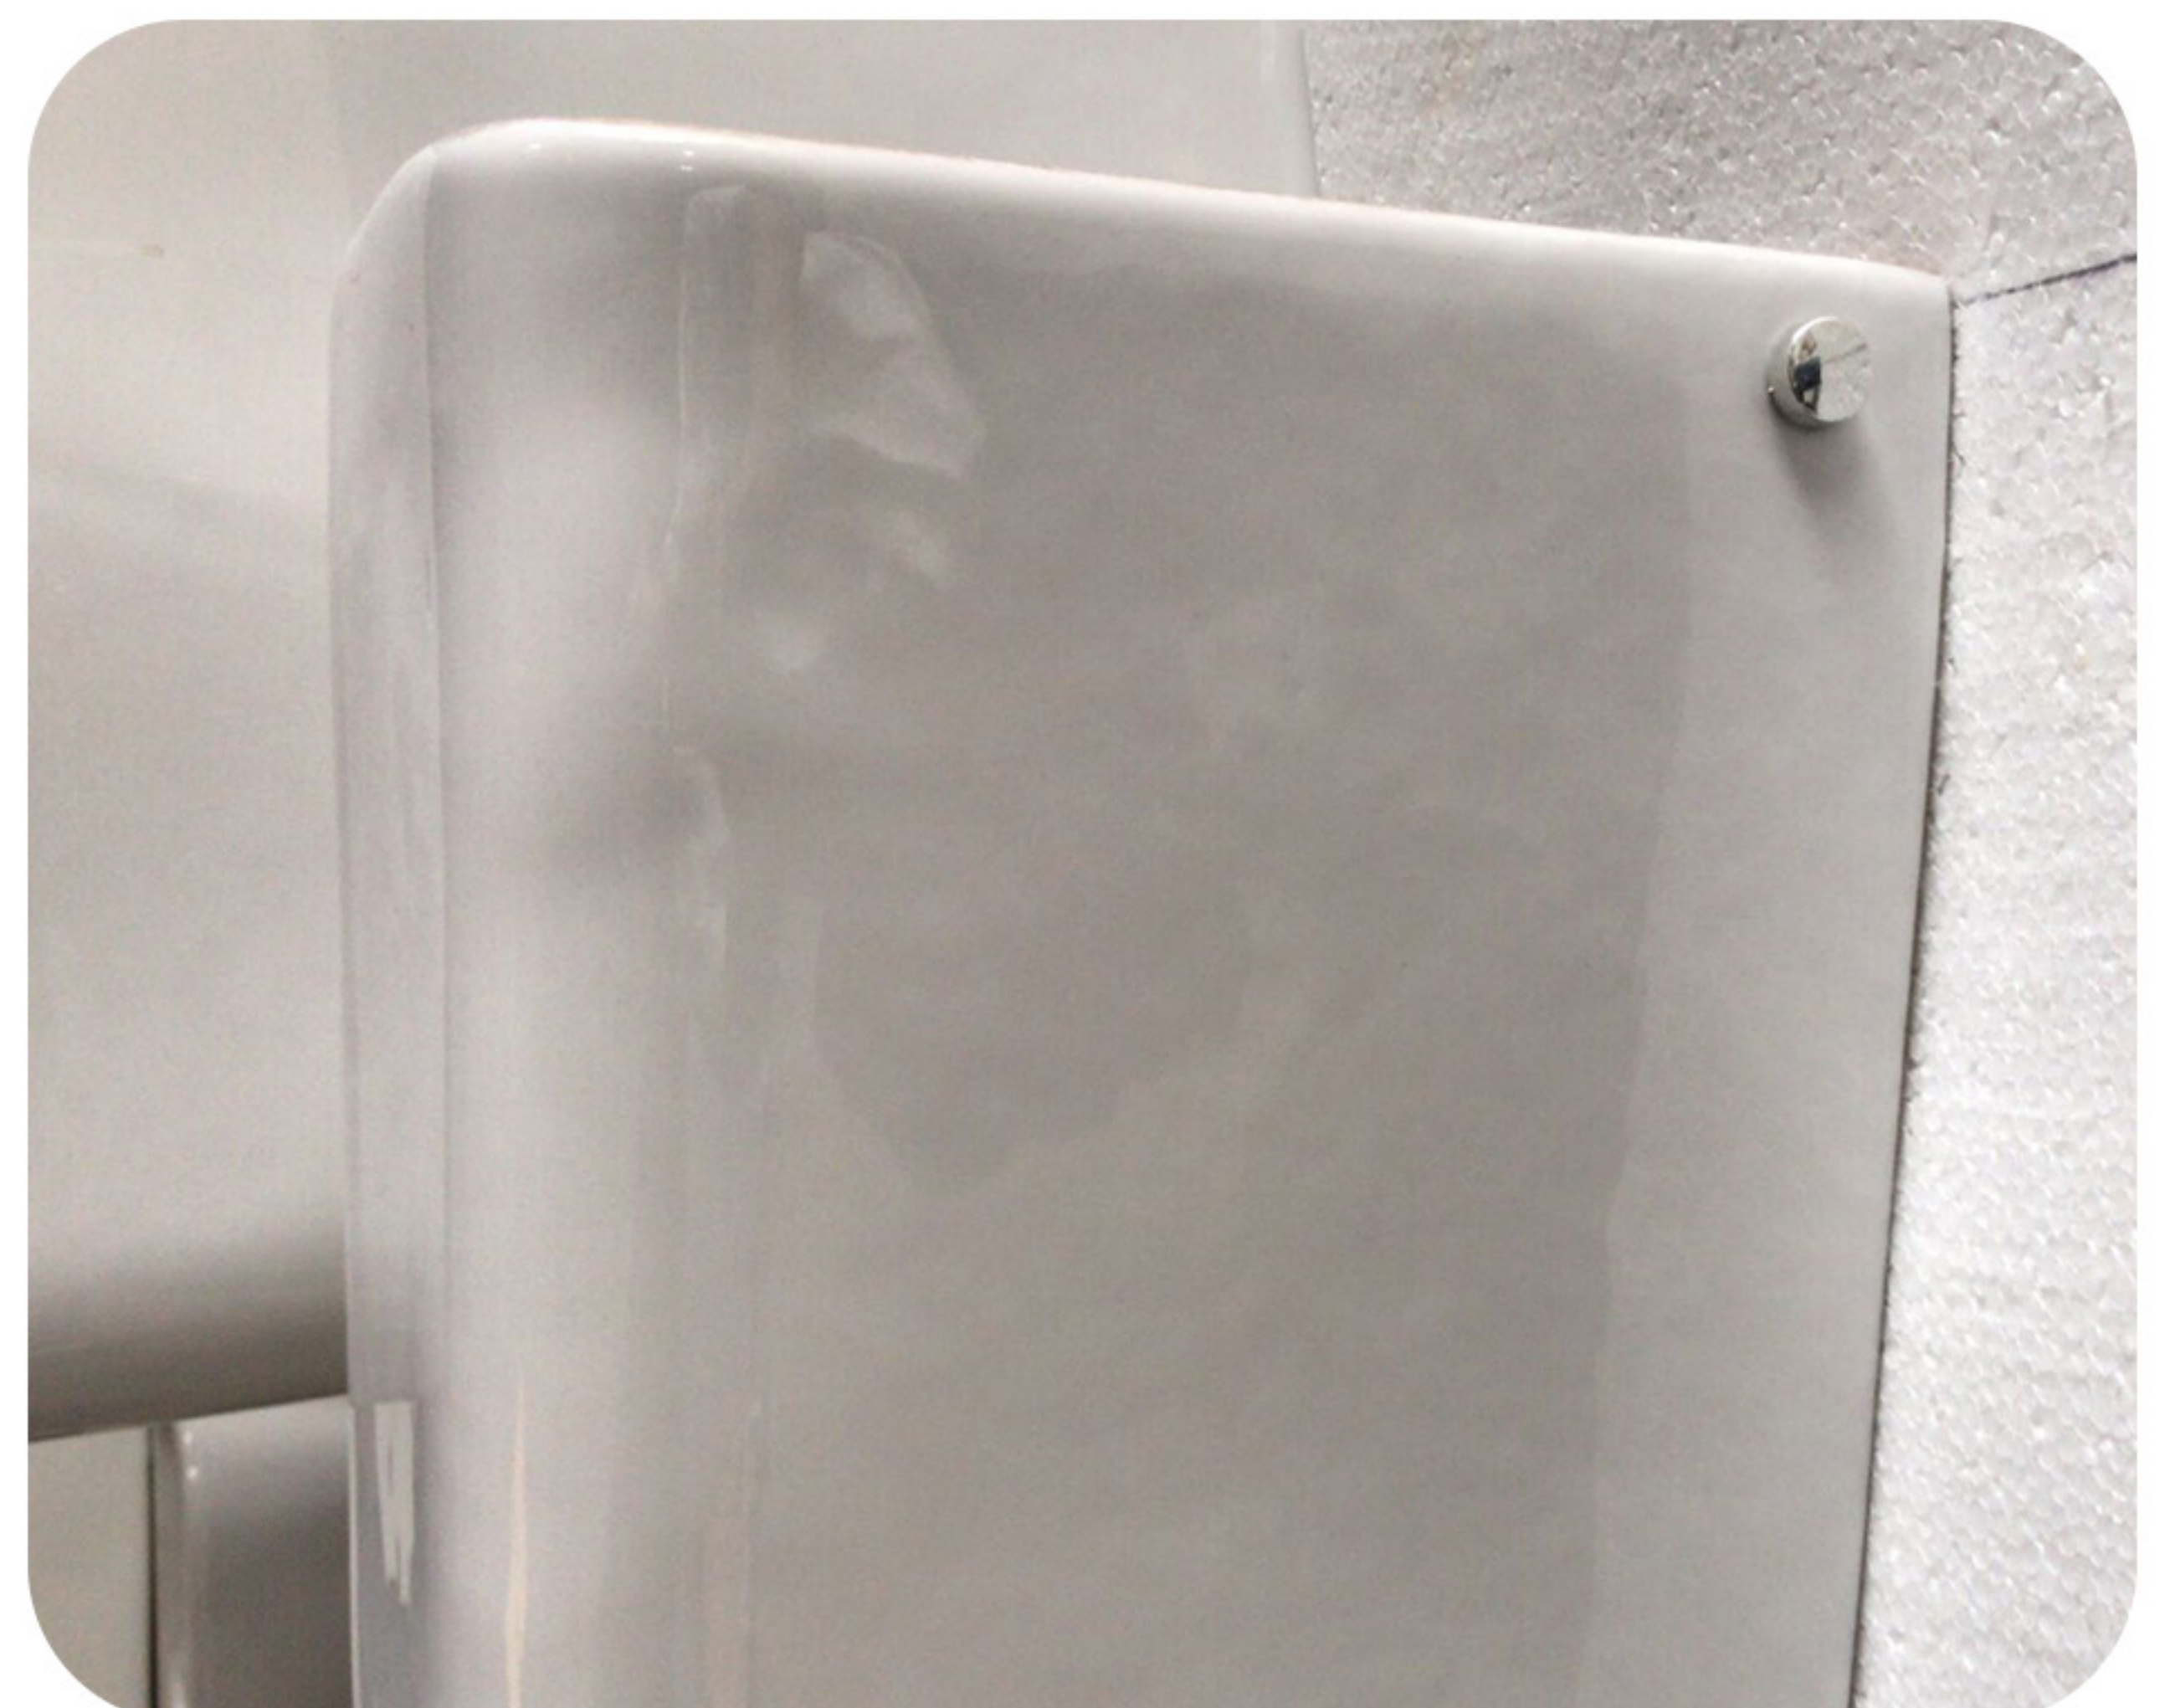

5) Cover the fittings