






BATH ULTRA 10 SEAL



**Guaranteed no mould
For 10 Years**



Tools required to complete the installation.

- Stanley Knife or similar 
- **Byretech sealant Removal tool** 
- Tape measure 
- Sealant gun 
- **Fuji II Silicone applicator** 
- Kitchen roll to wipe fingers



• Fuji II and Silicone removal tool available from www.byretech.com

Suitable for **rectangular** baths smaller than 2m x 1m
Suitable for **corner** baths smaller than 2m x 2m



Installation instructions

- Carefully clear away old sealant from bath with **Byretech Silicon Removal Tool**. **Carefully measure length & width of bath as per diagram**
- Transfer measurements to **BathSeal** profiles taking care **not to cut the shaped ends L2 & L3**. The profiled ends fit neatly on to the L1 profile.
- Cut the profiles to length - L1 first and place them onto the bath to check the all fit correctly. L2 & L3 have profiled ends that fit perfectly over L1. Use the cleaning wipe provided to clean the fitment area and also the profile. If your bath is subject to movement you may wish to fill the bath with water now.
- Remove the profiles after checking and take the sealant with the large nozzle and infill the edges of the bath. **It is important that enough sealant is used to completely fill the gaps between the bath and wall.**
- Apply sealant to each corner end of the profiles before fitment. This will ensure no water can sit in the corners of the bath when in use.
- Place the profiles one by one into the wet sealant. **Longest profile L1 first.**
- **Gently** push the profile into place onto your bath and fit end caps with a small amount of sealant on the end of the profile to hold in place.
- Immediately wipe away with your finger any excess sealant that has squeezed out from above or below the installed profile.
- Change the sealant nozzle to the **fine nozzle** and infill carefully the top, bottom edges and corners of the newly installed profile.
- Once complete, wipe with a wet finger to smoothe the sealant and remove any excess. This operation ensures a complete seal and once done there is no where for the water to sit on the profile.
- Leave for a minimum of two hours to cure with water still in the bath and **BathSeal** is ready for use.

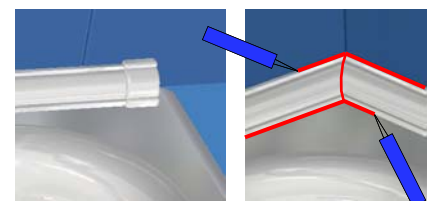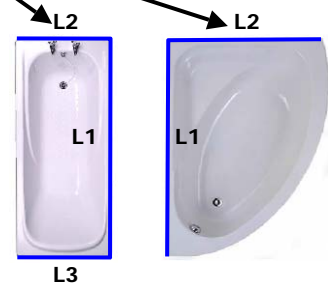

Note. Manufacturer recommends that all black mould in the bathroom is removed prior to fitting its products.

Note. NO MOULD GUARANTEE

If Forever White discolours or stains due to mould growth within 10 years of application simply return pack and receipt of purchase to Everbuild and we will refund you the silicone and postage costs. CAUTION: This guarantee is only valid providing regular cleaning has been carried out, Microban helps prevent the growth of mould, mildew and bacteria that can stain and degrade silicone, however it is not a substitute for regular cleaning as excessive deposits of soap can cause secondary mould growth. Everbuild address on silicone tube pack. Nothing in this statement does or will affect your statutory rights.

www.plumbworld.co.uk Ltd
Units 2, 3 and 4 Millenium Court
Enterprise Way, Evesham
Worcs, WR11 1GA
E-mail tech@plumbworld.co.uk
Web www.plumbworld.co.uk

Check out our full range of Bathroom Accessories

Bathroom Accessory Sets

Heated Towel Rails

Bathroom Extractor Fans

Bathroom Lighting

Shower Seats

Grab Rails

Shower Curtains

Toilet Brushes

Bathroom Cleaning Products

Wall Mounted Bathroom Accessories

Robe Hooks

Bathroom Tumblers

Toilet Roll Holders

Soap Dishes

Towel Rings

Shower Caddies

Bathroom Mirrors

Standard Bathroom Mirrors

LED Bathroom Mirrors

Shaving Mirrors

plumbworld
Big brands, small prices.