

# Replacement Universal Bath Screen Seal from Byretech

## Translucent

Visit us at  
[www.screenseal.com](http://www.screenseal.com)

# SCREENSEAL!

### Tools required to complete the installation.

- Stanley Knife or scissors
- Kitchen roll to wipe fingers



*All above are available as a kit from your ScreenSeal supplier.*




Suitable for all solid bath screens  
with Maximum length of 1.0m  
Profile size 15mm high x 3mm wide

### General Information.


**ScreenSeal** is designed to work with most modern glass bath screens as a universal replacement seal for worn or damaged sealing profiles found on many bath screens. Will fit both framed screens and plain glass. **ScreenSeal** is made from high grade anti-fungicidal silicone and is flexible enough to prevent water from escaping under the screen if fitted correctly. It can be fitted on either the inside of the screen (preferred) or the outside of the screen depending upon choice.

### Installation instructions....

- Remove the old seal from your bath screen. This can be done with most screens by sliding the worn out profile from the metal holder it sits in.
- Measure the required length needed by holding **ScreenSeal** along the entire length of the screen.
- Wedge / support the screen so as it can not move during the installation.
- Cut **ScreenSeal** to length with stanley knife or sharp scissors.
- Open alcohol wipe and clean along the bottom of the screen all the way along where the profile will fit. Use the wipe to also clean the measured profile too. Leave for 3 minutes to dry before fitting.
- Open the silicone sachet and apply the silicone in a **continuous bead** along the entire length of the **ScreenSeal** profile on the **serrated side only**.
- Gently offer the profile to the glass screen and adjust the fit so the profile gently sits on the bath with the round end at the bottom. Wipe away excess sealant that may appear with your finger.
- Leave for **three hours minimum** to cure and **ScreenSeal** is ready for use.  
**Note.** During this time the Bath Screen door **must not be moved** or the profile will not adhere to the bath screen properly.

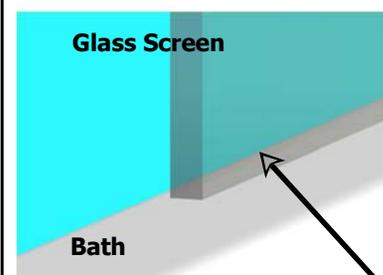

Clean along complete outer or inner screen with alcohol wipe.

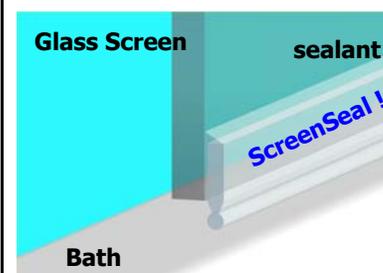

Apply sealant to serrated side of profile in continuous bead.

Gently push onto bottom of screen and wipe away excess with finger.

Profile should sit neatly on bath to prevent leaks.



**Byretech Ltd**

The Bathroom Water Damage Prevention specialists

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.

Byretech Ltd  
Unit 51 Padgets Lane, South Moons Moat,  
Redditch, Worcestershire B98 0RD UK.  
Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111  
E-mail: [info@byretech.com](mailto:info@byretech.com) Web: [www.byretech.com](http://www.byretech.com)

# Check out our full range of Bathroom Accessories

Bathroom Accessory Sets

Heated Towel Rails

Bathroom Extractor Fans

Bathroom Lighting

Shower Seats

Grab Rails

Shower Curtains

Toilet Brushes

Bathroom Cleaning Products

## Wall Mounted Bathroom Accessories

Robe Hooks

Bathroom Tumblers

Toilet Roll Holders

Soap Dishes

Towel Rings

Shower Caddies

## Bathroom Mirrors

Standard Bathroom Mirrors

LED Bathroom Mirrors

Shaving Mirrors

**plumbworld**  
**Big brands, small prices.**