


CONCEALED CISTERN ASSEMBLY INSTRUCTIONS

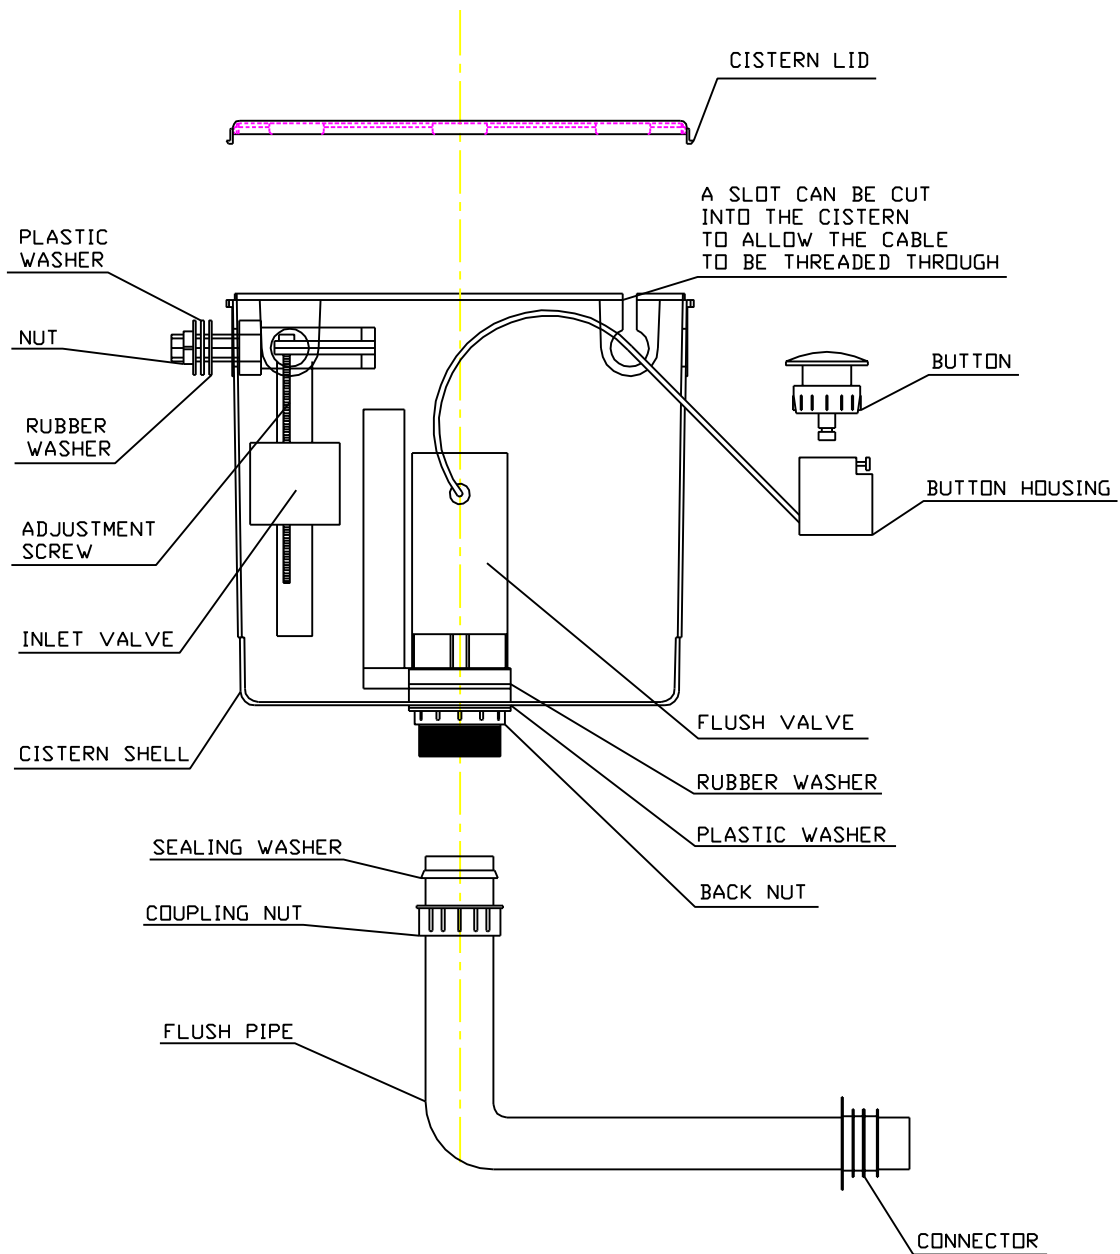

ASSEMBLE THE CISTERN AS ABOVE AND MARK POSITION OF WHERE THE CISTERN IS TO BE FITTED. USE THE BRACKET AND FIXING HOLES TO FIX THE CISTERN INTO W.C UNIT OR WALL CAVITY.

MARK OUT THE SIZE THAT THE FLUSH PIPE NEEDS TO BE AND TRIM USING A FINE TOOTHED SAW. CONNECT THE FLUSH PIPE TO THE CISTERN USING THE COUPLING NUT AND WASHER.

MARK POSITION OF THE BUTTON ON THE FRONT FACIA OF THE W.C UNIT OR DUCTING AND DRILL A 40mm HOLE ENSURING THAT THERE IS ENOUGH ROOM FOR THE BUTTON HOUSING BEHIND THE FACIA. FIX BUTTON INTO POSITION BY TIGHTENING THE BACK NUT, CLIP THE BUTTON HOUSING ONTO THE BUTTON ENSURING NOT TO BEND OR KINK THE CABLE.

THE WATER LEVEL IN THE CISTERN CAN BE SET BY TURNING THE ADJUSTING SCREW ON THE INLET VALVE.

CONNECT THE W.C PAN AND FIX ACCORDING TO THE MANUFACTURERS INSTRUCTIONS.

Check out our full range of Bathroom Suites

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

Wide variety of toilets

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

Huge Selection of Baths

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

Don't forget the important bathroom suite extras

Bath panels

Toilet seats

plumbworld
Big brands, small prices.