CORATECH® SHOWERTRAY

Please read these instructions carefully and keep for future reference. Incorrect fitting will invalidate the guarantee.

Check contents of pack before installation. If there is anything missing, contact our Customer Careline for assistance: 01746 713410

- Make sure there are no hidden pipes or cables in the floor or walls where you intend to drill.
- Wear safety goggles, shoes and appropriate clothing.

8

6

5

9 Offset Quadrant

2

PN60138

PN60139


PN50193

PN50237


800 x 800 tray PN30042 900 x 900 trav PN30043 1000 x 800 left PN30049 PN30050 right

Crosshead Screwdriver, Spirit Level, Pencil, Fine Tooth Saw, Ruler, Masking Tape, Silicone Sealant.


- Once fitted the showertray must be tiled in place.
- Acrylic sealants, plumbers putty or mastic will damage the surface of the showertray.

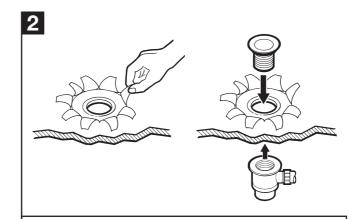

Peel back protective film from waste hole inside the tray and fit waste outlet. Fit the waste and trap as per the manufacturers instruction. Do not apply any sealant to the underside of the tray as this will invalidate the guarantee.

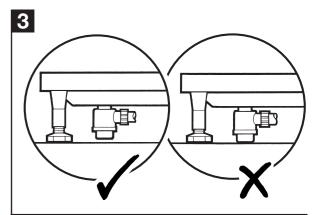


Place the tray in position and fit waste pipe. Make sure pipe work is clear of floor when standing in the tray. If necessary cut a hole in the floor to provide adequate clearance.

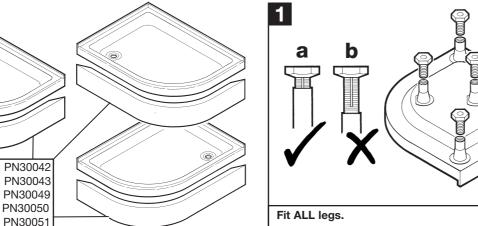

Fit ALL legs.

NOTE: The legs must be screwed in far enough that the end of the groove on the leg is NOT visible (a).

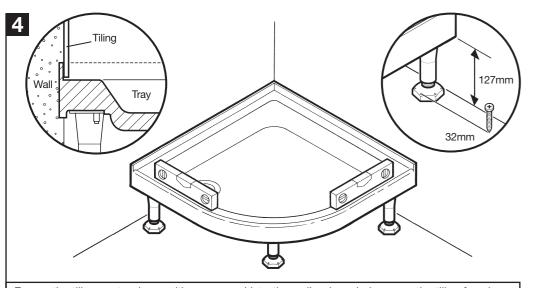

1200 x 800 left

1200 x 900 left


right

PN30052


PN30045

right PN30041

Ensure the tiling upstands are either recessed into the wall or boarded over so the tiling face is flush with the edge shown in the diagram. Adjust legs where necessary. Check tray is level in all directions (there is a built in fall on the tray for water drainage). Ensure all legs are wound down tight to the floor. Fix legs to the floor using 32mm screws, where accessible.

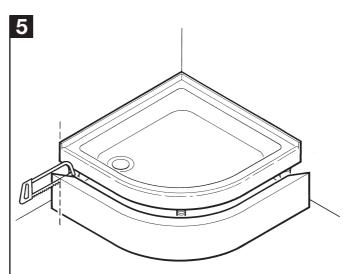


If necessary, carefully cut the outside edges of the panel to fit.

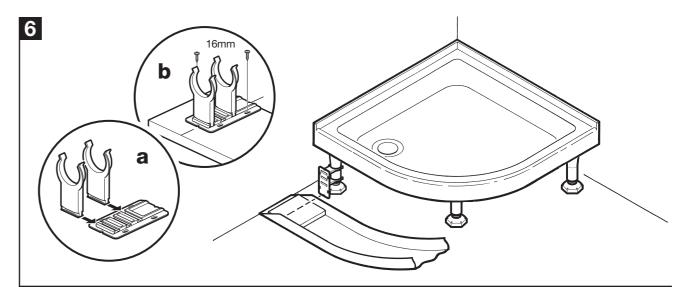

(a) Separate and assemble the panel brackets. Push fit the panel brackets onto the legs, align panel up with the brackets and mark the centre line of the brackets onto the back of the panel.

(b) Fix panel brackets flush with the bottom of the panel using 16mm screws.

Push fit panel into place.

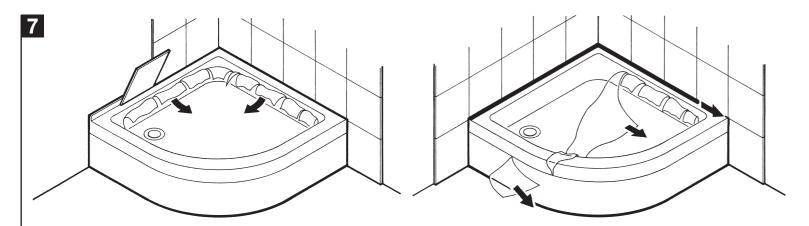

Peel back protective film from back edges of tray. Tile over the upstands. Seal the wall edges of tray with silicone sealant. When the final installation of the enclosure is complete, remove the remaining protective film.

IMPORTANT

You must not use or work on the showertray for 24 hours after installation.

DO NOT use bleach, scouring powders, solvents or other aggressive cleaning agents. To clean, use warm soapy water and a clean cloth and rinse off.

NOTE: The tray should be inspected six months after installation, check for any floor movement.

If necessary adjust all the legs to ensure they are resting on the floor.

Sealant should ONLY be applied to the surface of the tray, never to the underside, any sealant applied to the underside of the tray will invalidate the guarantee.

CUSTOMER CARELINE: 01746 713410

CORAM SHOWERS LTD

Stanmore Industrial Estate, Bridgnorth, Shropshire WV15 5HP, UK Tel: 01746 766466 Fax: 01746 764140 www.coram.co.uk

Check out our full range of Shower Enclosures

Quadrant Shower Enclosures

Corner Entry Shower Enclosures

Walk in Shower Enclosures

Sliding Shower Doors

Bifold Shower Doors

Pivot Shower Doors

Hinged Shower Doors

Shower Screens

From Top Brands

Coram Shower Enclosures

Mira Shower Enclosures

Hydrolux Shower Enclosures

Diamond Shower Enclosures

With quality shower trays to match your enclosure

Square Shower Trays

Rectangular Shower Trays

Quadrant Shower Trays

Coram Shower Trays

Mira Flight Shower Trays

