

# Premium Aluminium Wire Storage Baskets

Please follow the fixing and care instructions to ensure that your wire storage product is fitted safely and that it retains its high quality finish. Please retain this leaflet for future reference.

This installation guide applies to the following products:

- QM770341 Aluminium Wire Large Basket**
- QM770541 Aluminium Wire Large Curved Basket**
- QM770641 Aluminium Wire Cosmetic Basket**
- QM775941 Aluminium Wire Corner Basket**
- QM770841 Aluminium Wire Large 2 Tier Basket**
- QM773841 Aluminium Wire Large 2 Tier Curved Basket**
- QM772841 Aluminium Wire Large 2 Tier Corner Basket**

## Home Safety Advice

- Do not strike the product with hard or sharp objects.
- Always take care when using an electric drill, particularly in the bathroom. Always check for hidden cables and pipe work before drilling and take extreme care if there is any water in the working area.
- It is advisable to use a residual current circuit breaker (RCCB).
- Always wear suitable eye protection when drilling.
- If the product is to be fitted on a ceramic tiled wall, a ceramic drill bit should be used. Always ensure that the drill hole passes through the central tiled area rather than through the grouted area. To prevent unnecessary damage to the tile, mask the area around the hole with tape before drilling.

## Product Care

- To retain the best quality finish, clean product with a soft cloth and a mild soap solution.
- Do not use abrasive or chemical cleaners as they may damage the surface finish on the surface of the storage baskets.

## Fixing Pack Contents


- 2(4) x Wall Fixing Screws
- 2(4) x Wall Plugs
- 2(4) x Decorative Screw Caps
- 2(4) x Threaded Bushes

## Tools Required

Drill; 6mm masonry drill bit (6mm ceramic drill bit optional); Cross head screwdriver; Pencil; Spirit level. **KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN**

## Fitting Instructions

1. Select position of the product on the wall and mark through the fixing holes, ensuring that the product is level.
2. Remove the product. Using a 6mm masonry drill, drill the holes in the marked positions to a depth of 30mm. If drilling through tiles, please pre-drill using a ceramic drill bit.
3. Insert the wall plugs to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.
4. Insert the screws through the threaded bushes and the basket and screw into the wall plug(s). Do not over tighten as cracking of the tiles could occur - See Fig.1.
5. Thread the decorative caps onto the bushes to complete the assembly - See Fig.1.

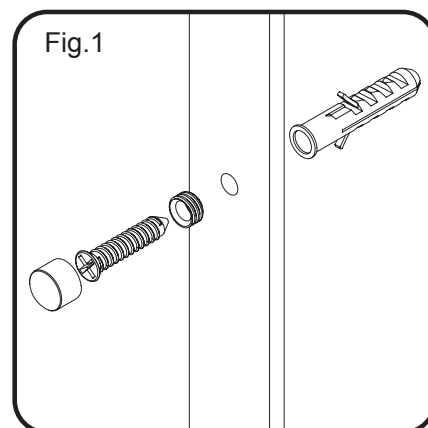

# Check out our full range of Bathroom Accessories

Bathroom Accessory Sets

Heated Towel Rails

Bathroom Extractor Fans

Bathroom Lighting

Shower Seats

Grab Rails

Shower Curtains

Toilet Brushes

Bathroom Cleaning Products

## Wall Mounted Bathroom Accessories

Robe Hooks

Bathroom Tumblers

Toilet Roll Holders

Soap Dishes

Towel Rings

Shower Caddies

## Bathroom Mirrors

Standard Bathroom Mirrors

LED Bathroom Mirrors

Shaving Mirrors

**plumbworld**  
**Big brands, small prices.**