


PARTS LIST		
ITEM	QTY	PART NUMBER
1	2	TOP AND BOTTOM RAIL
2	2	SIDE GLASS UPRIGHT
3	4	CAM LOCK**
4	4	CAM LOCK DOWEL**
5	2	SIDE GLASS**
6	4	GLASS HOLDER
7	2	SIDE GLASS BLADE SEAL
8	2	WALL PROFILE
9	1	CURVED DOOR GLASS
10	1	MAGNETIC DOOR SEAL
11	1	DOOR BLADE SEAL
12	1	HANDLE
13	4	DOOR WHEEL STOP**
14	1	CURVED DOOR GLASS
15	1	MAGNETIC DOOR SEAL
16	1	SIDE GLASS BLADE SEAL
17	1	HANDLE
18	4	DOOR WHEEL STOP**
19	8	DOOR RUNNER WHEEL ASSEMBLY
20	4	4x12 SCREW
21	4	GLASS HOLDER CAP
22	4	SCREW CAM COVER
23	6	4x35 SCREW
24	6	WALL PLUG WHITE
25	4	3.5x20 screw for uprights
26	4	SCREW COLLAR
27	4	SCREW COVER CAP
28	1	TOPCAP LH
29	1	TOPCAP RH

**PARTS THAT ARE COME PLACED OR FIXED IN TO THE HORIZONTAL OR VERTICAL RAILS

INSTRUCTION GUIDE SUITABLE FOR

XL976Q OFFSET QUAD (REVERSABLE) -ADJUSTMENT 865/725-895/755MM
 XL108Q OFFSET QUAD (REVERSABLE) -ADJUSTMENT 965/765-995/795MM
 XL128Q OFFSET QUAD (REVERSABLE) -ADJUSTMENT 1165/765-1195/795MM
 XL129Q OFFSET QUAD (REVERSABLE) -ADJUSTMENT 1165/865-1195/895MM
 XL800 QUAD -ADJUSTMENT 765-795MM
 XL900 QUAD -ADJUSTMENT 865-895MM

HEIGHT 1950

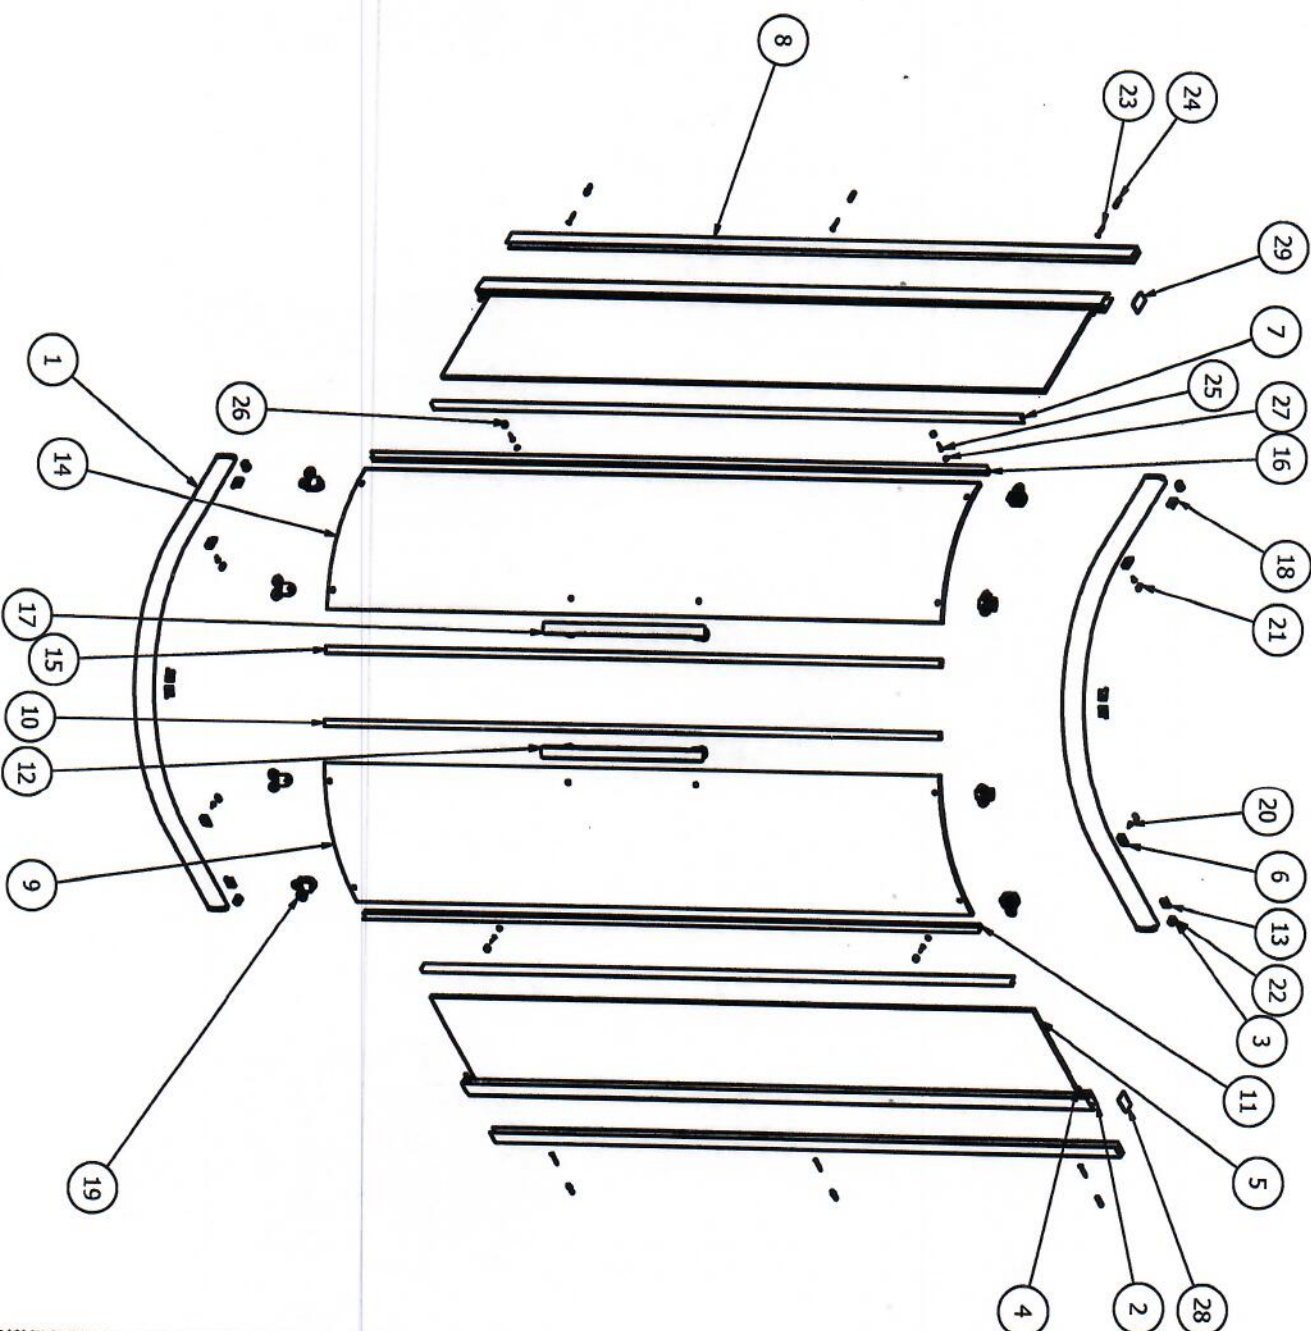

IF FURTHER ASSISTANCE IS NEEDED PLEASE CONTACT YOUR RETAILER OR ALTERNATIVELY CALL OUR CUSTOMER SERVICE TEAM ON 01924 666590

TO ENSURE THE CORRECT INSTALLATION IS EXECUTED IT IS RECOMMENDED USING A QUALIFIED COMPETENT INSTALLER TO INSTALL THE PRODUCT.


1



To ensure the correct installation is executed, it is recommended using a qualified, competent installer to install the product.
The installation is recommended as a two person install

The shower tray should be fully installed with the wall covering finished down on to the shower tray. Ensure that the shower tray is level in all planes before you begin. The shower tray needs to be fully sealed and cured before fitting the enclosure.

2

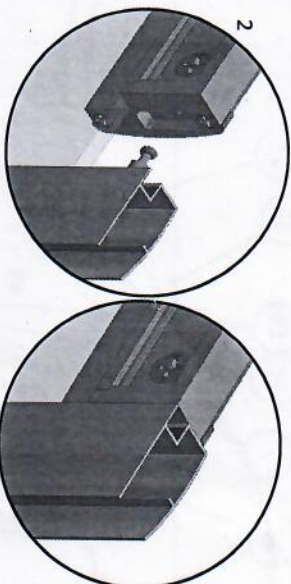


First, assemble the frame.

Ensure that the small arrow on the cam lock screw is pointing toward the dowel.

Insert the dowel into the cam lock until home. Then turn the cam lock screw half a turn to lock in place.


The small arrow should now be pointing away from the dowel

3

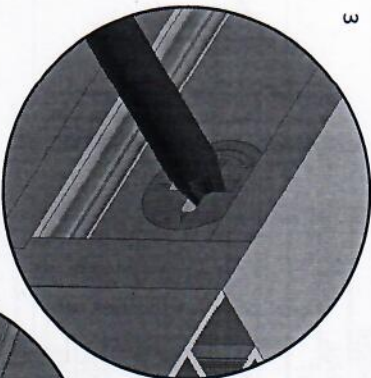


Repeat top and bottom for both sides.

Screw in the glass holders, then cover with the cover cap

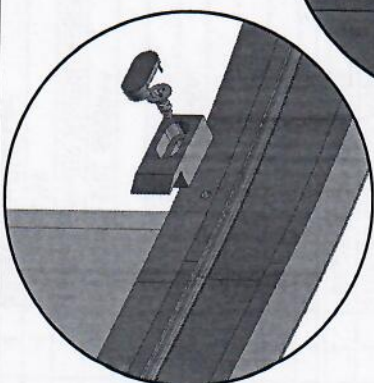

4

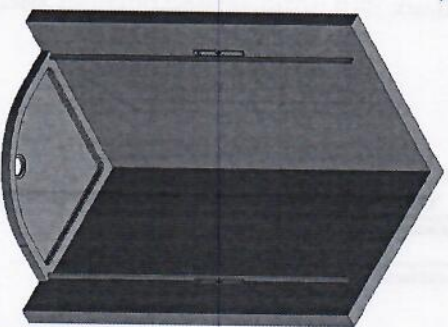


An ideal installation - set the wall profiles 10-20mm back from the face of the tray. Make sure that the wall profiles are vertical using a spirit level. Mark through the fixing holes onto the wall. Remove profiles, then drill and plug the wall. Fix the wall profiles in place




Offer your assembled frame on to the tray first. Ensure that the wall profiles will reach both walls.

5

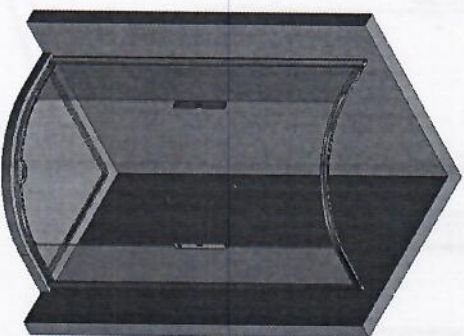


Fit the frame into the wall profiles. Adjust until there is an even amount of gap between the front edge of the tray and the bottom rail. There should be an equal amount of frame in each wall profile. Make sure that the frame is true on both sides before fixing in place

6

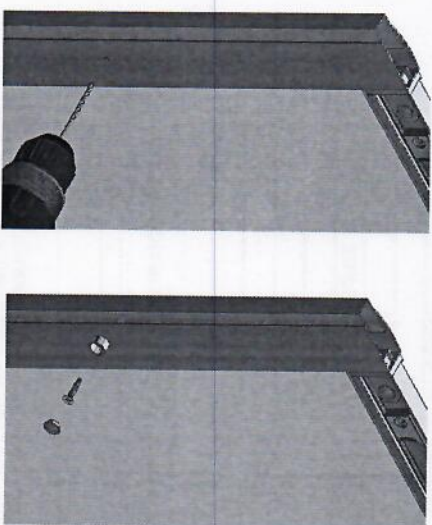

To fix the frame in place, drill through the upright and wall profile (1st wall only) 300mm from the top and the bottom for a secure fix. Then fix the frame with the screw, collar and cover cap provided.

7

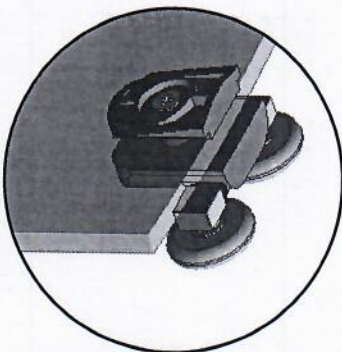


Fit the top wheel assembly (the top assembly is height adjustable via a screw located on the bottom). Then fit the bottom wheel assembly (the bottom assembly is sprung)

The wheels face to the outside of the curved glass. Add the decorative covers once the wheel assemblies are attached securely.

Fit the door handles, which locate in the holes in the glass. Then screw together

8

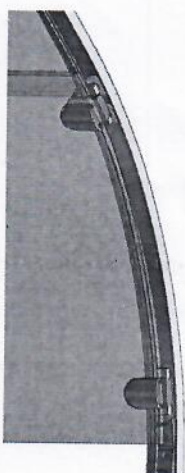

Hang the door ensuring that the wheels sit in the interior channel of the top rail. To do this you may need to introduce the door and the wheels into the rail at an angle.

Once the top wheels are in place, push the door on sprung wheels on the bottom roller to locate them into the channel in the bottom rail.

Once the door has been hung, turn the screws on the underside of the top rollers to make the doors level and run true.

Note: when the doors are hung correctly the top wheels and the bottom wheels should hit the bump stops at the same time.


9




Fit the magnetic door seal to the side where the doors meet.

Fit the blade seal with the blade pointing away from the enclosure.

Fit the final blade seal to the side glass with the blade pointing inward, toward the door.

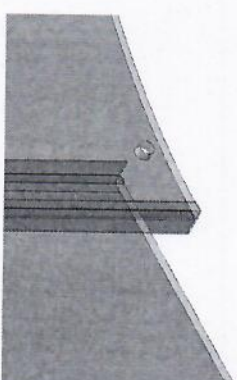


10

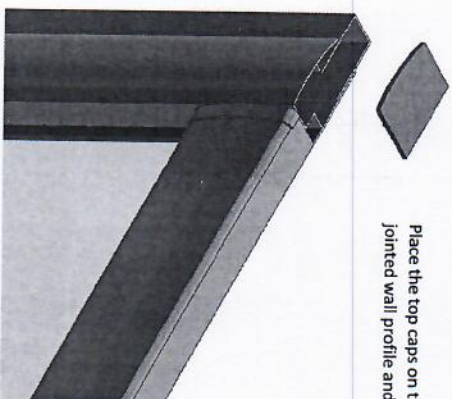

Place the top caps on the top of the jointed wall profile and vertical rail.

11

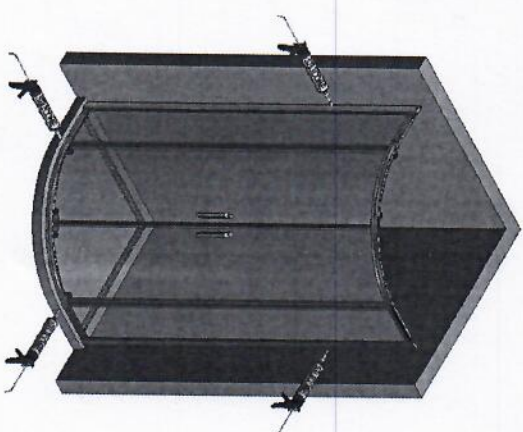

12

Externally silicone seal the wall profiles where they meet the wall and where the enclosure meets the shower tray in a continuous silicone bead.

Do not silicone the inside of the enclosure

Allow at least 24 hours for the silicone to cure before using the enclosure. -Use the lubricant in the small packet provided to ensure that the wheels run smoothly inside the channel.

Use appropriate personal protection equipment when installing the product

Customer Care Guide

It is important to clean your shower door and tray after every use, wipe down all glass and metal parts with a soft cloth

Do not allow limescale to build up in hard water areas

Ensure that any residual water on the glass is removed after every use

Clean the glass regularly

Do not use abrasive products on any surfaces

Bathroom products are vulnerable to acid attack and some household consumables such as hair dye, disinfectants, denture cleaners etc can contain such acids. Contact with these materials should be avoided. This instruction guide is for illustration purposes and may not be an exact representation of the physical product.

For full terms and conditions, please refer to the manufacturer

If further assistance is required, please contact your retailer or alternatively call our customer services team on 01324 665590