

## Instruction












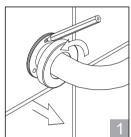

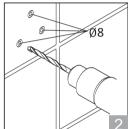

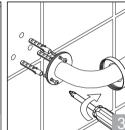

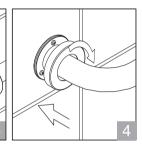

## Warning!

Please use the standard fixing kit for installation on concrete, solid brick, sand-lime perforated brick walls and solid board.

Others walls, such as aerated concrete, plasterboard and gypsum fibre board require extra strengthening.

## Cleaning

Only clean and dry the surface with mild-cleanser and soft- cloth. Never use rough sponges, abrasives, ammonia, bleach or solvent based cleaners. It is recommended to clean the surface periodically for lucent surface.

Residues of liquid soaps, shampoos and shower foams can also cause damage, so rinse with clean water after using. The damage of already damaged surfaces will deteriorate under the effect of the cleansers. Components with damaged surface must be exchange, otherwise there could be an injury danger.

## **Check out our full range of Bathroom Accessories**

Heated Towel Rails
Bathroom Extractor Fans
Bathroom Lighting

**Bathroom Accessory Sets** 

Shower Seats

**Grab Rails** 

**Shower Curtains** 

**Toilet Brushes** 

**Bathroom Cleaning Products** 

Wall Mounted Bathroom Accessories

**Robe Hooks** 

**Bathroom Tumblers** 

**Toilet Roll Holders** 

**Soap Dishes** 

**Towel Rings** 

**Shower Caddies** 

**Bathroom Mirrors** 

Standard Bathroom Mirrors

**LED Bathroom Mirrors** 

**Shaving Mirrors** 

