


GENERAL FITTING GUIDE for HIGH LEVEL FLUSH KIT

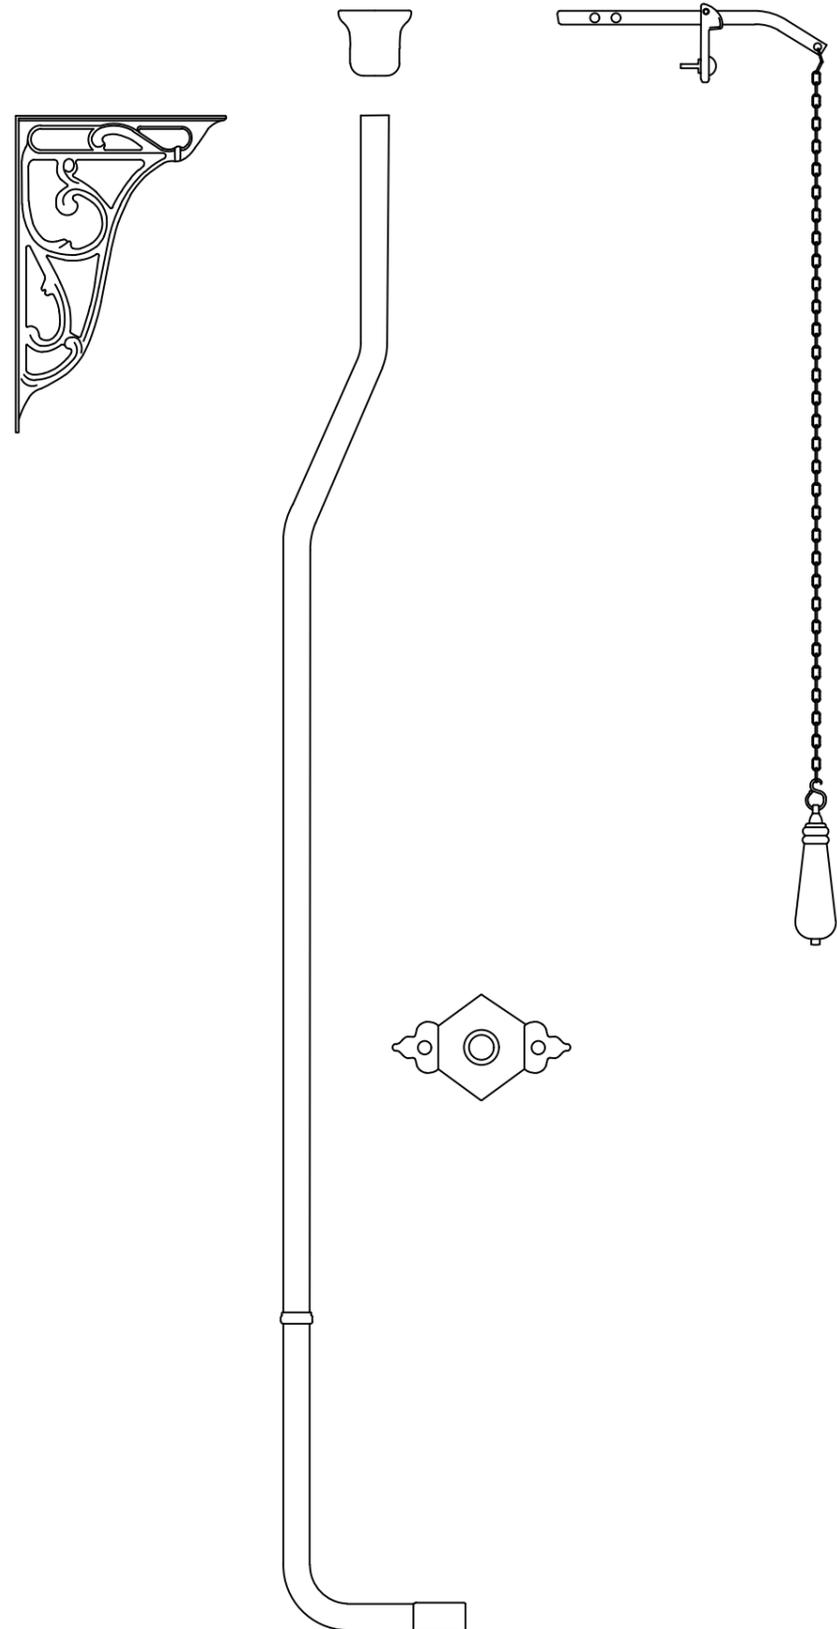

INSTALLATION PROCEDURE

1. Mount the cistern securely on the wall at the required height using the fixing holes through the rear of the cistern. If you are installing your cistern on an outside wall, ensure that the black rubber spacing washers are used to create a small gap between the cistern back and the wall. There are two reasons for this; firstly it will help to reduce the possibility of condensation when cold mains pressure is contained within a humid environment and secondly, the gap will help prevent "thermal shock". This is when rapid temperature change occurs (usually overnight) and causes the wall to contract or expand, thus cracking the sanitary ware. When fixing the cistern to the wall it is advisable to insert the screw through a washer (not supplied) on the inside of the cistern. This will prevent the screw damaging the sanitary ware when the screw "bites".
2. Join the two flush pipes by using the compression "O" ring and nut. Remove the nut and "O" ring from bend and fit onto long flush pipe, nut uppermost, before inserting into bend.
3. Place the retaining ring (thinner of the two supplied) and ornate shroud over the upper flush pipe and insert the threaded syphon stem (supplied as part of the cistern fitting). Once this is secure push the ornate shroud up to cover the fitting and secure with the retaining "O" ring. The thin "O" ring is a friction fit on the upper flush pipe and acts as support for the shroud. The shroud just resting upon the retaining ring at the required position.
4. Insert the lower end of the pipe into the pan via the multi-quick seal (supplied as part of the cistern fittings).
5. Fit the rubber nipple into the hole in the buffer clip before fitting to the wall. Locate the buffer clip so as to prevent collision between the seat and pipe. This clip will also secure the pipe to the wall.
6. Join the lever arm to the "S" hook on the syphon (inside the cistern) and fix the lever arm to the cistern with the nut and bolt provided, then hang the pull chain with ceramic handle from the lever arm.
7. Mount the decorative brackets to the underside of the cistern using the screws provided if suitable. The ornate brackets are purely decorative. They should not be used as support for the cistern. Always ensure the cistern is firmly and securely fixed to the wall via the fixing holes at the rear of the tank.

GUARANTEE & AFTERCARE

When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration. The company provides a guarantee against faulty material or manufacture excluding serviceable parts, providing they have been installed, cared for and used in accordance with our instructions.

The company reserves the right to continually evolve its product lines without notification. The company will not accept any liability regarding specification changes and their consequences unless previously quoted by the company in writing.

Check out our full range of Bathroom Suites

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

Wide variety of toilets

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

Huge Selection of Baths

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

Don't forget the important bathroom suite extras

Bath panels

Toilet seats

plumbworld
Big brands, small prices.