


INSTALLATION INSTRUCTIONS



DES1383A

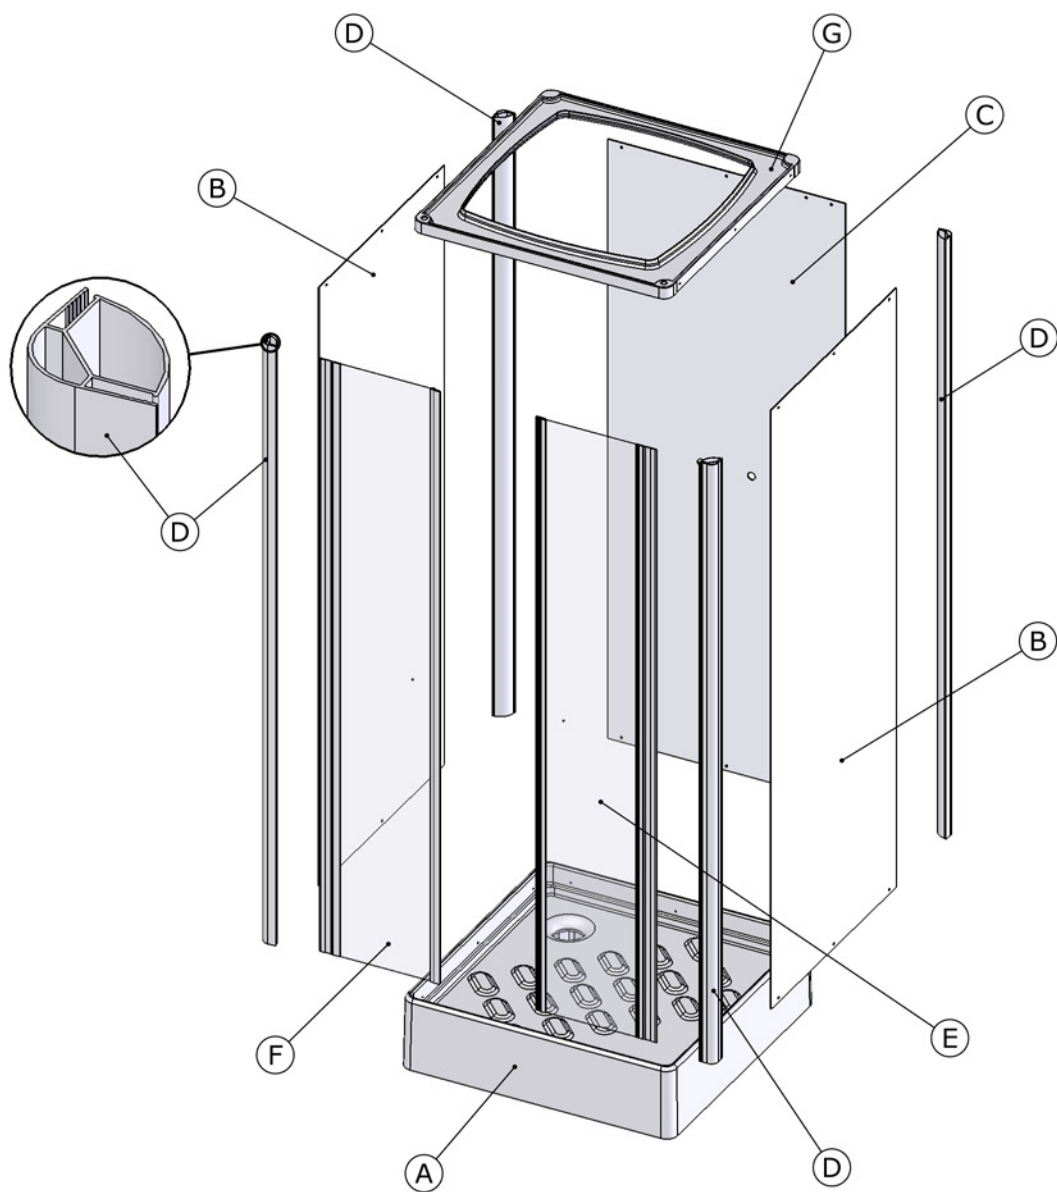












PACKAGE CODES (See marks on page 2)

A	RTH085
B	ENSW02
C	
D	EPW07
E	PORT09
F	
G	CTHW1333-E

Other parts:


(see next pages)

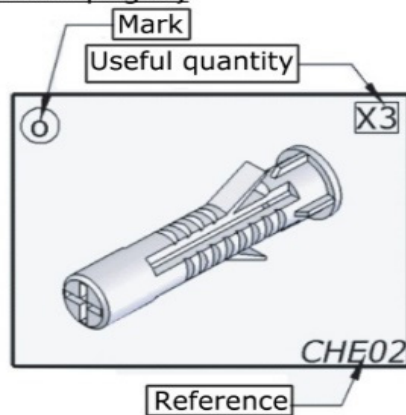


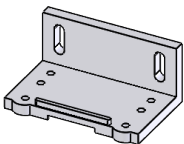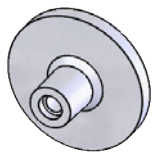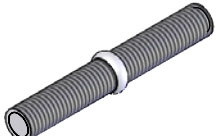

(H) X1  BOND07	(I) M4 X10  12 1=1 VIS87	(J) X10  1=1 RON05
(K) X10  1=1 ECR09	(L) Ø5,5 X17  16 1=1 VIS05	(M) X10  PPL505
(N) X2  PPL503	(O) M5 X2  20 1=1 VIS83	(P) M5 X2  25 1=1 VIS86
(Q) X4  1=1 RON34	(R) X4  1=1 ERCORD	(S) X4  PPL502
(T) X2  DP100310	(U) X6  RON58	(V) X6  CAC10


The quantities given are what are required for the installation. There may be some surplus parts in the package provided.

Tools required

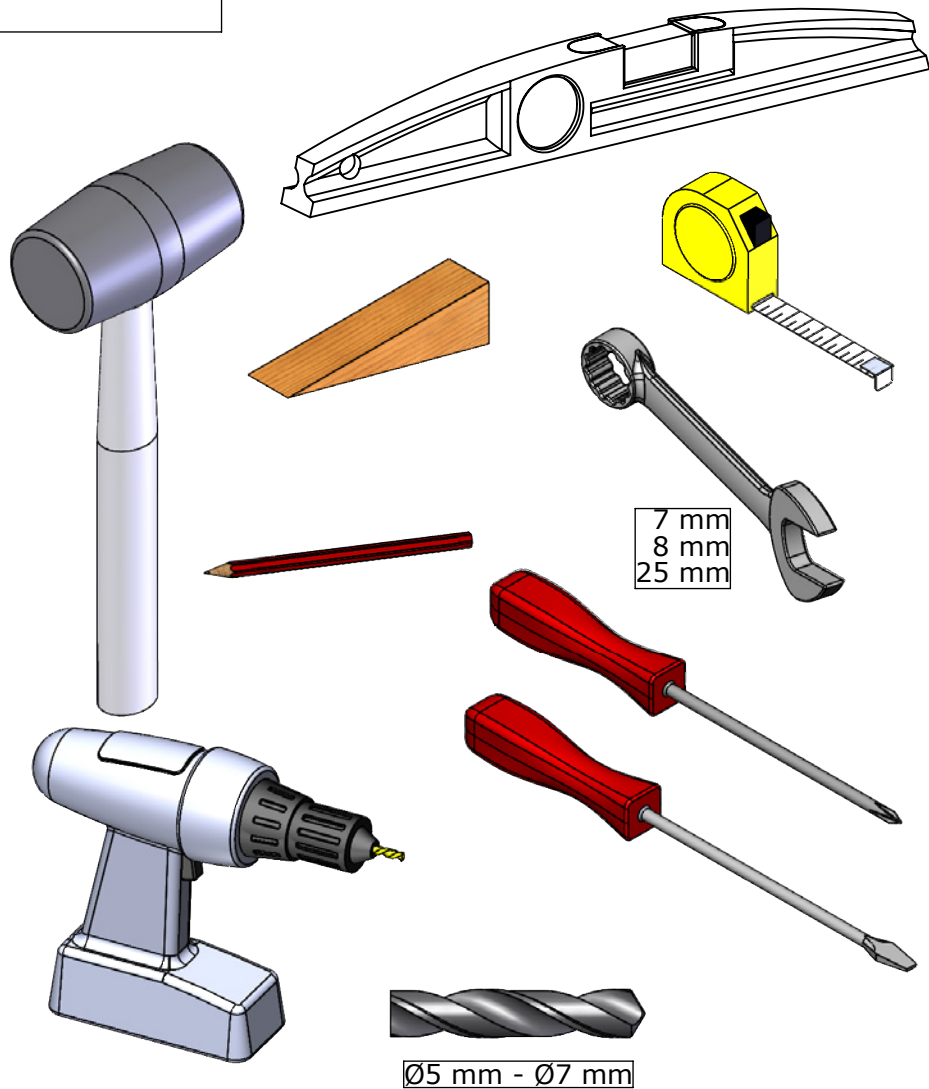

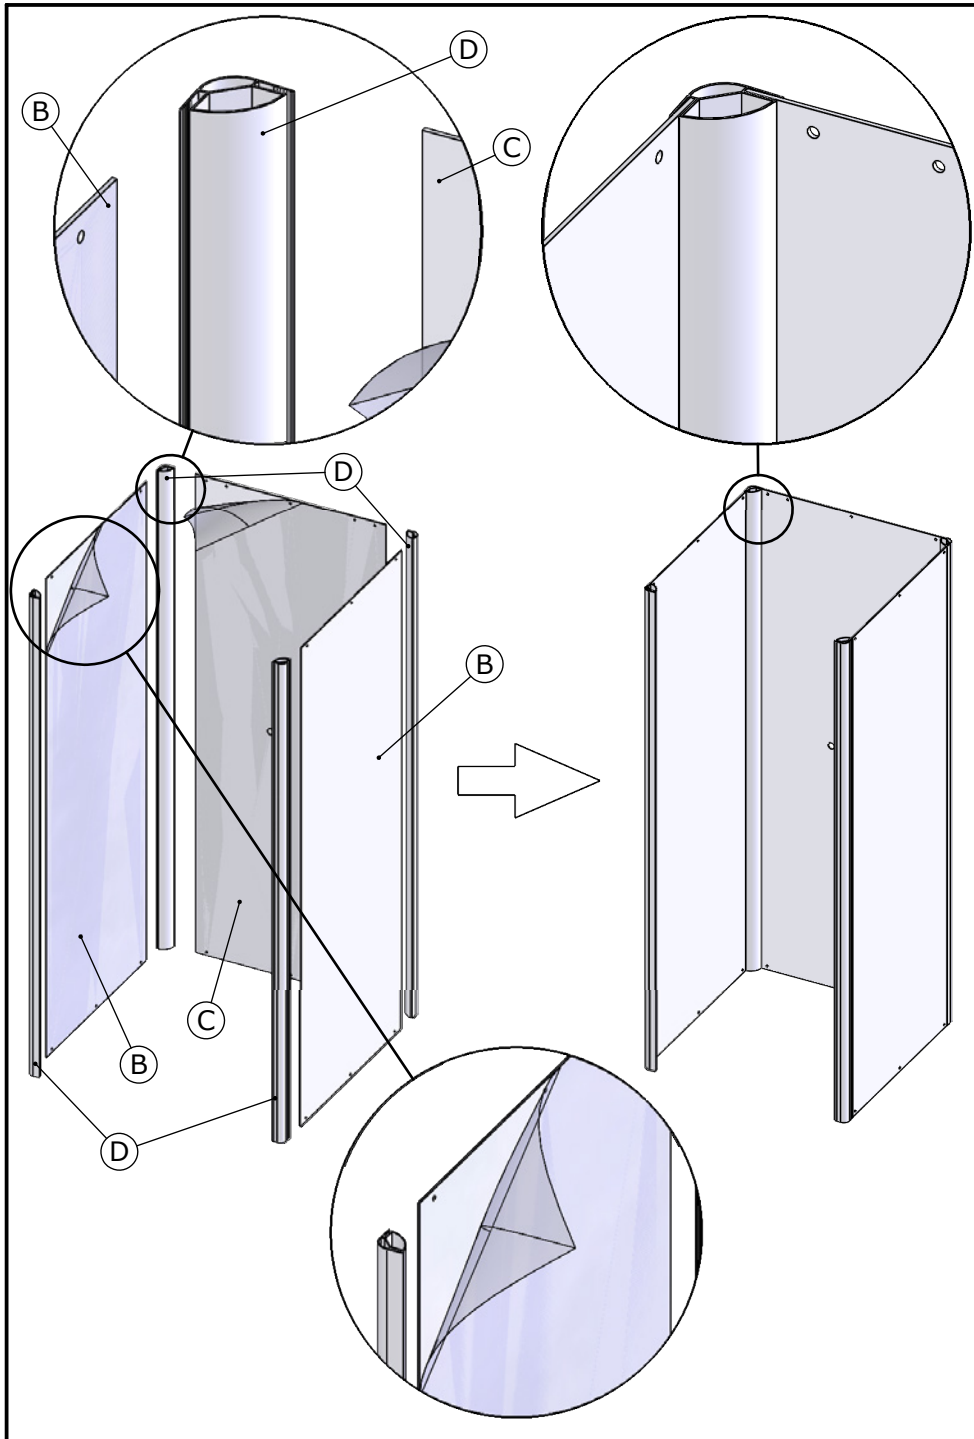

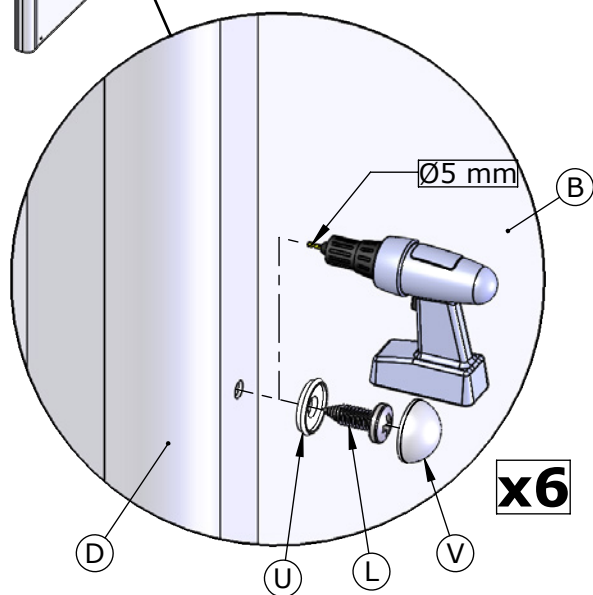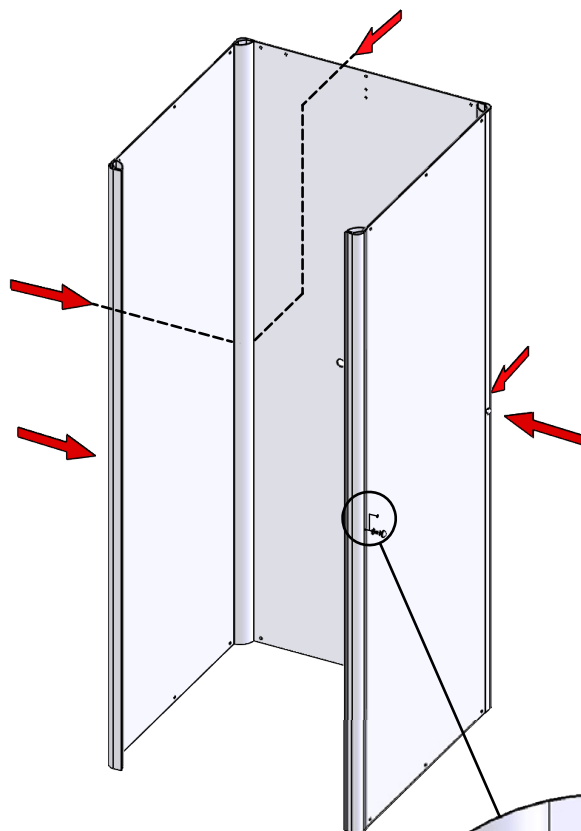


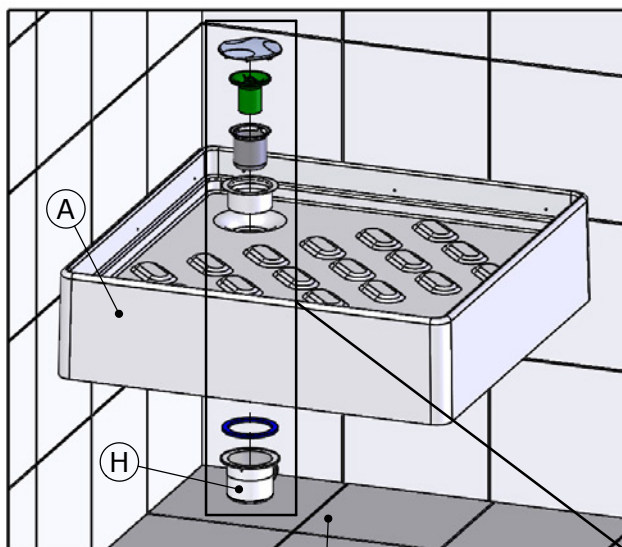



The underlying floor must absolutely be rigid and dry





Do not put glue or silicone
between the waste trap
seal and the tray

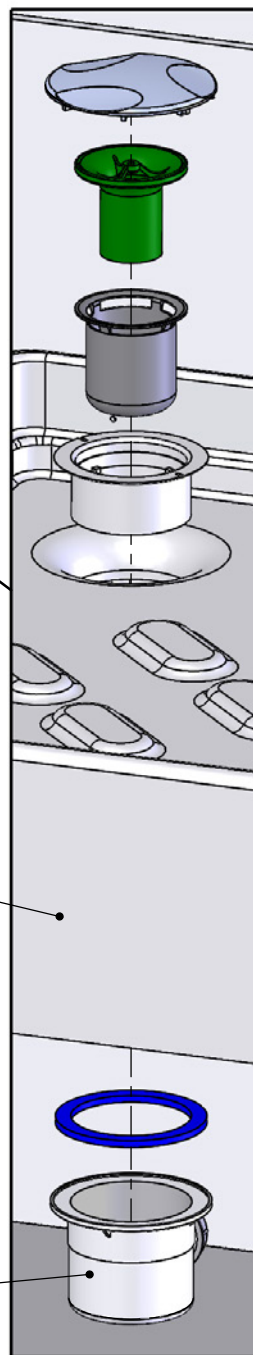


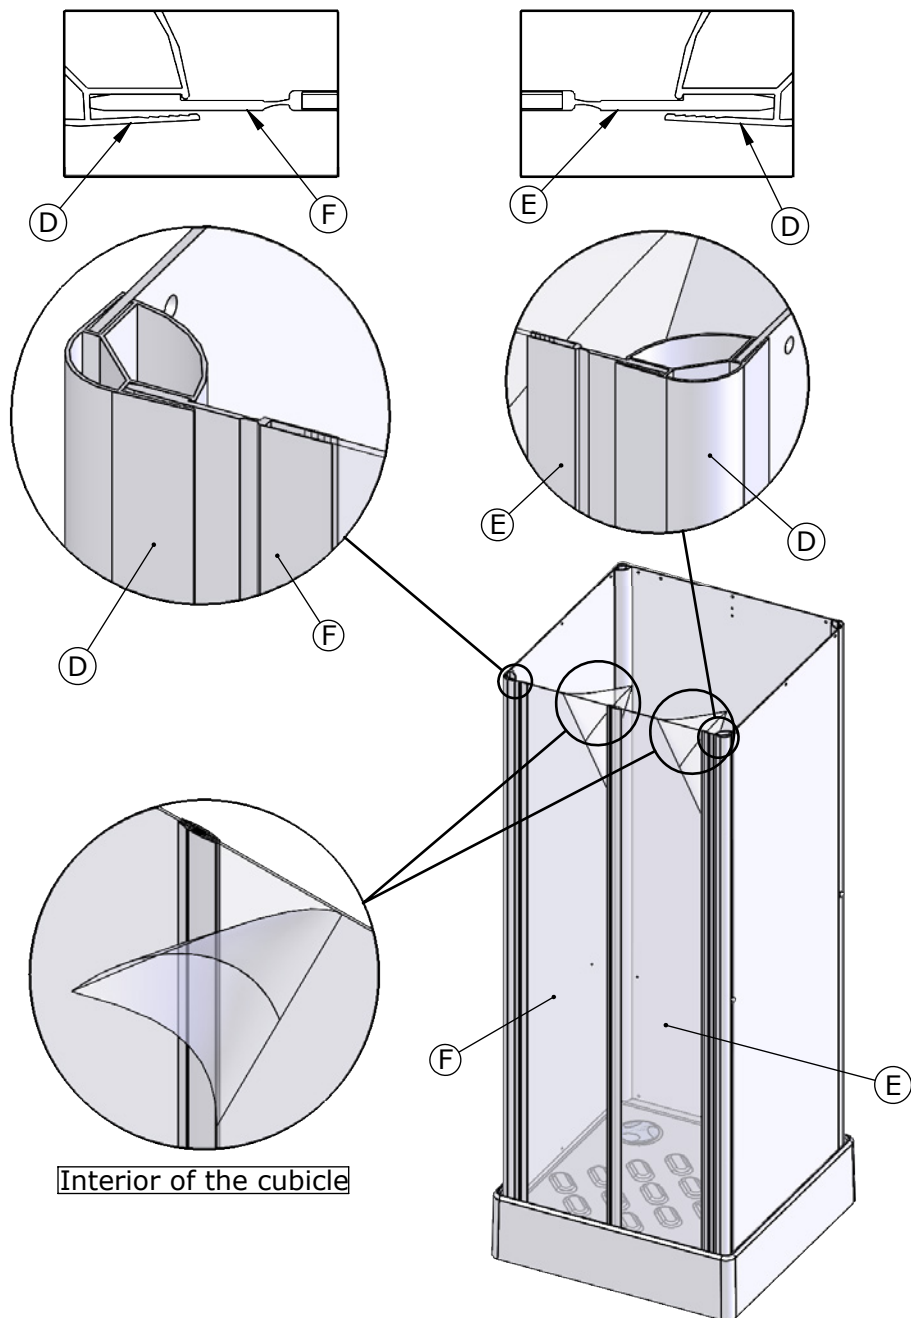


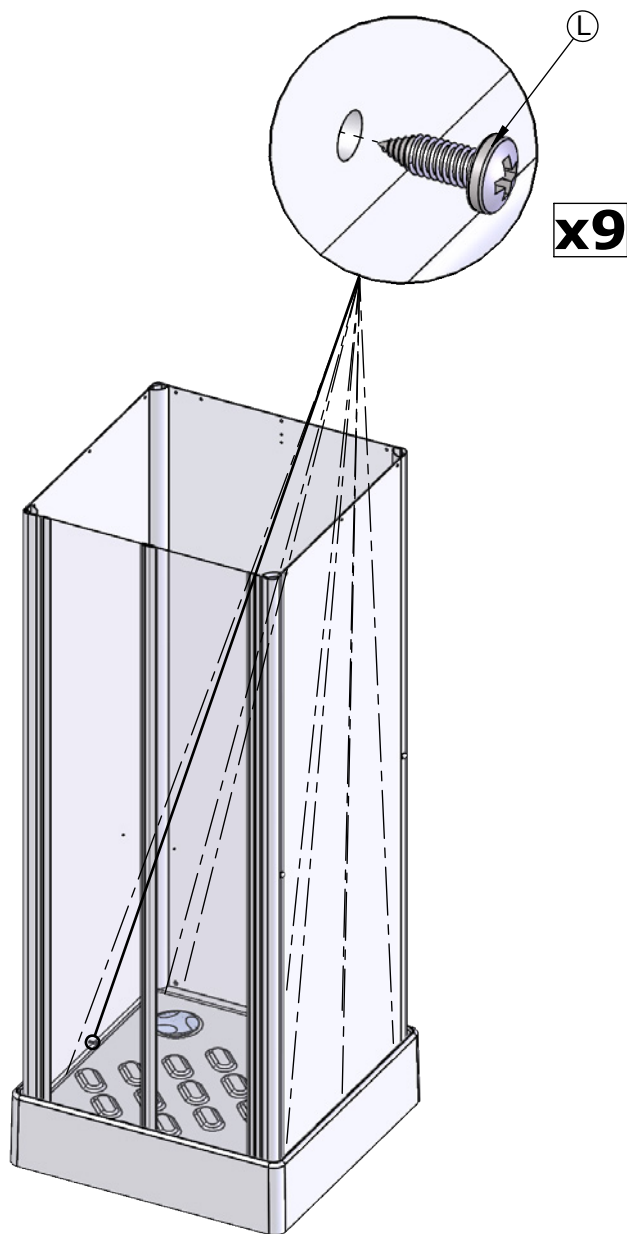


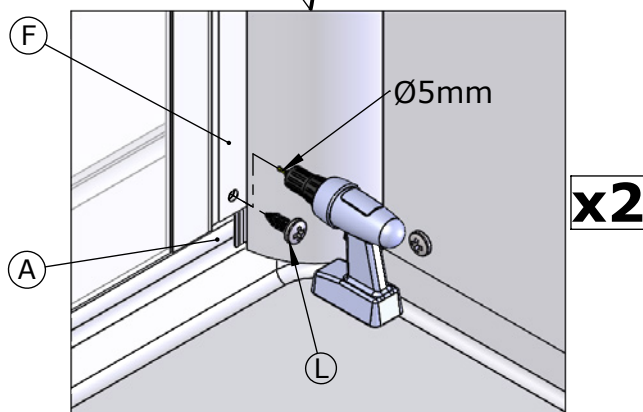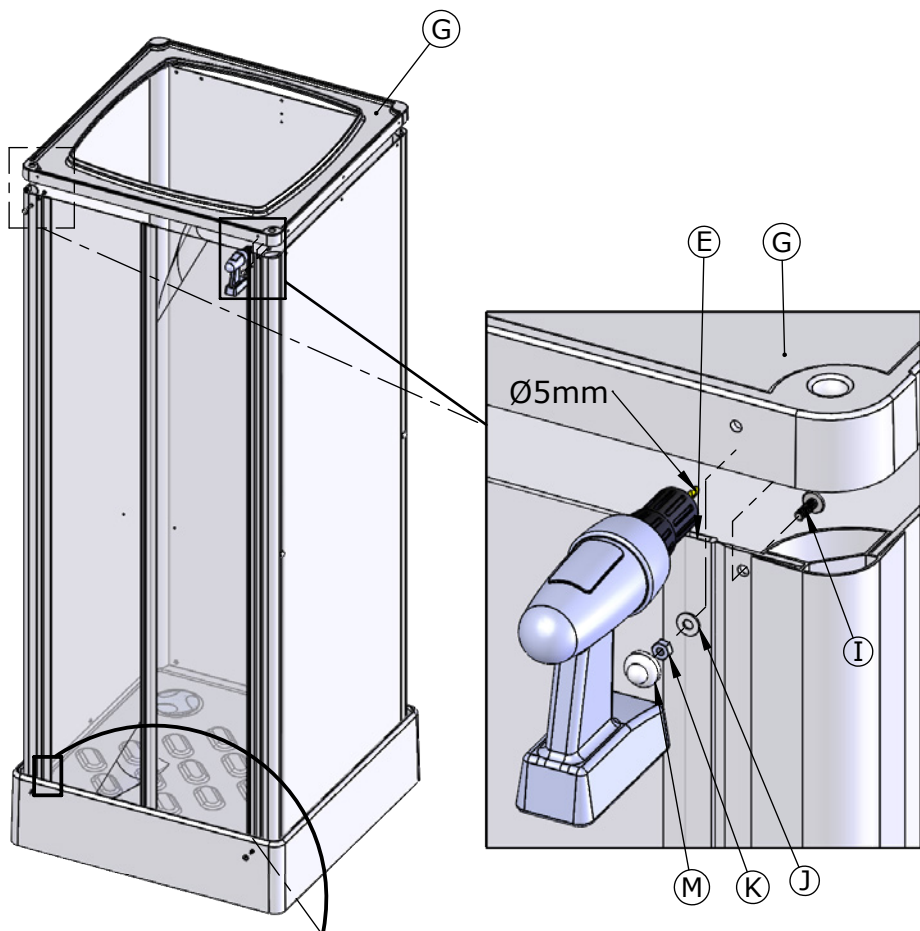

Interior of the cubicle

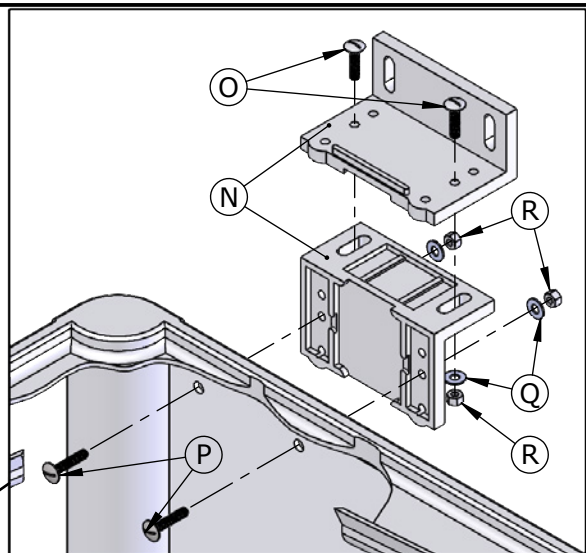

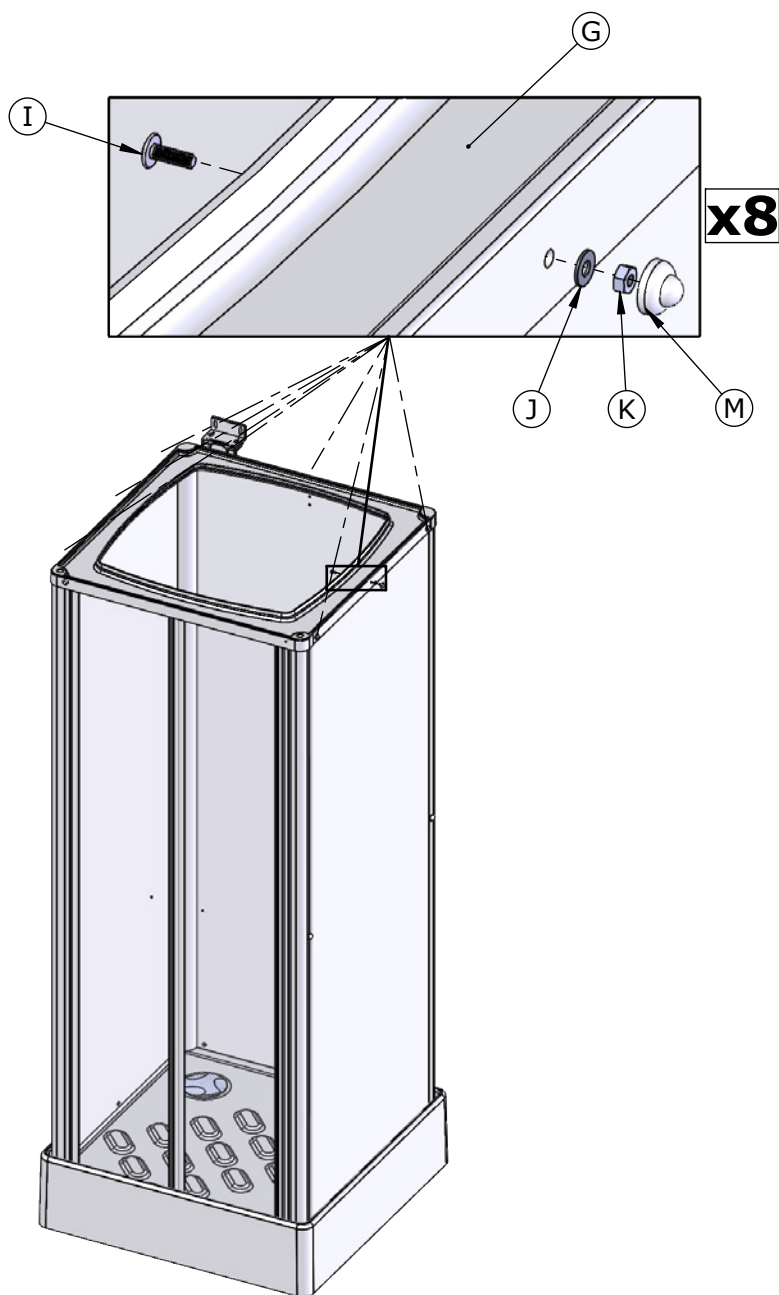

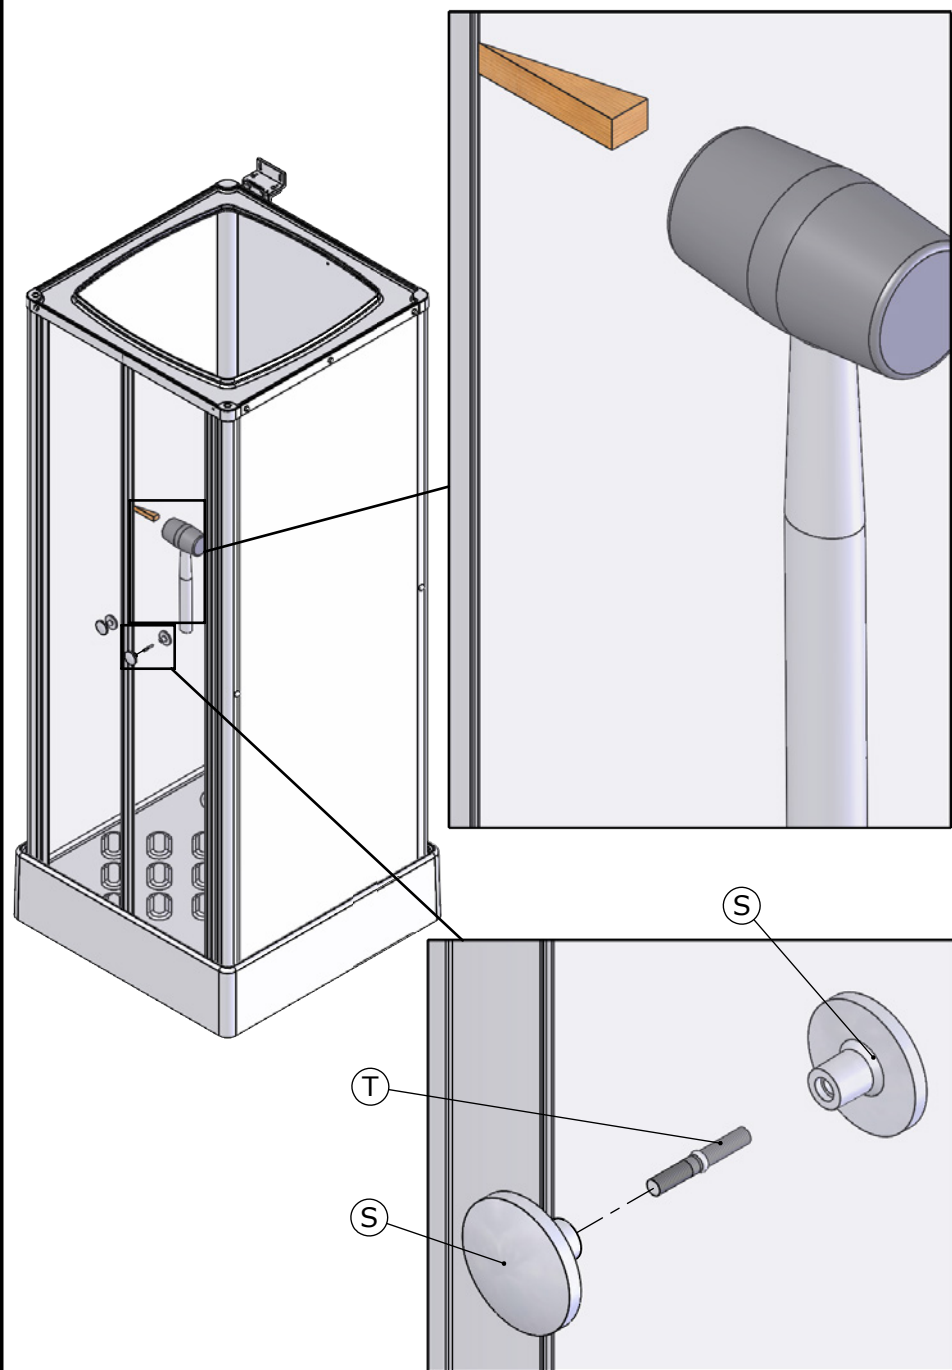



SERVICE APRÈS-VENTE AFTER-SALES SERVICE

FRANCE

+33 (0)2 40 21 29 45

UK

+44 (0)20 8842 0033

IRELAND

+353 04697 33102

DEUTSCHLAND

+49 (0) 6074 / 30928 0

ITALIA

+39 02 30559420

ÖSTEREICH

+43 1 710 60 70

SUISSE/SCHWEIZ

+41 (0)32 631 04 74

ESPAÑA

+34 93 544 60 76

NEDERLAND

+31 475 487 100

BELGIQUE/BELGIË

+31 475 487 100

РОССИЯ

+7 495 258-29-51

PORTUGAL

+351 219 112 785