

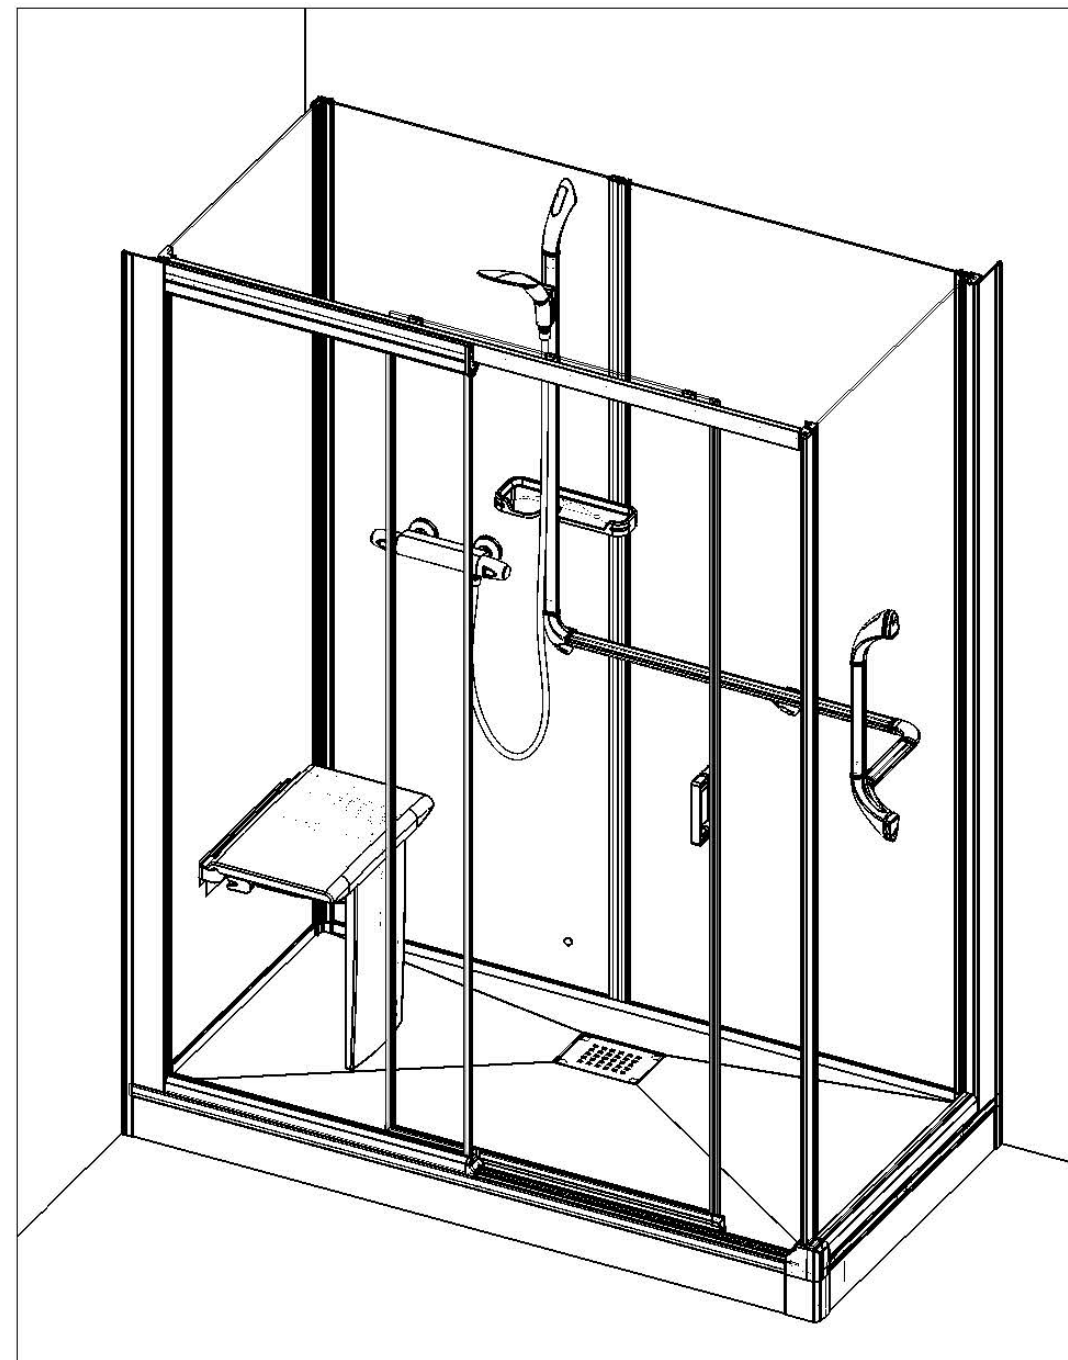


GB Installation instructions

GB Check installation steps : P. 12 - 24

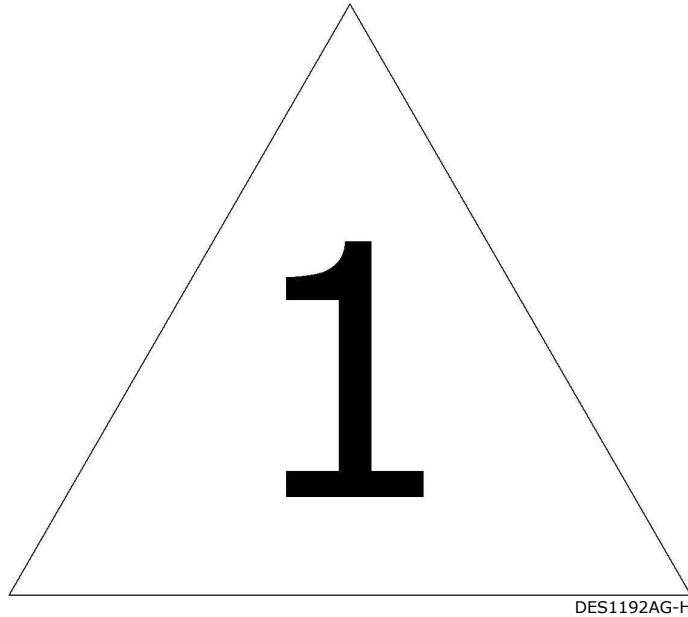

• **NEW :** The seal is now pre-positioned at the factory. Paste it along its entire length before mounting.




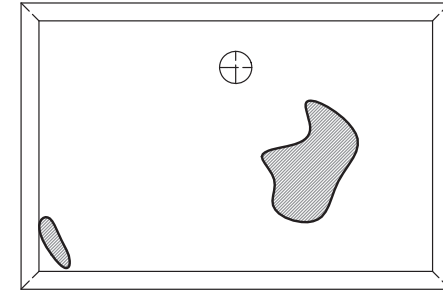


• Any surface irregularities on the underside of the shower tray have no influence on the installation according to the installation recommendations. The adhesive (polyurethane or MS polymer) compensates for these unevenness when bonding the feet off without any problems.



• Vacuum the bottom of the shower tray before installation




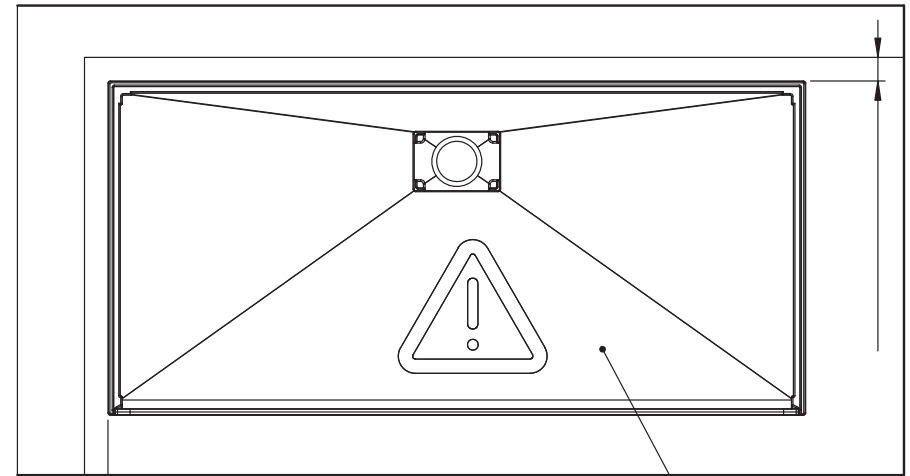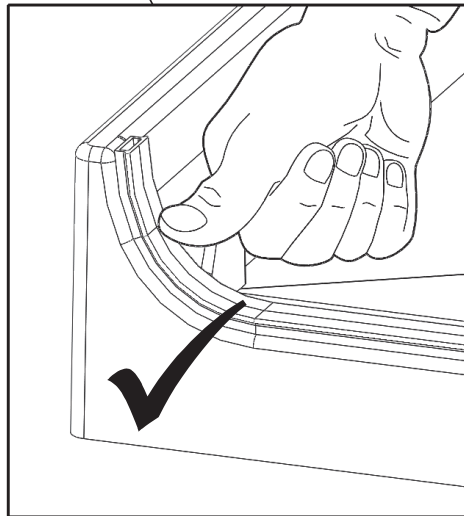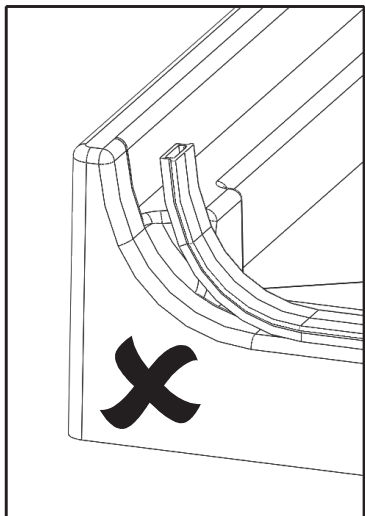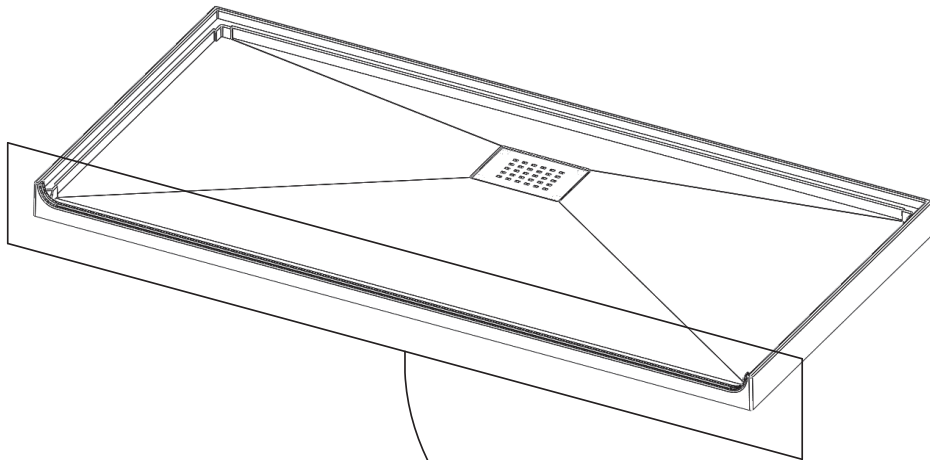


30mm à 200mm*

A


• Left and right sides summed must not exceed 385 mm

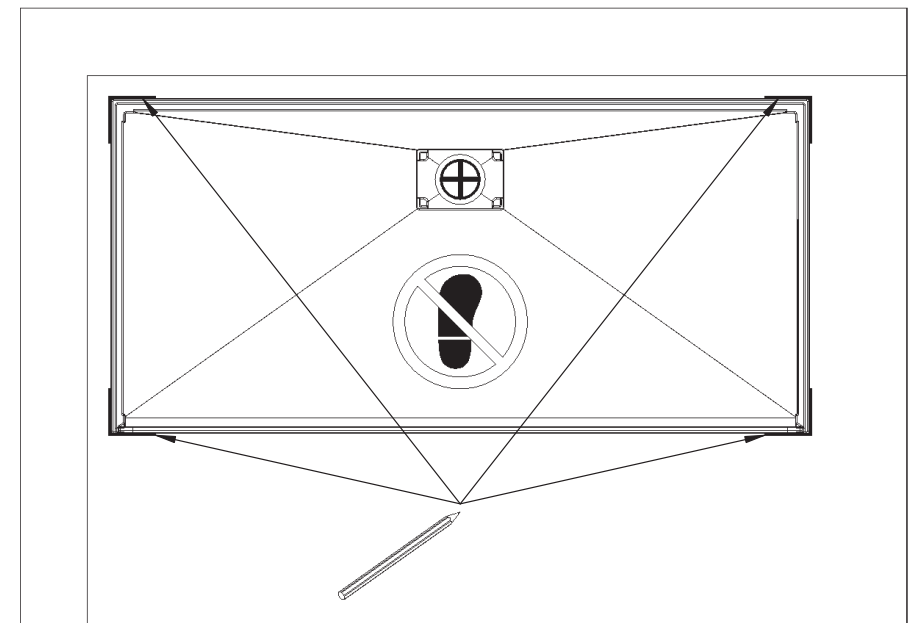

100


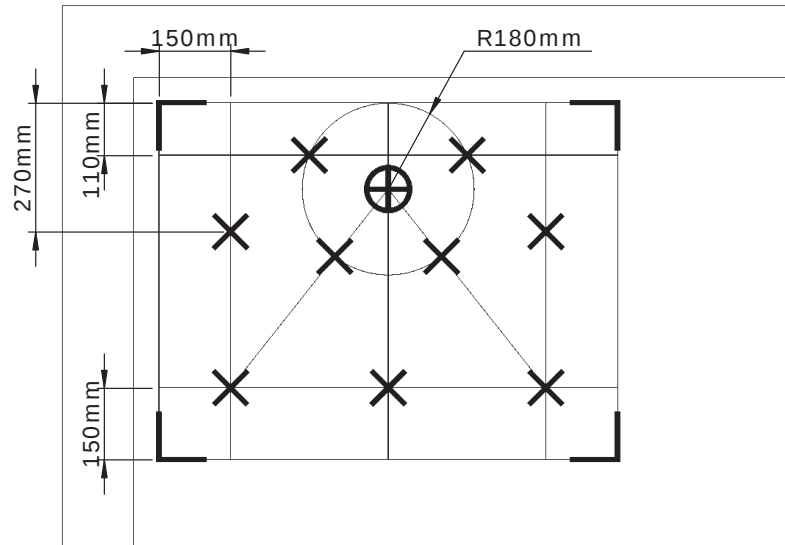


120 / 140 / 160 / 170


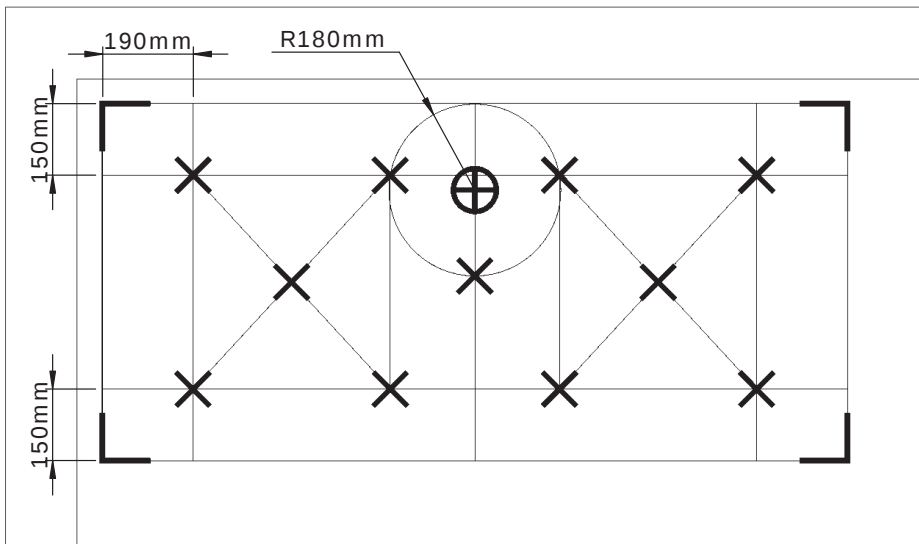


⑥ Laying the tray with adjustable feet

⑥ Polyurethane adhesive

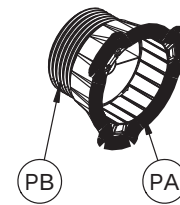
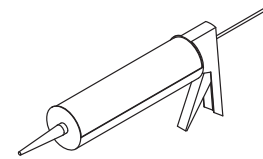


60mm à
110mm

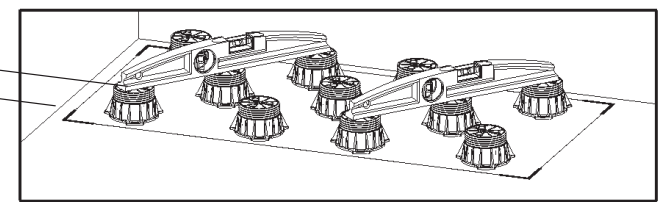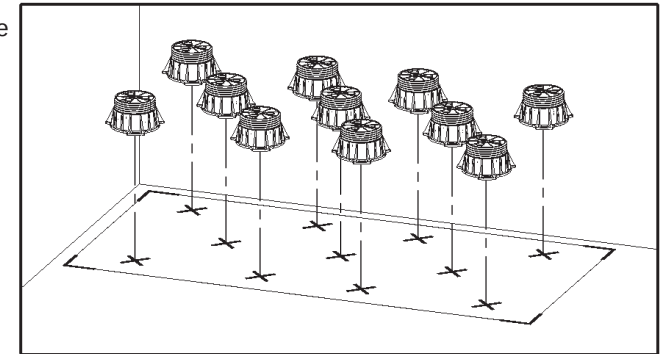


⑥ Laying the tray without feet

⑥ Polyurethane adhesive

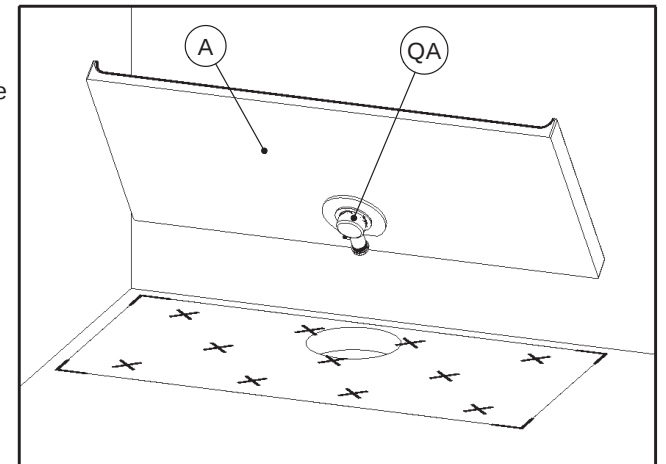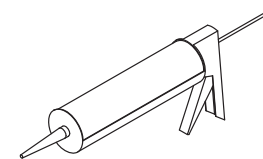




● Check that all feet are in contact with the shower tray

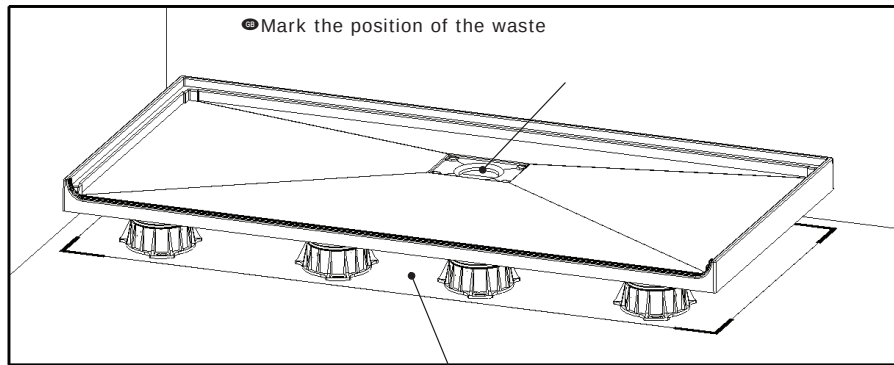

● Mark the position of the waste



● Ensure a solid dry surface

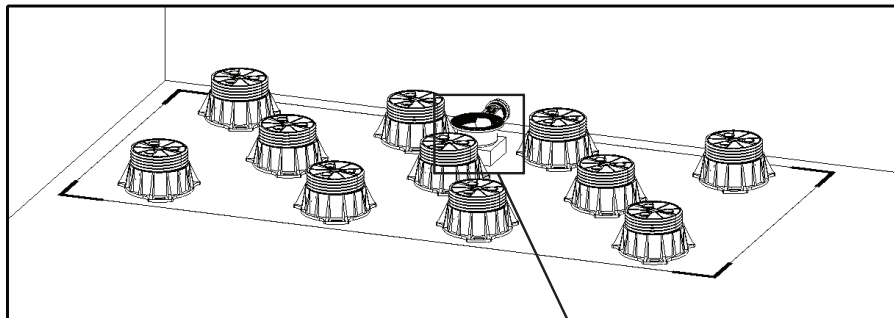



● Connect the waste pipe


QA


● Provide support if necessary

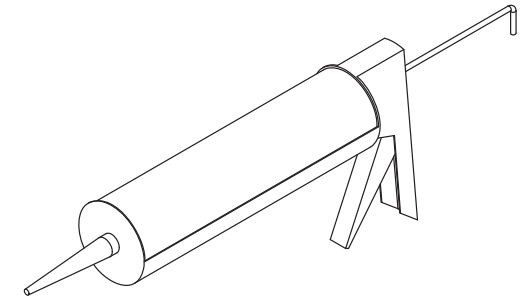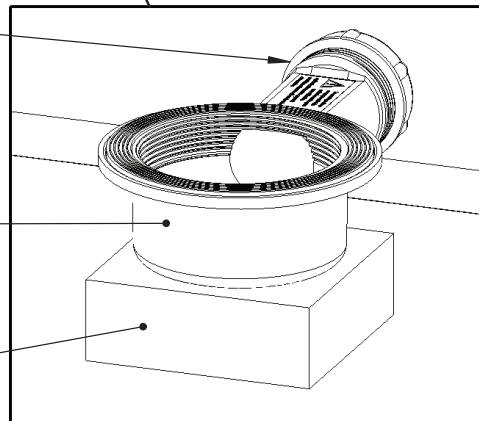


● Polyurethane adhesive

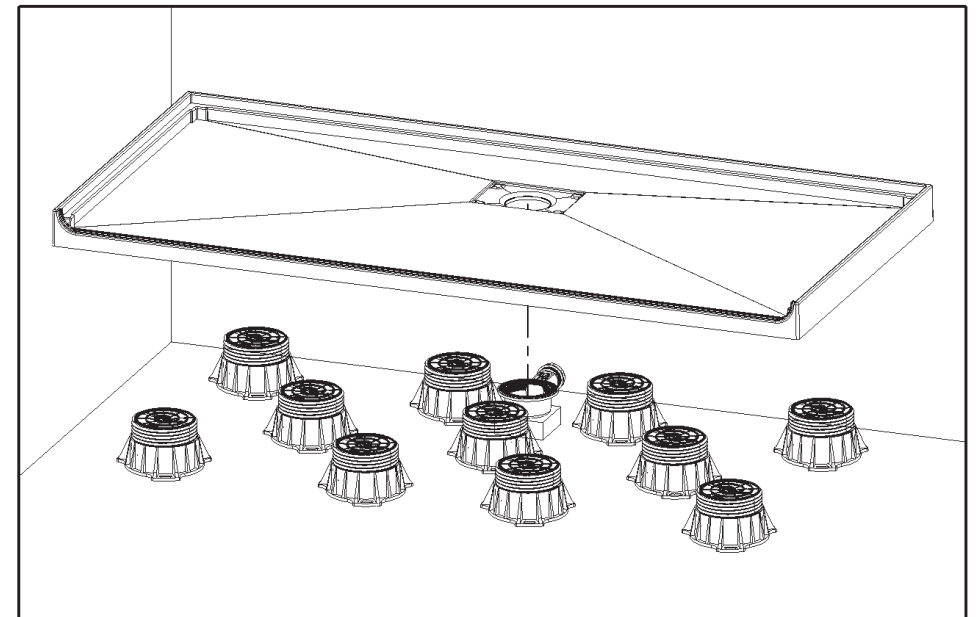
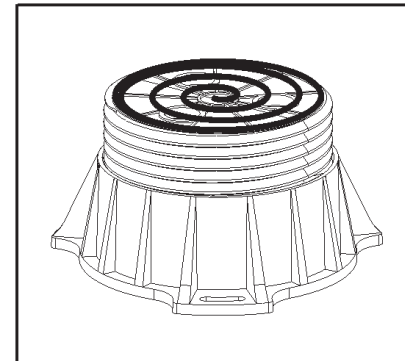



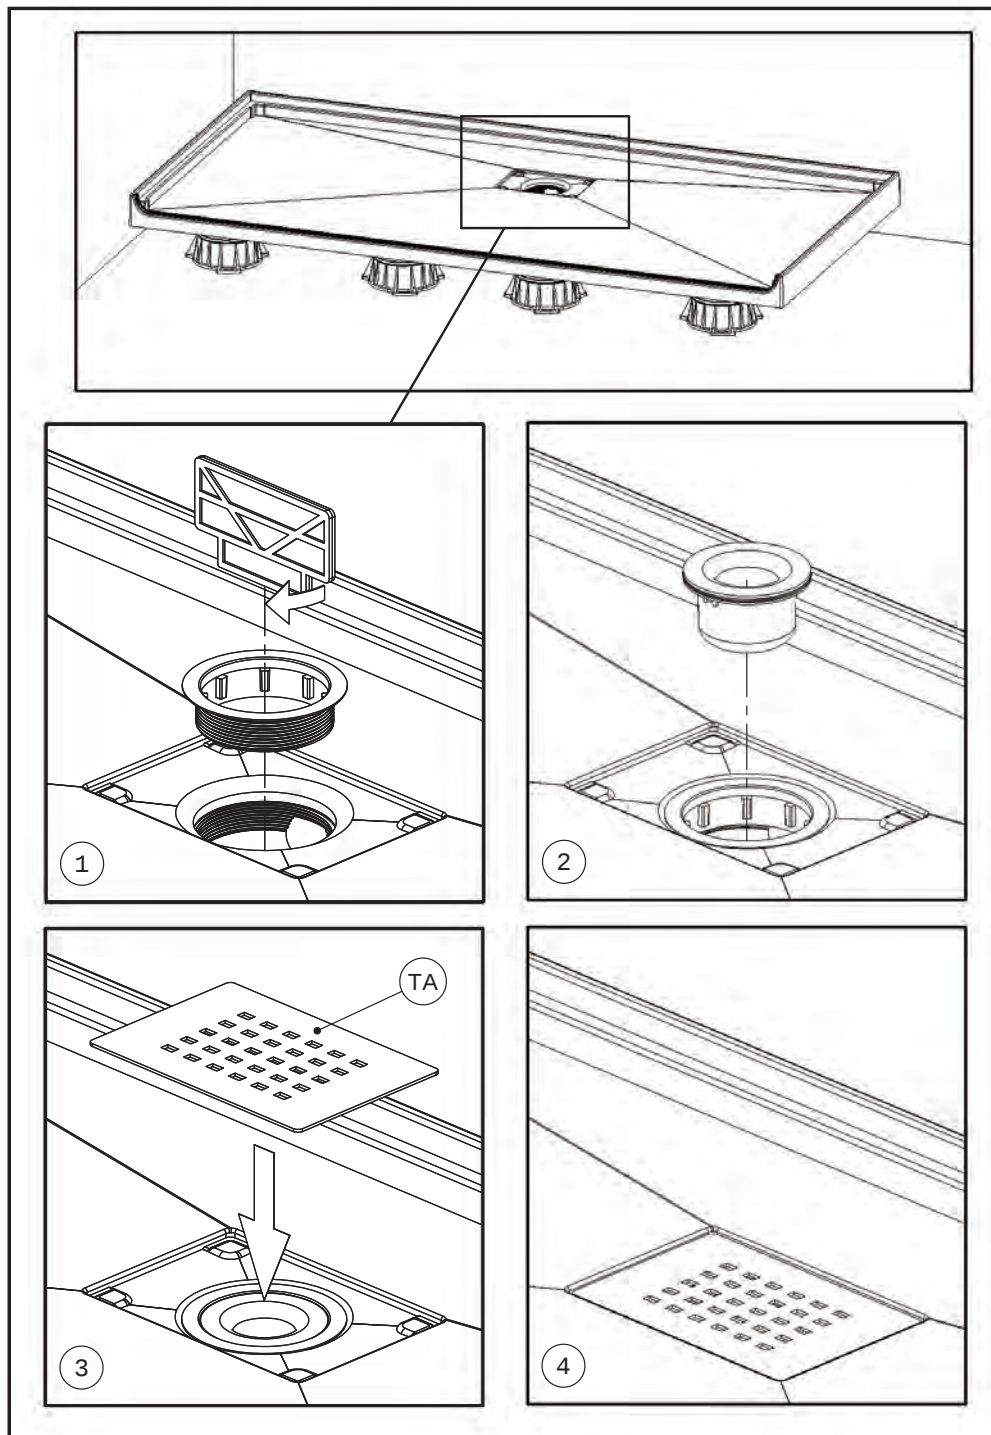


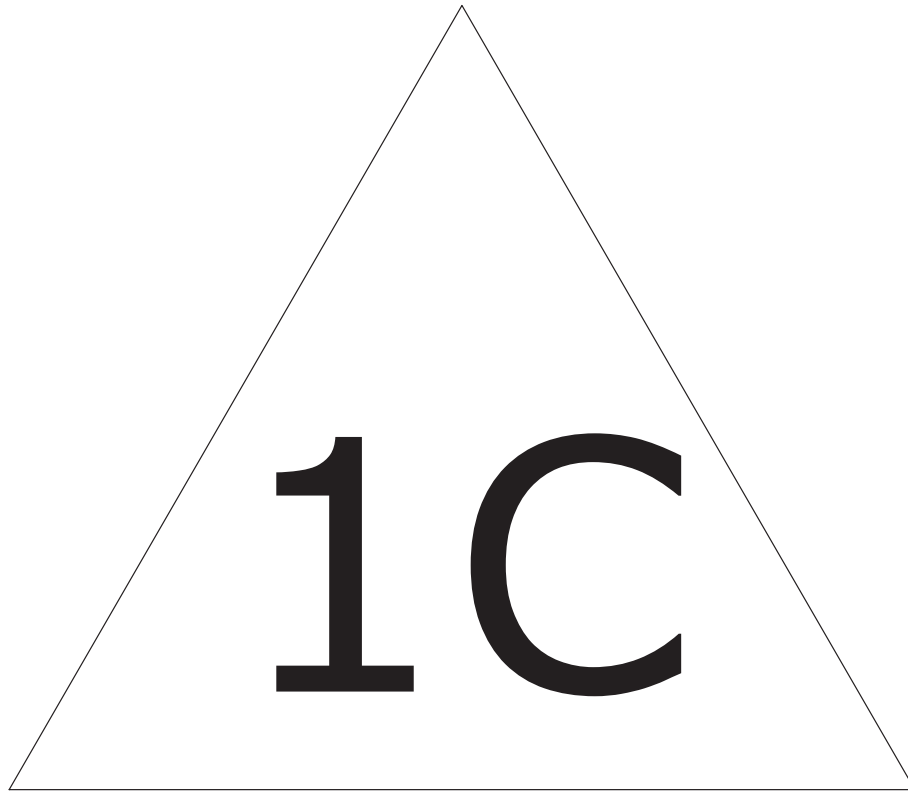




DES1176AG-C


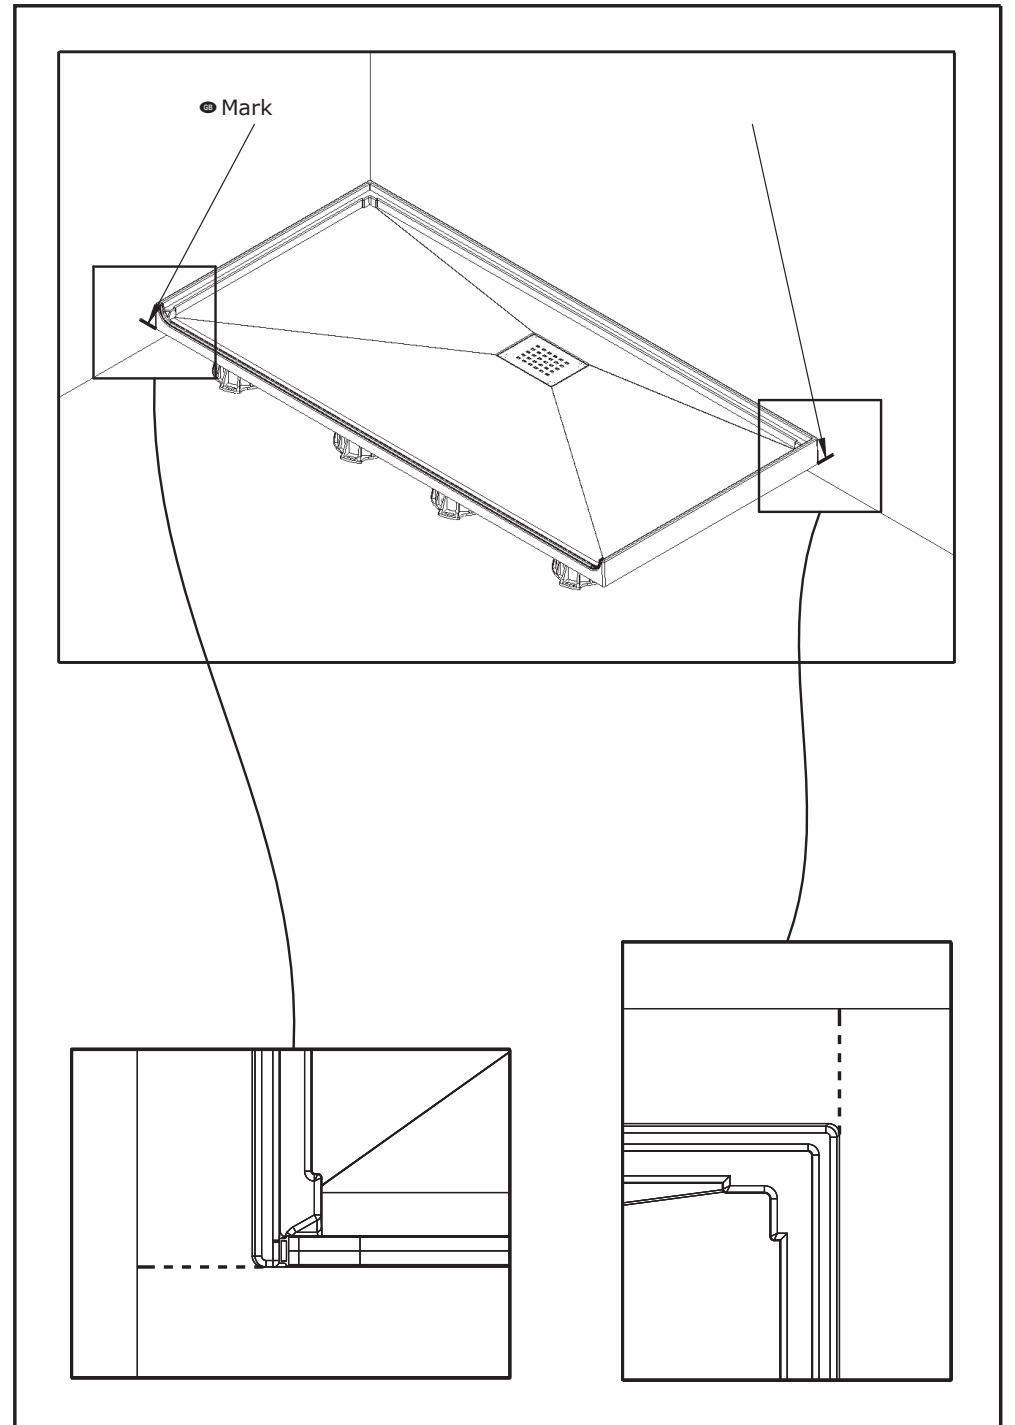



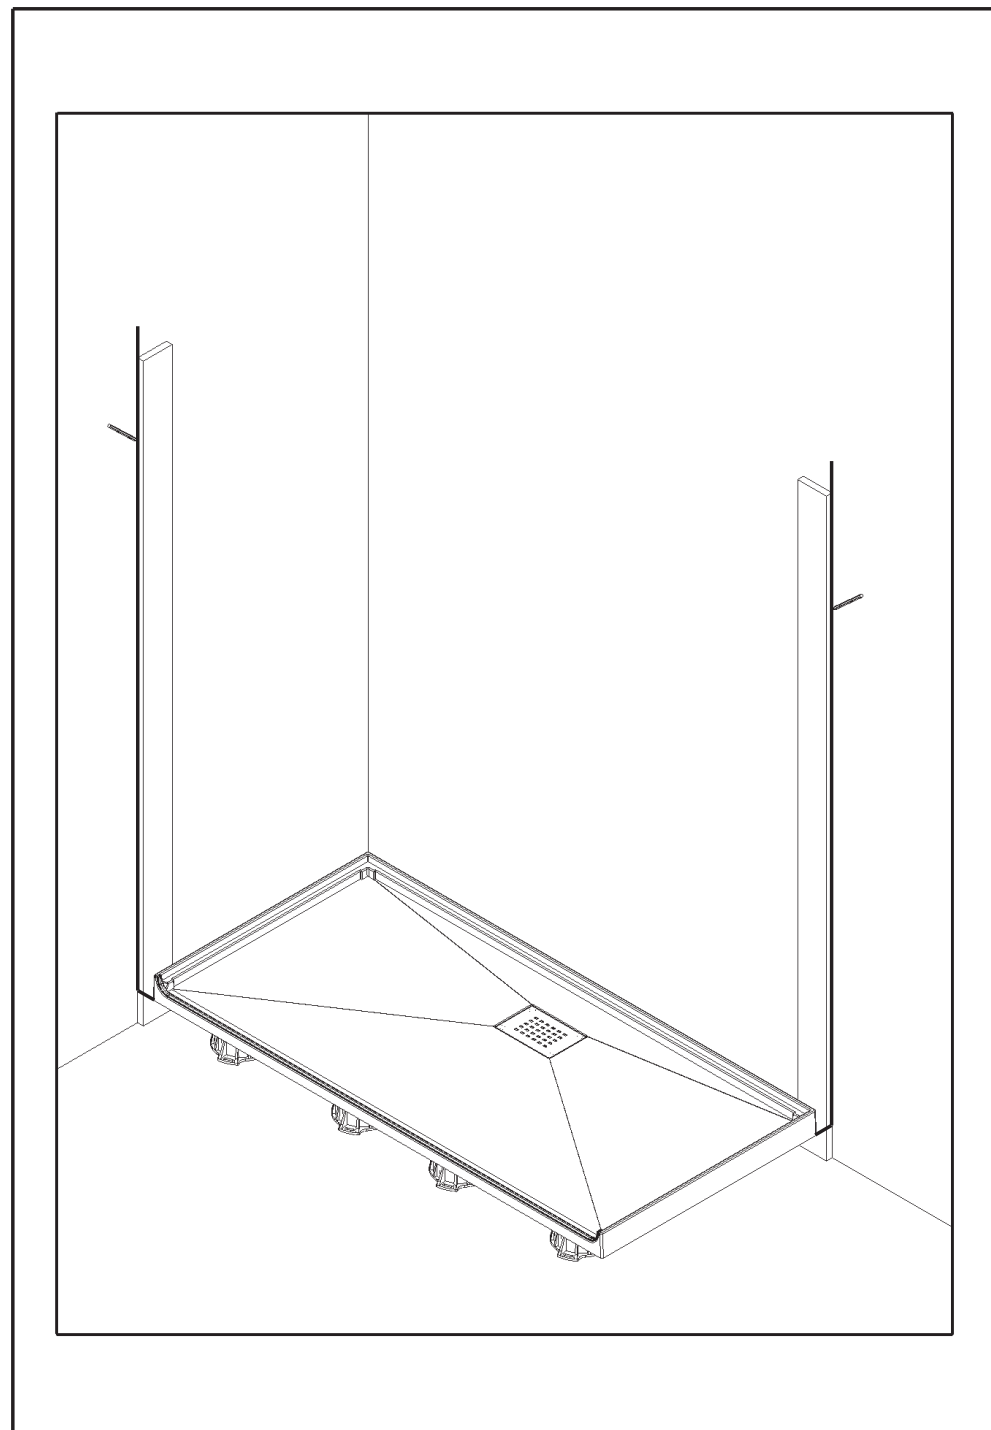
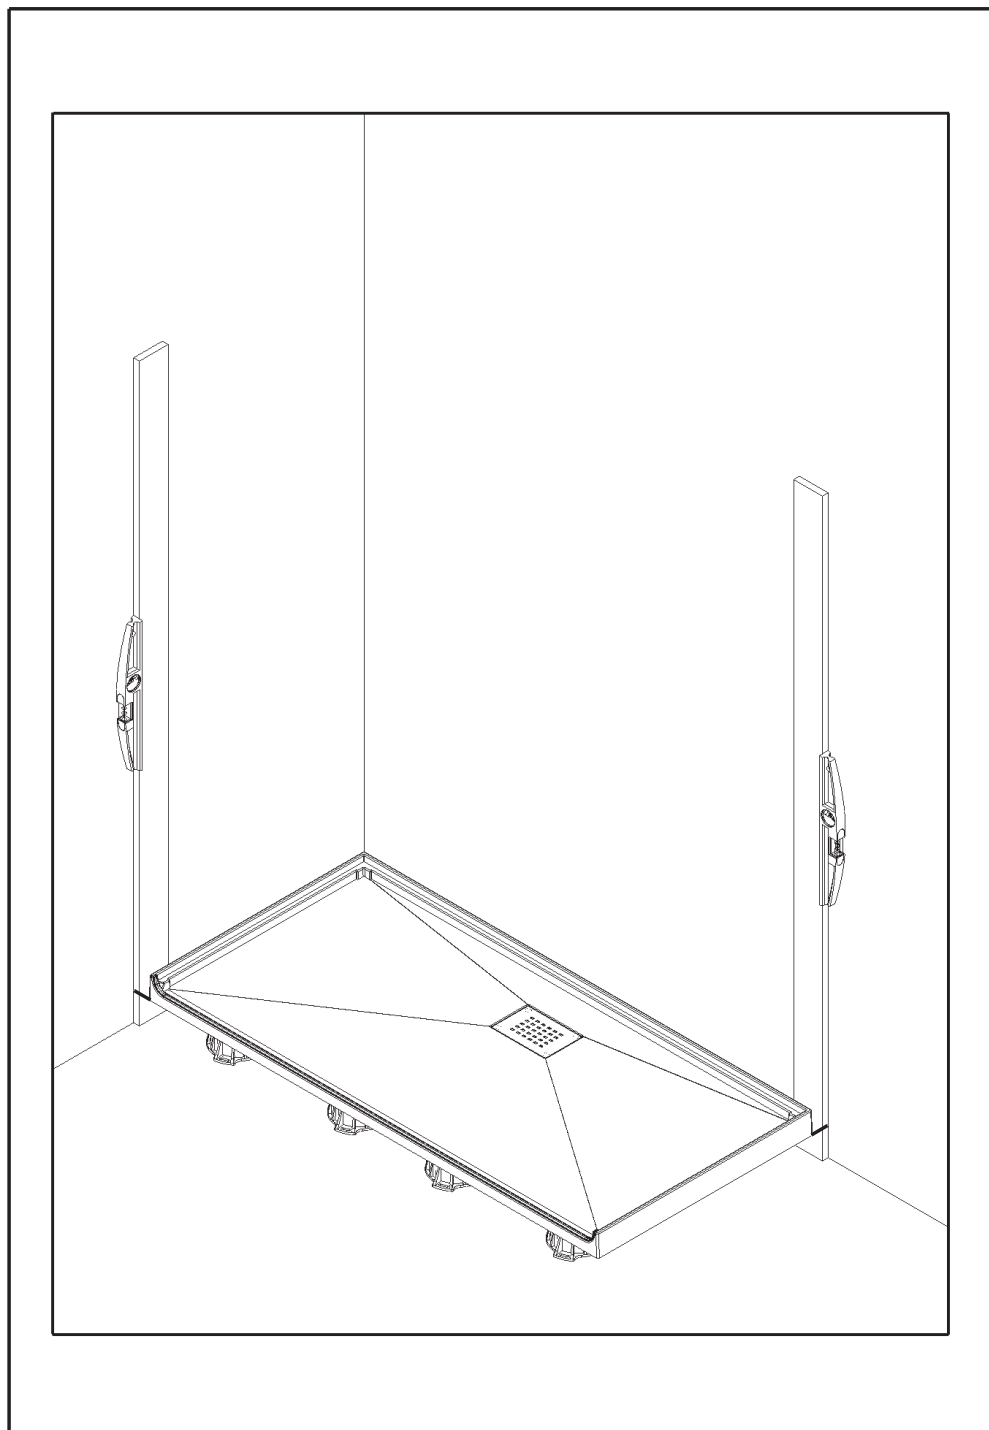










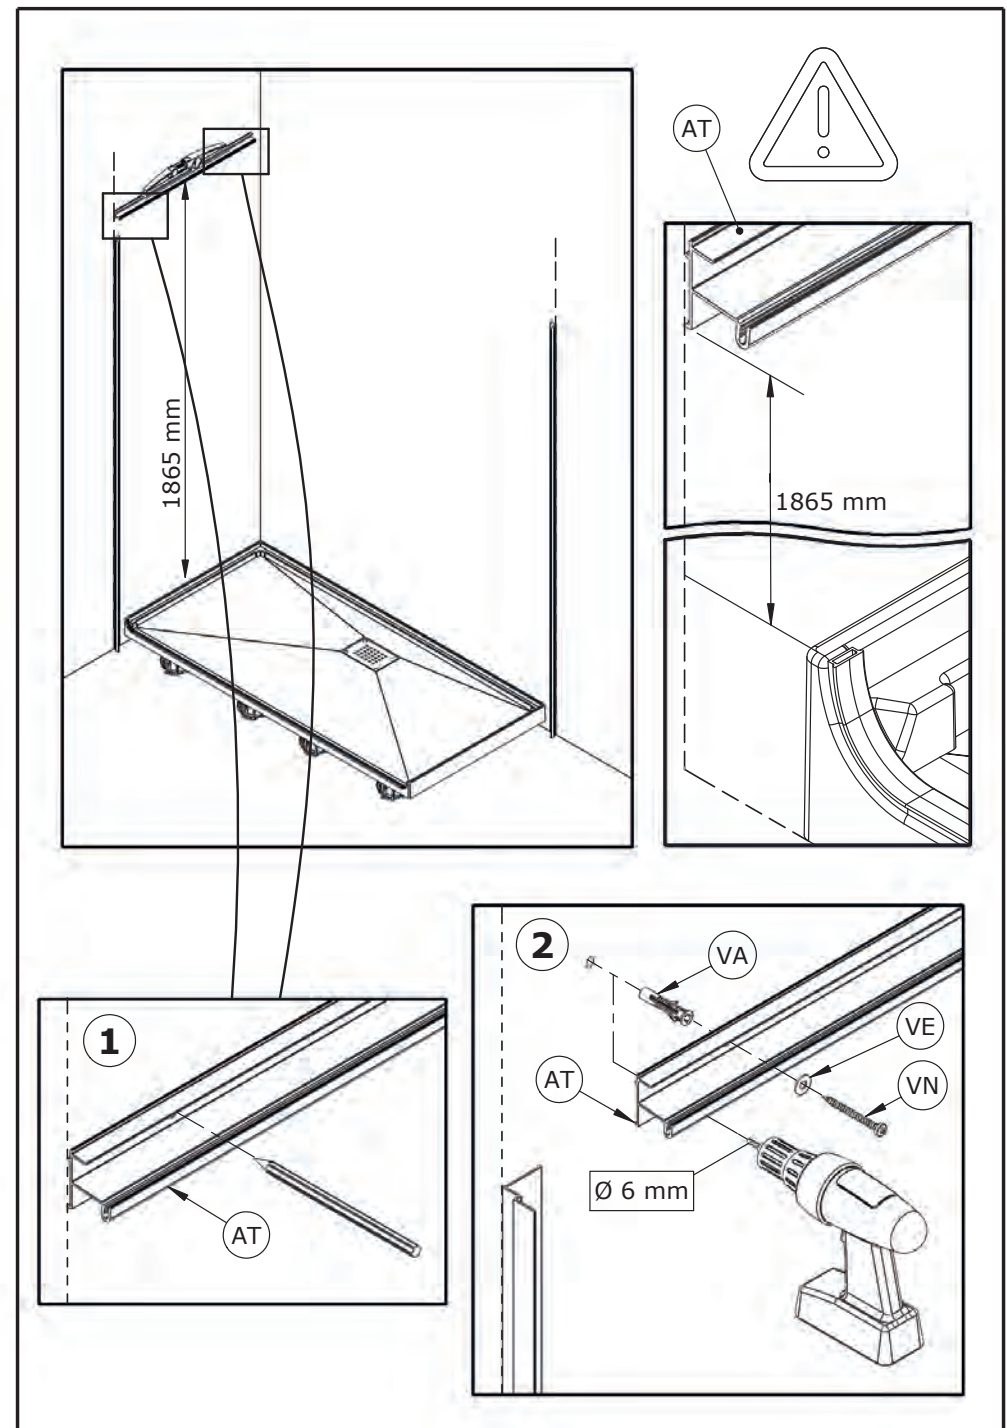
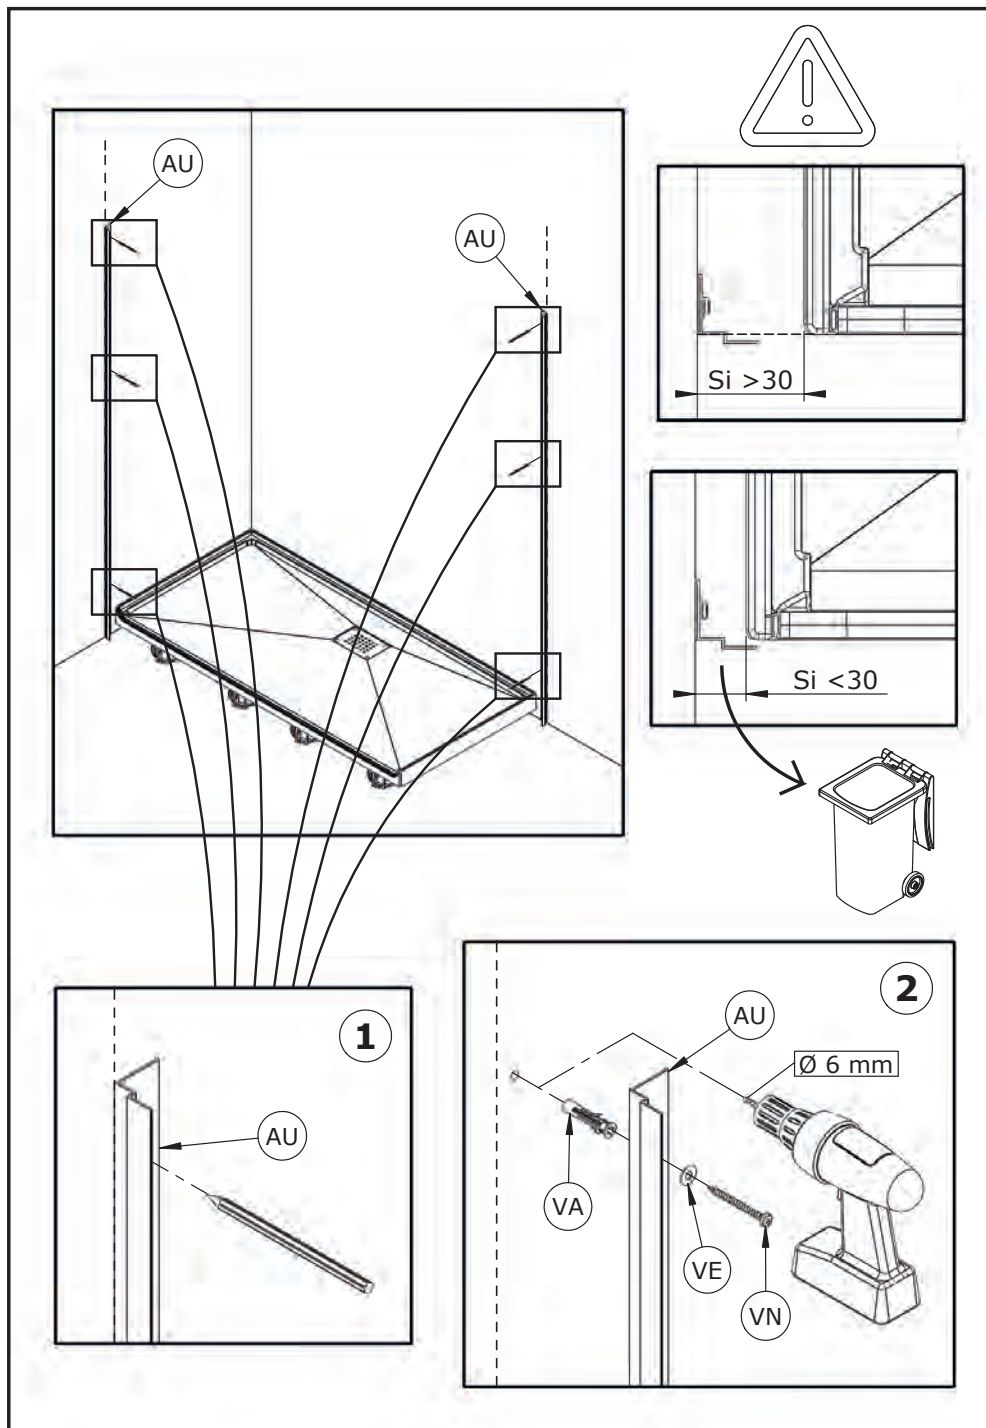


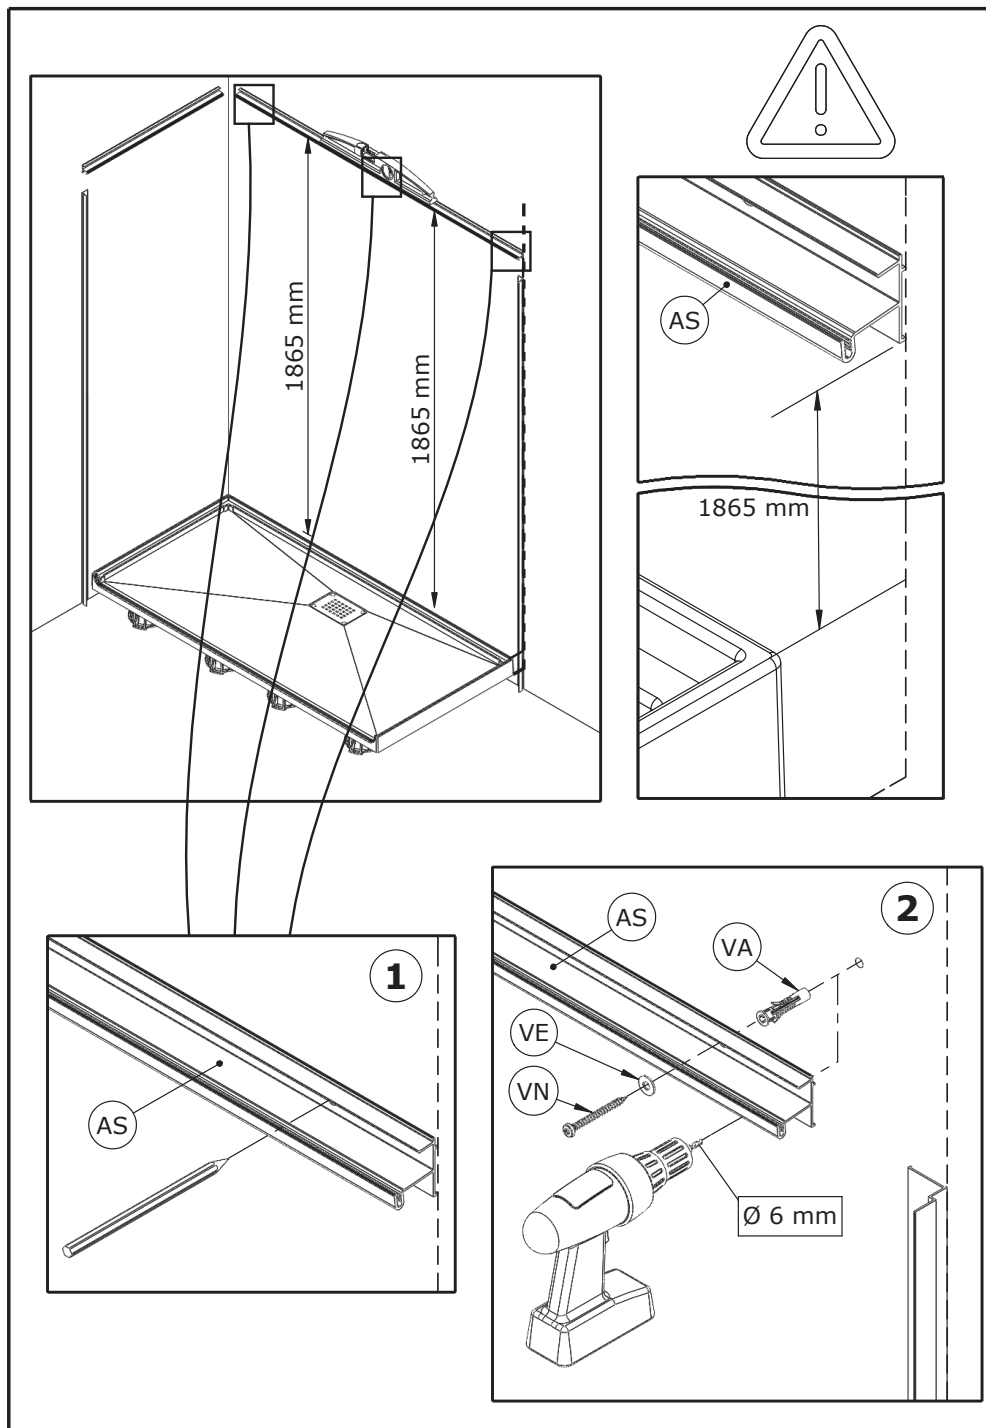


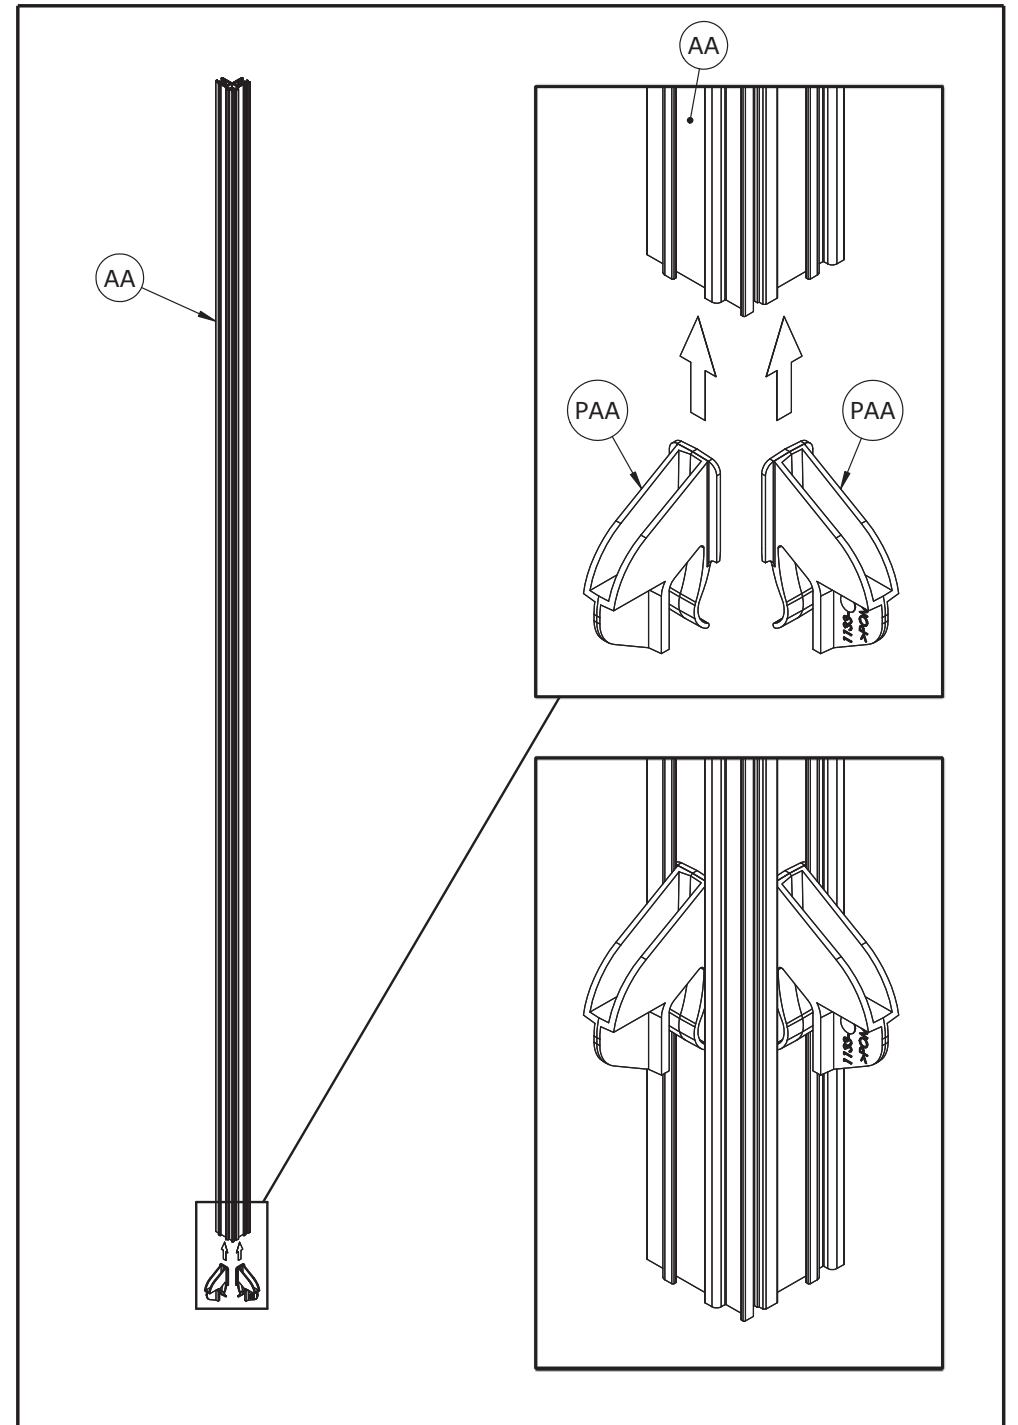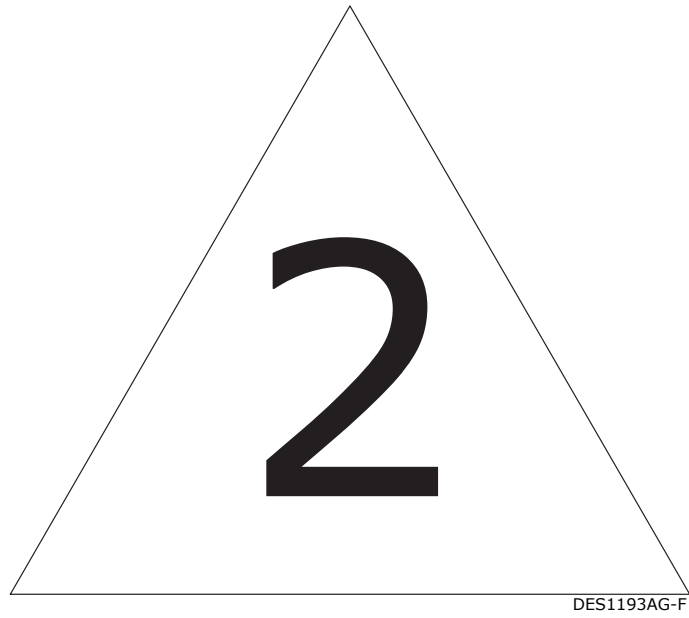


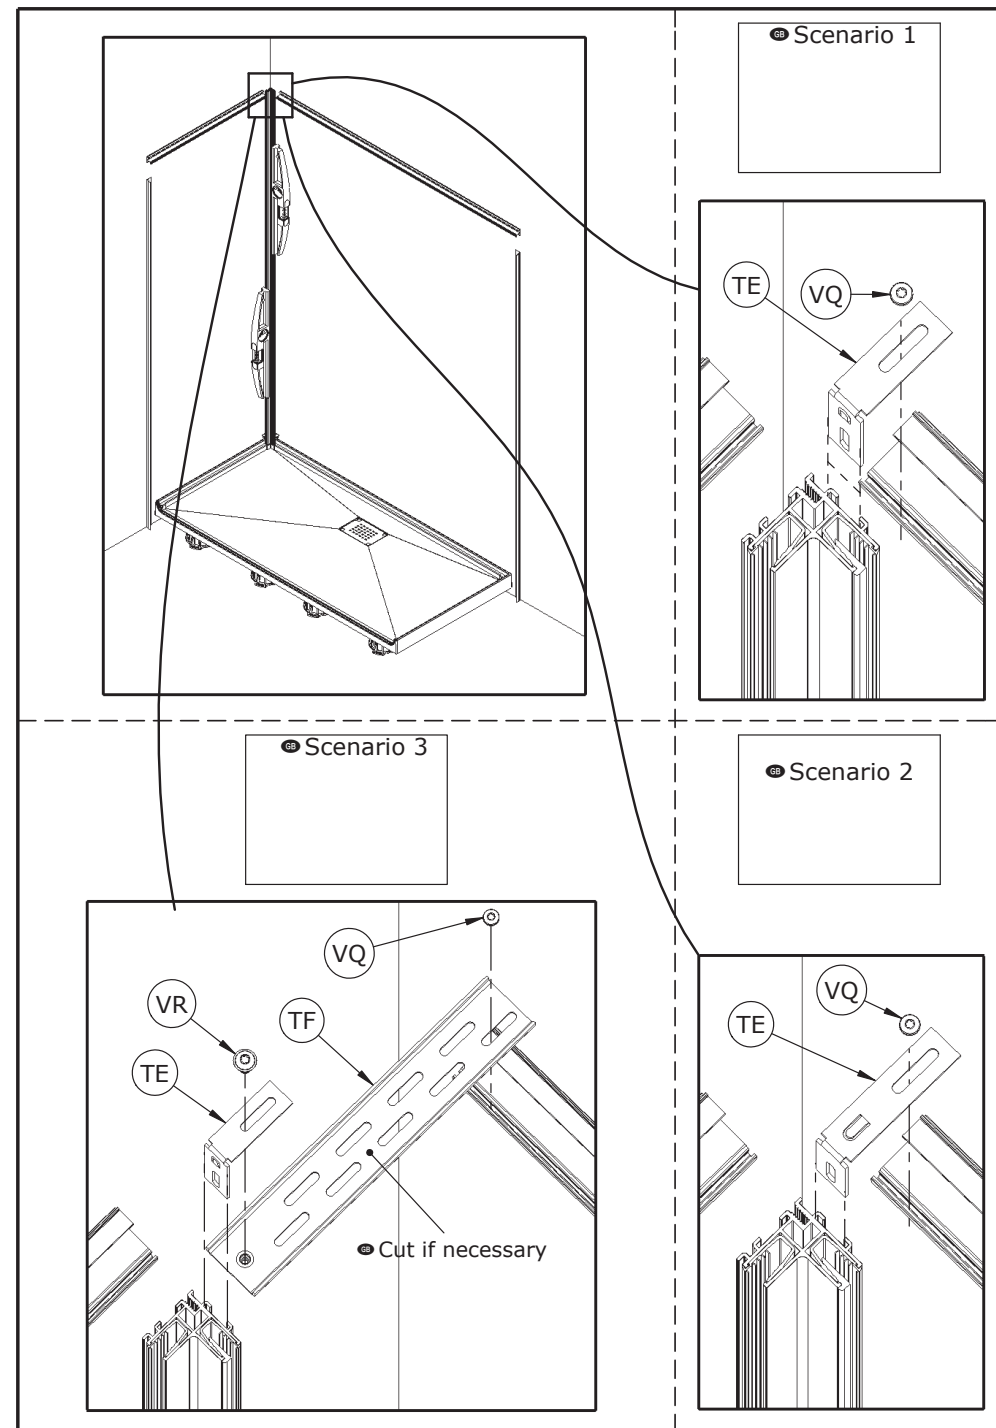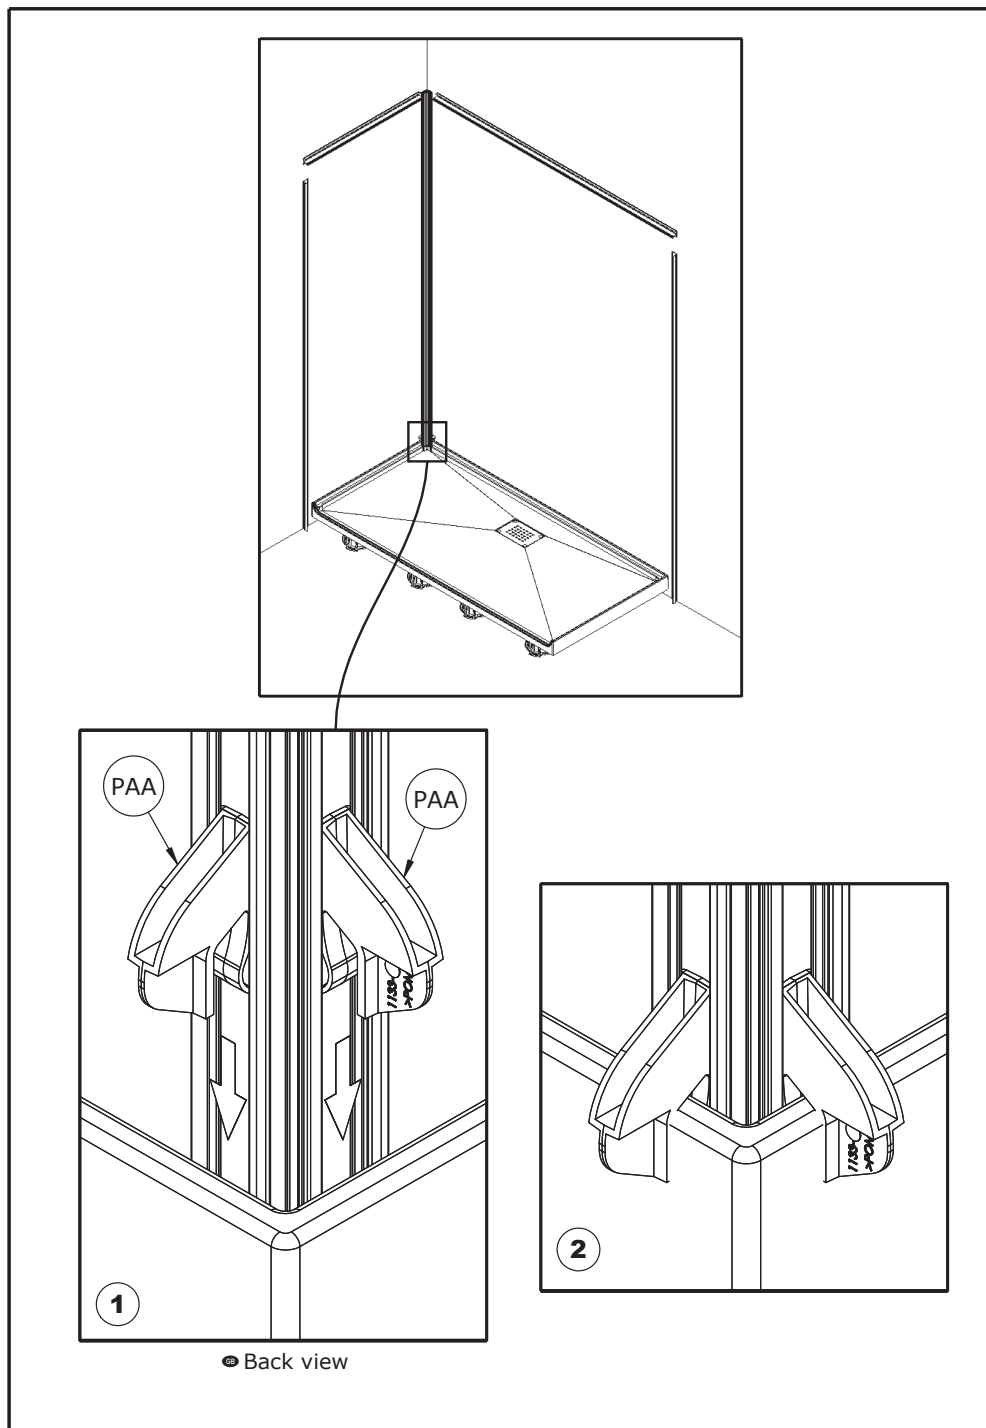




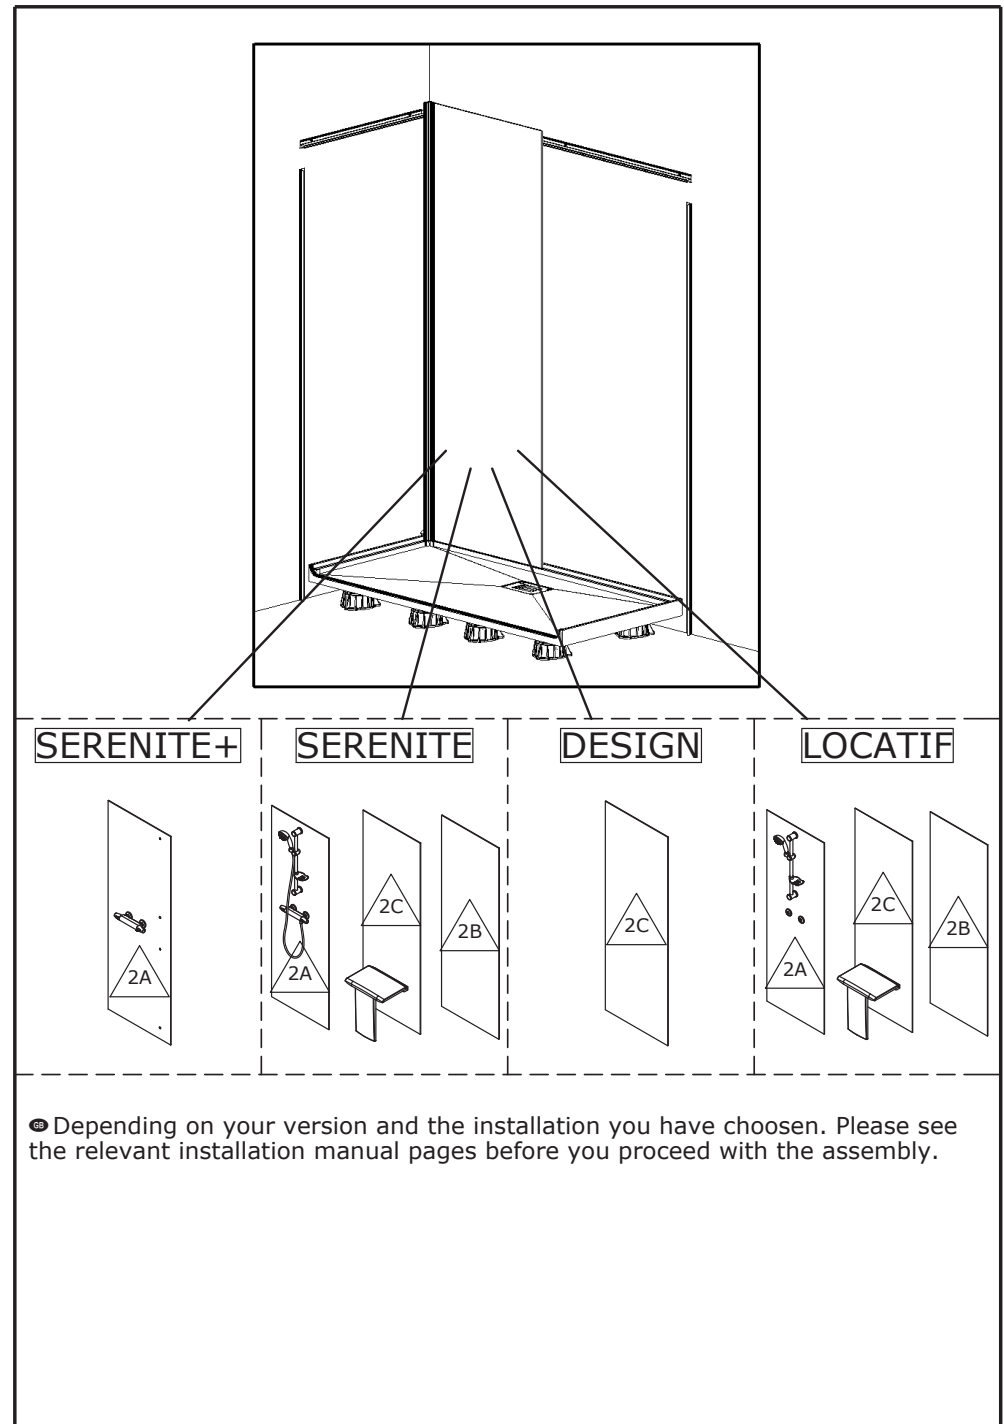
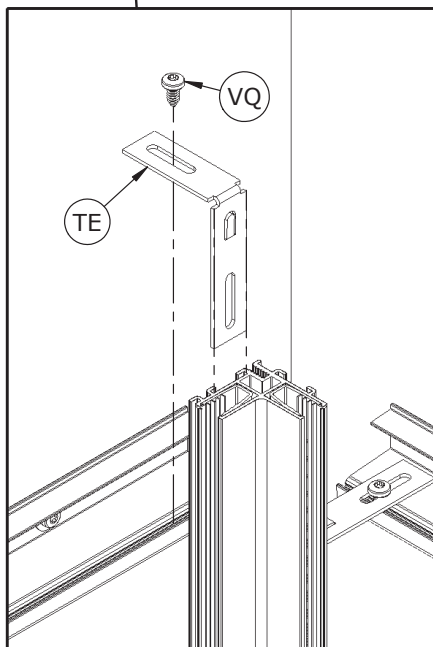
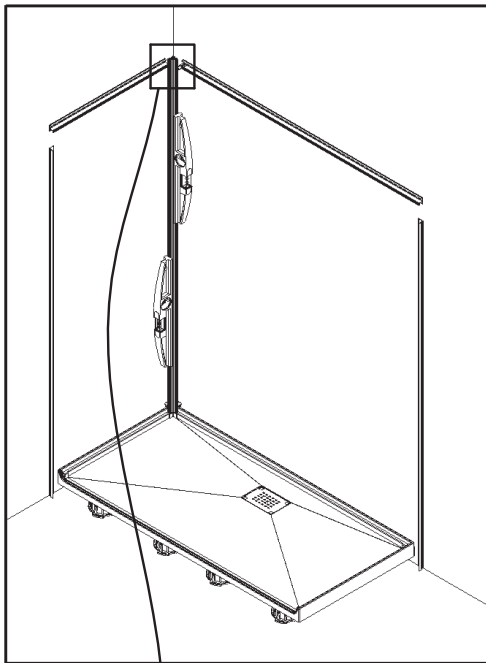


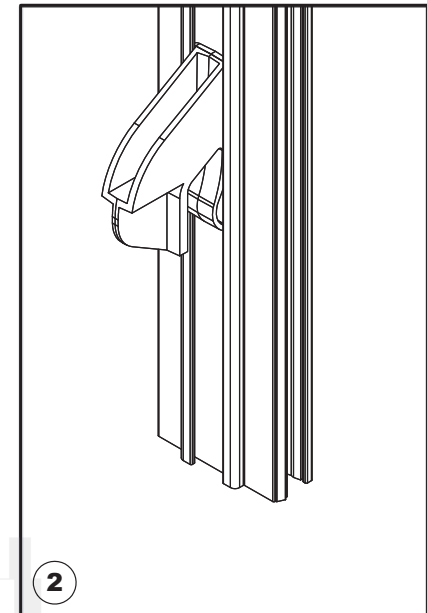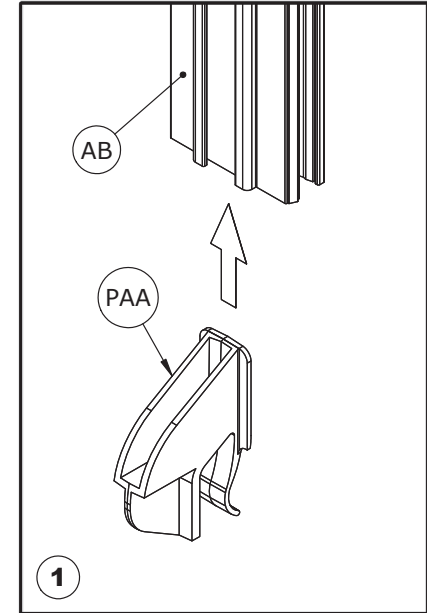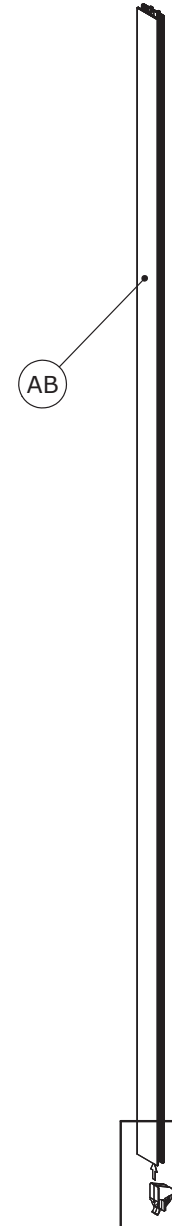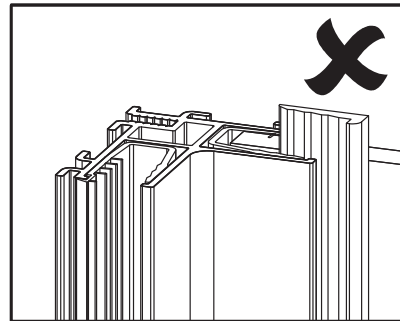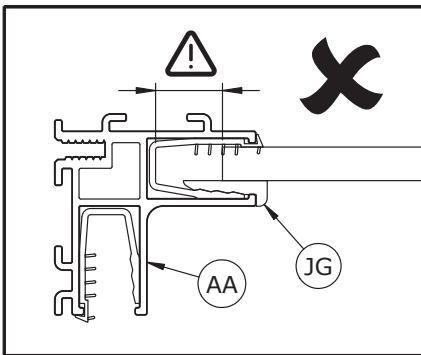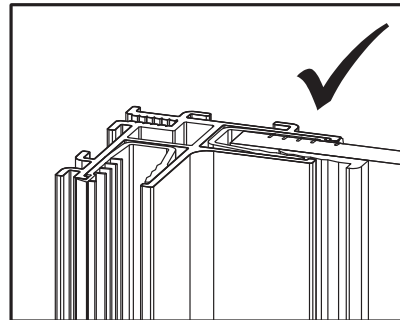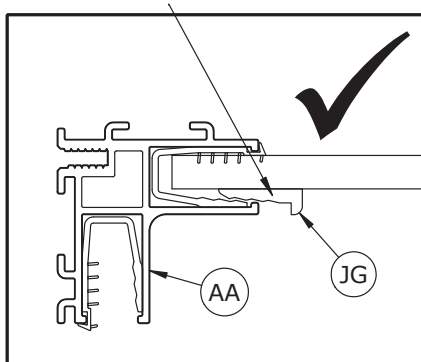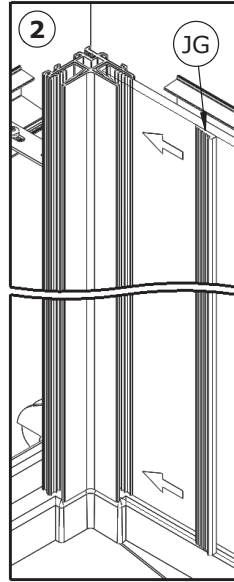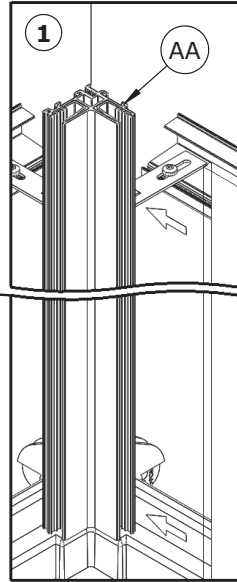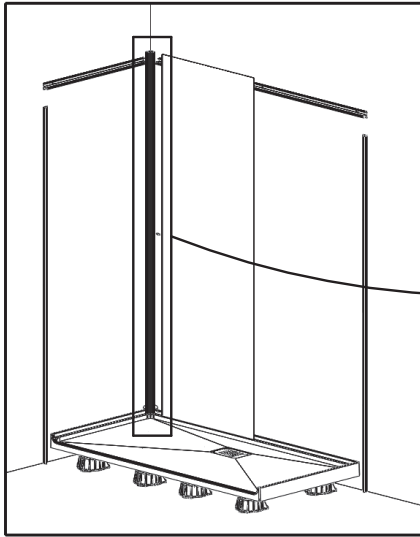

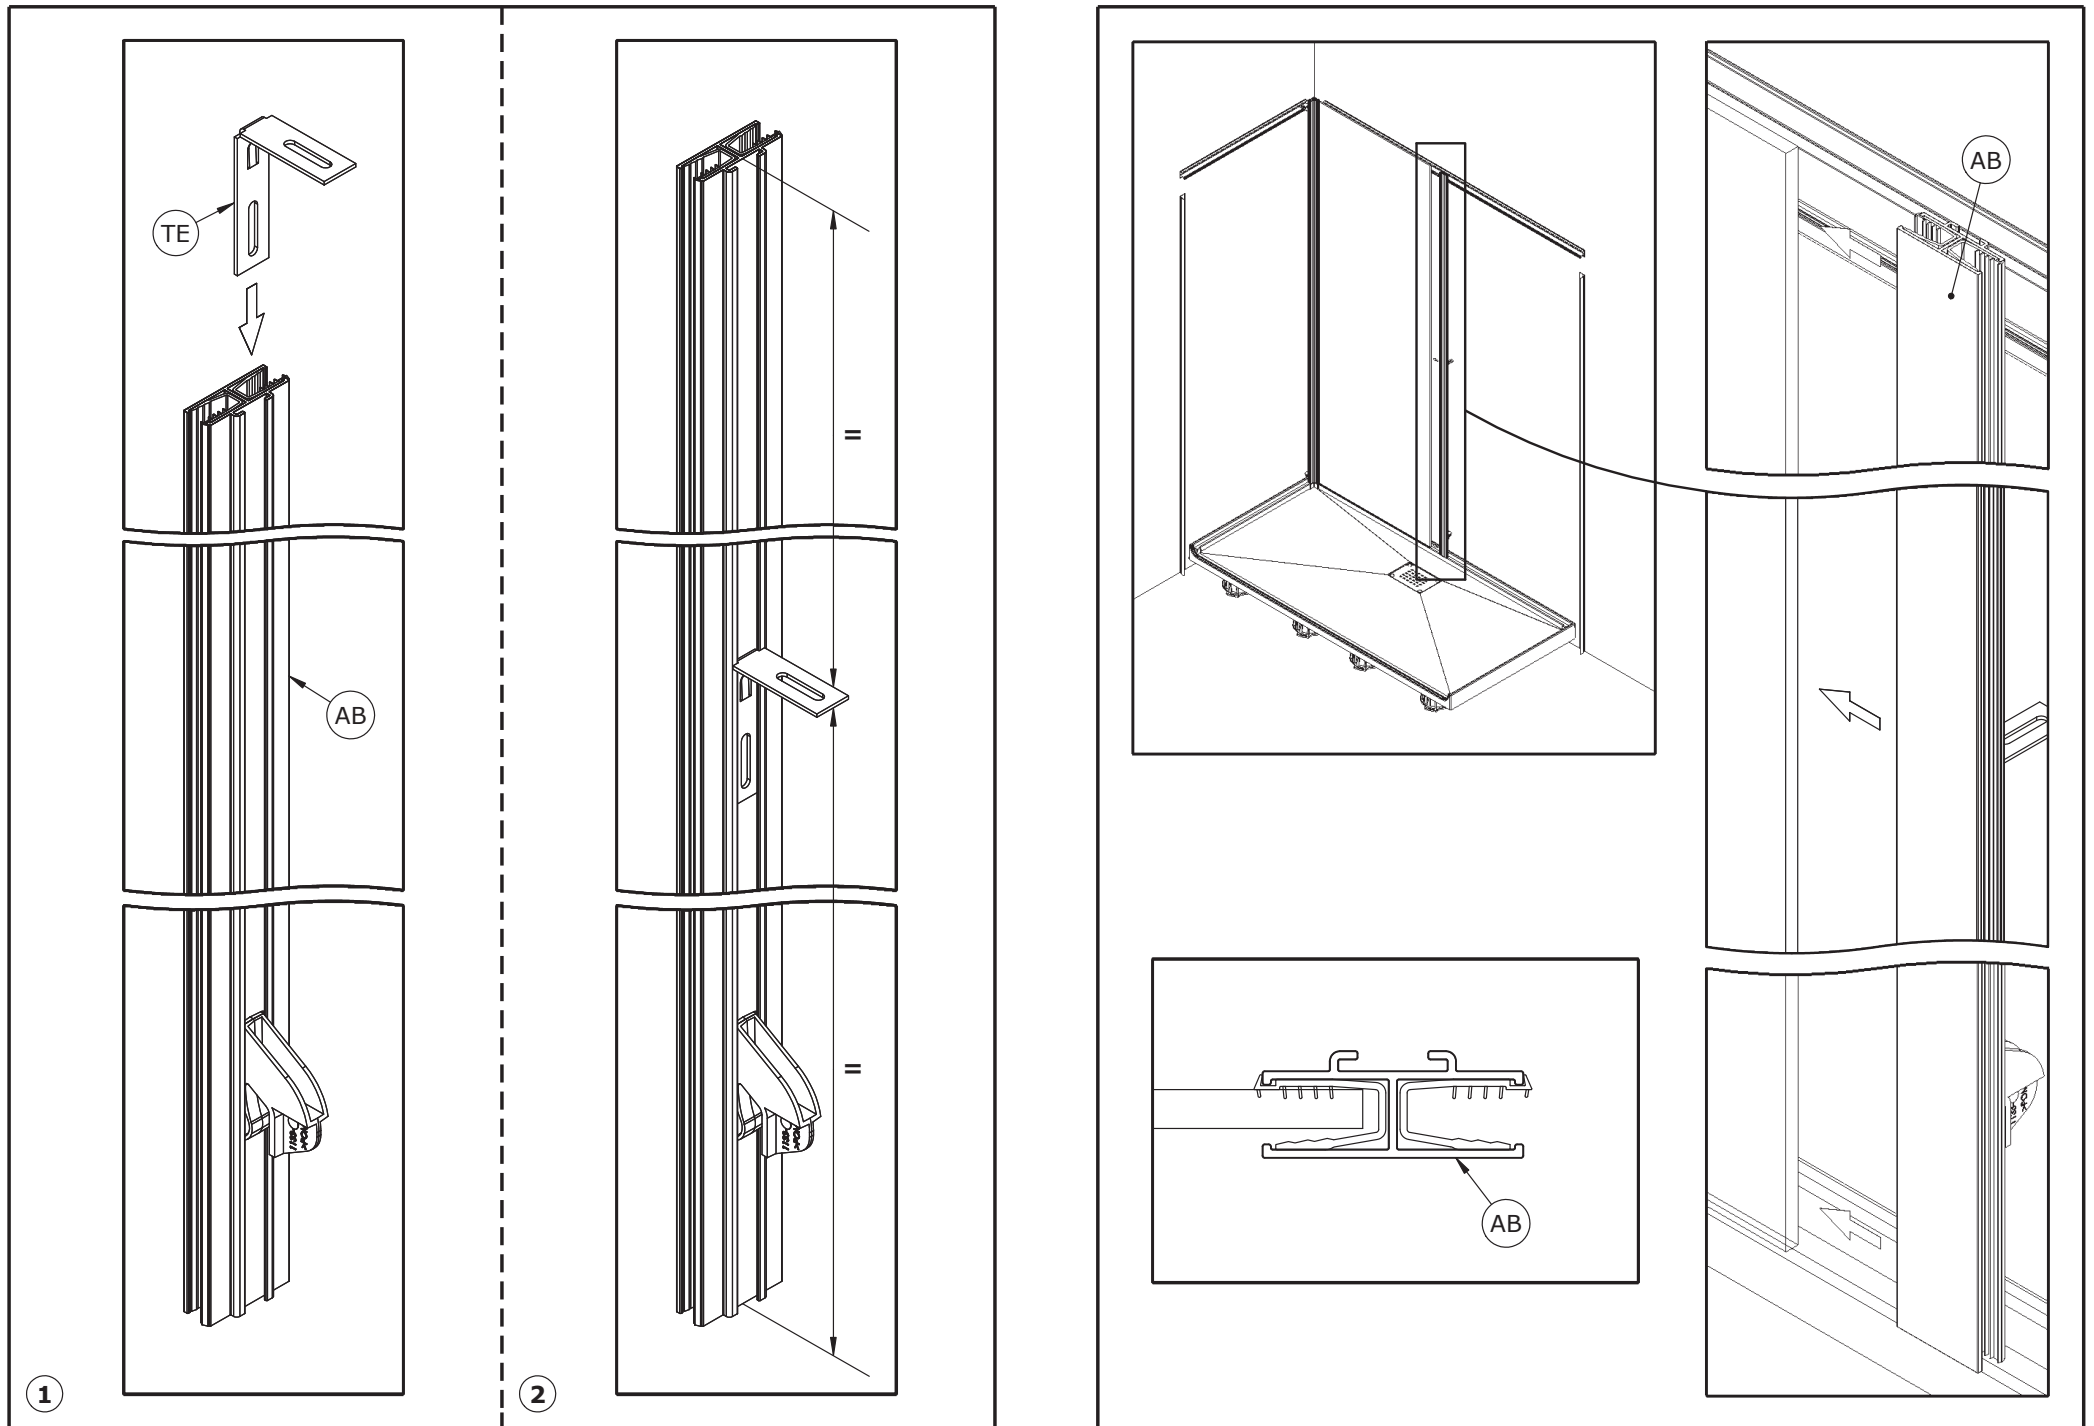







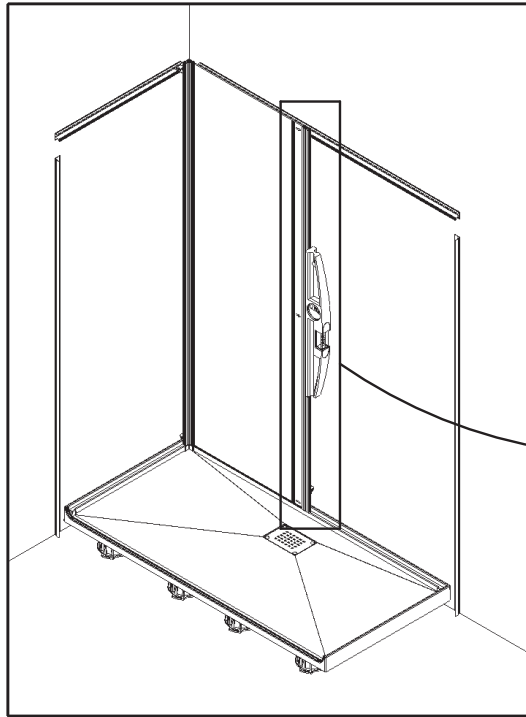



Do not block

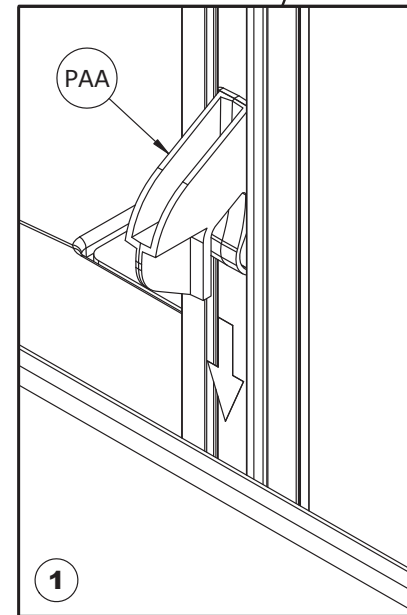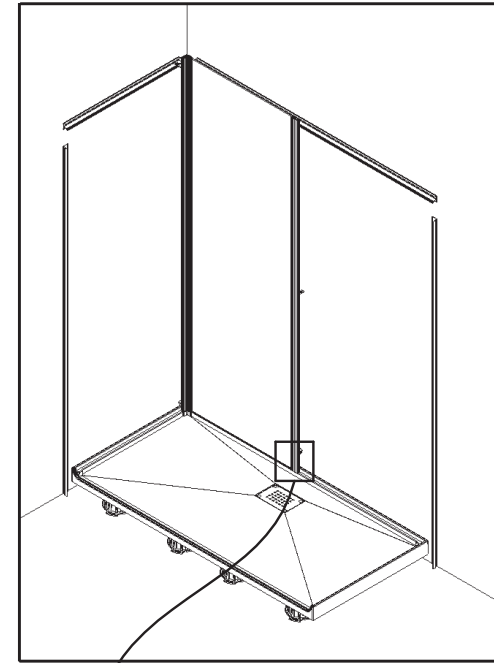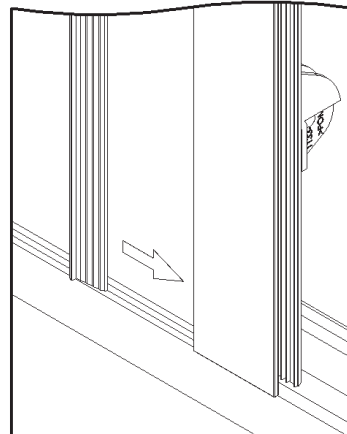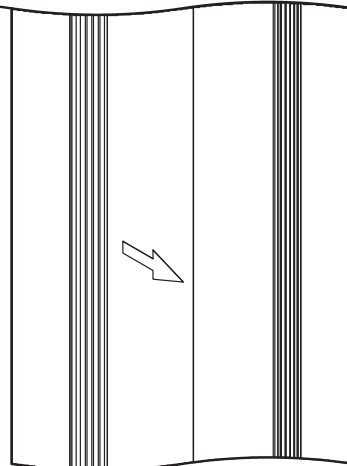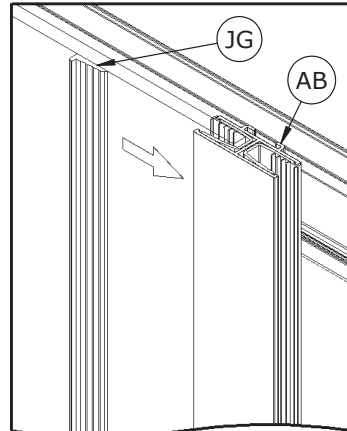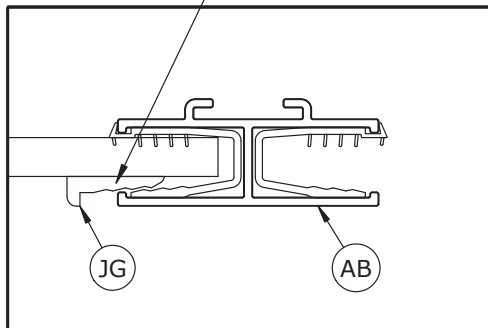

Back view

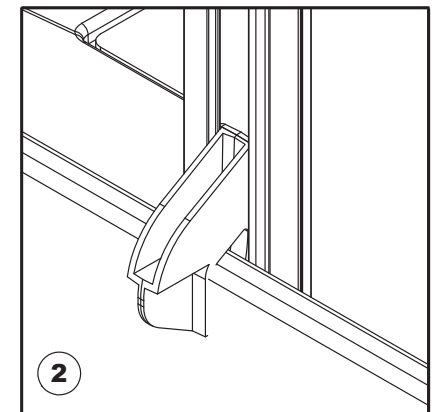

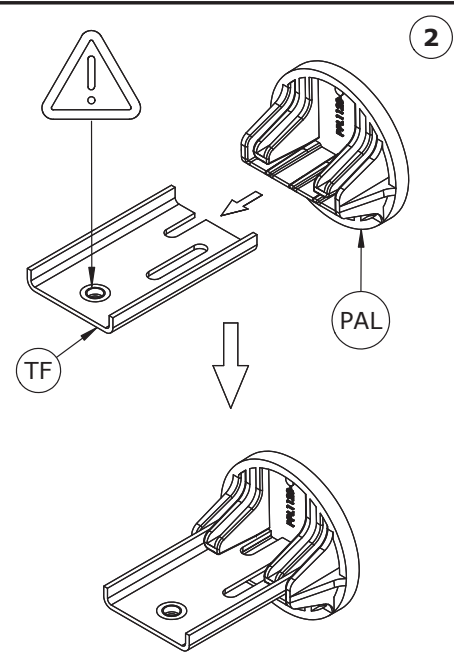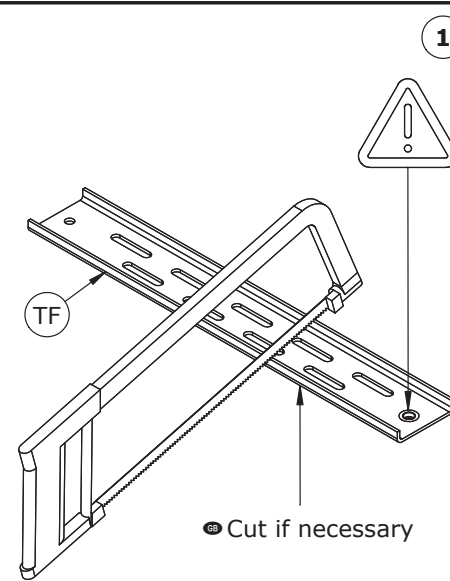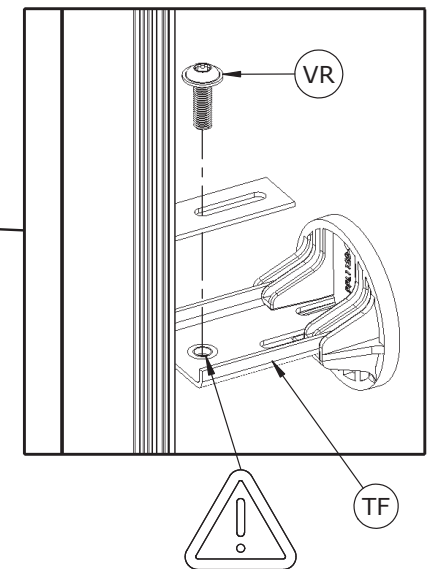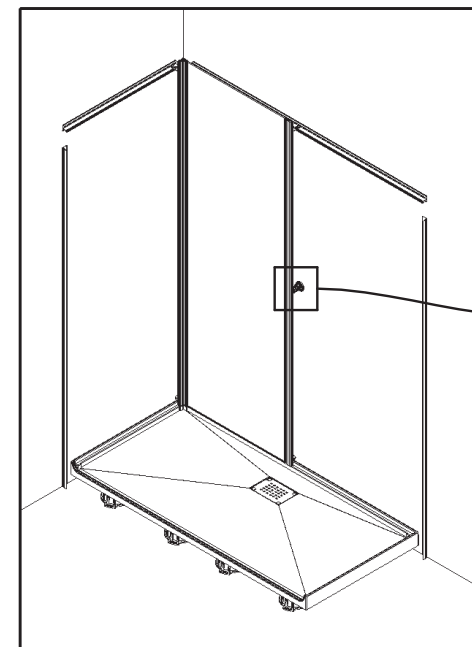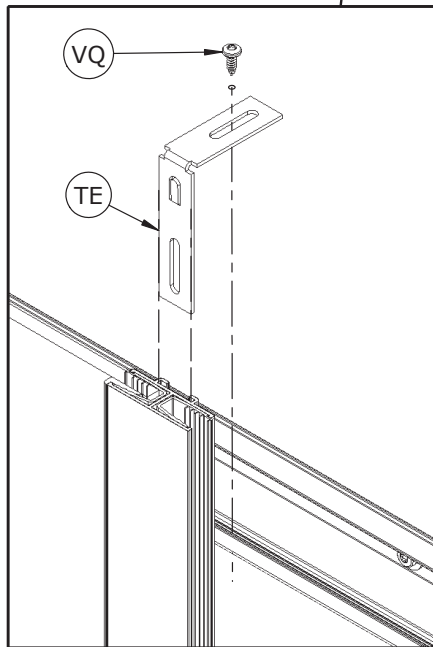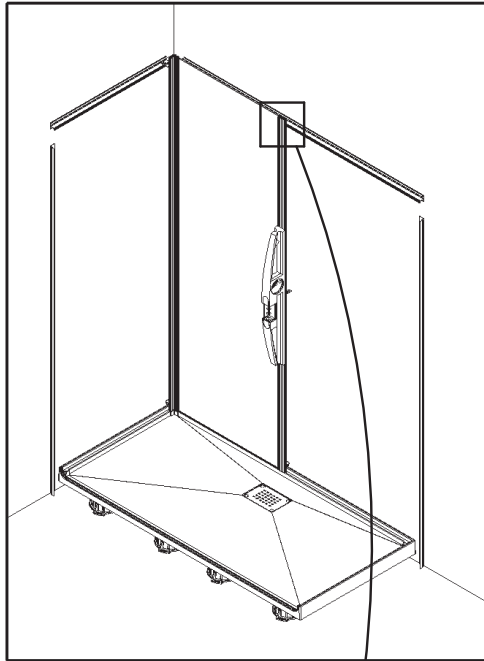



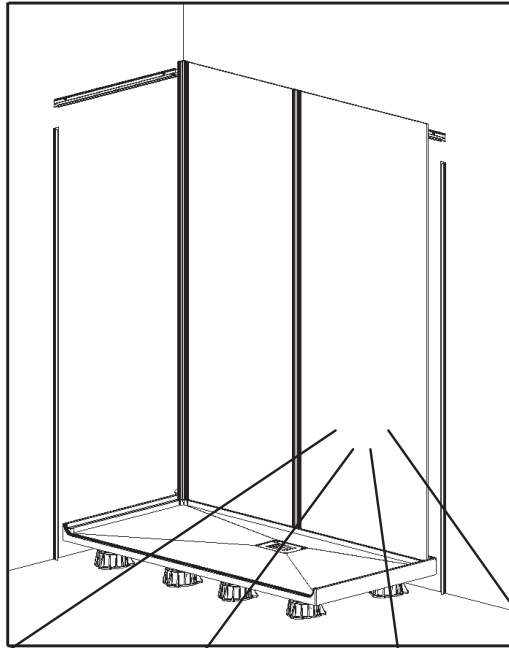


SERENITE+






SERENITE



DESIGN



LOCATIF

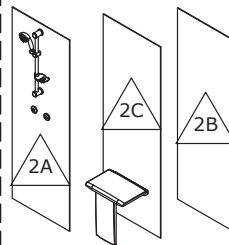
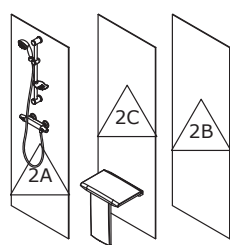



ⓘ Depending on your version and the installation you have chosen. Please see the relevant installation manual pages before you proceed with the assembly.

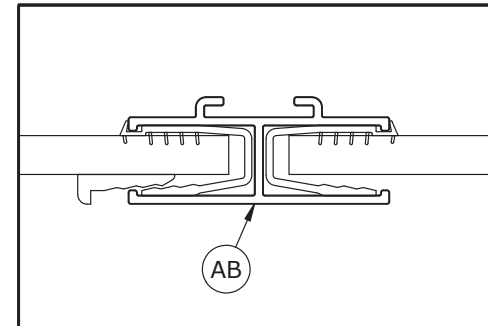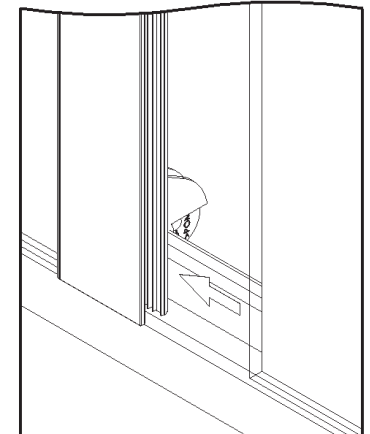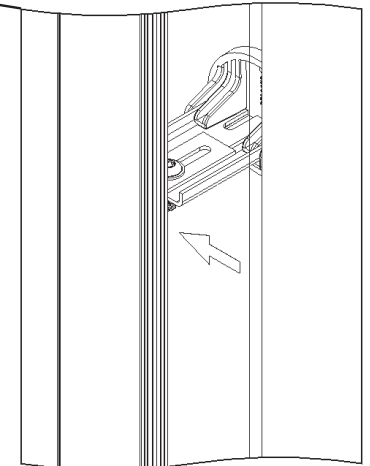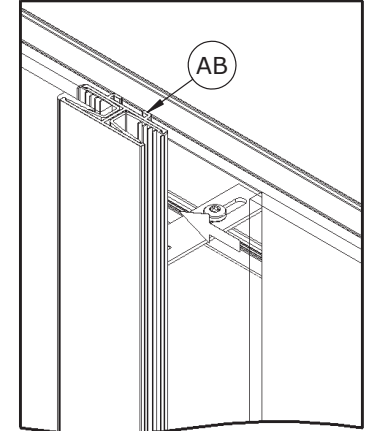
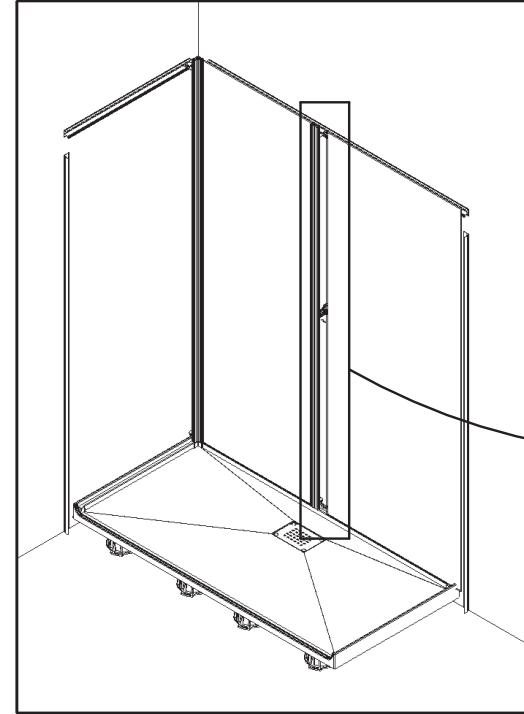


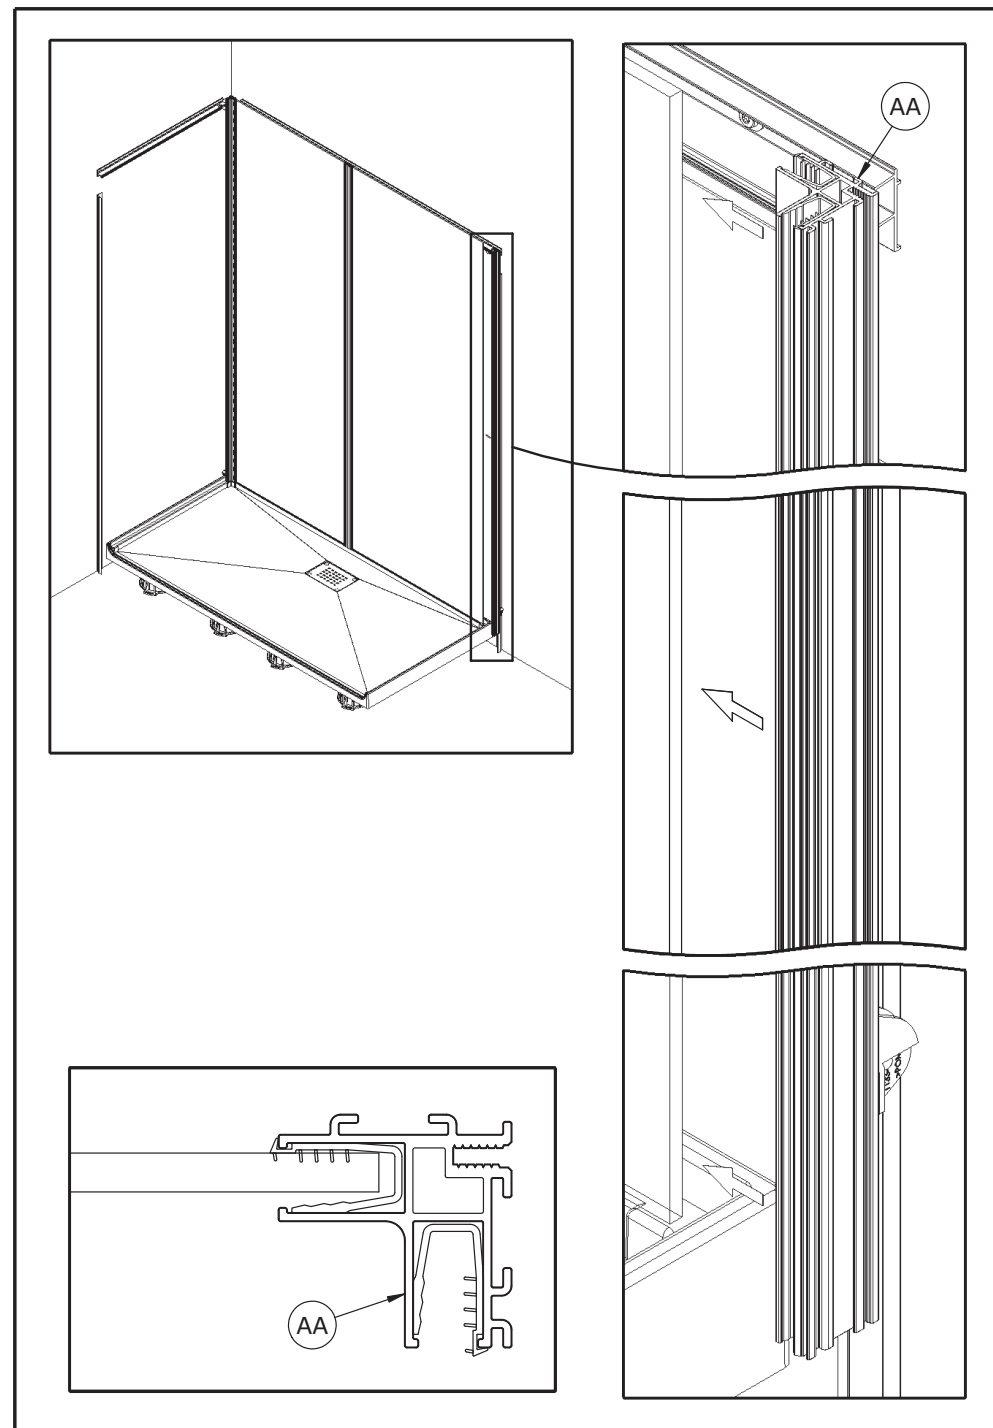
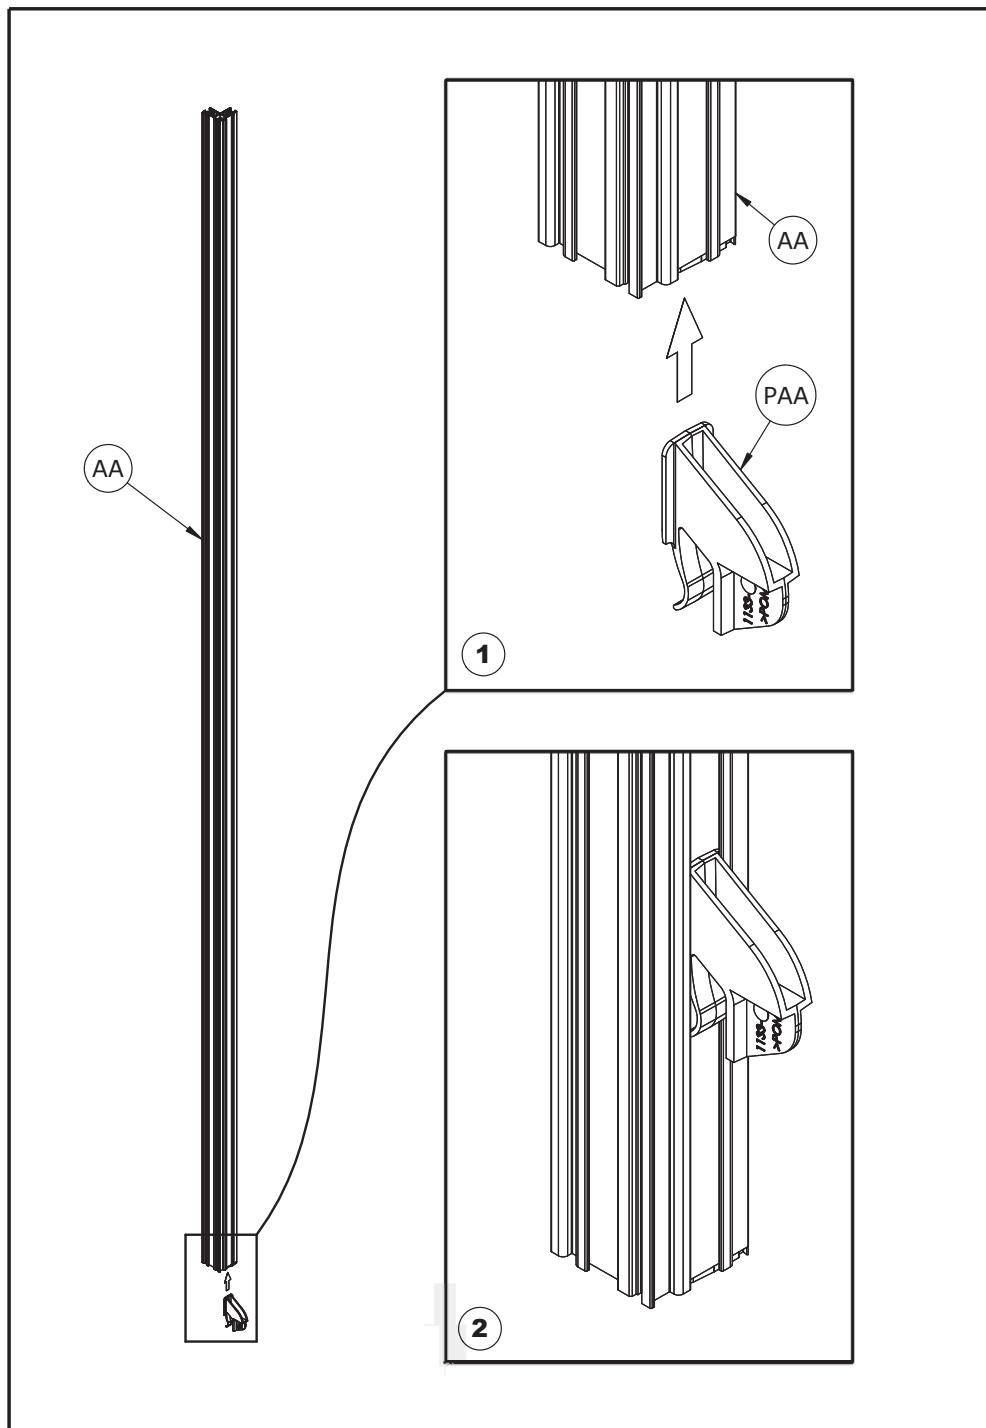


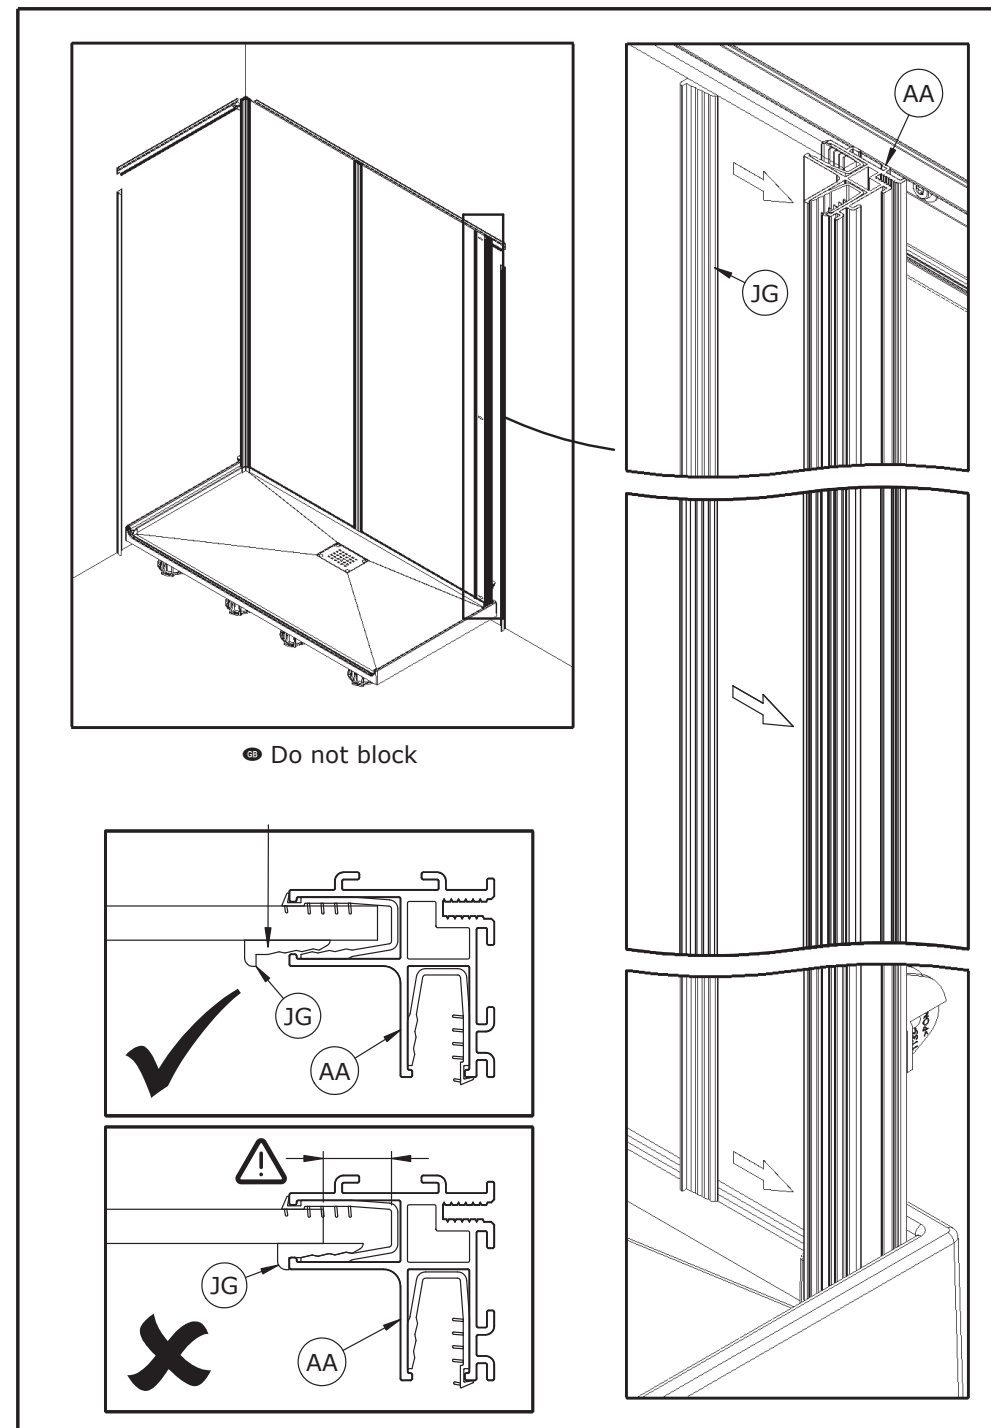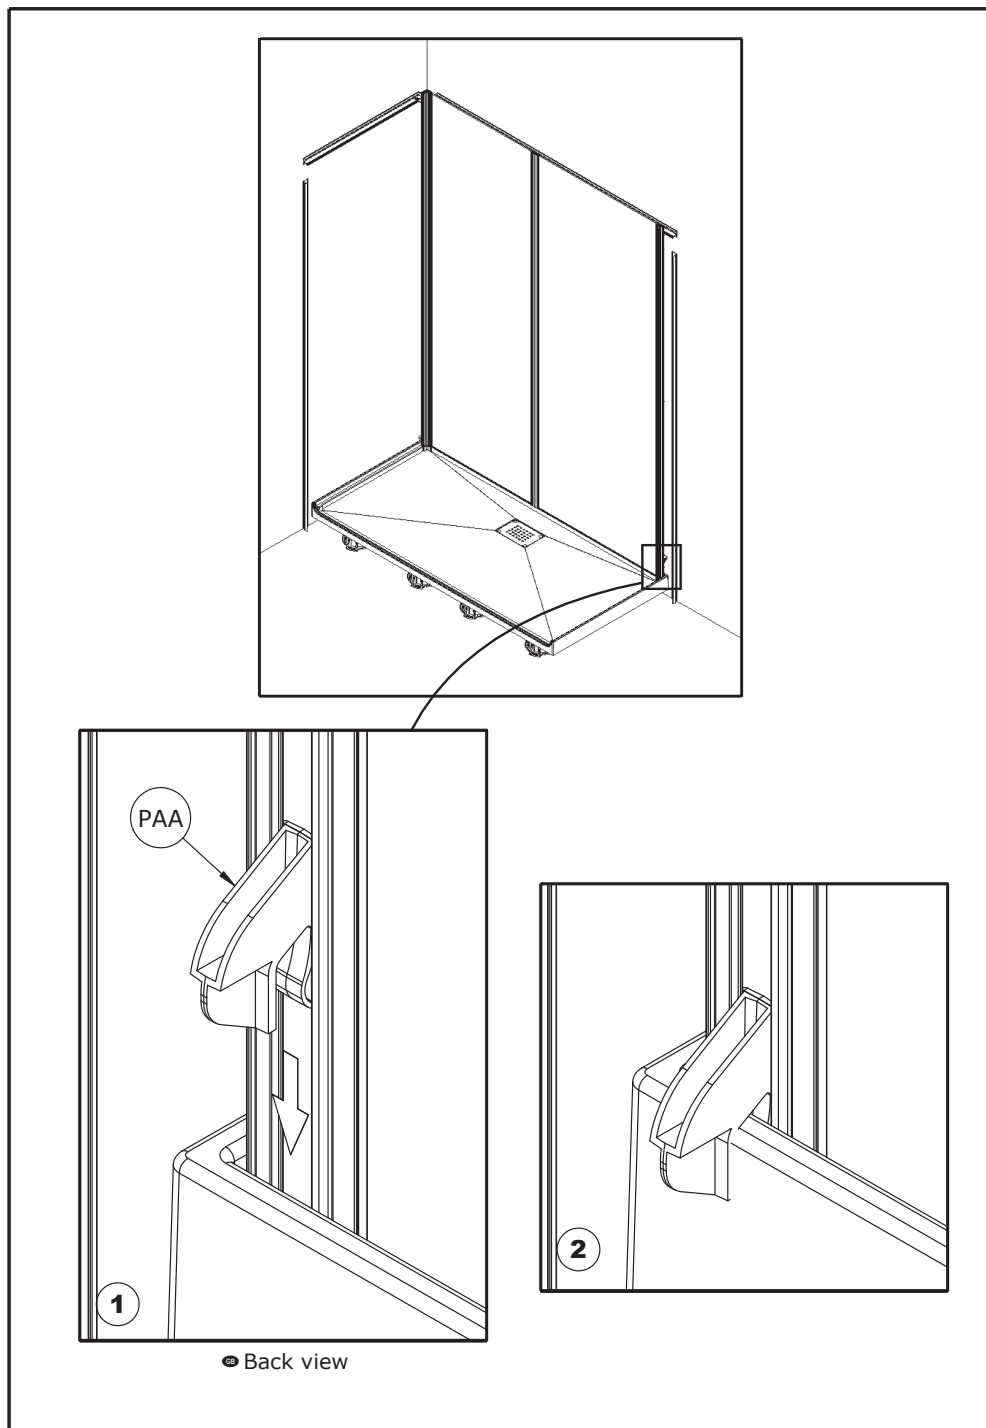


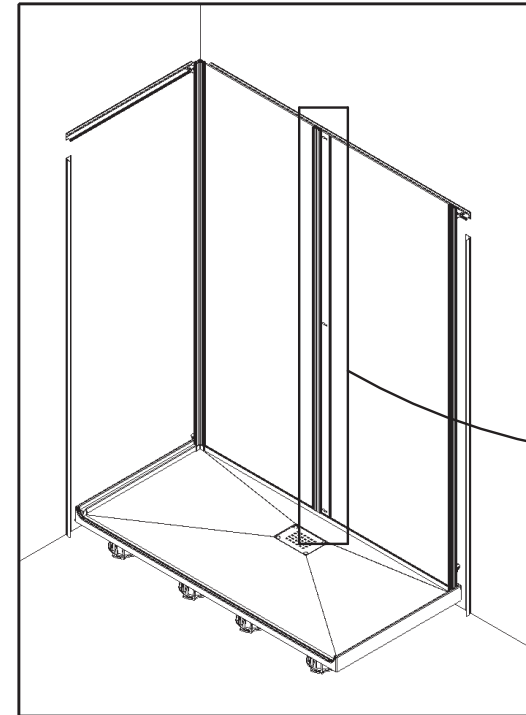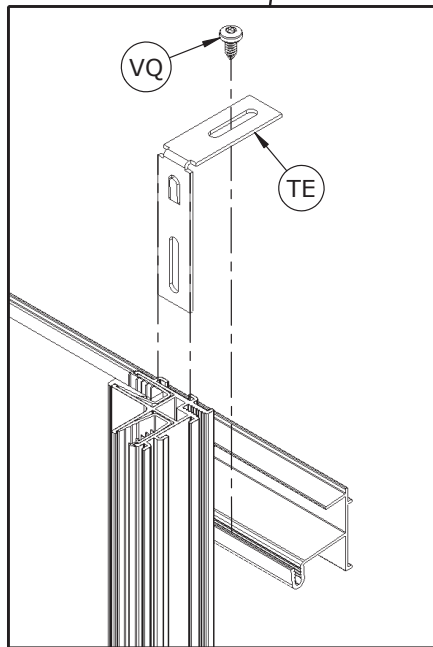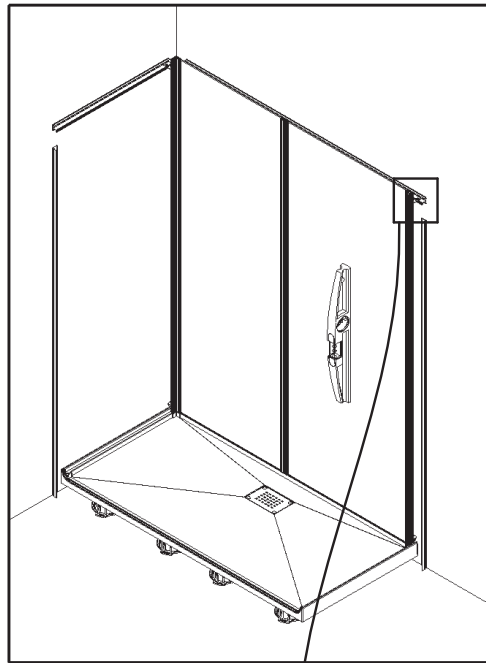







Do not block

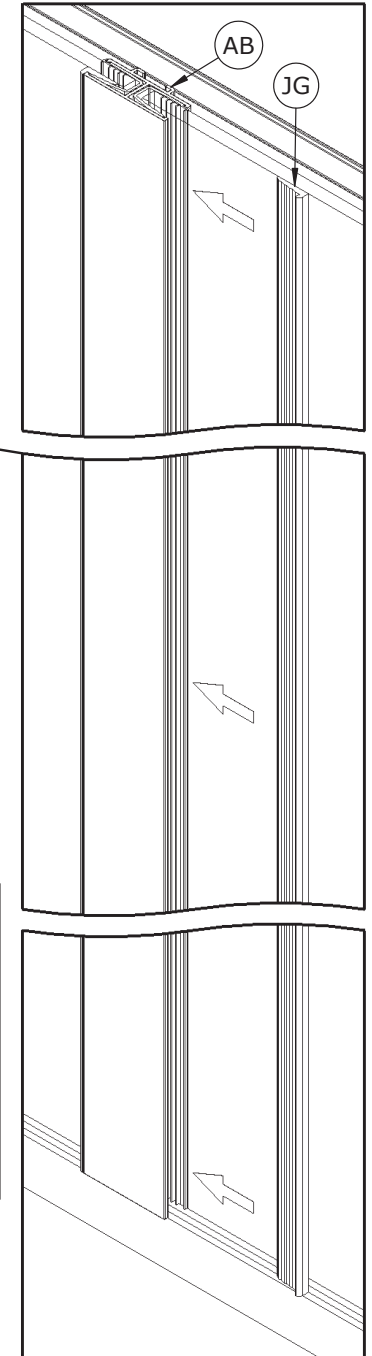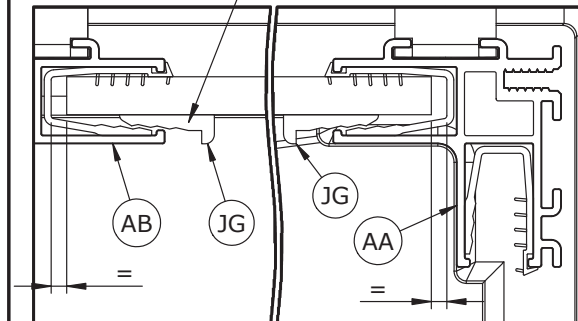

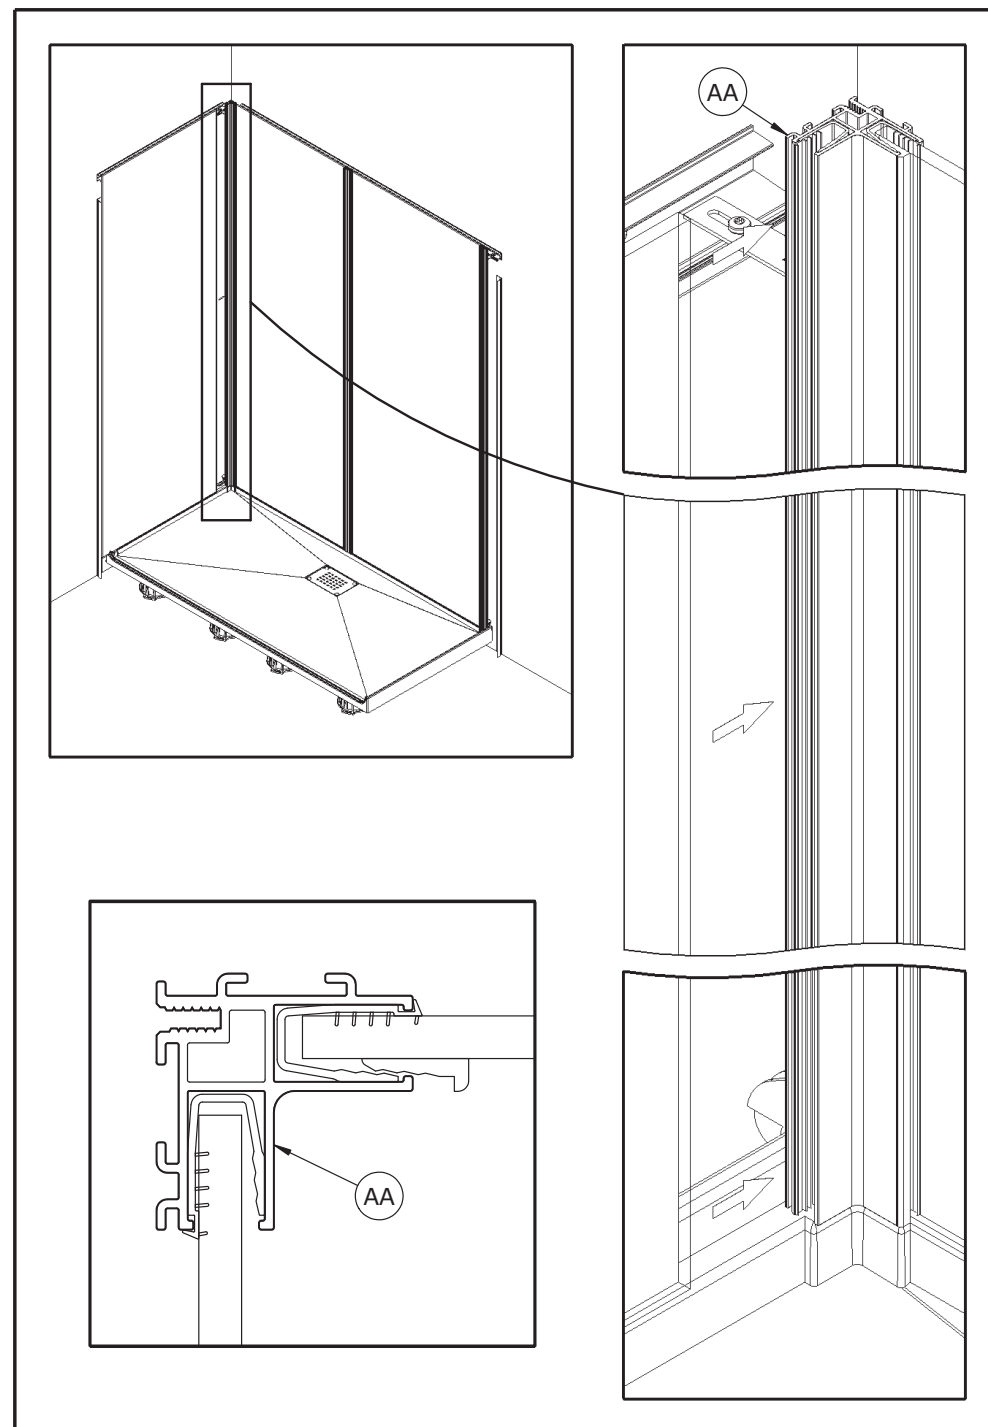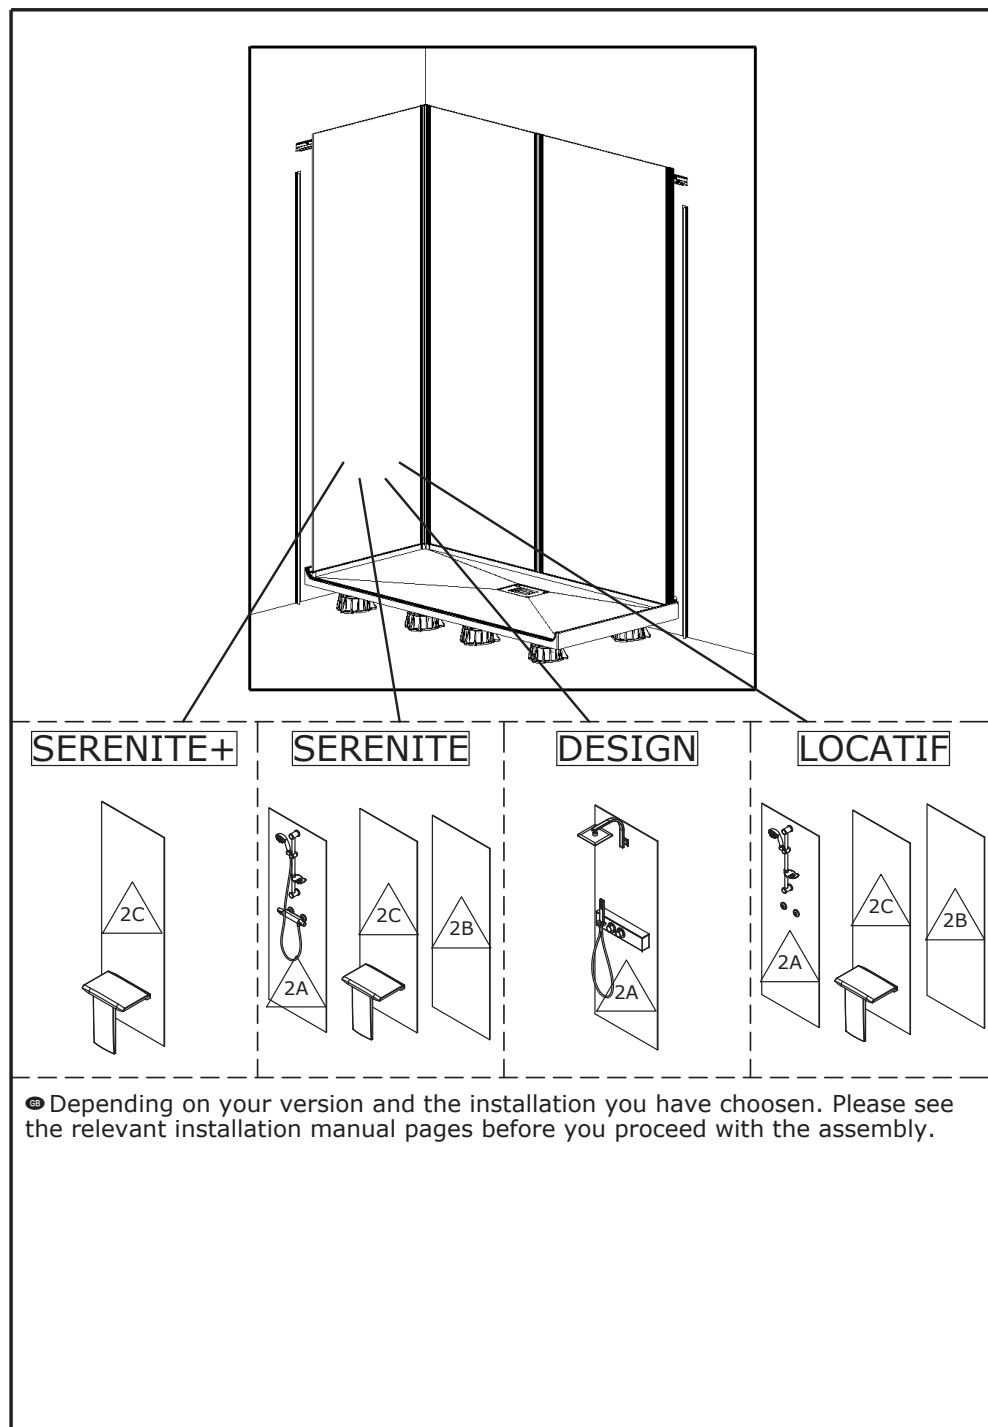


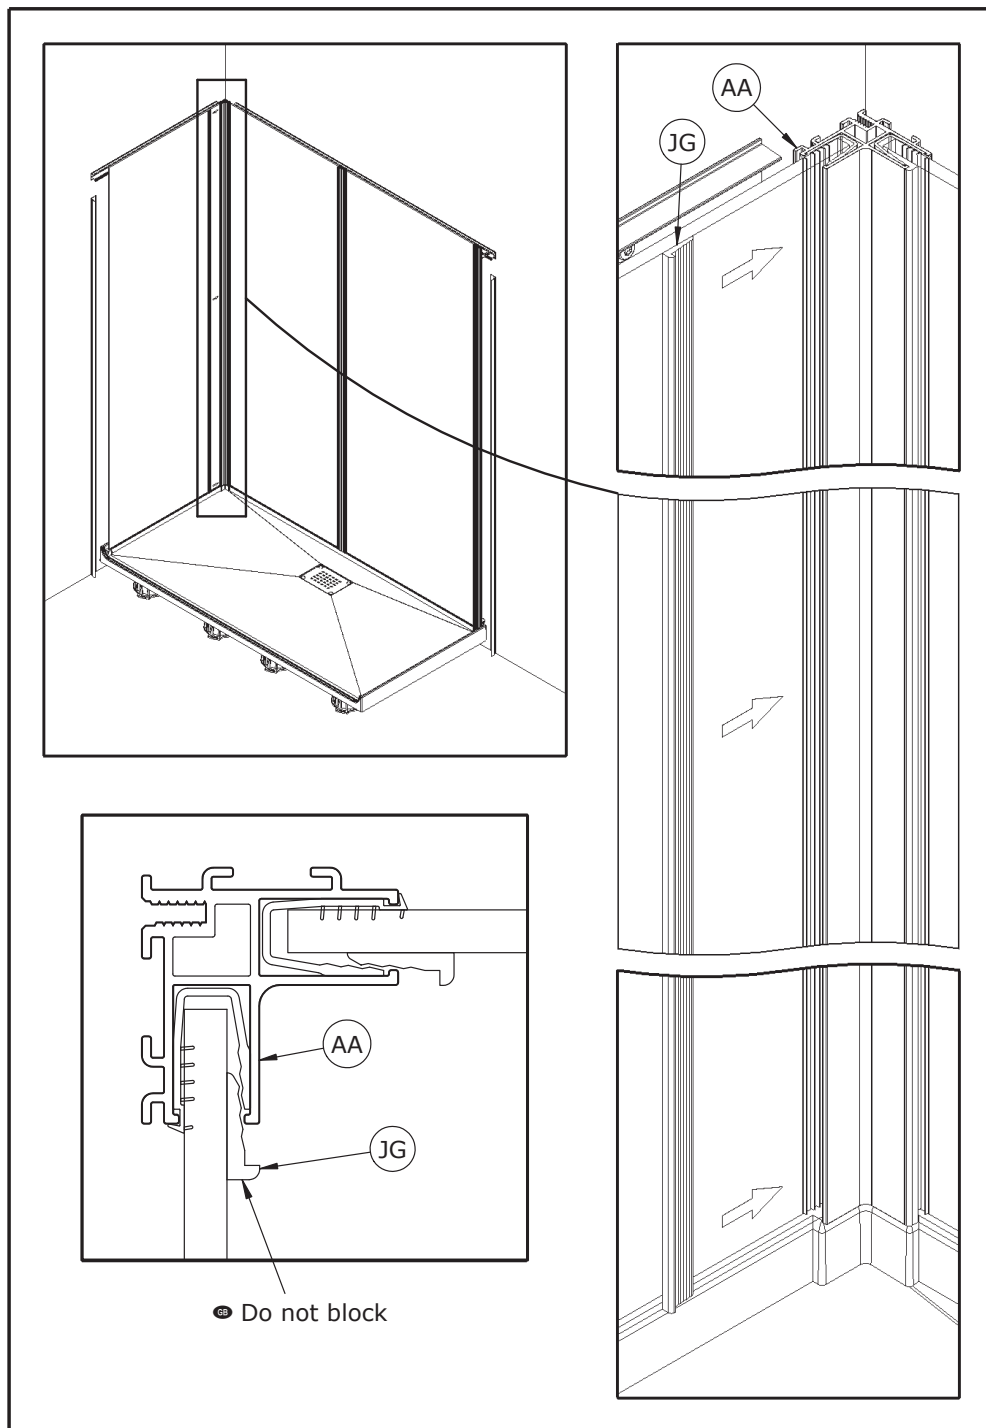

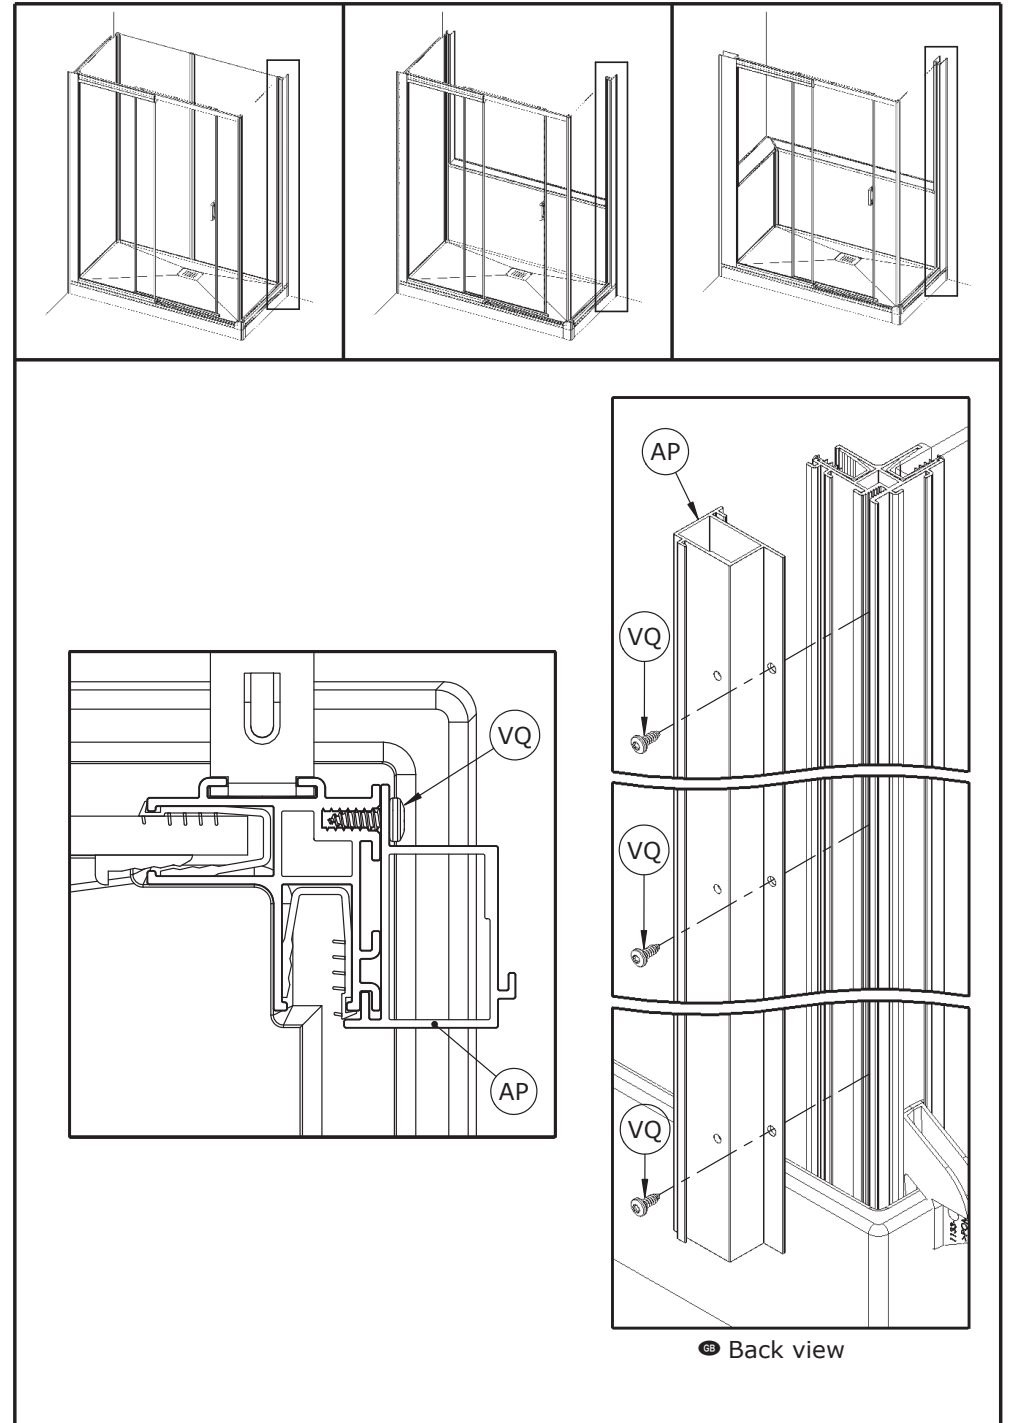


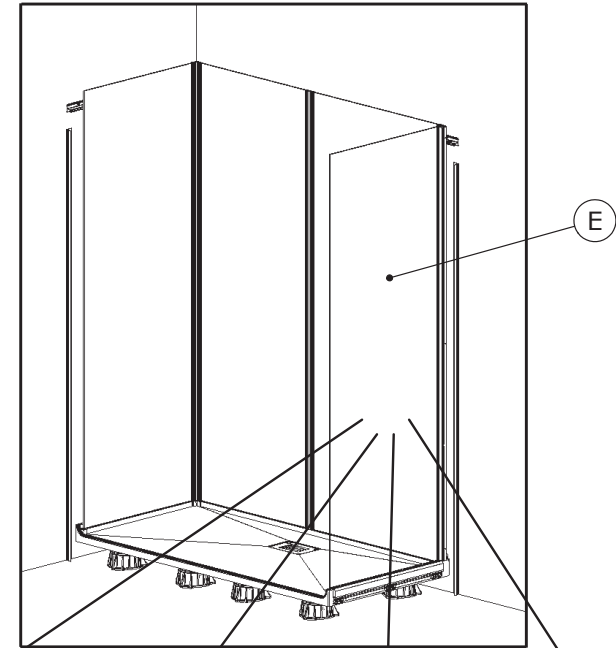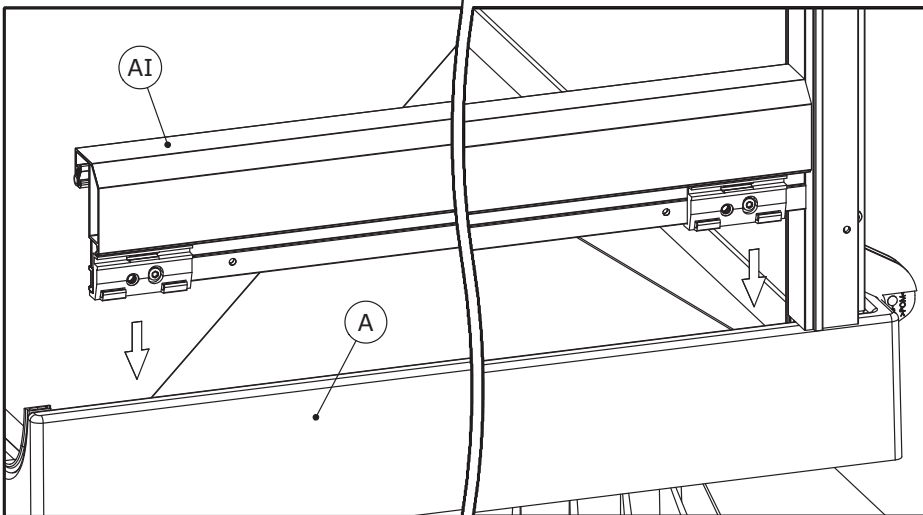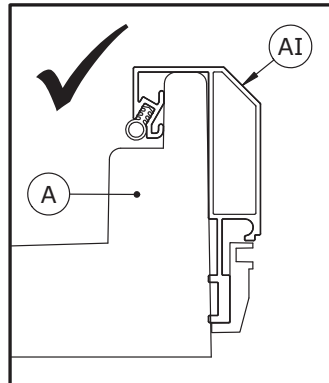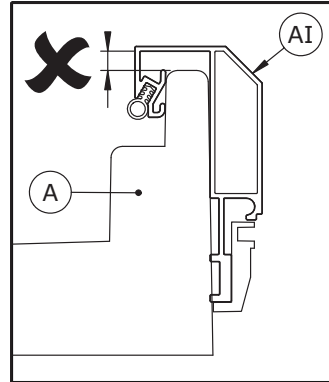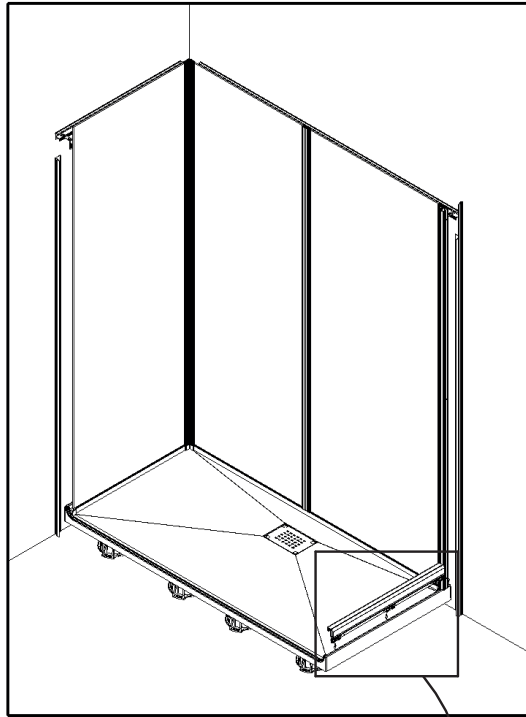


SERENITE+




SERENITE





DESIGN




LOCATIF




Ⓔ Depending on your version and the installation you have chosen. Please see the relevant installation manual pages before you proceed with the assembly.

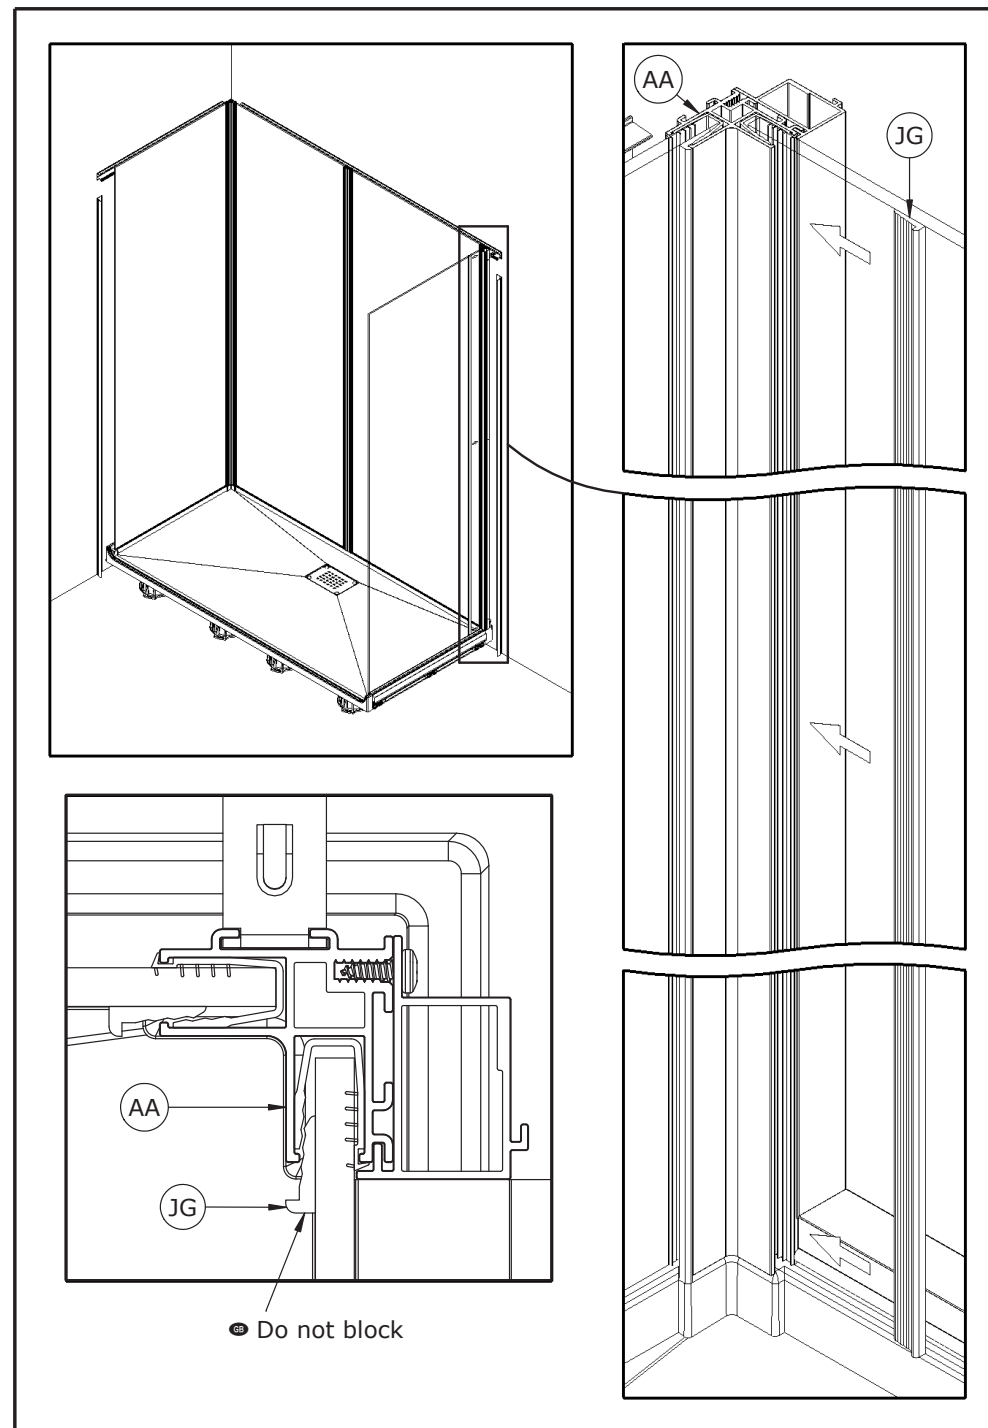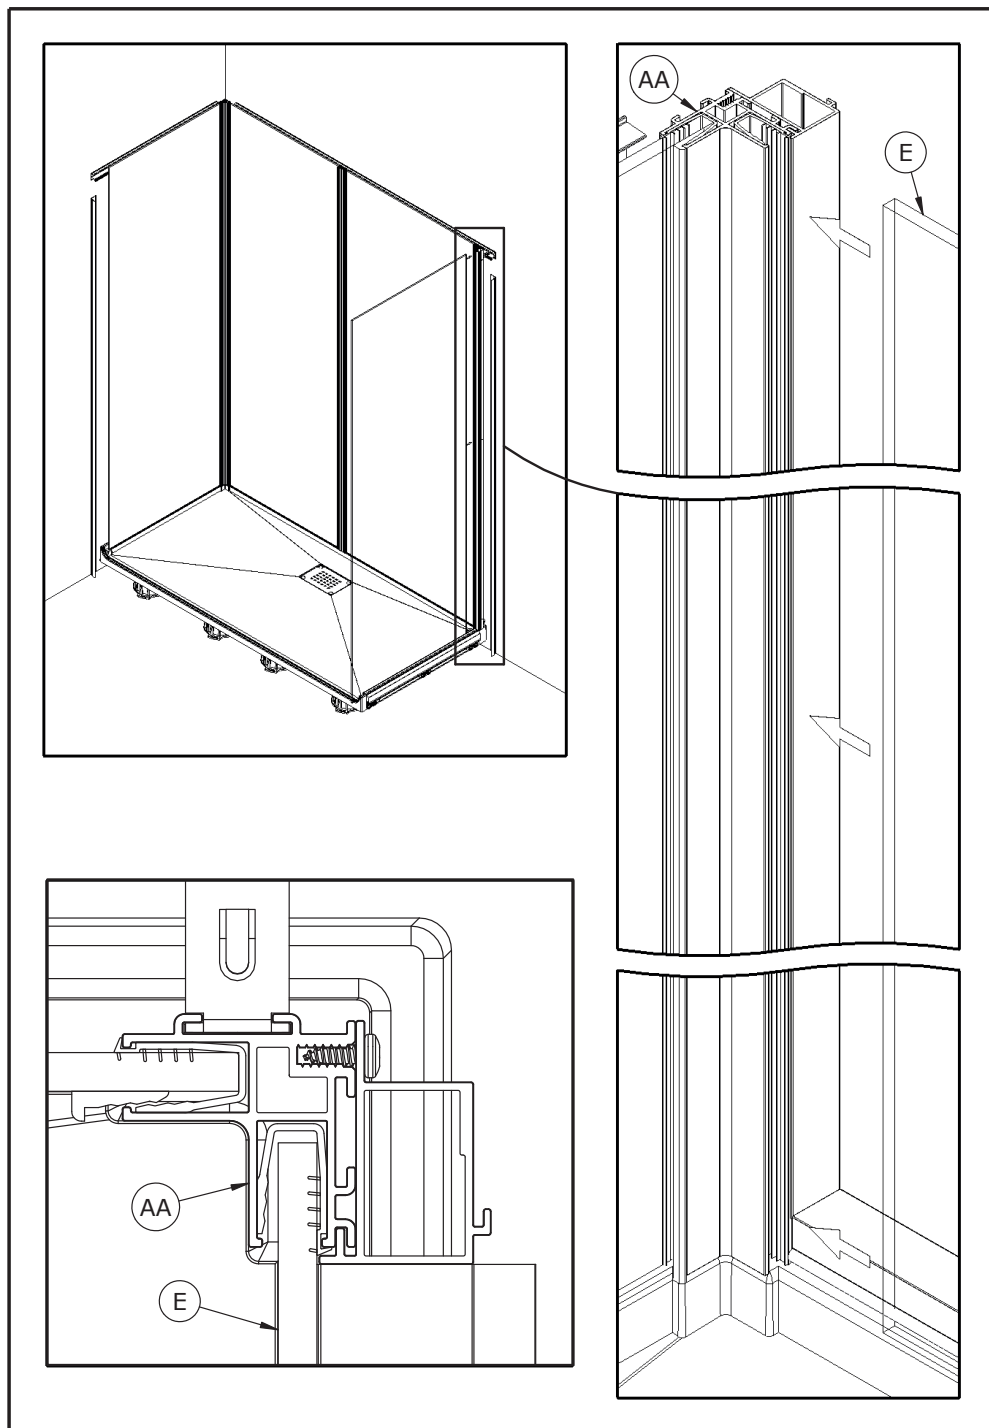



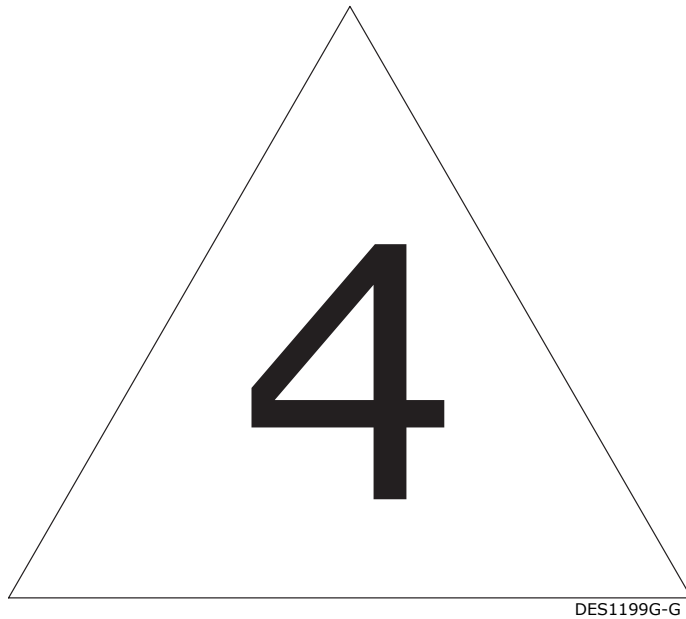




CORNER version


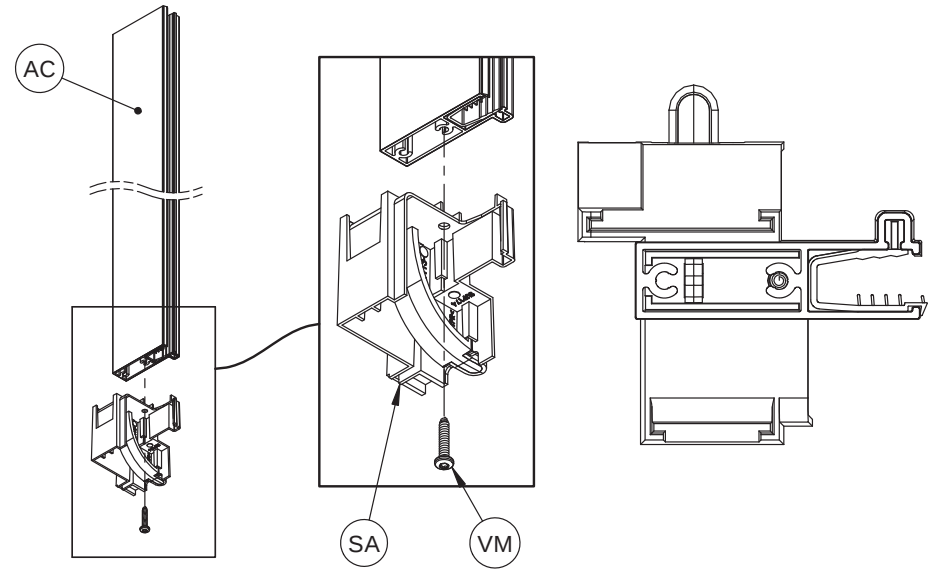


RECESS version




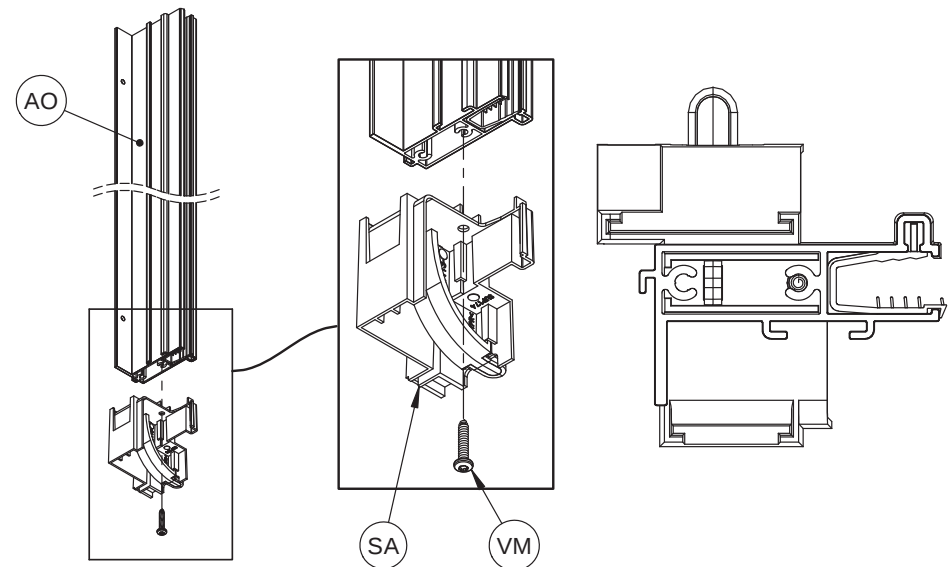


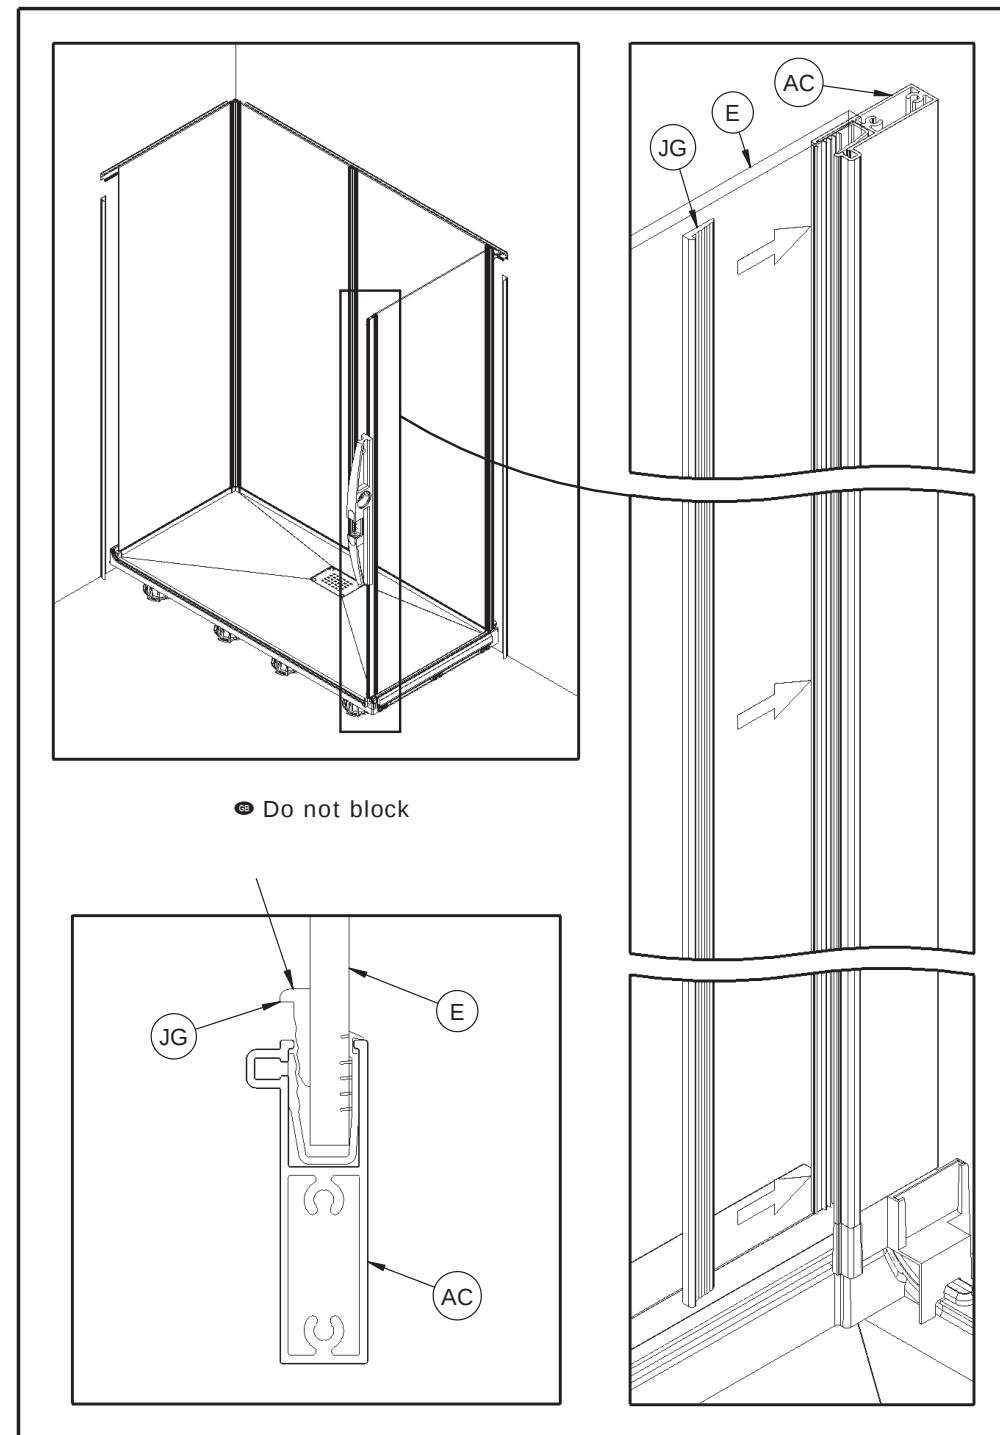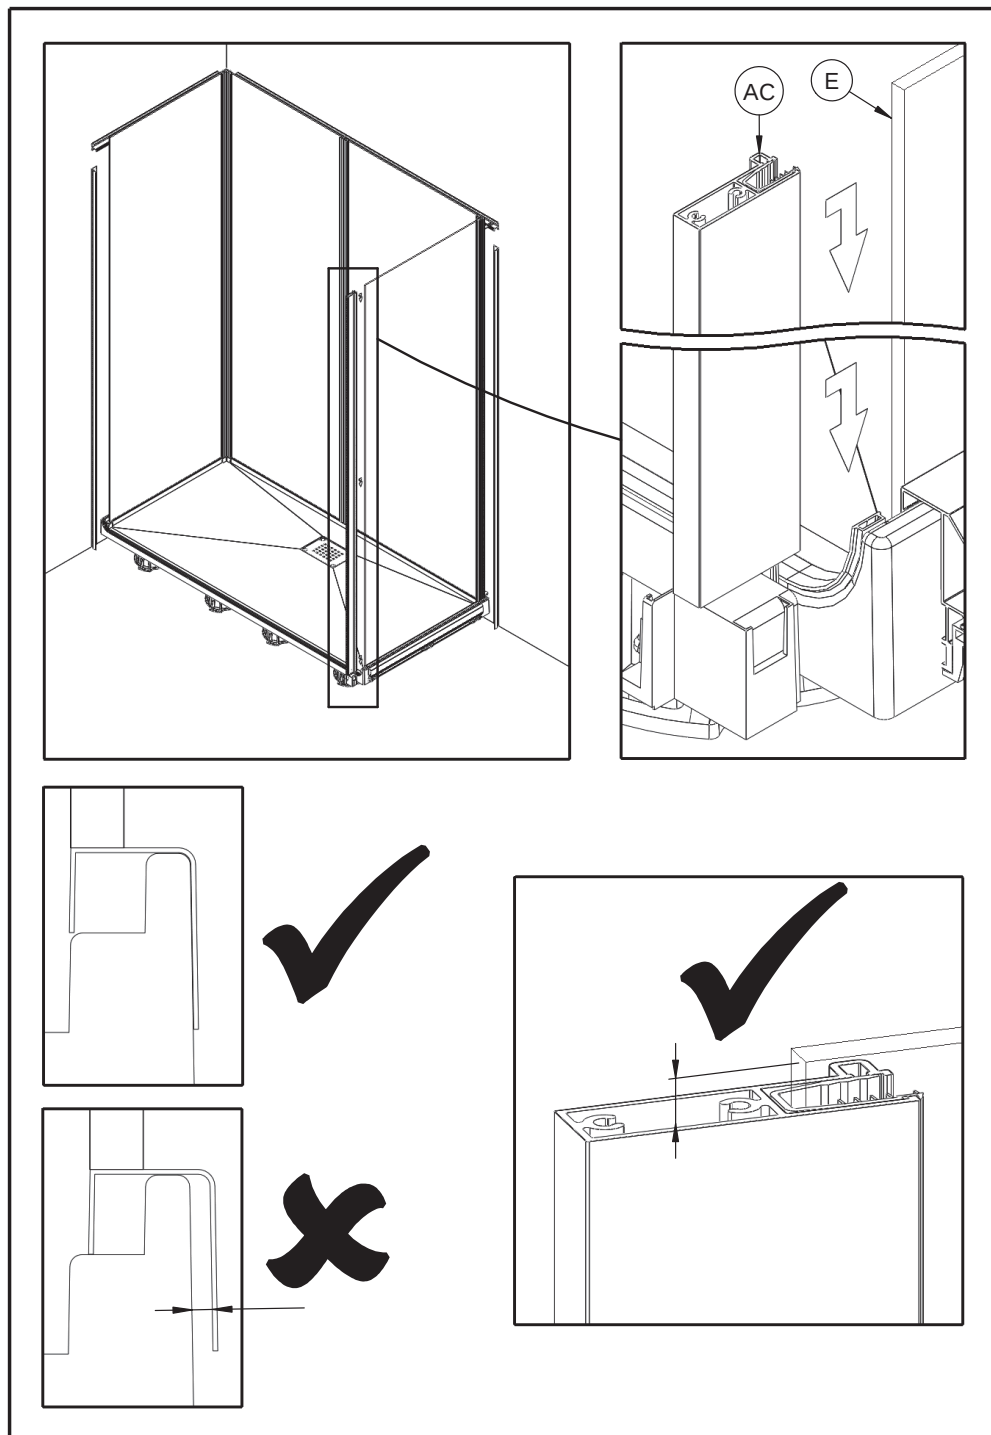

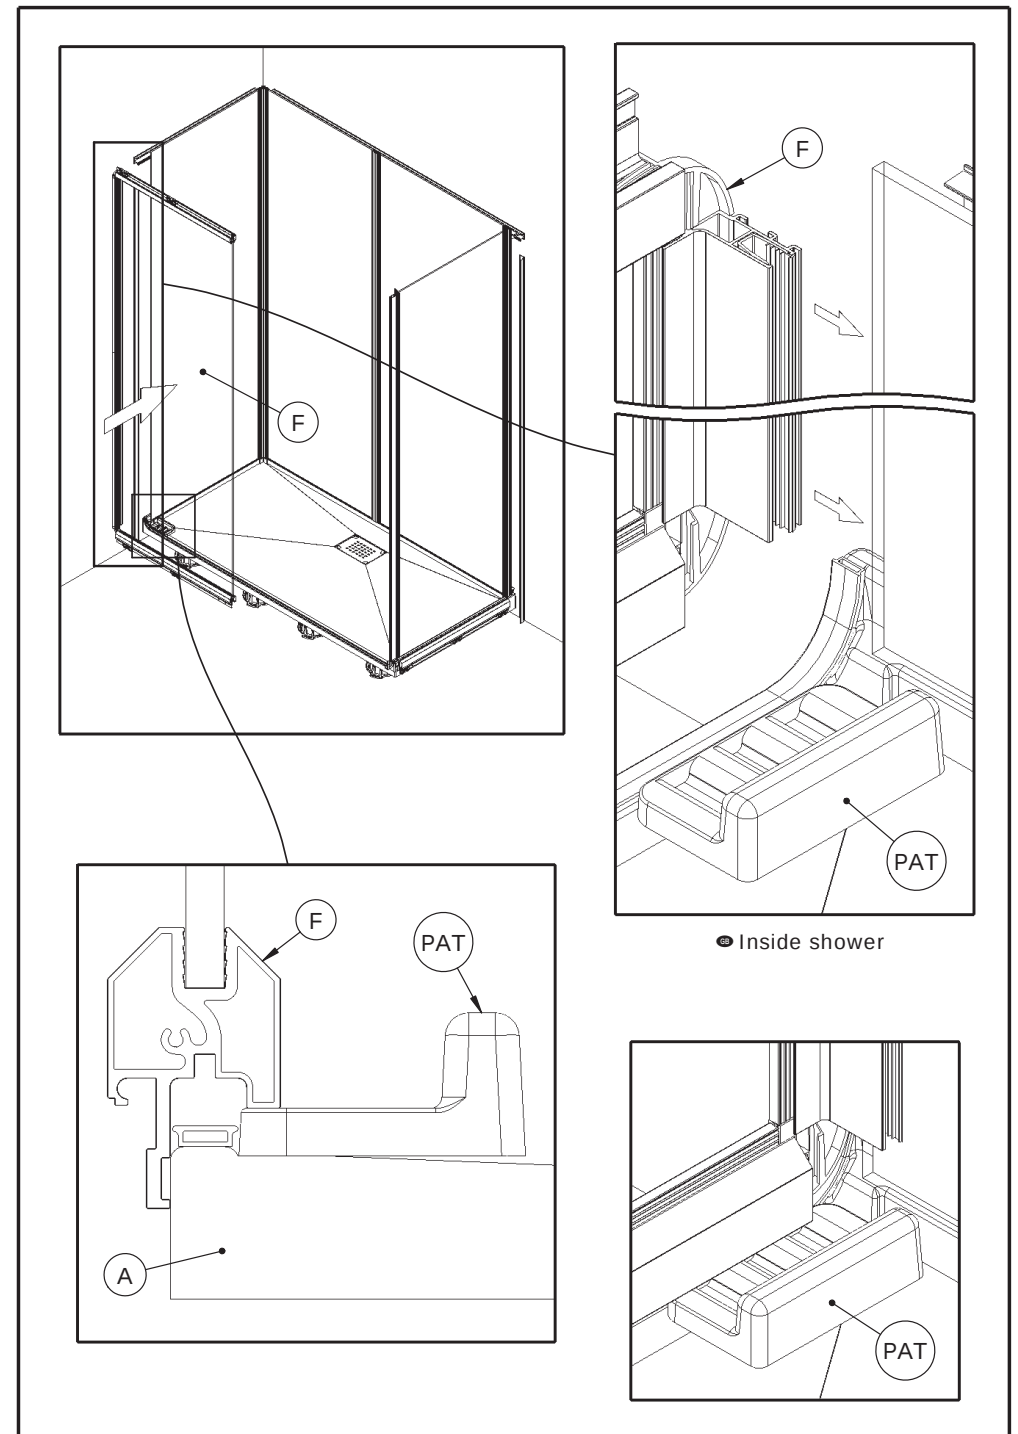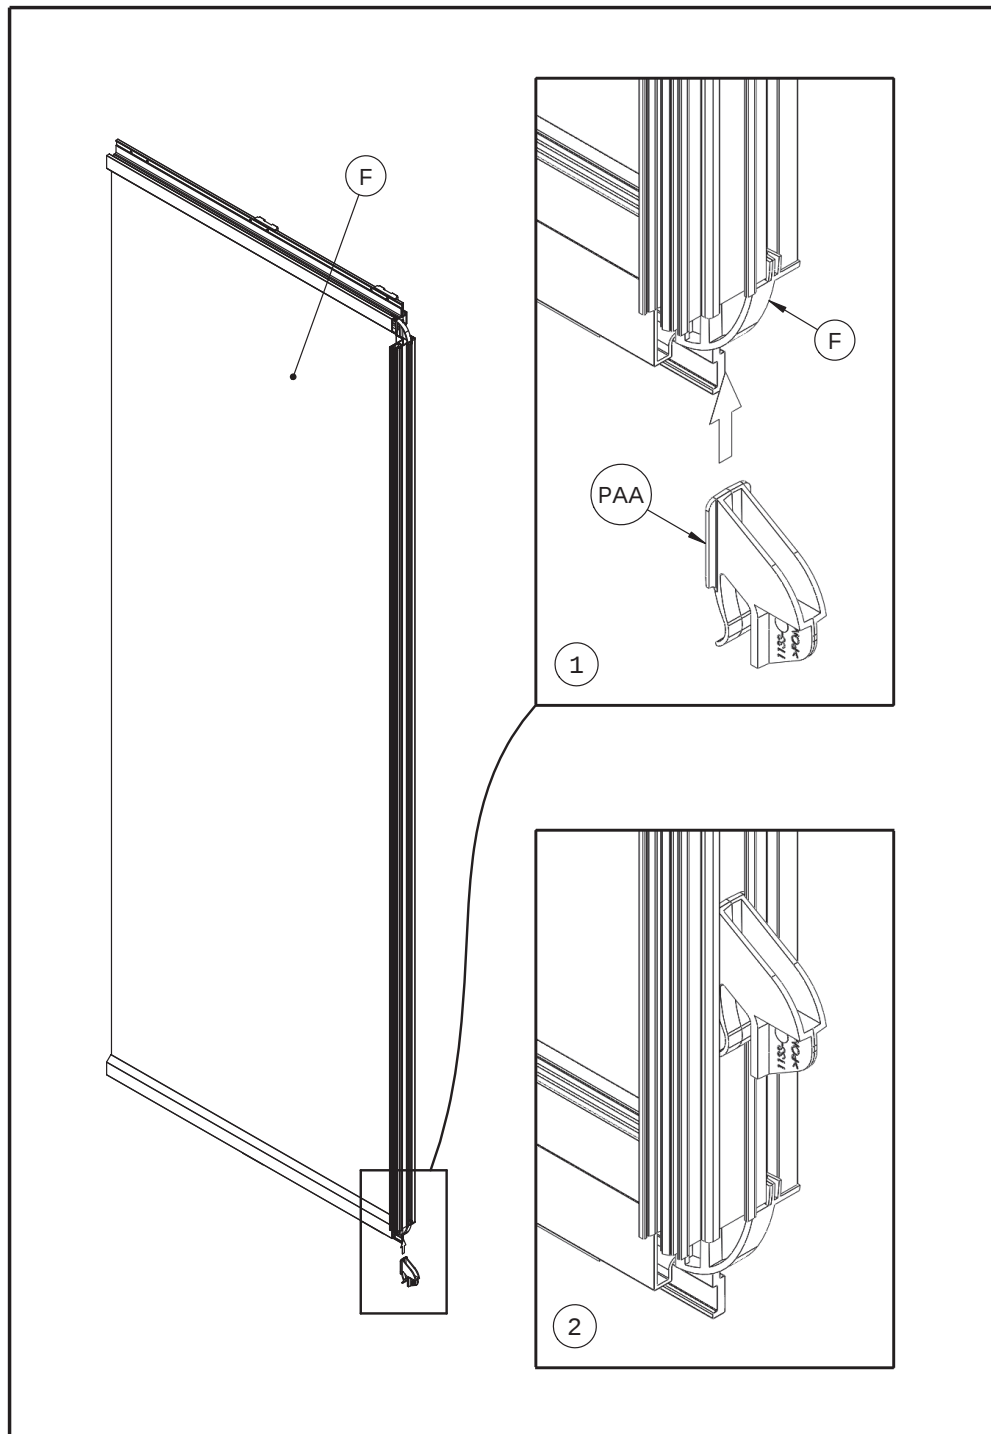


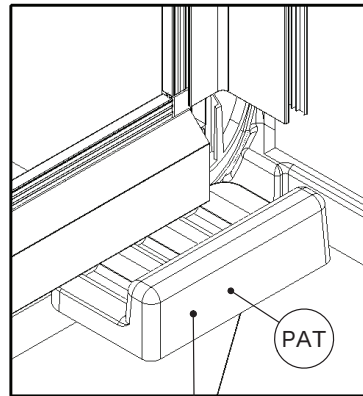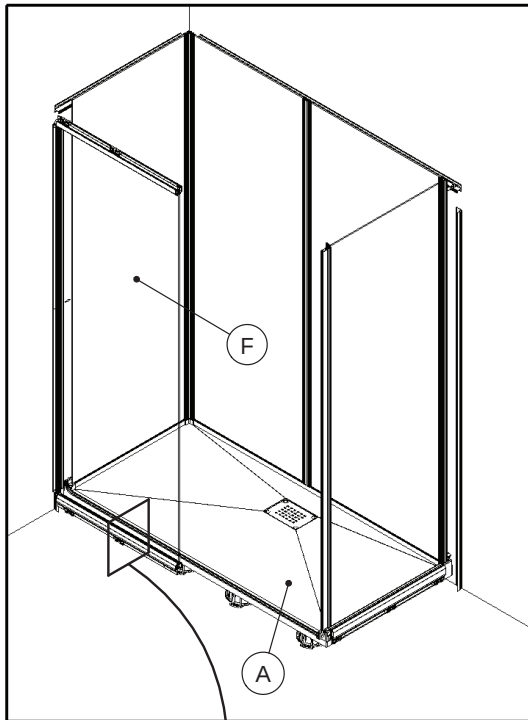


Remove


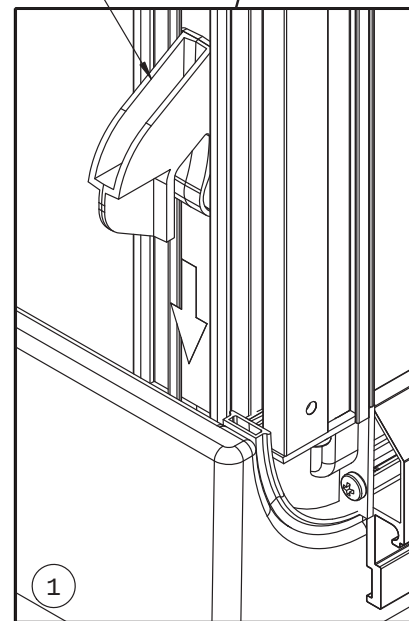
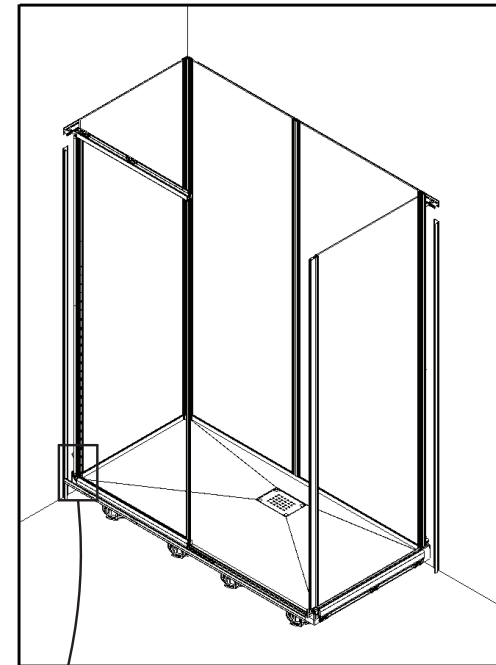
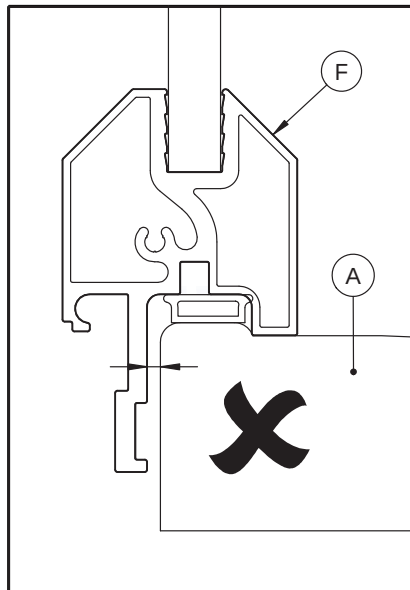
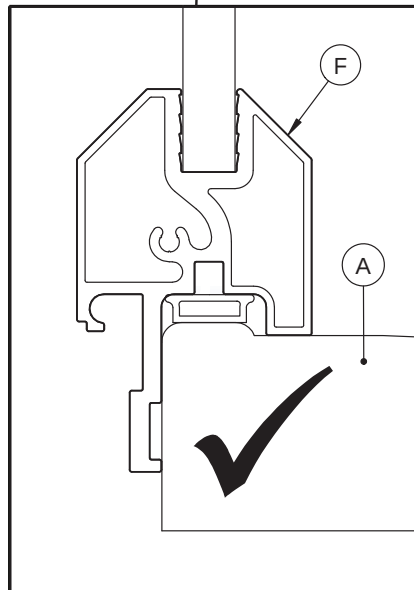


Back view

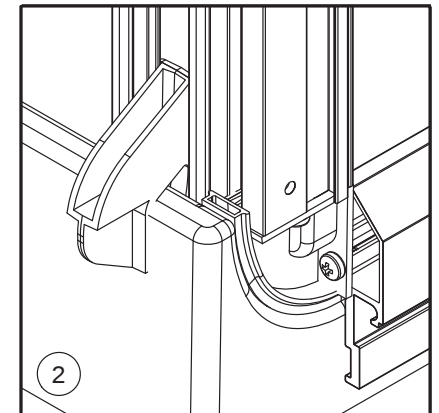




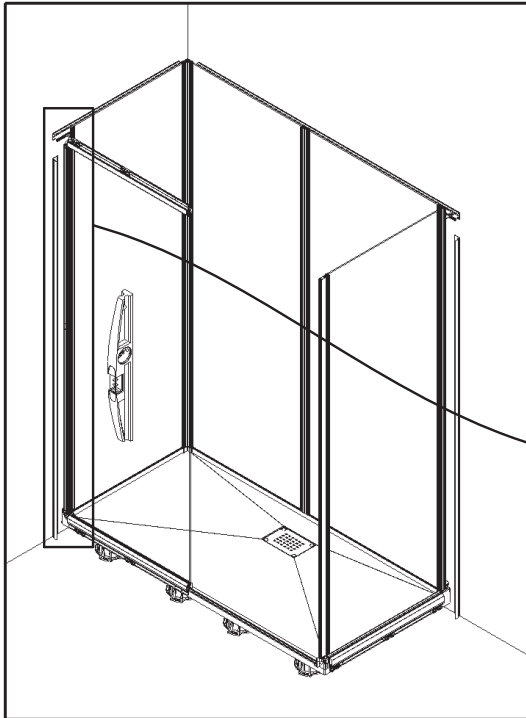




Do not block

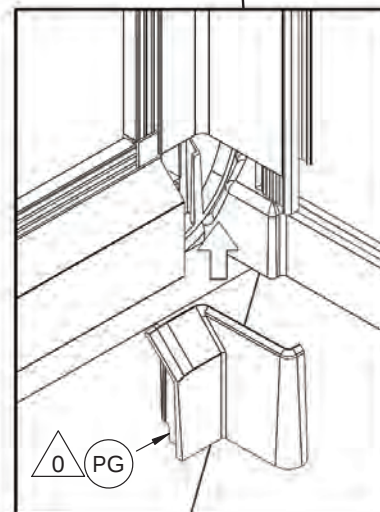
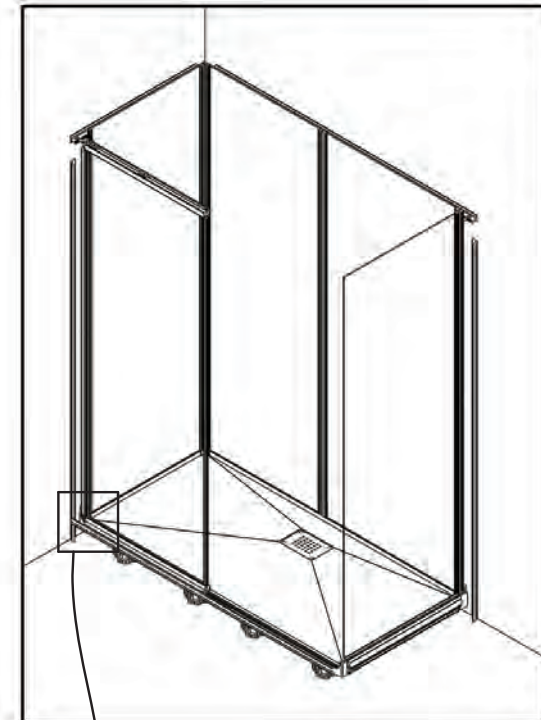
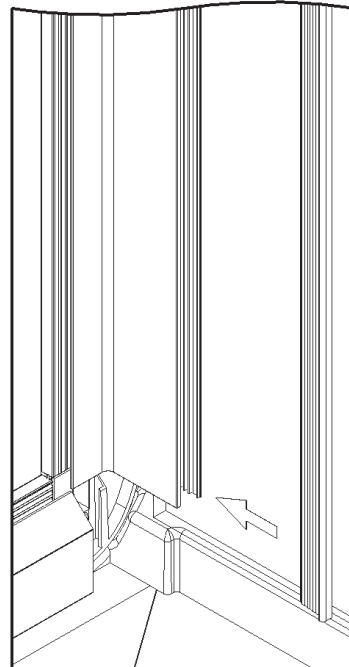
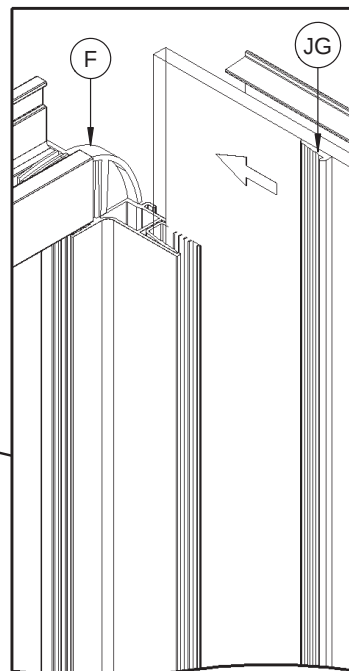
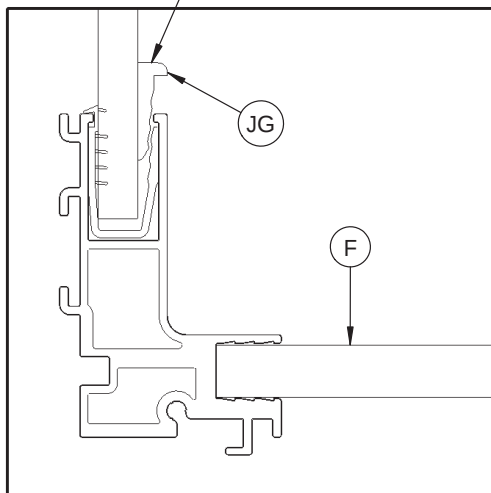


Inside shower


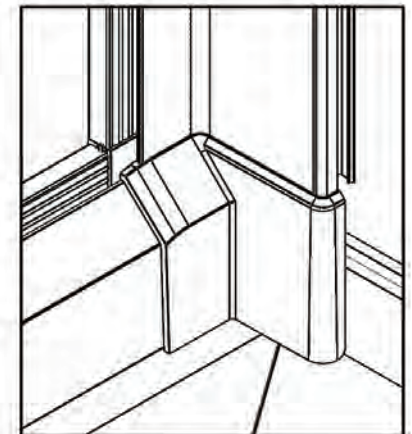


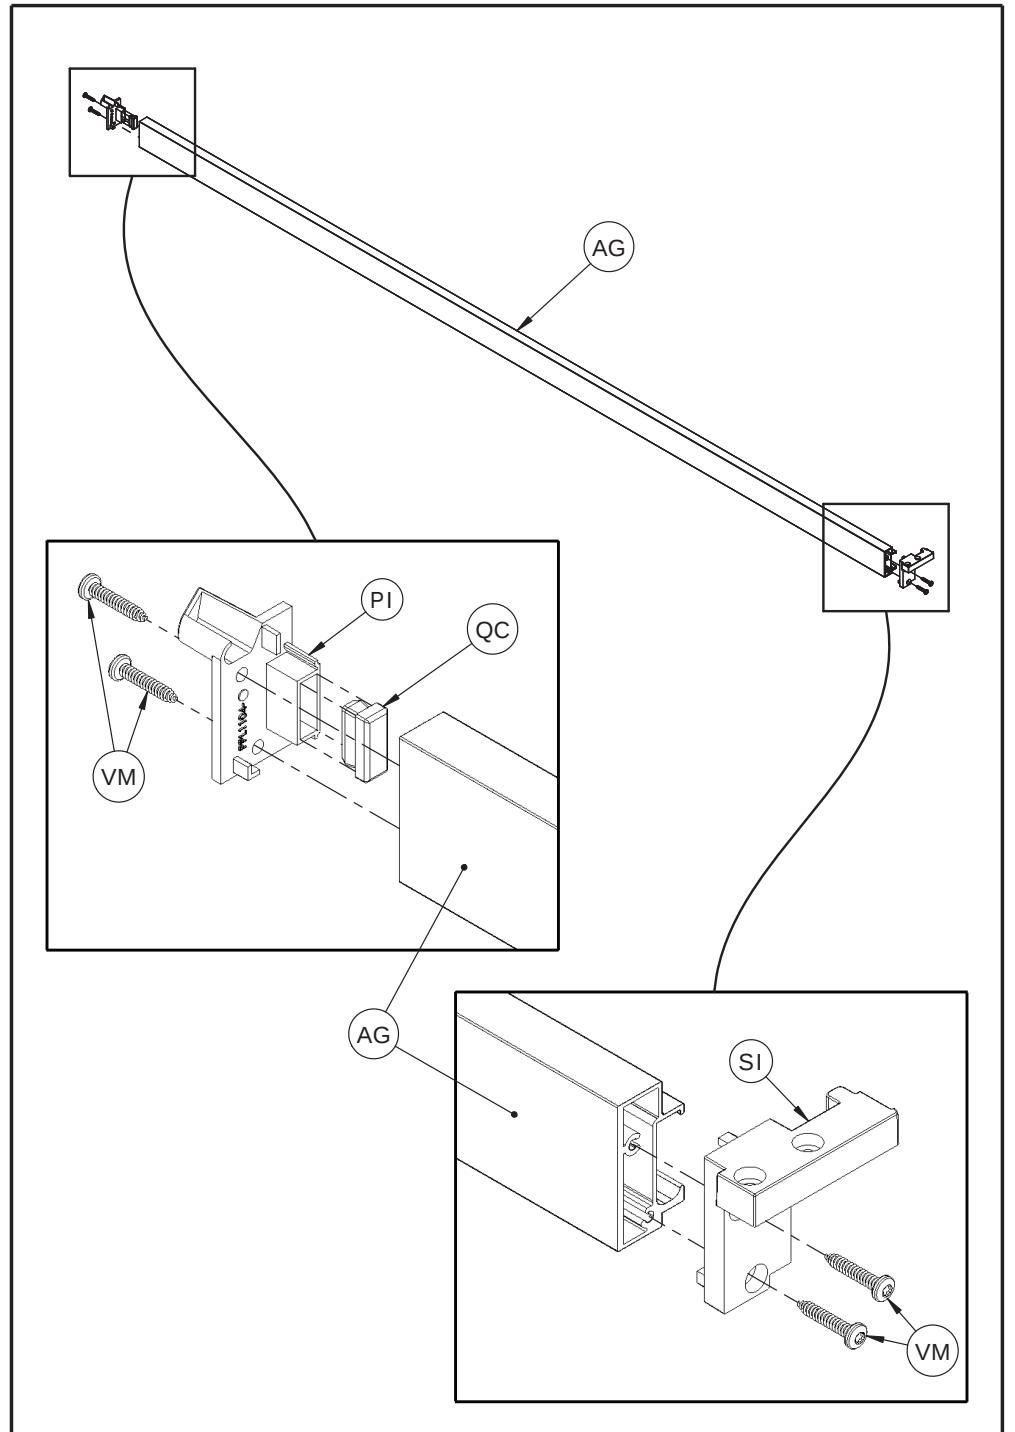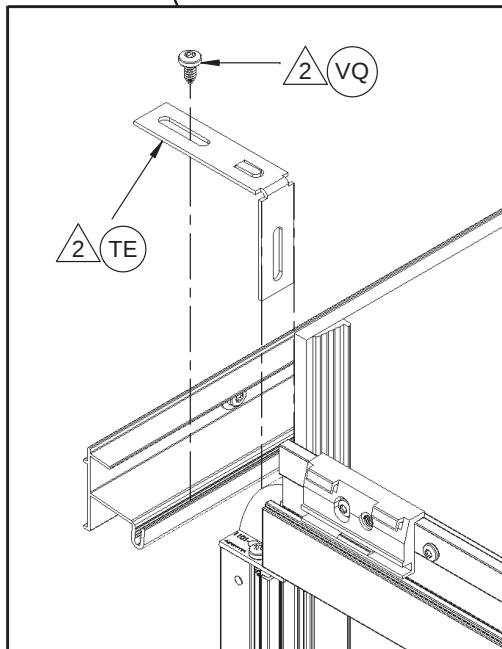
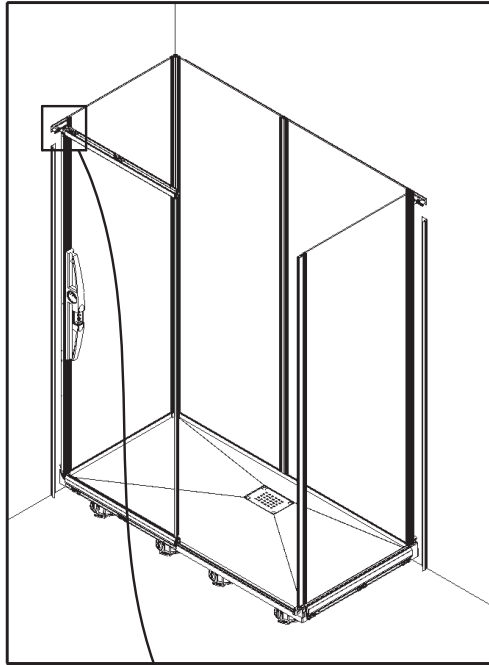


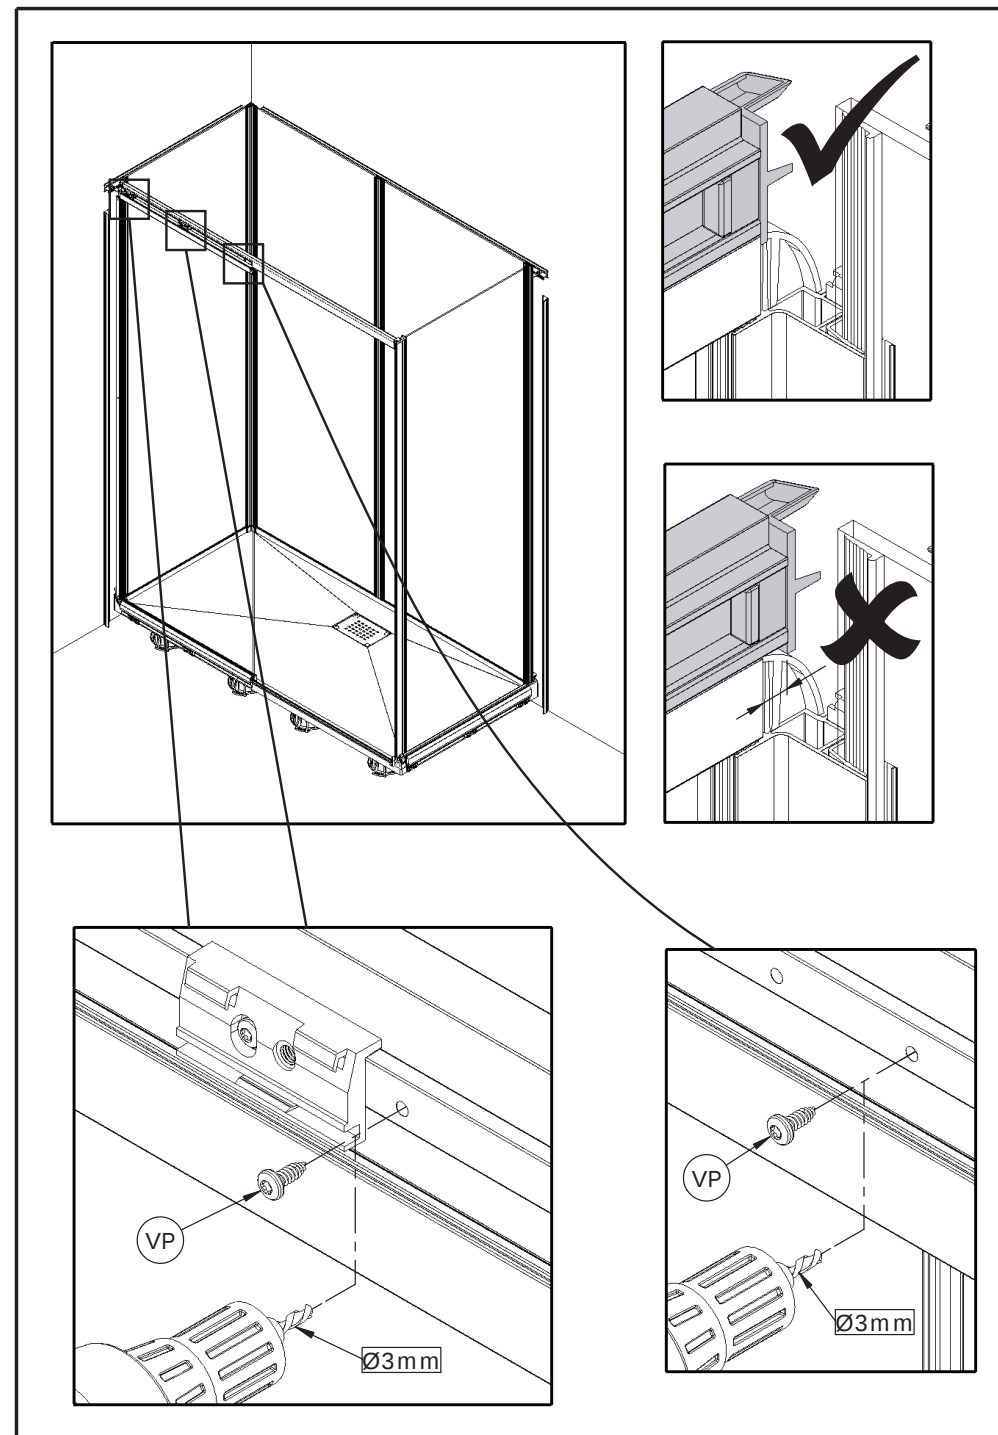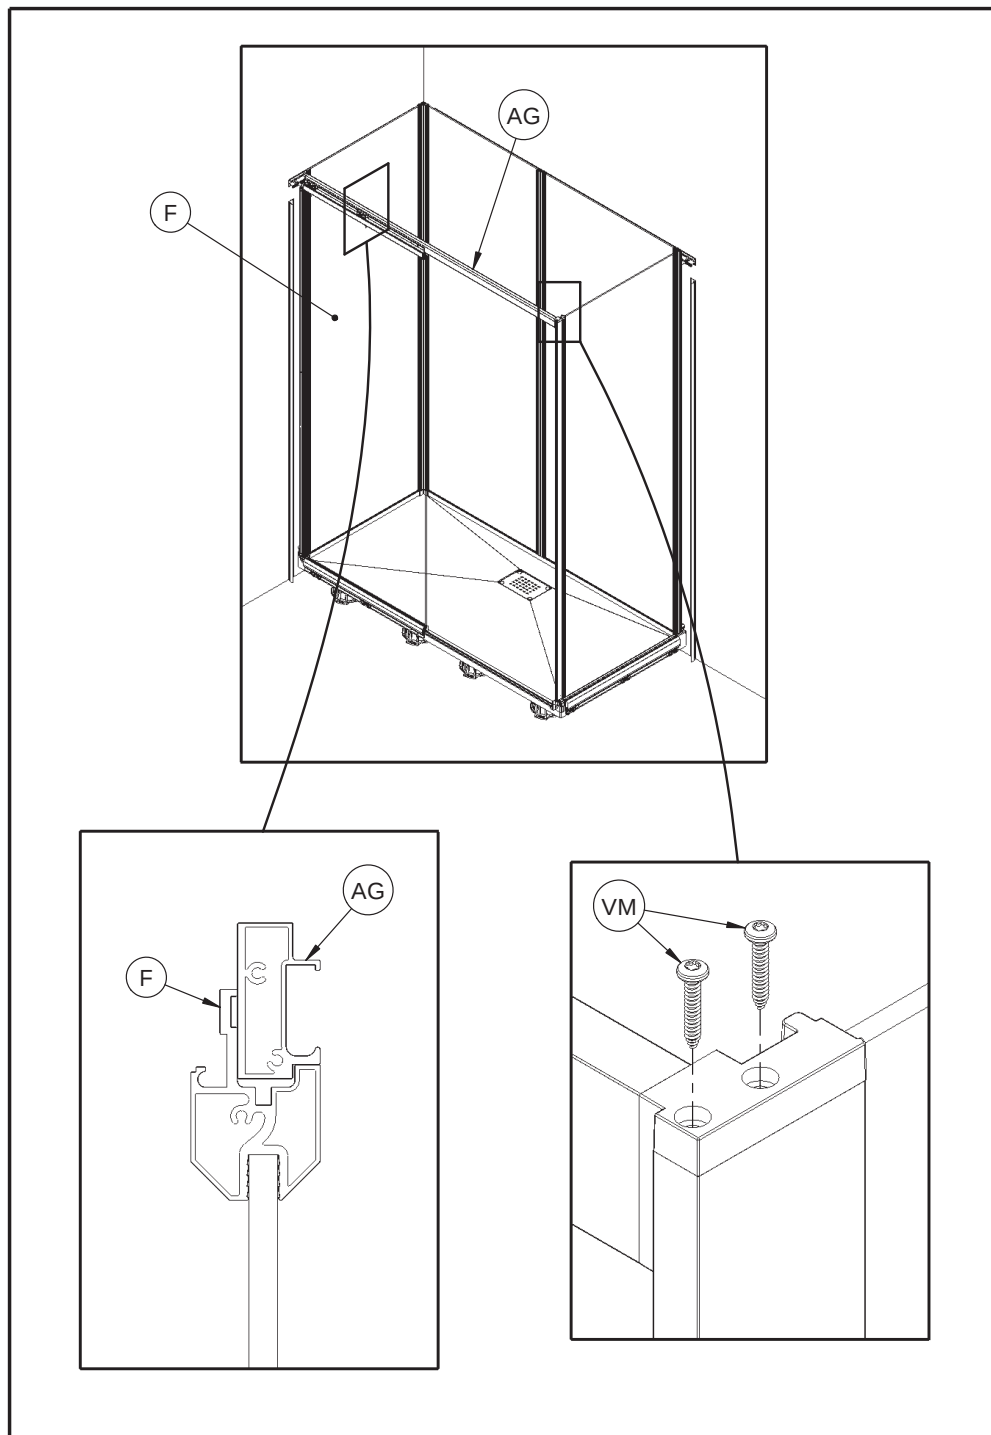



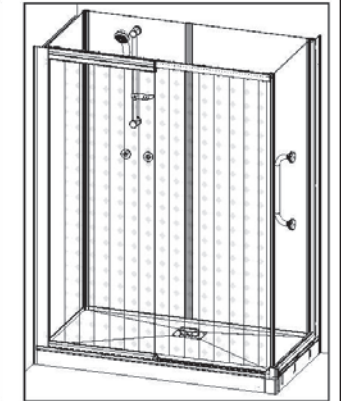
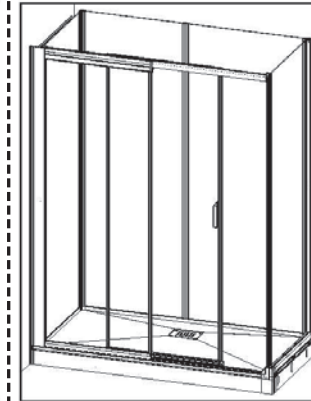
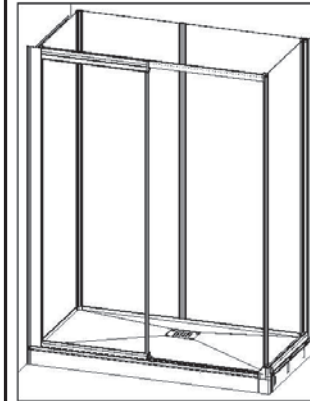
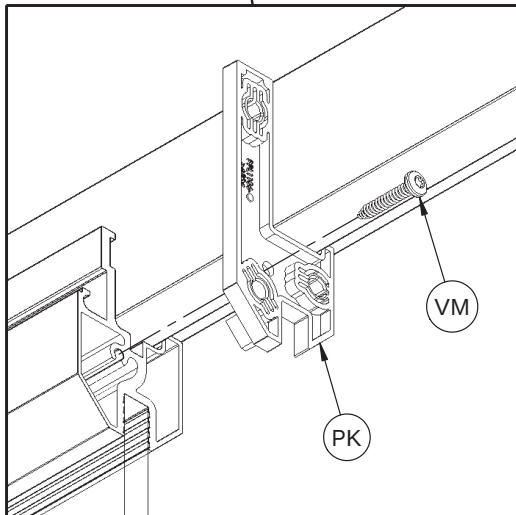
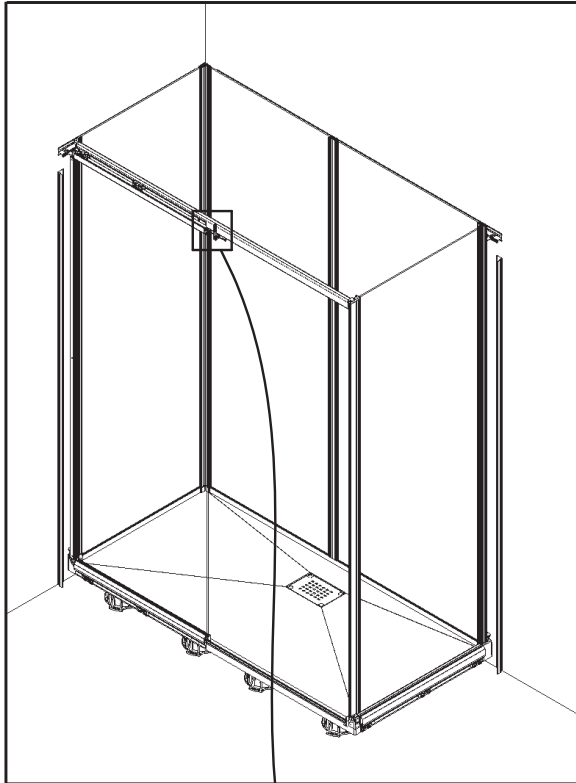



Next page

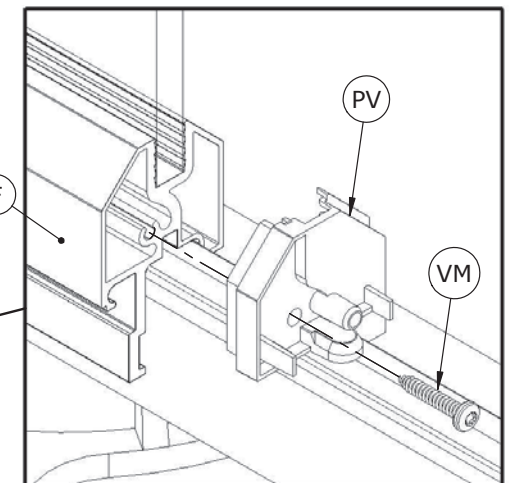
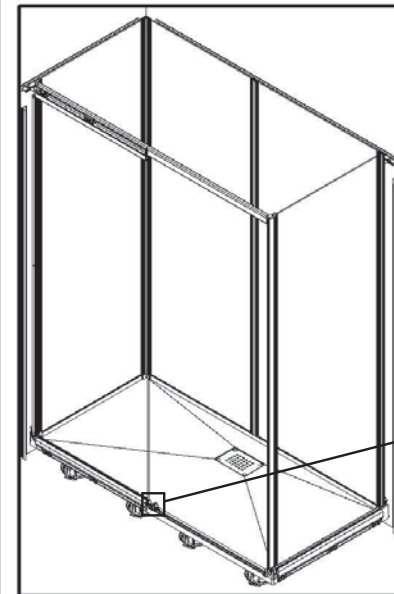


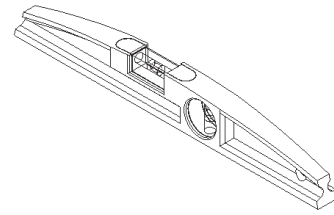
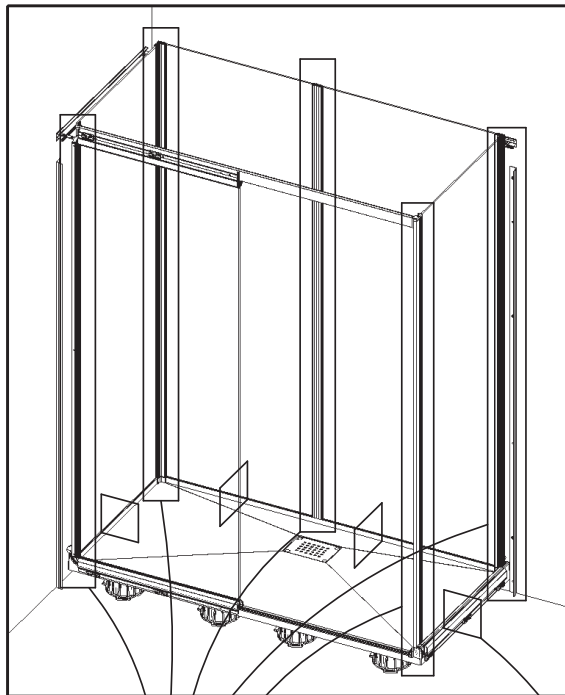




Ⓔ Ensure level then block

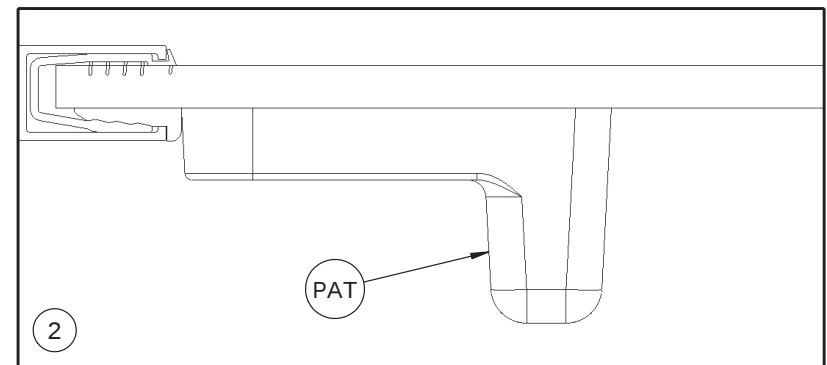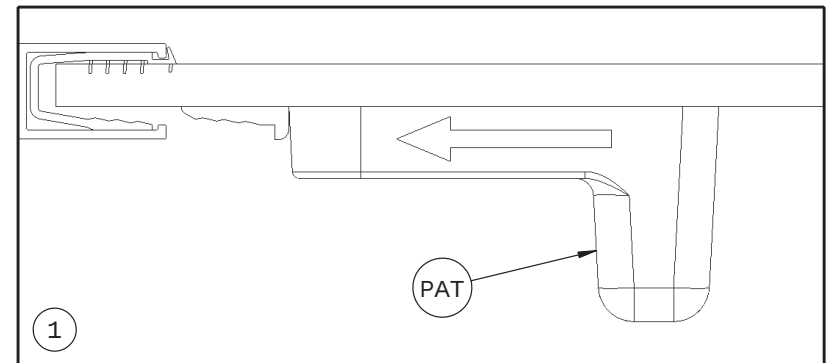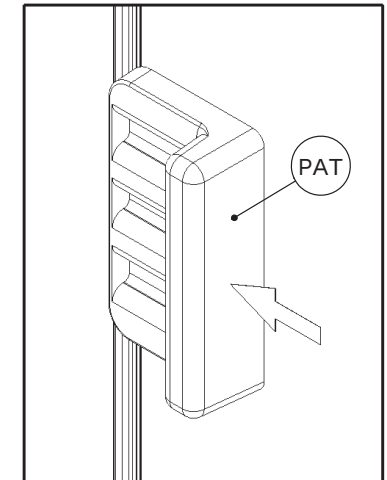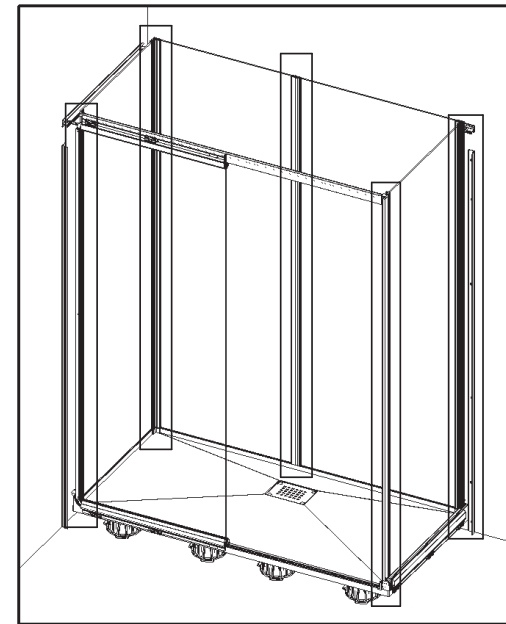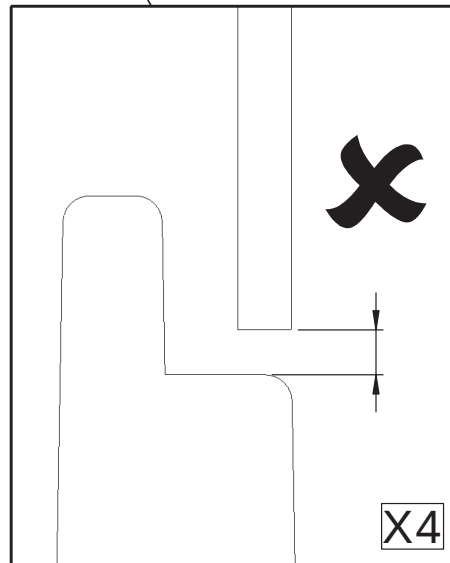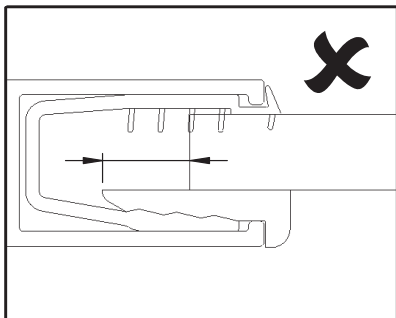
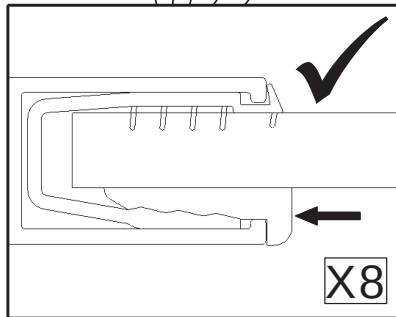


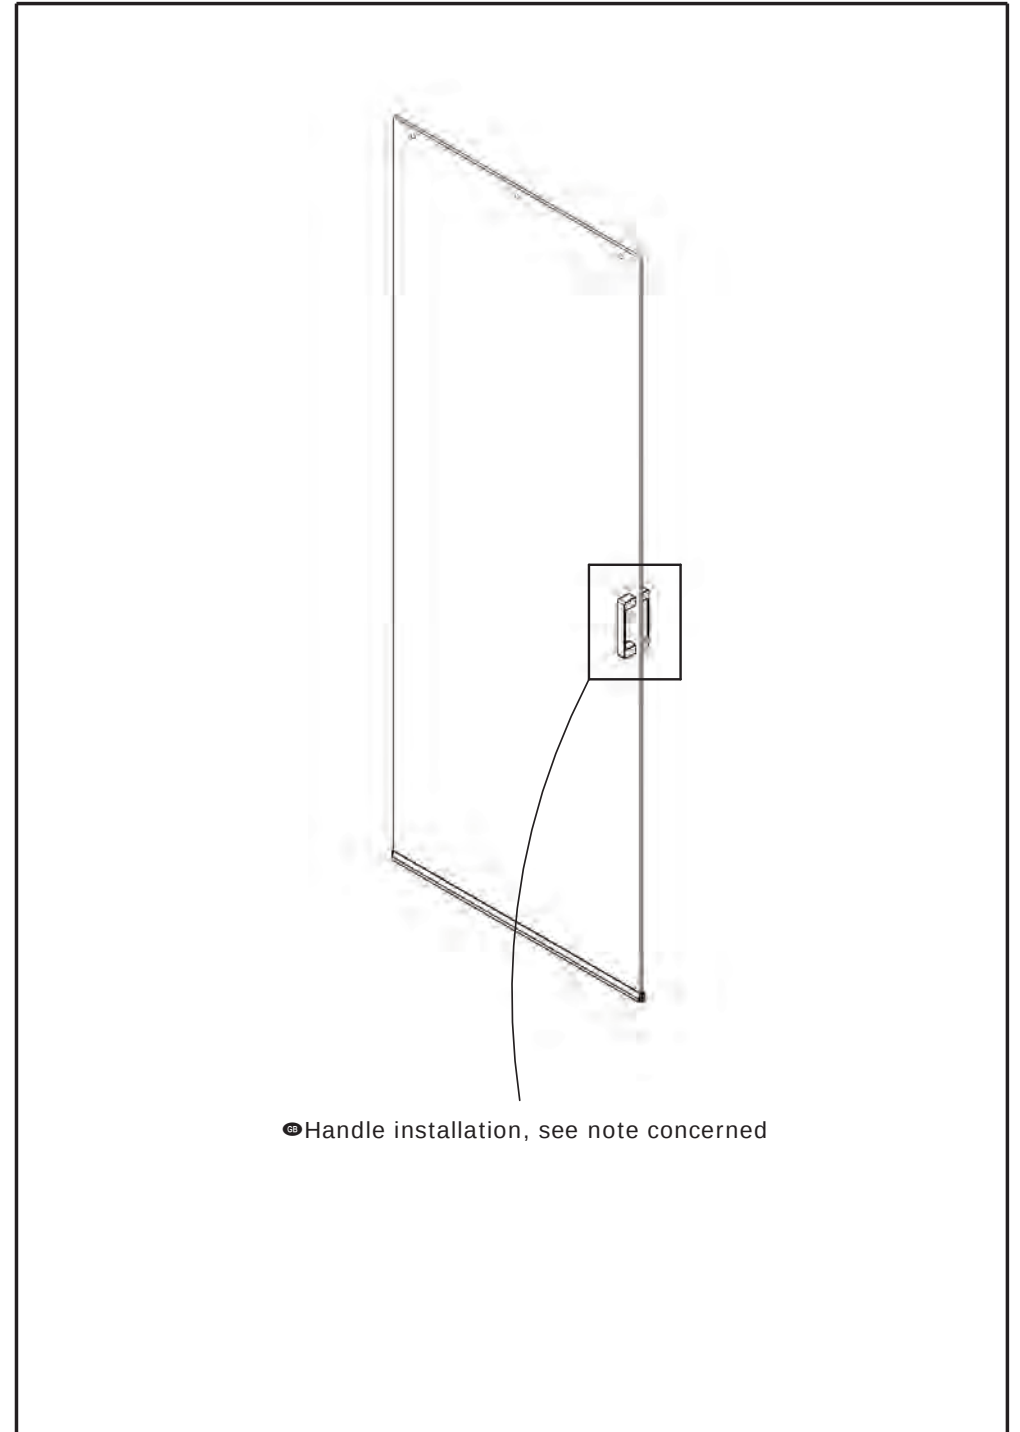


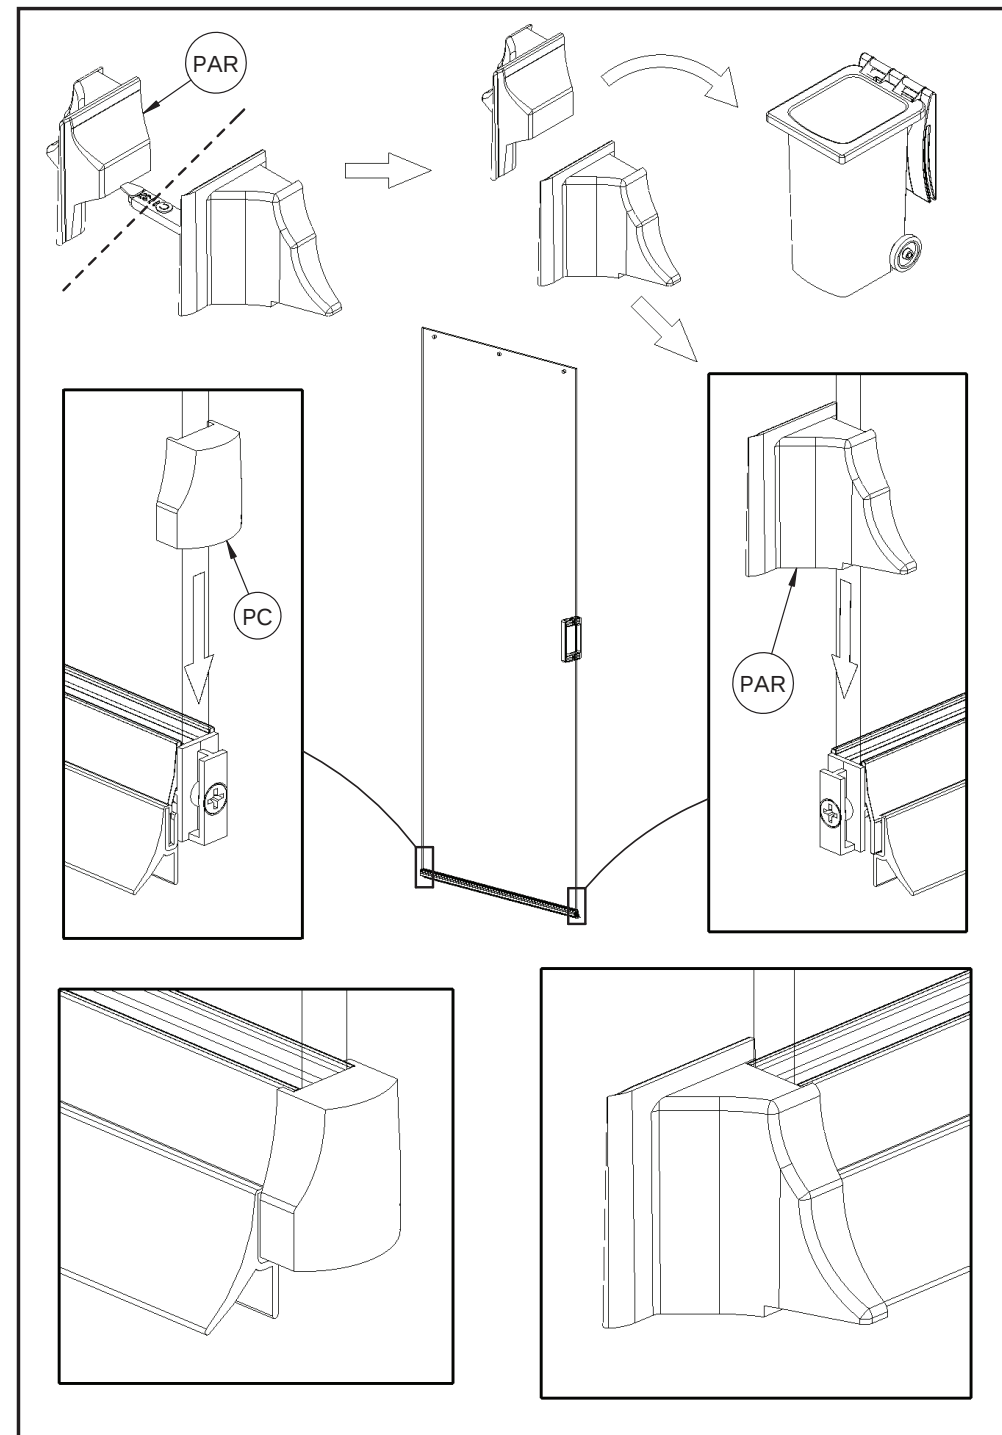
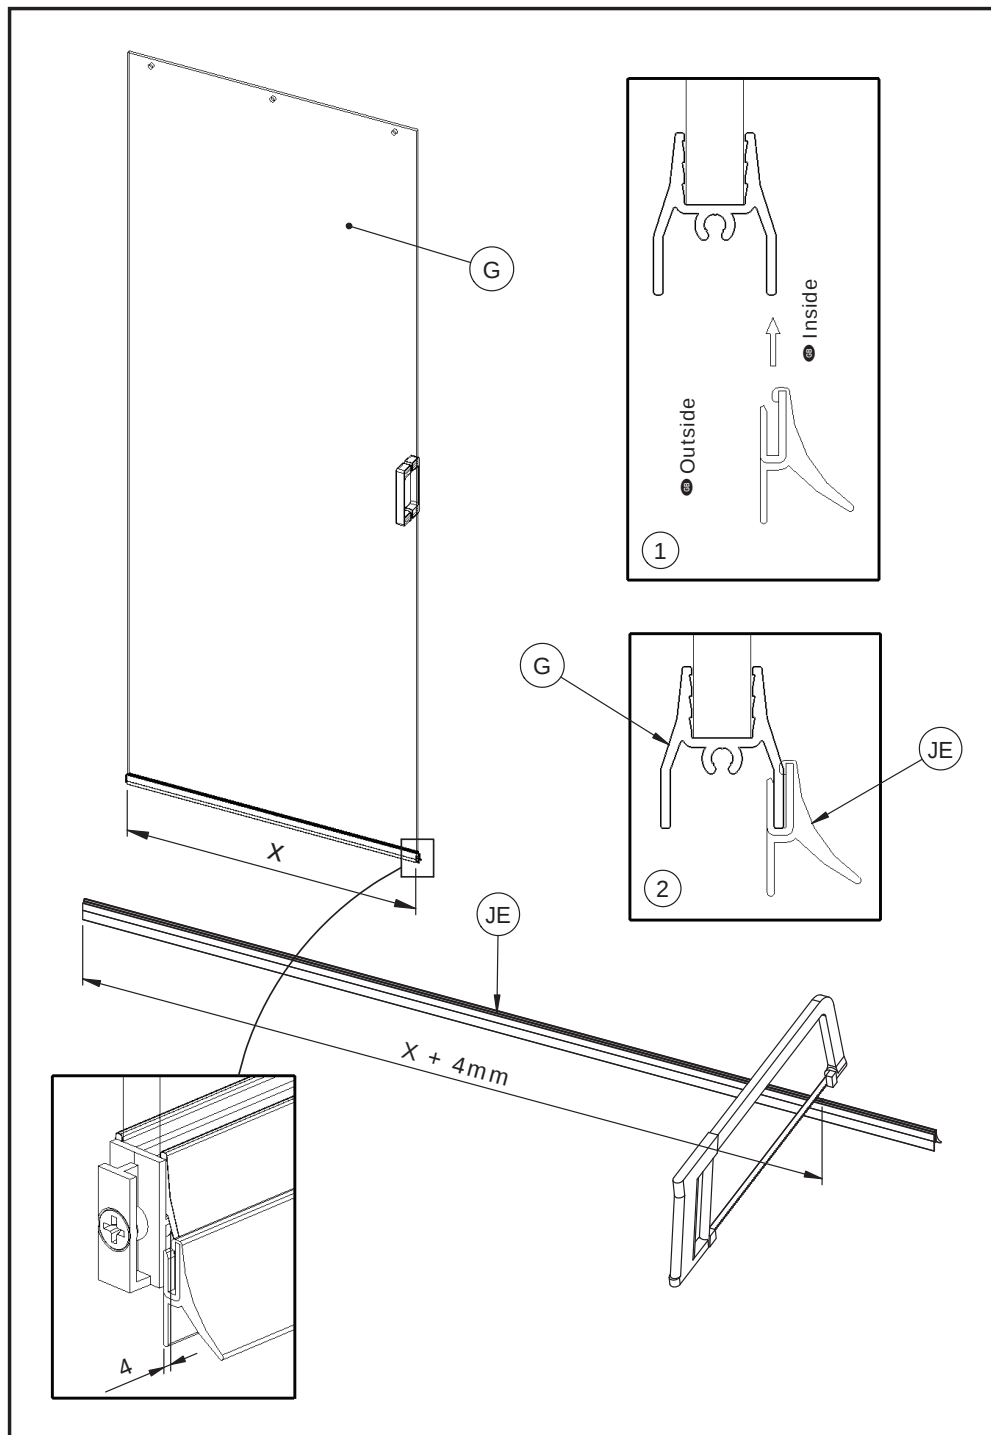


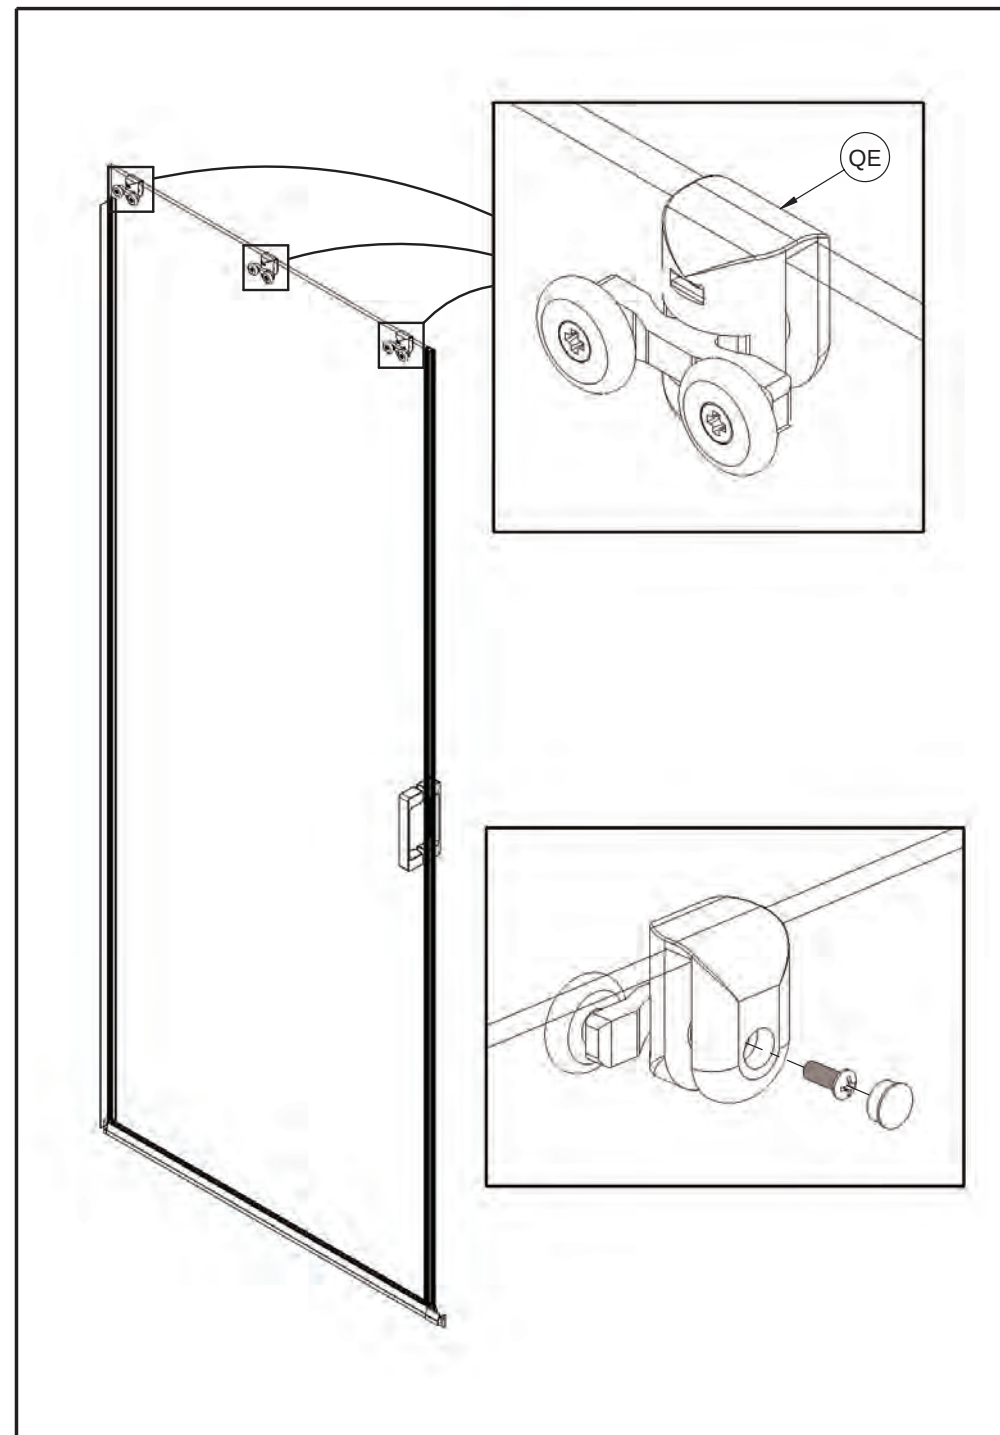
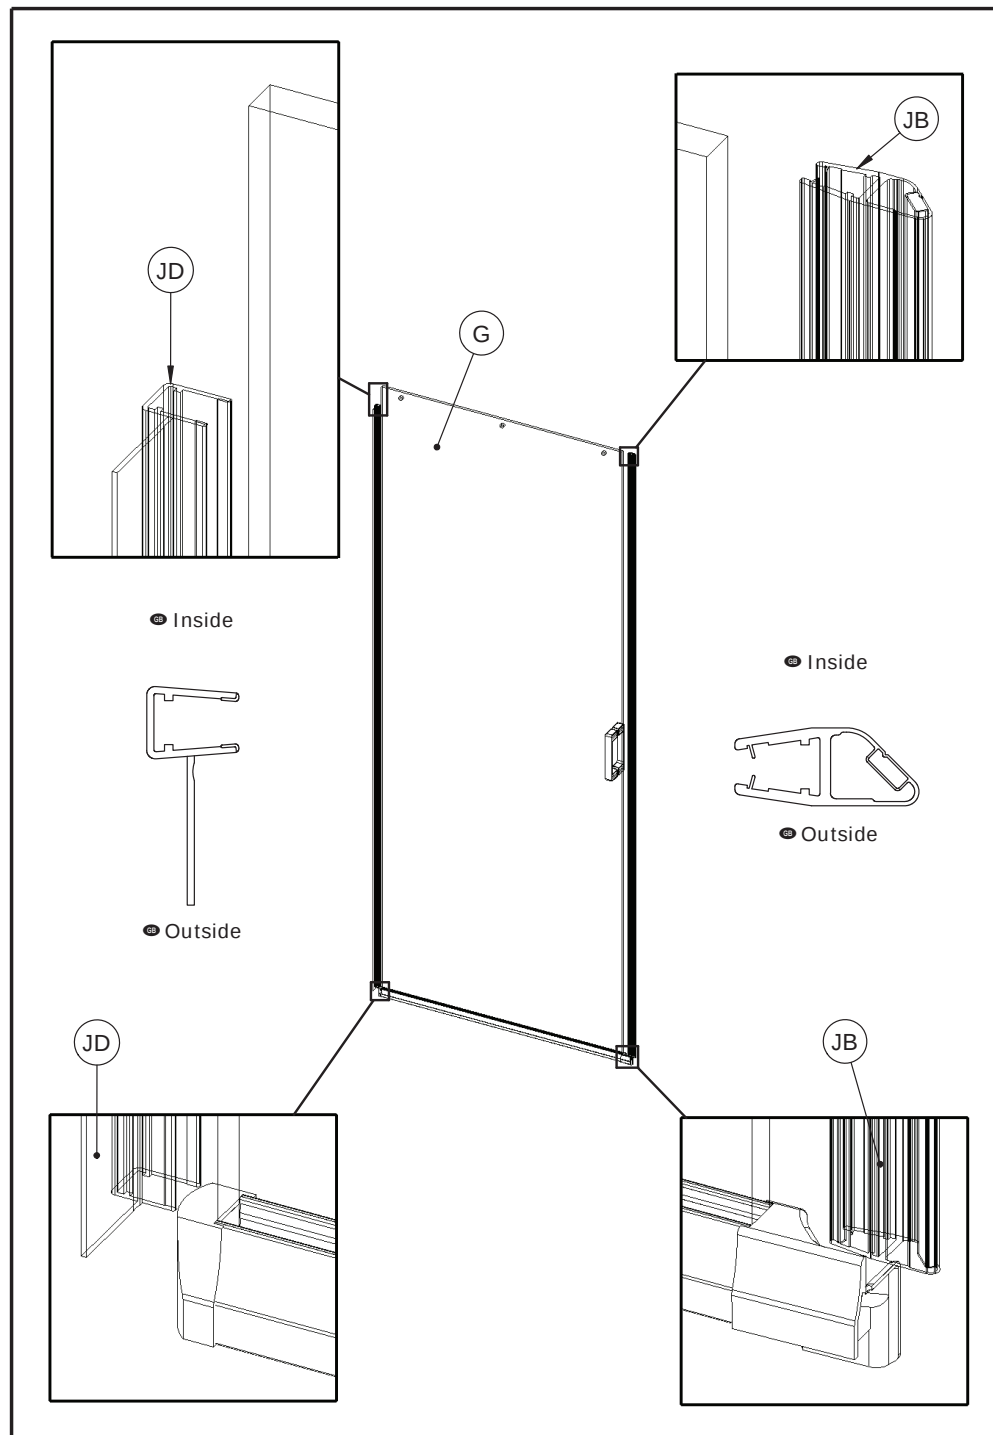


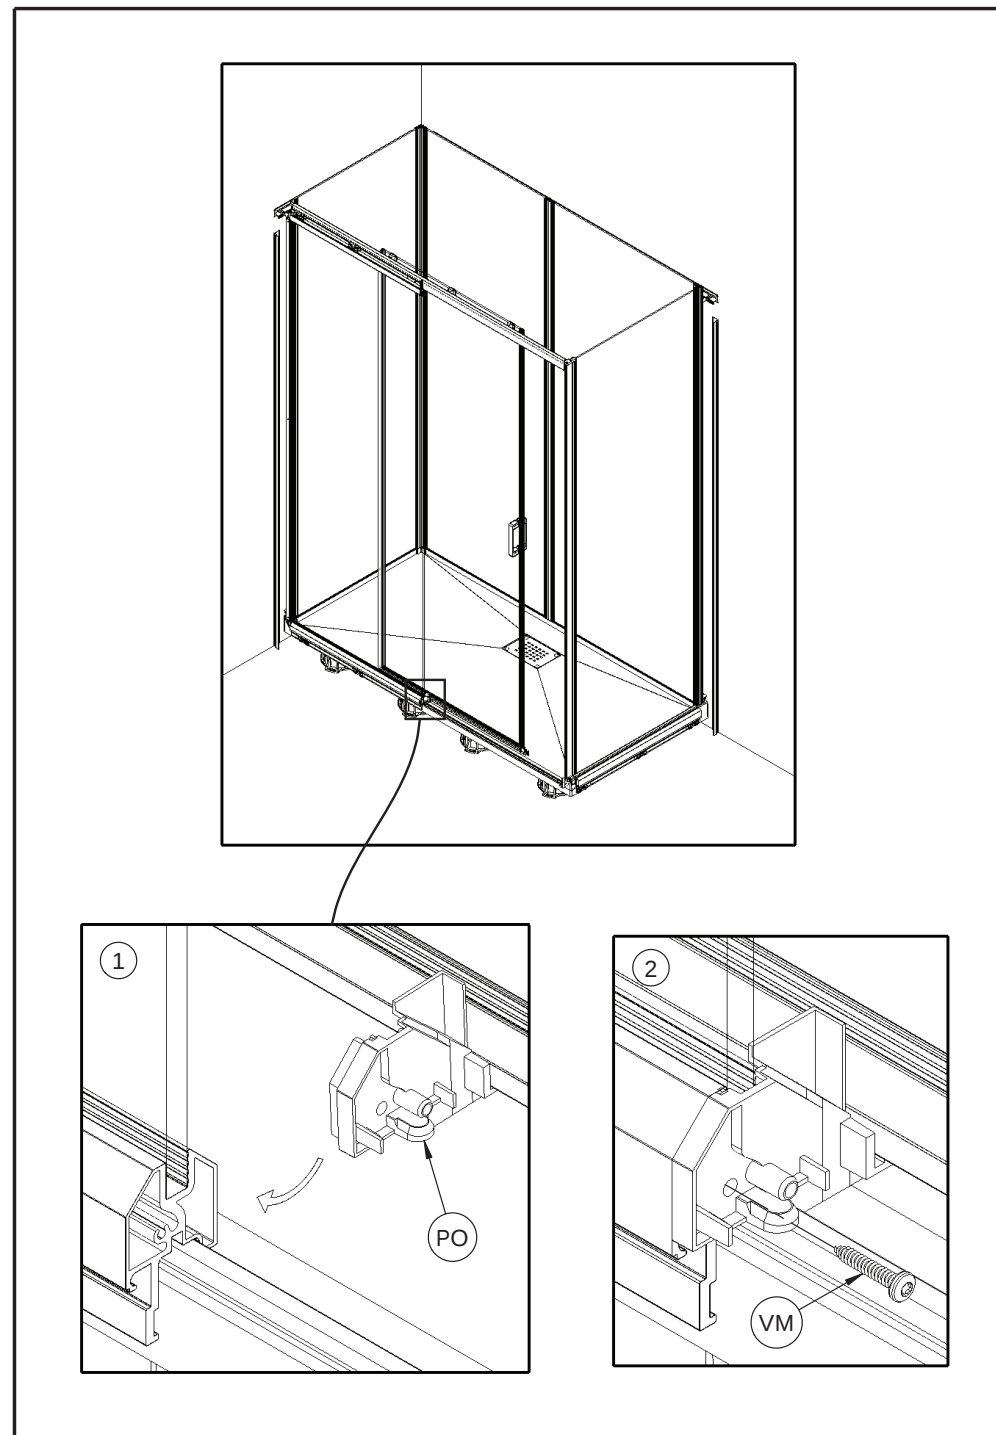
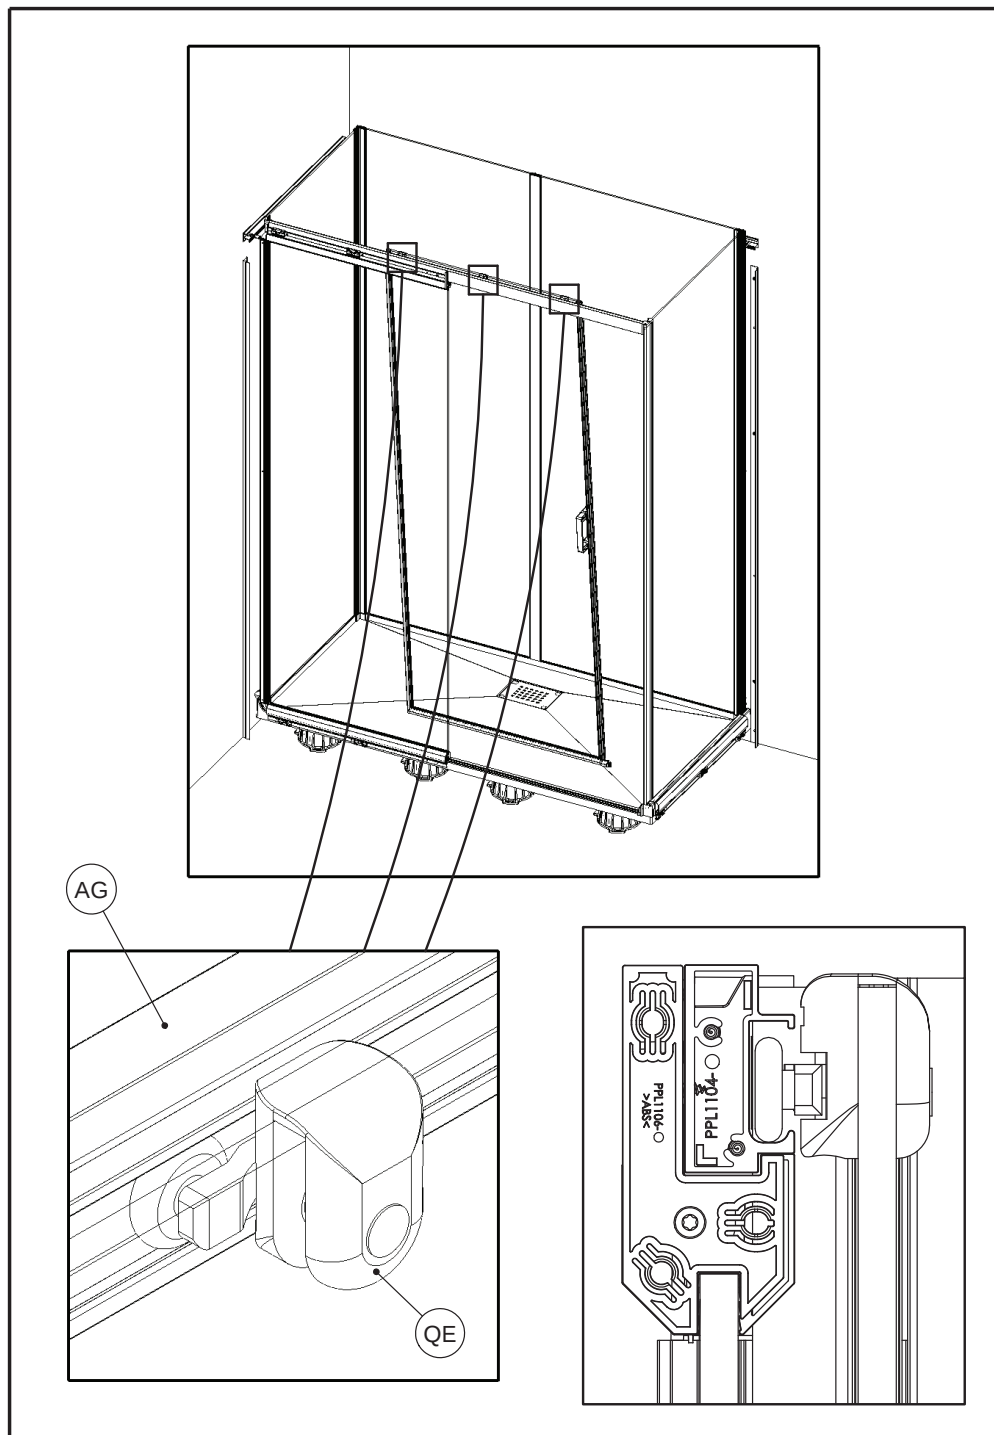






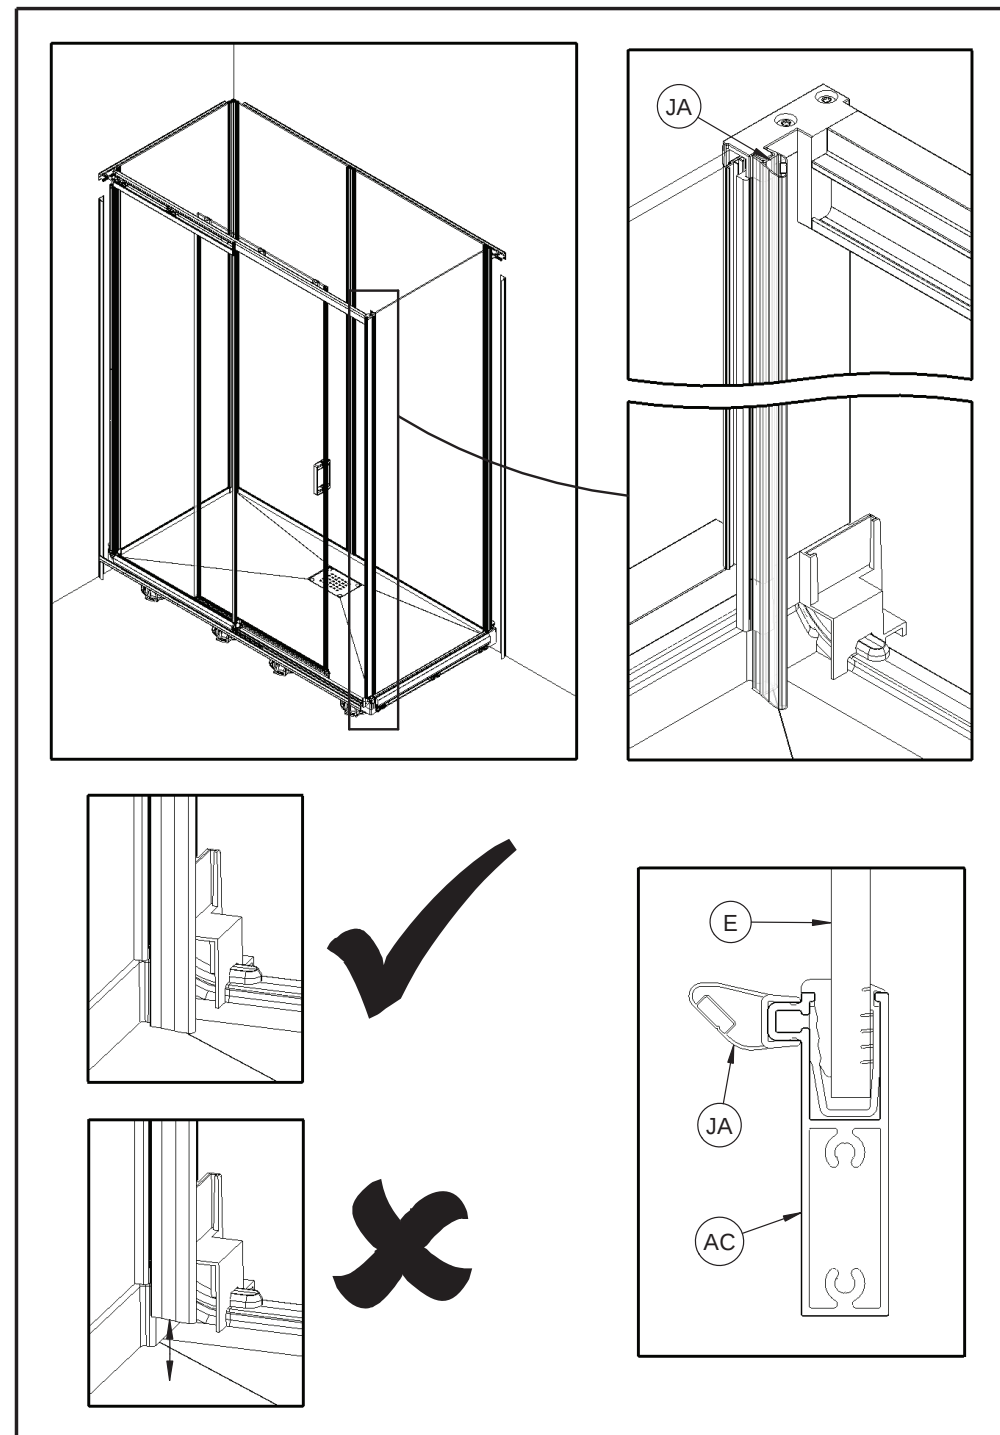
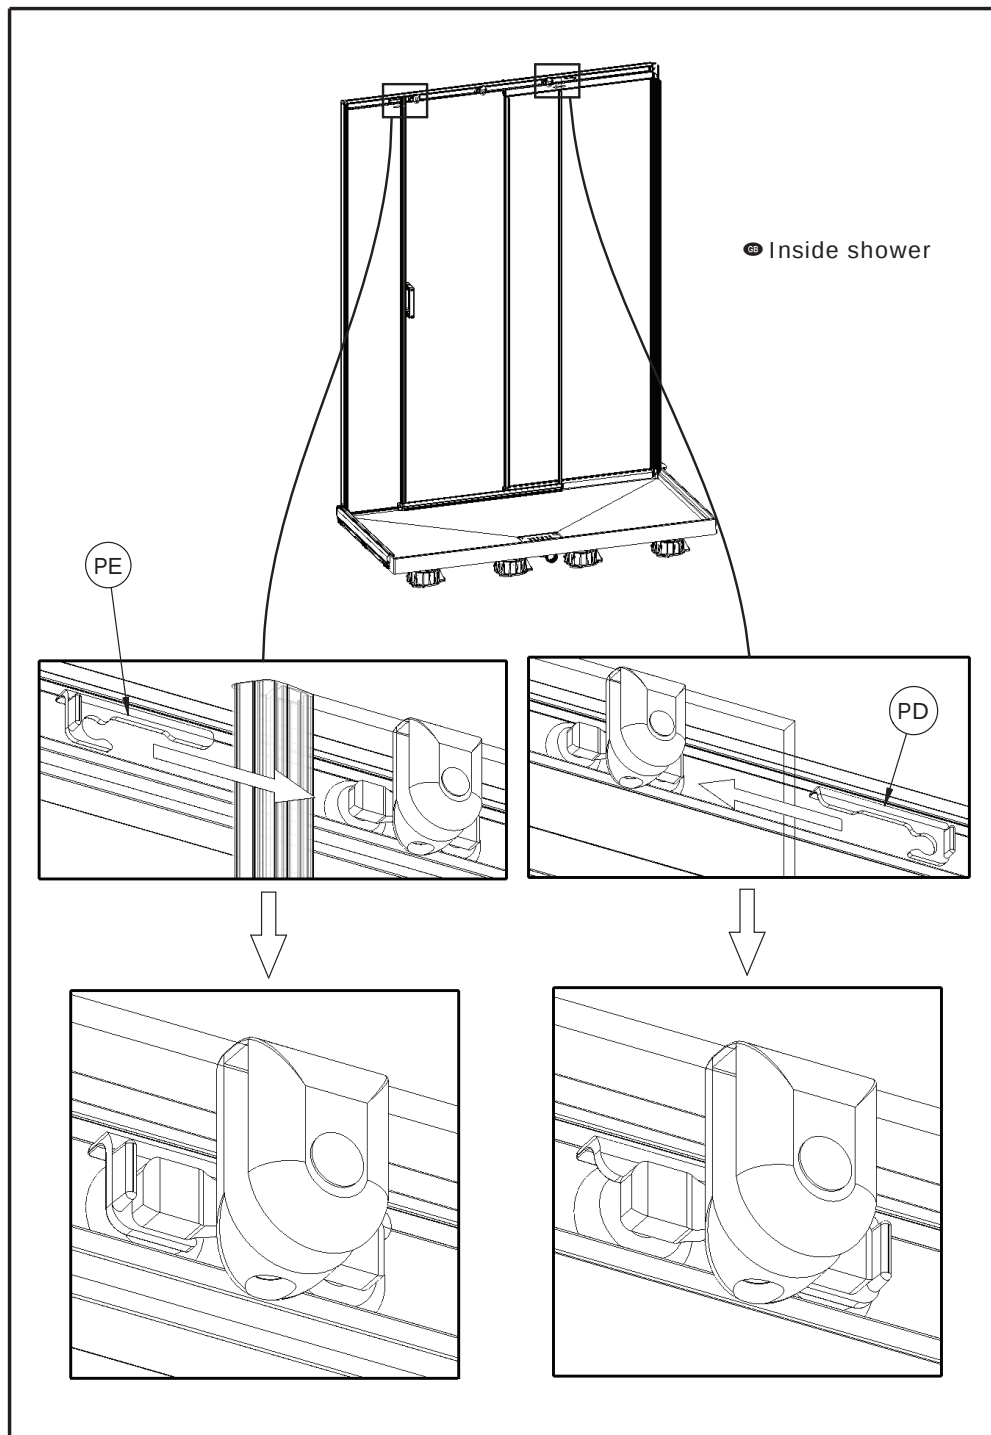



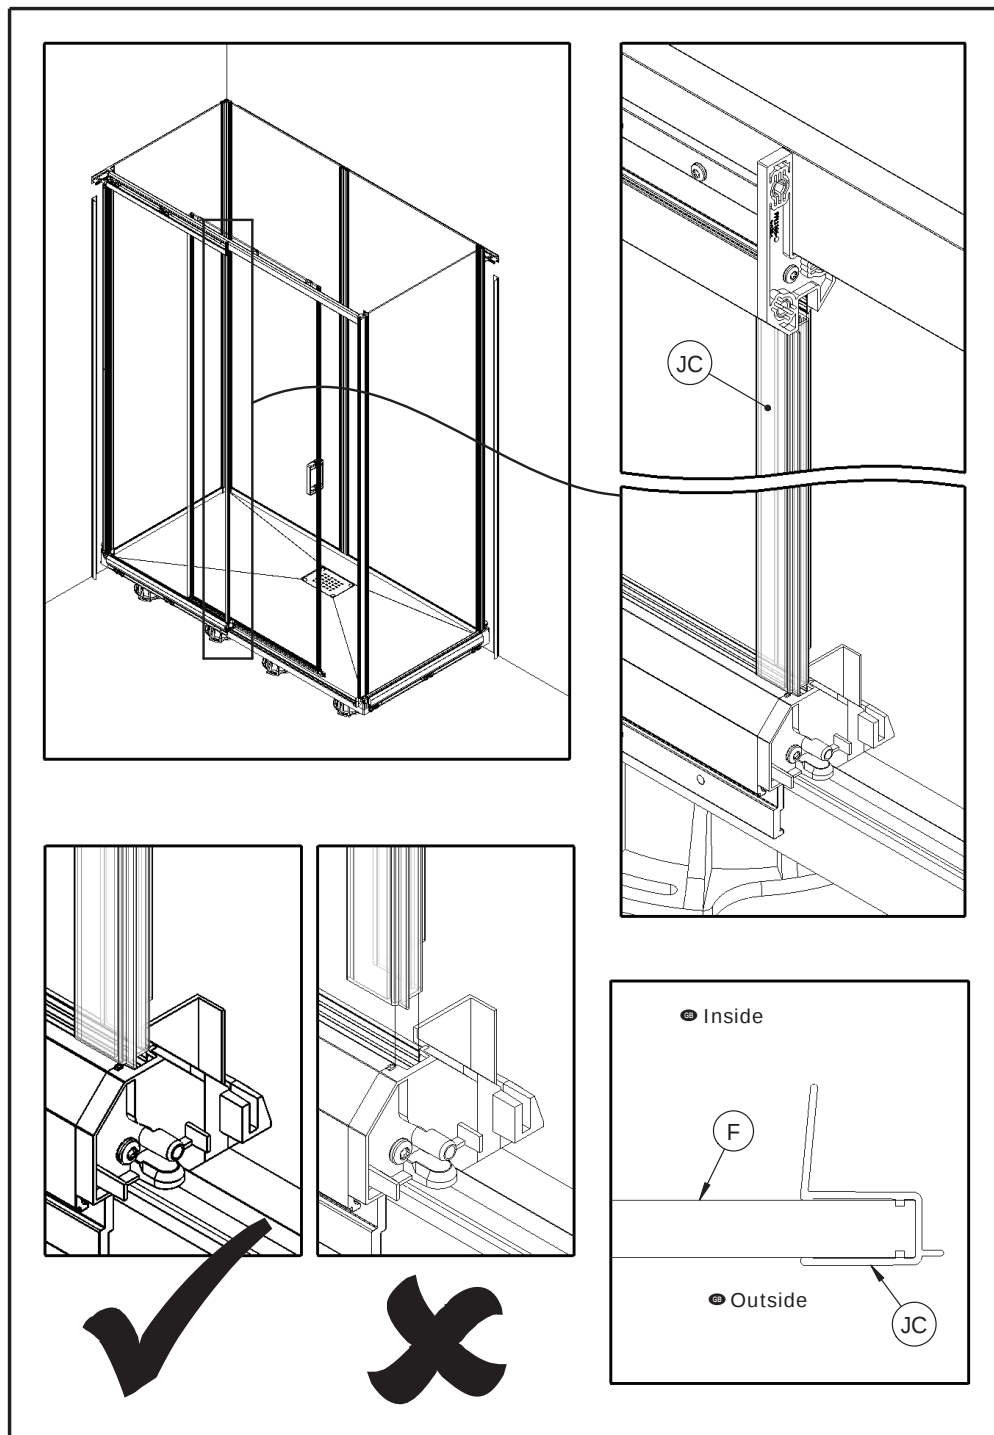


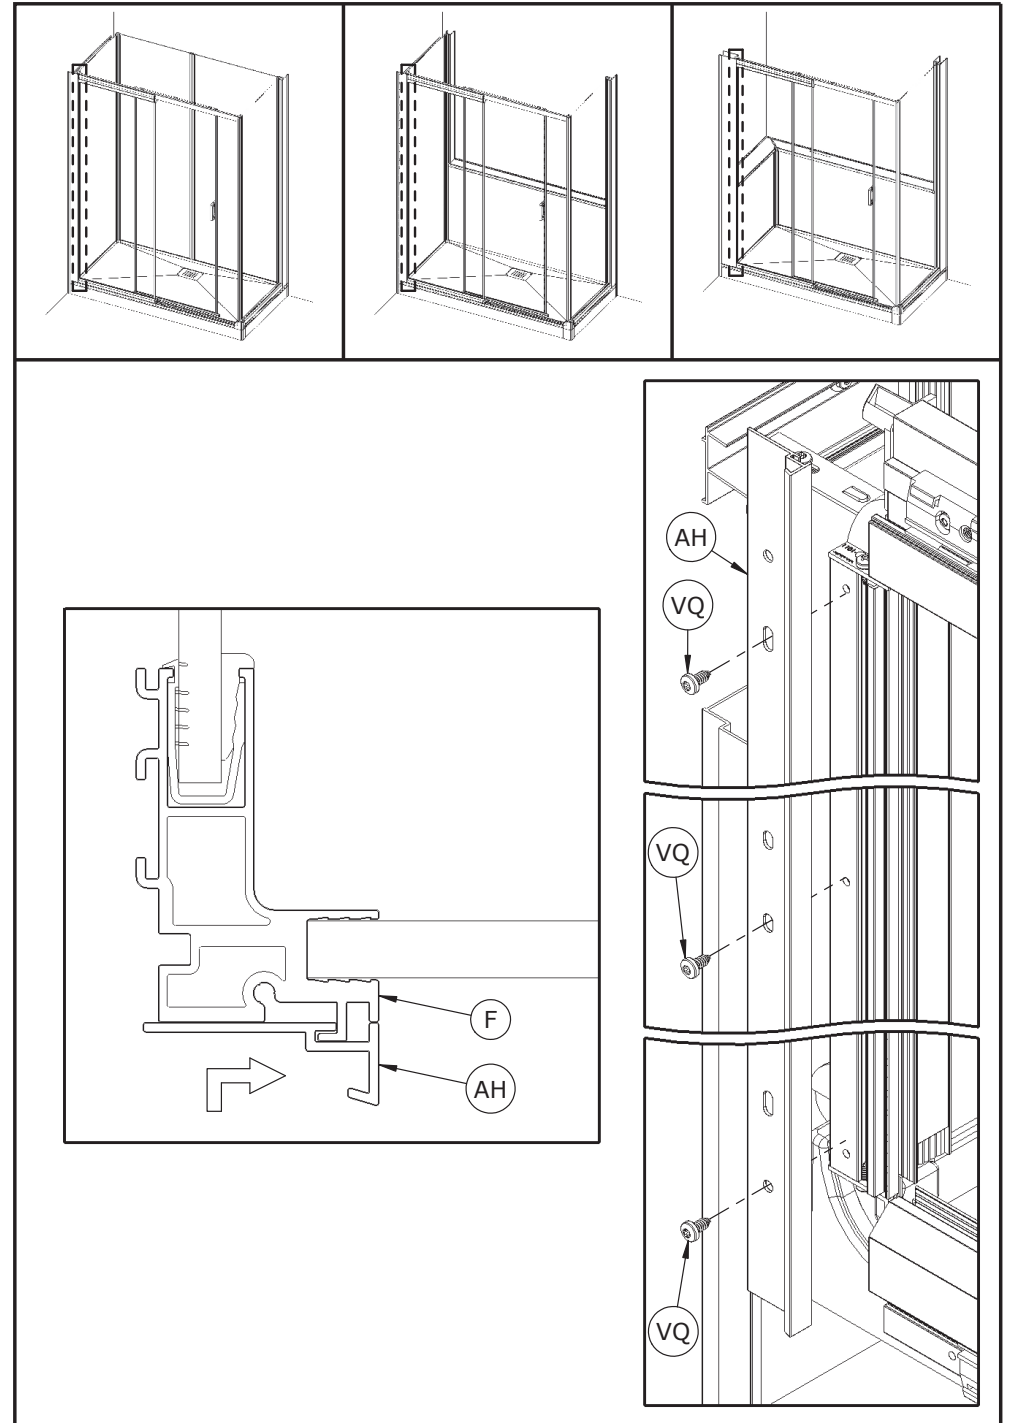
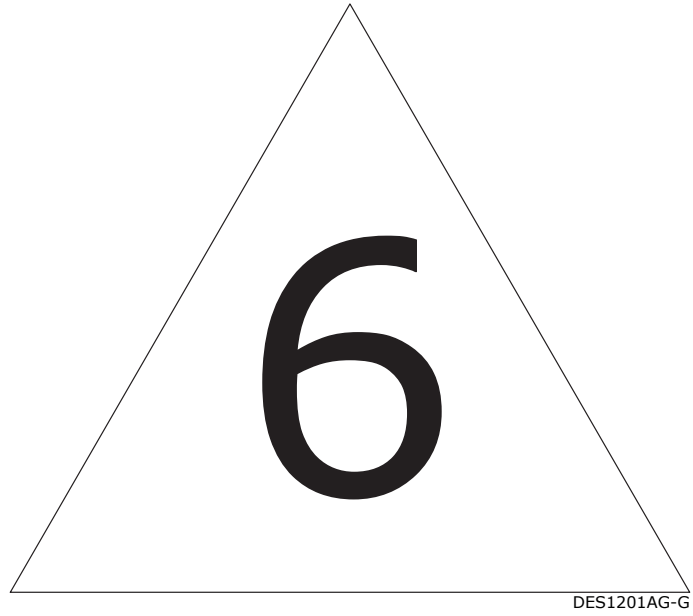


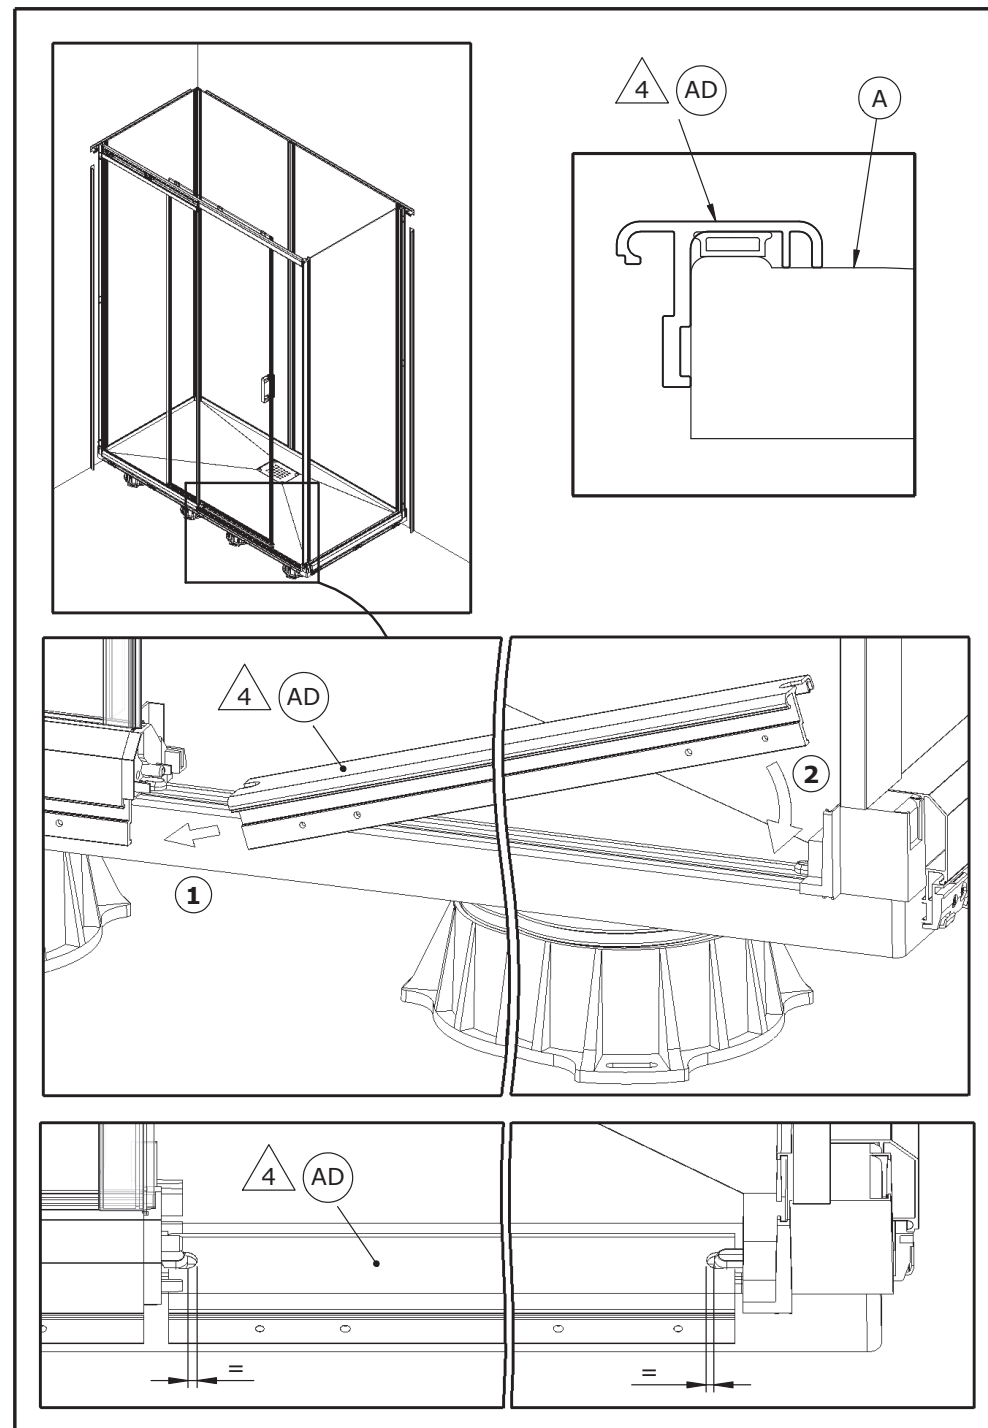
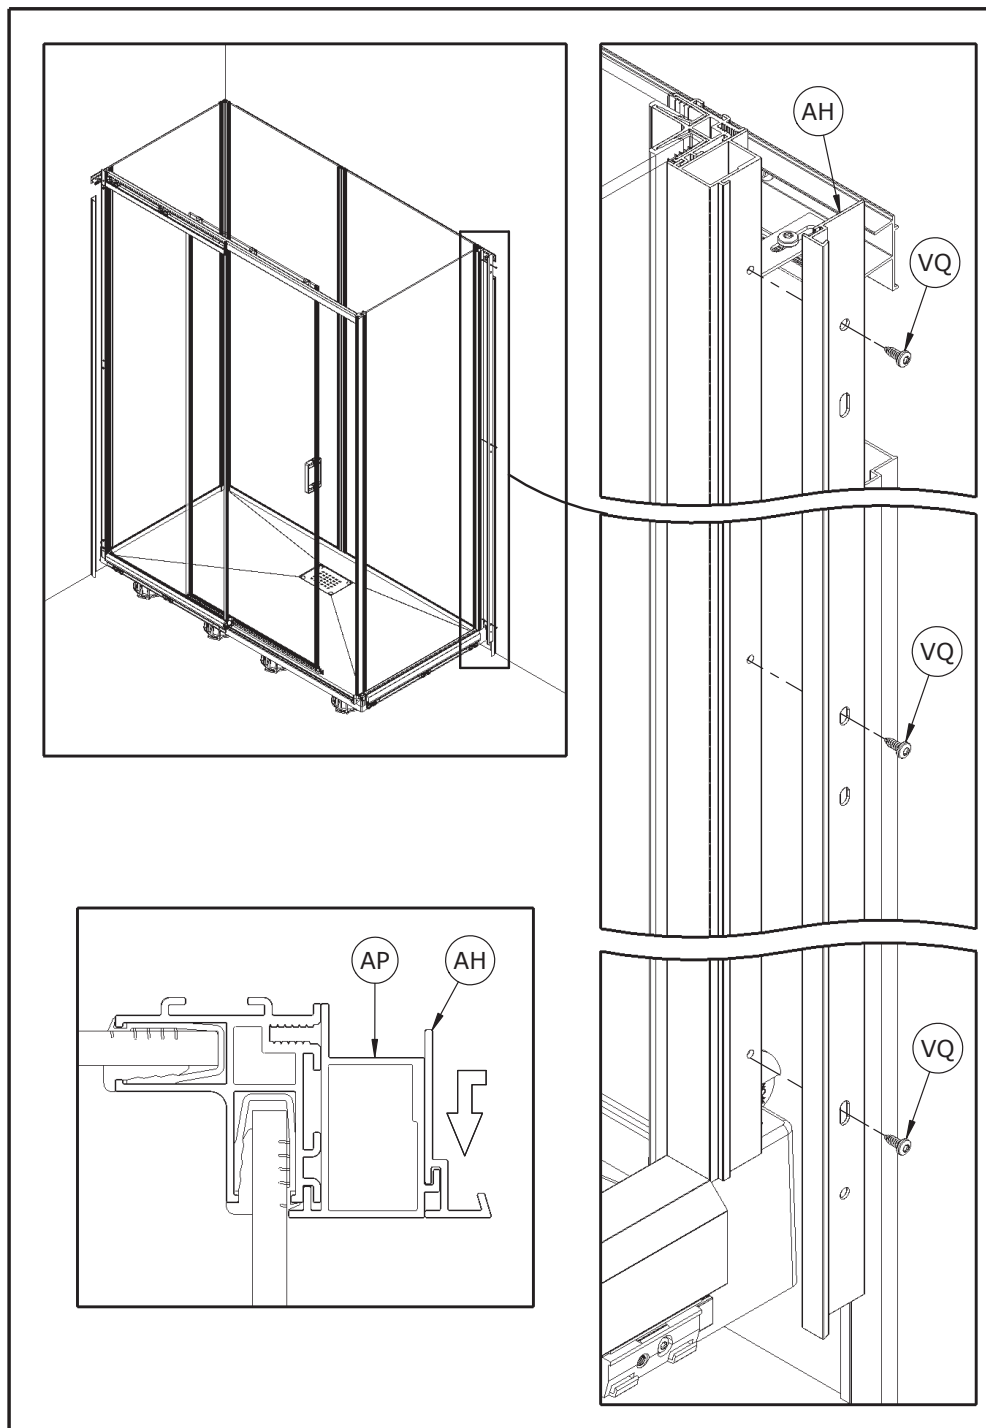


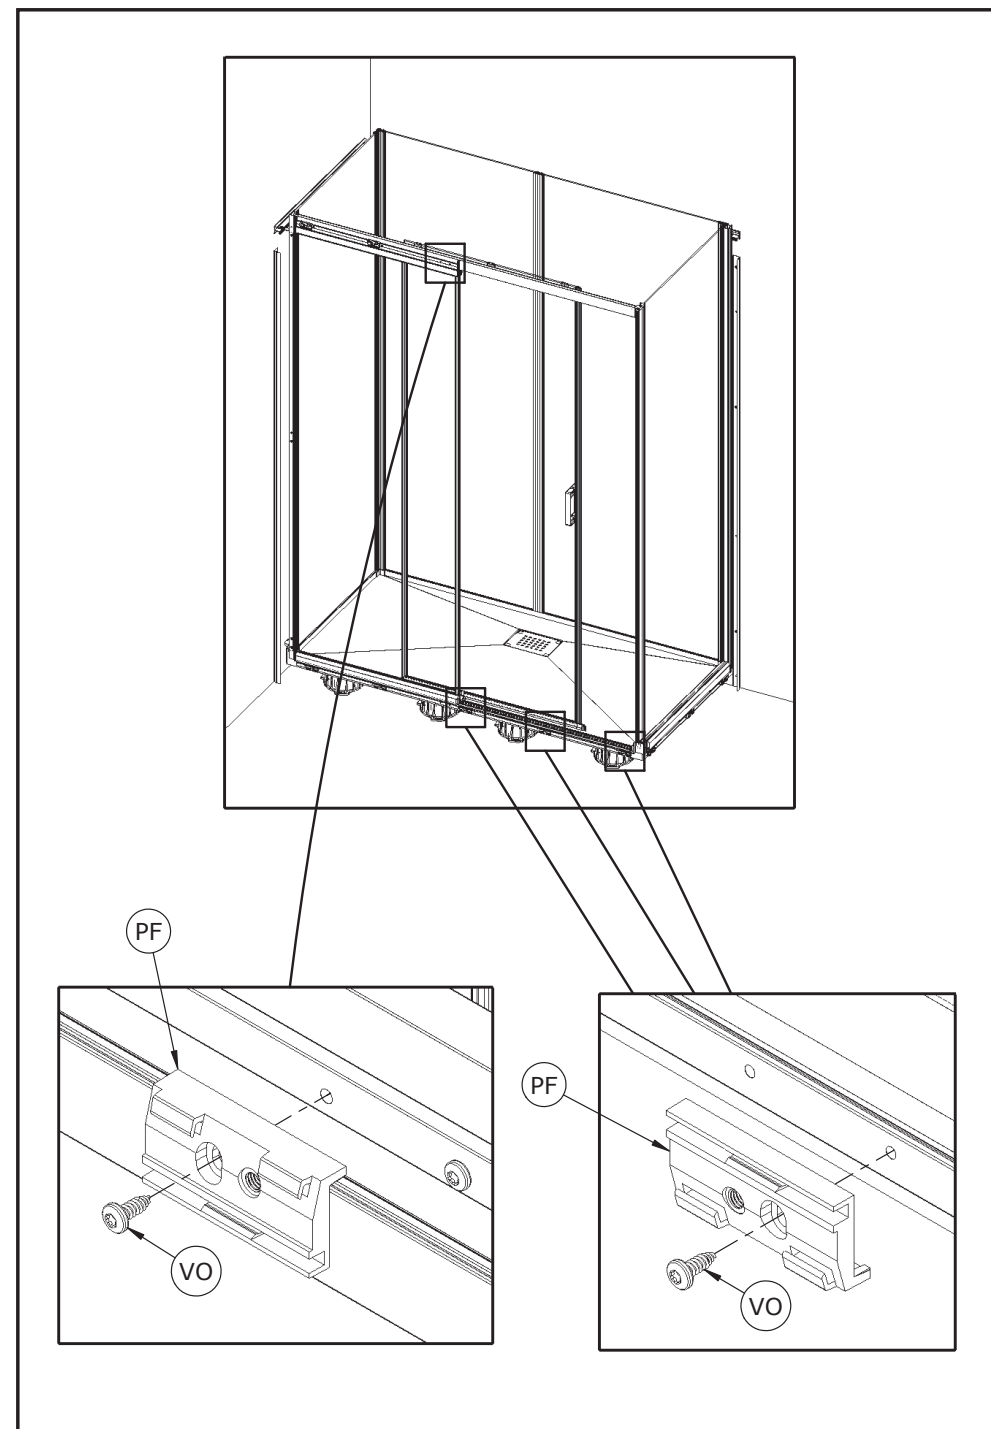
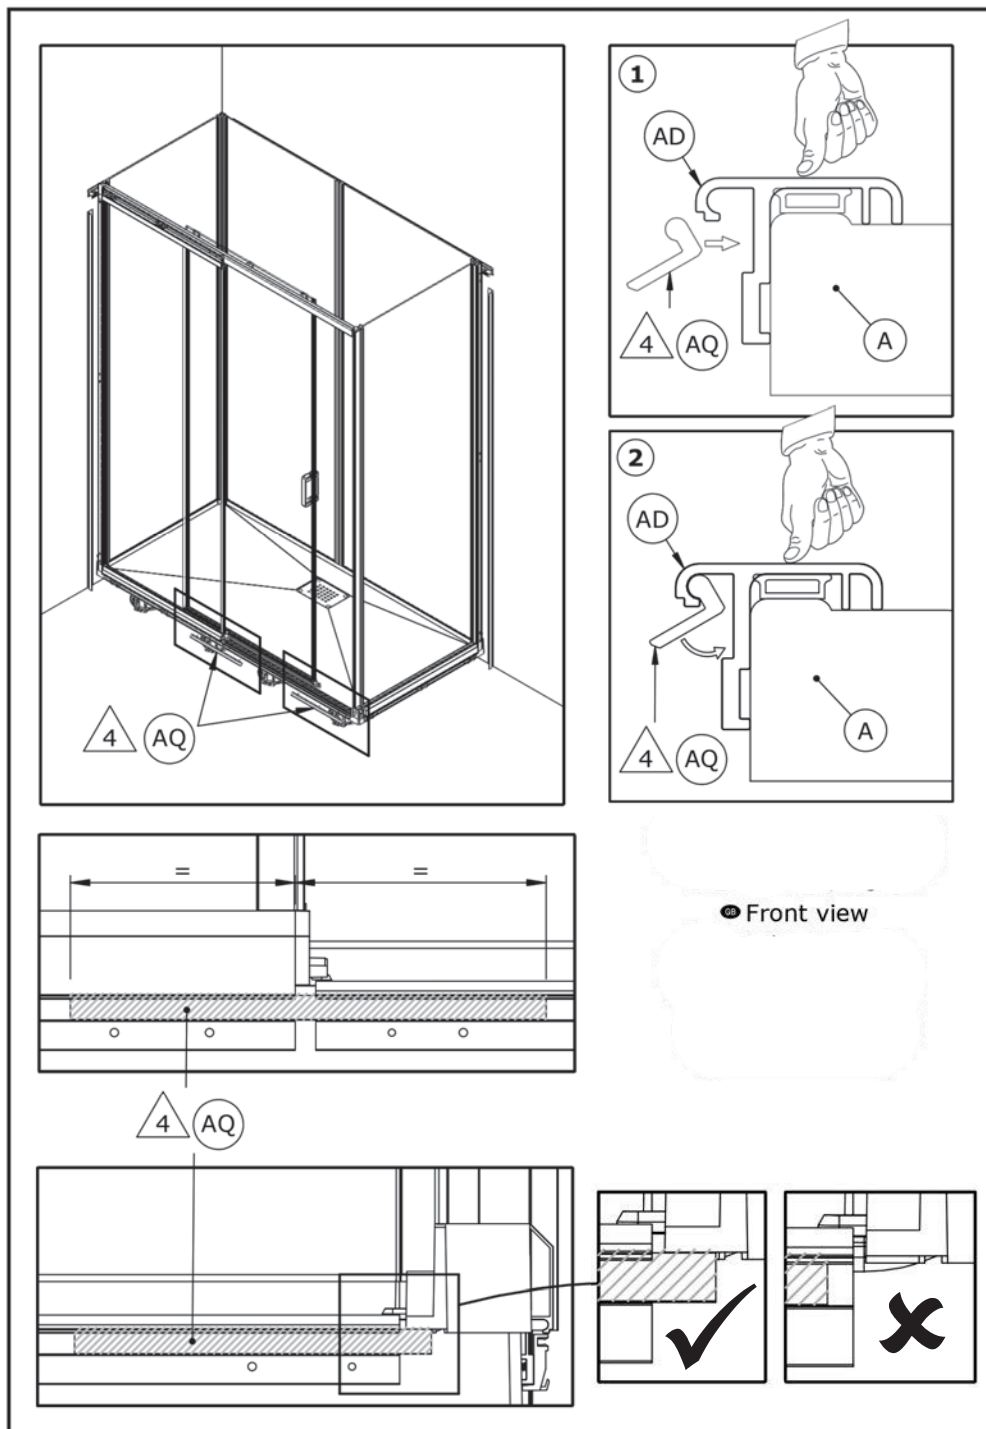


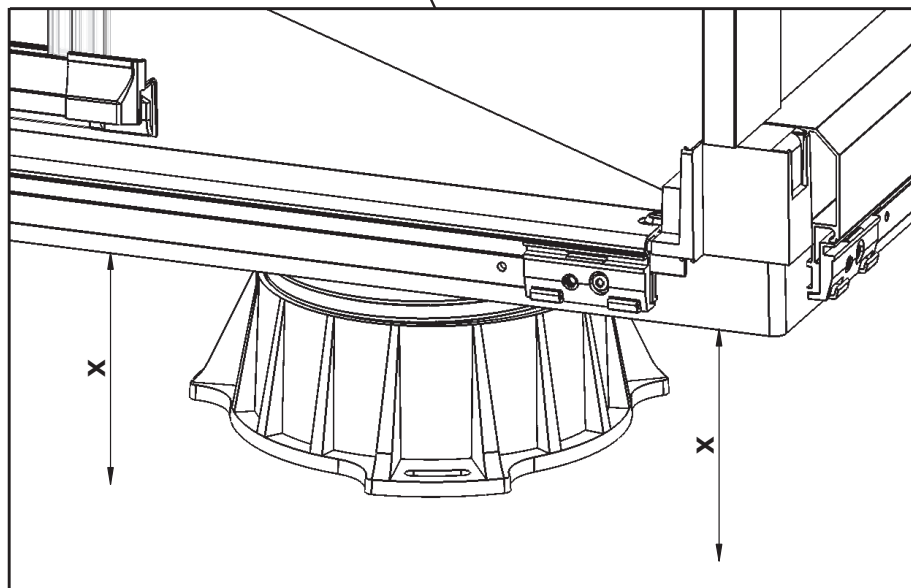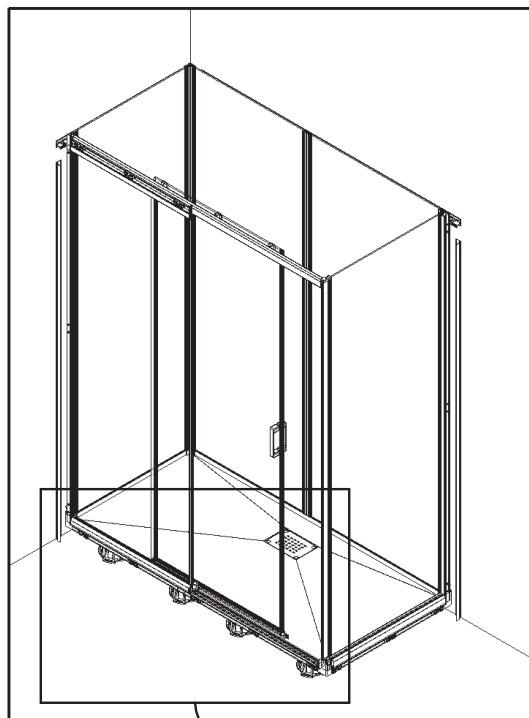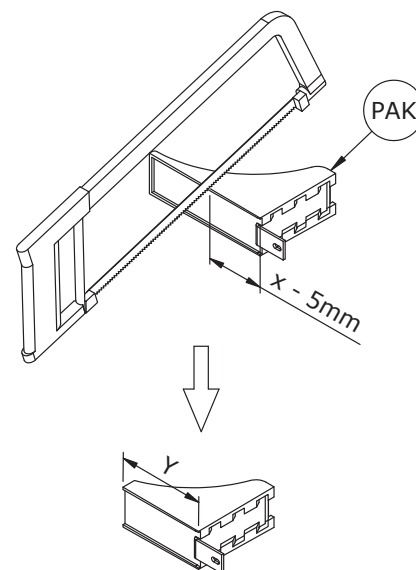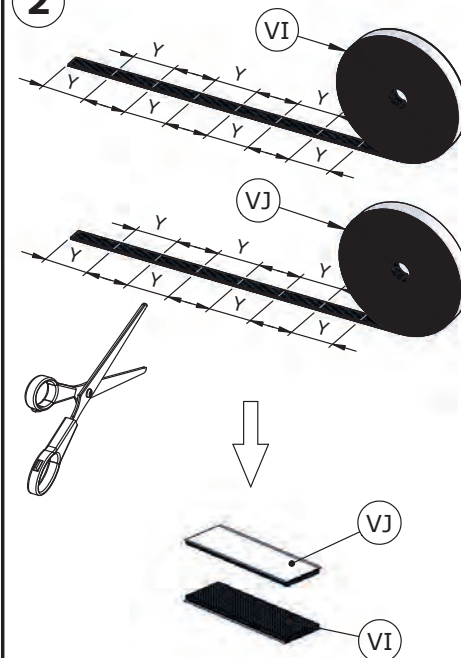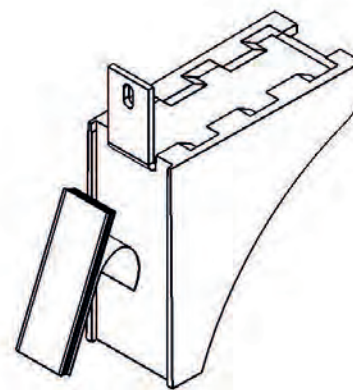
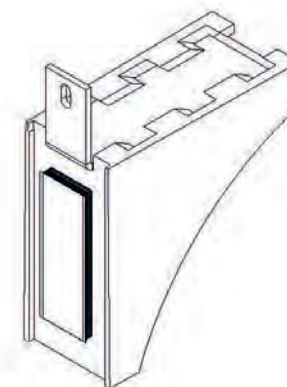
**1****2****3****4**

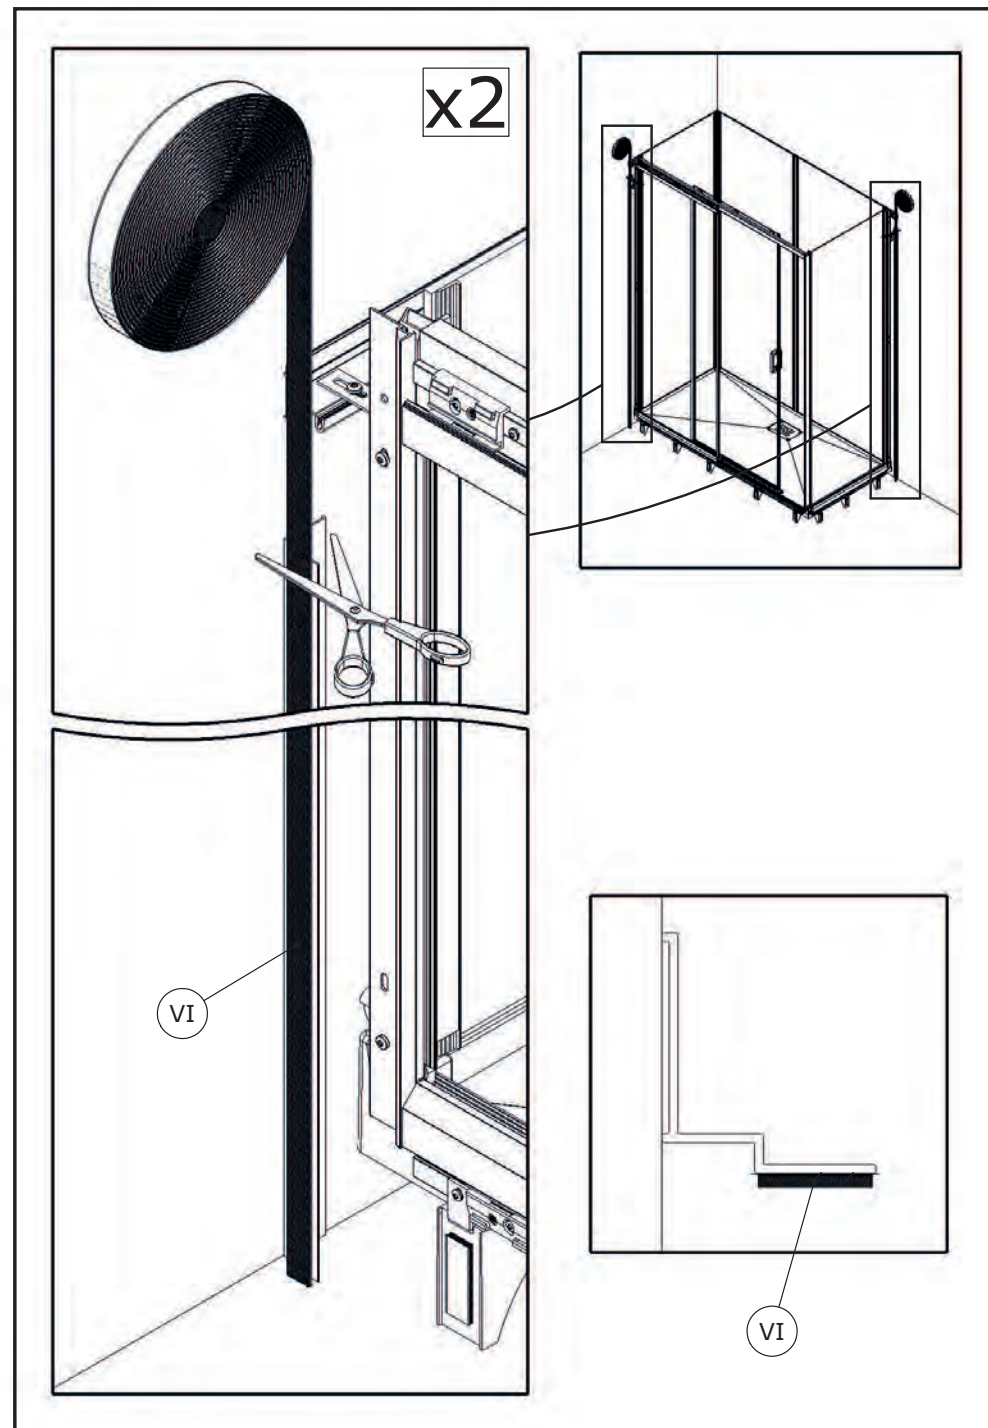
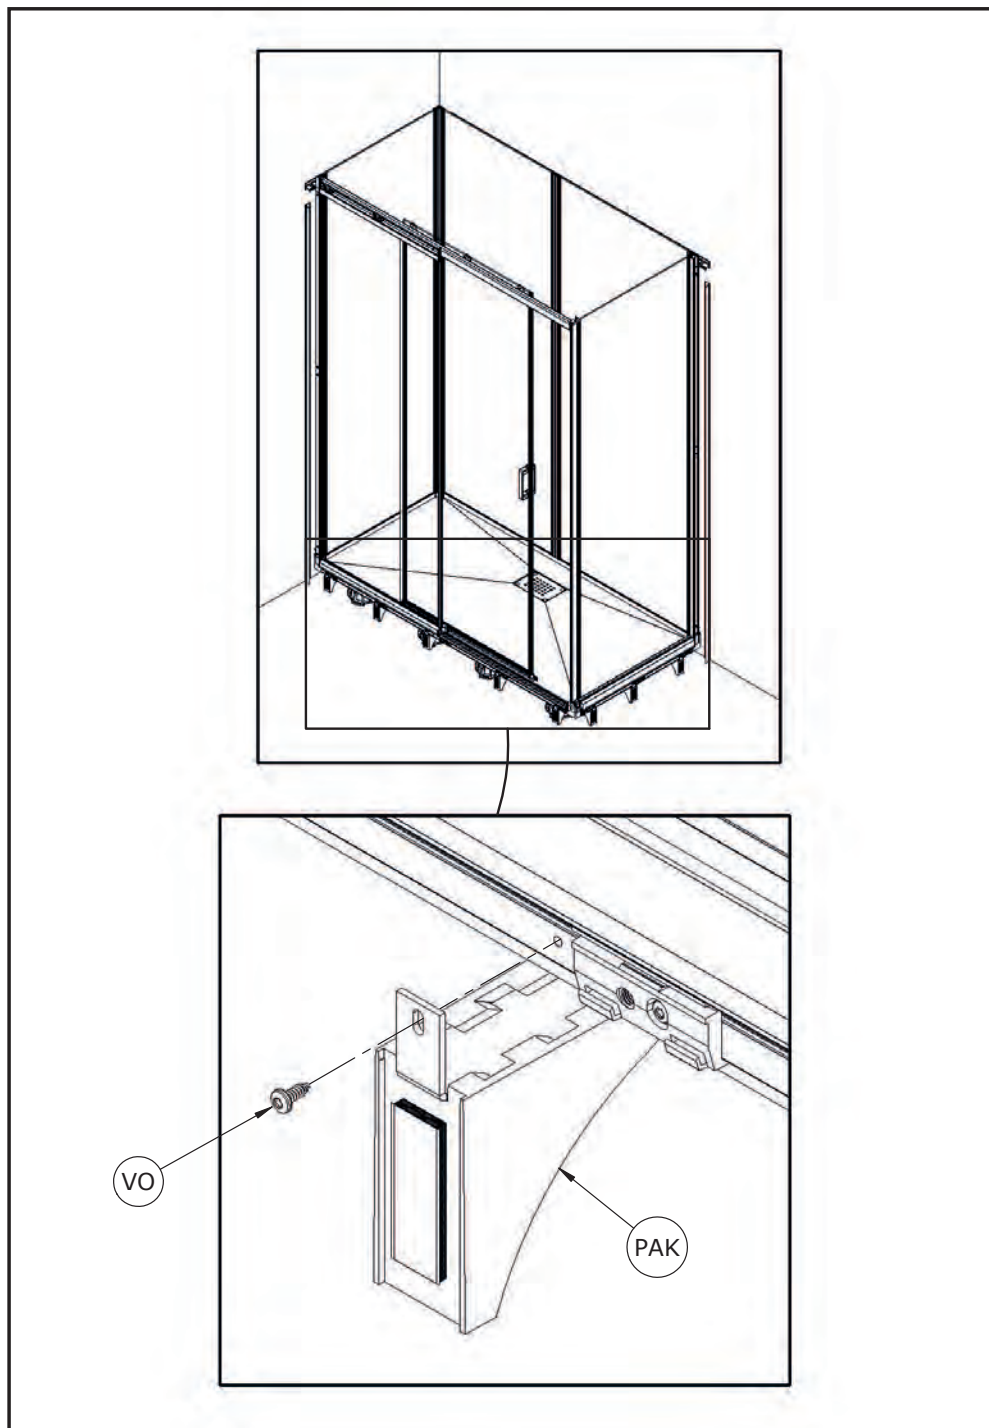


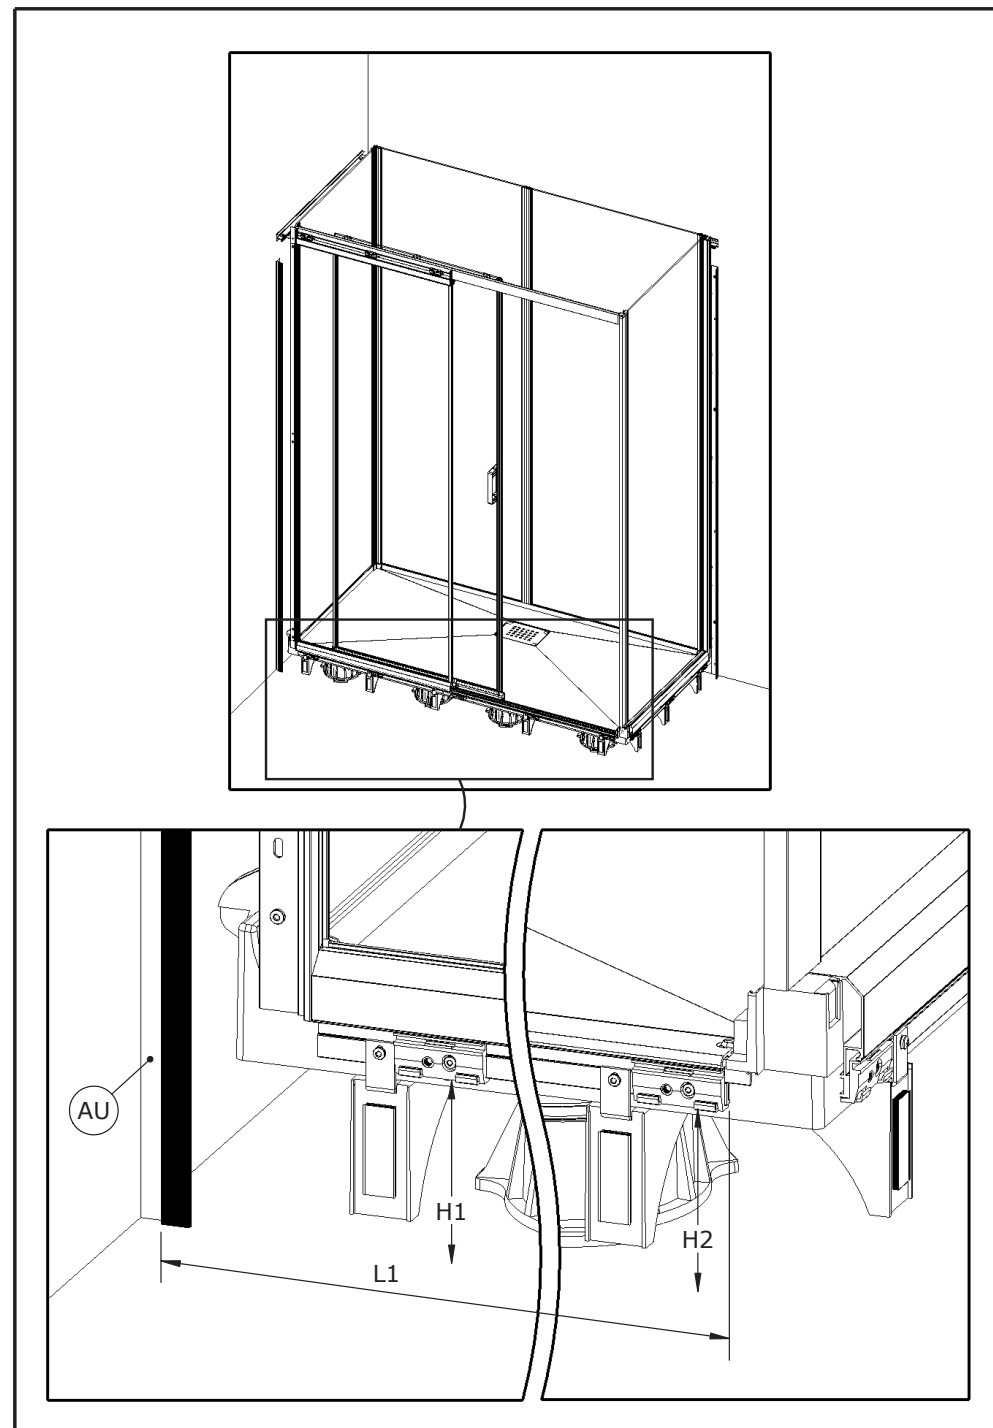
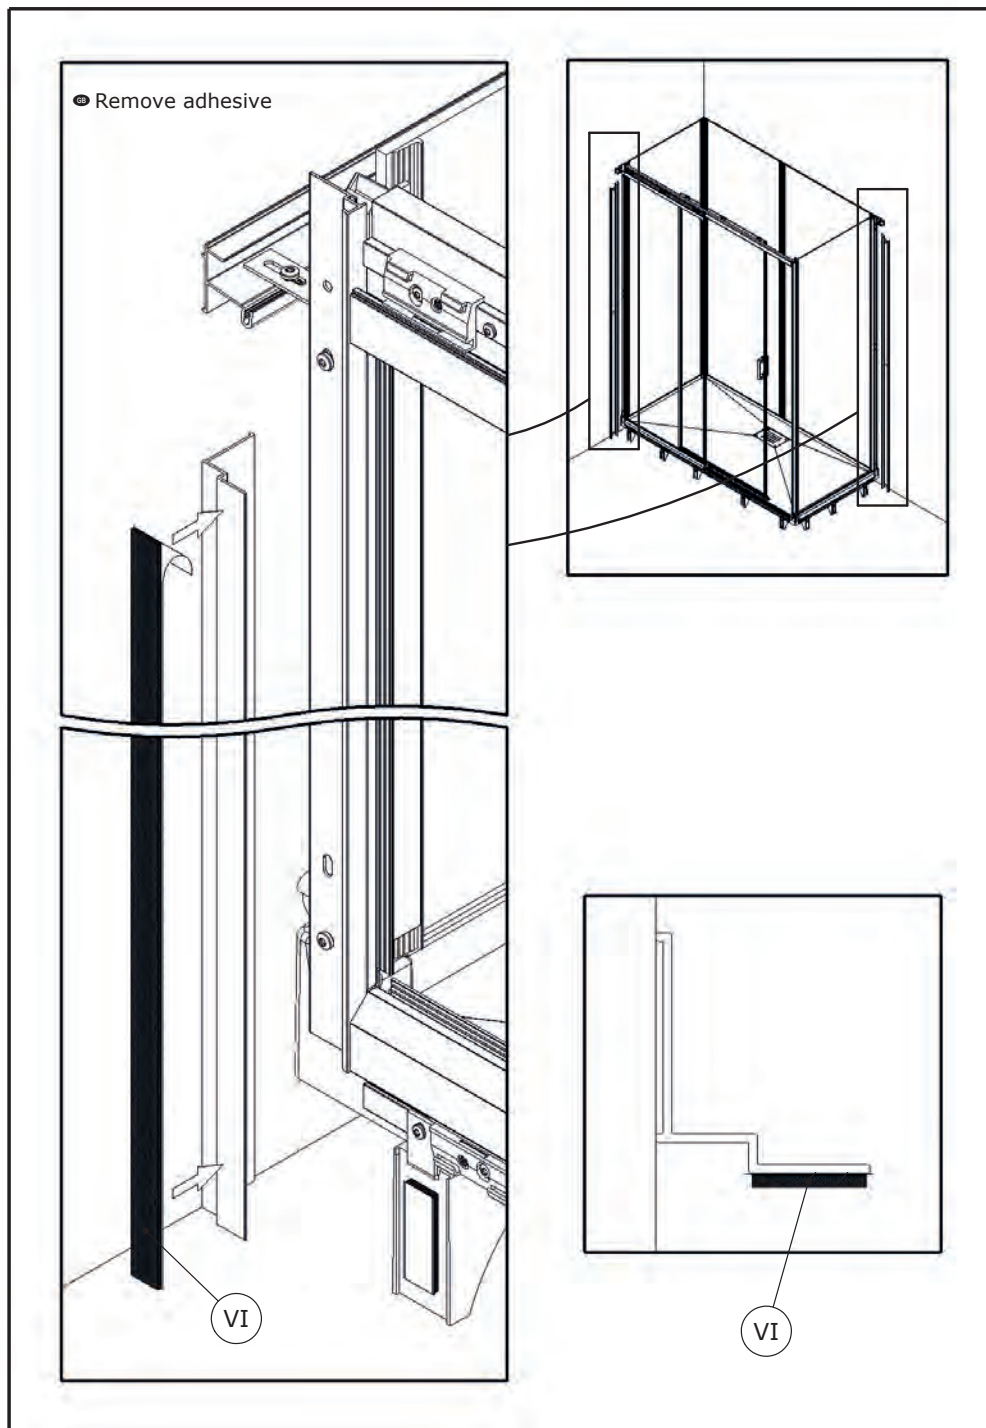


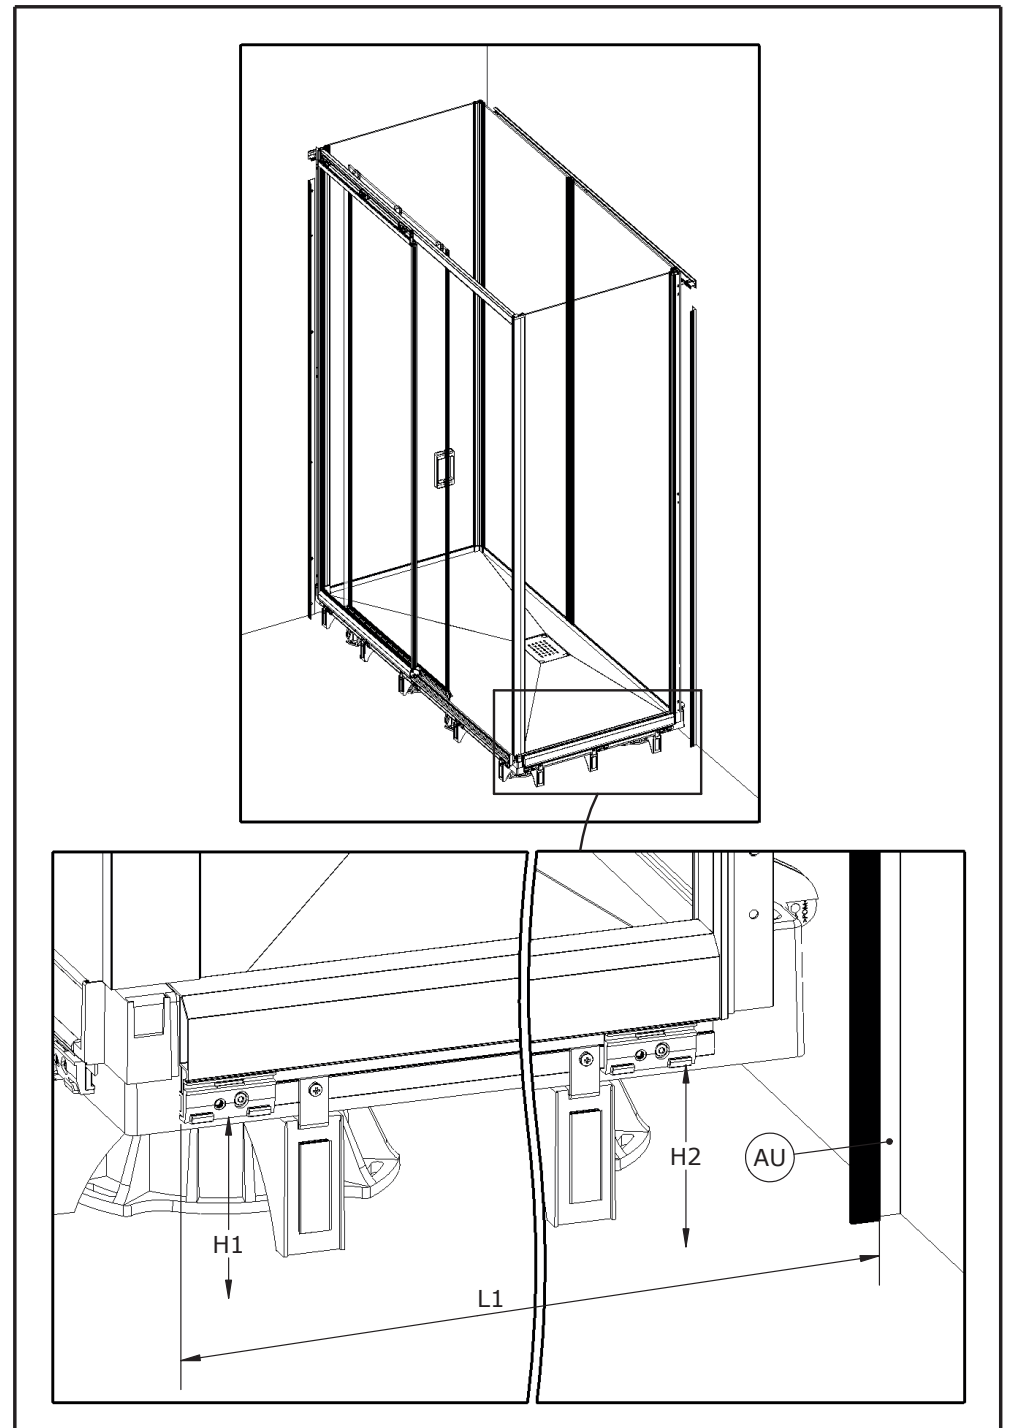
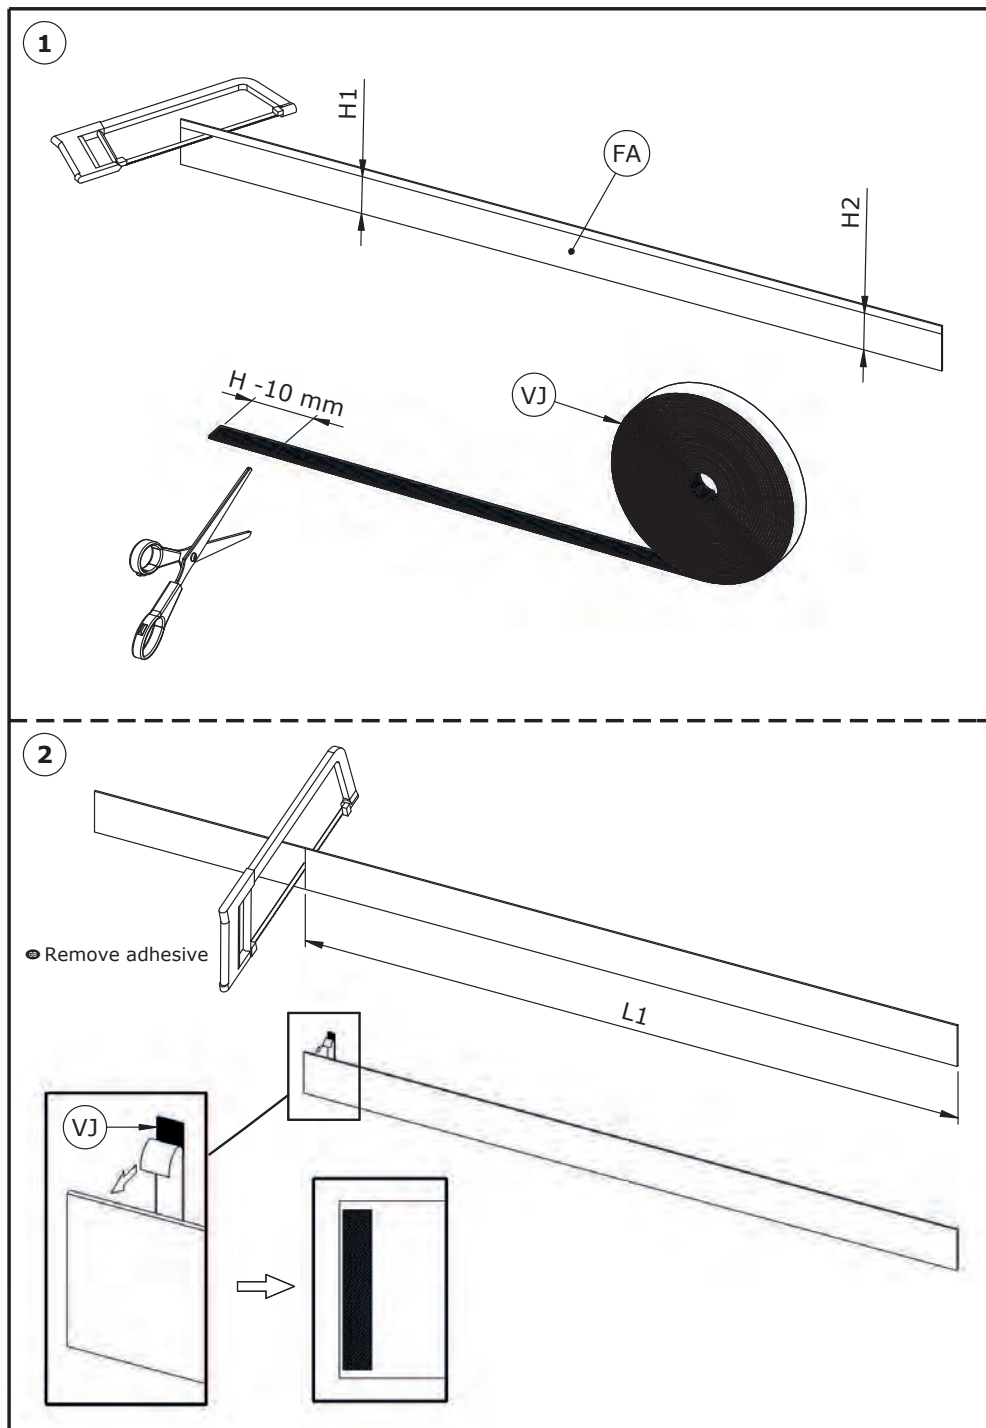


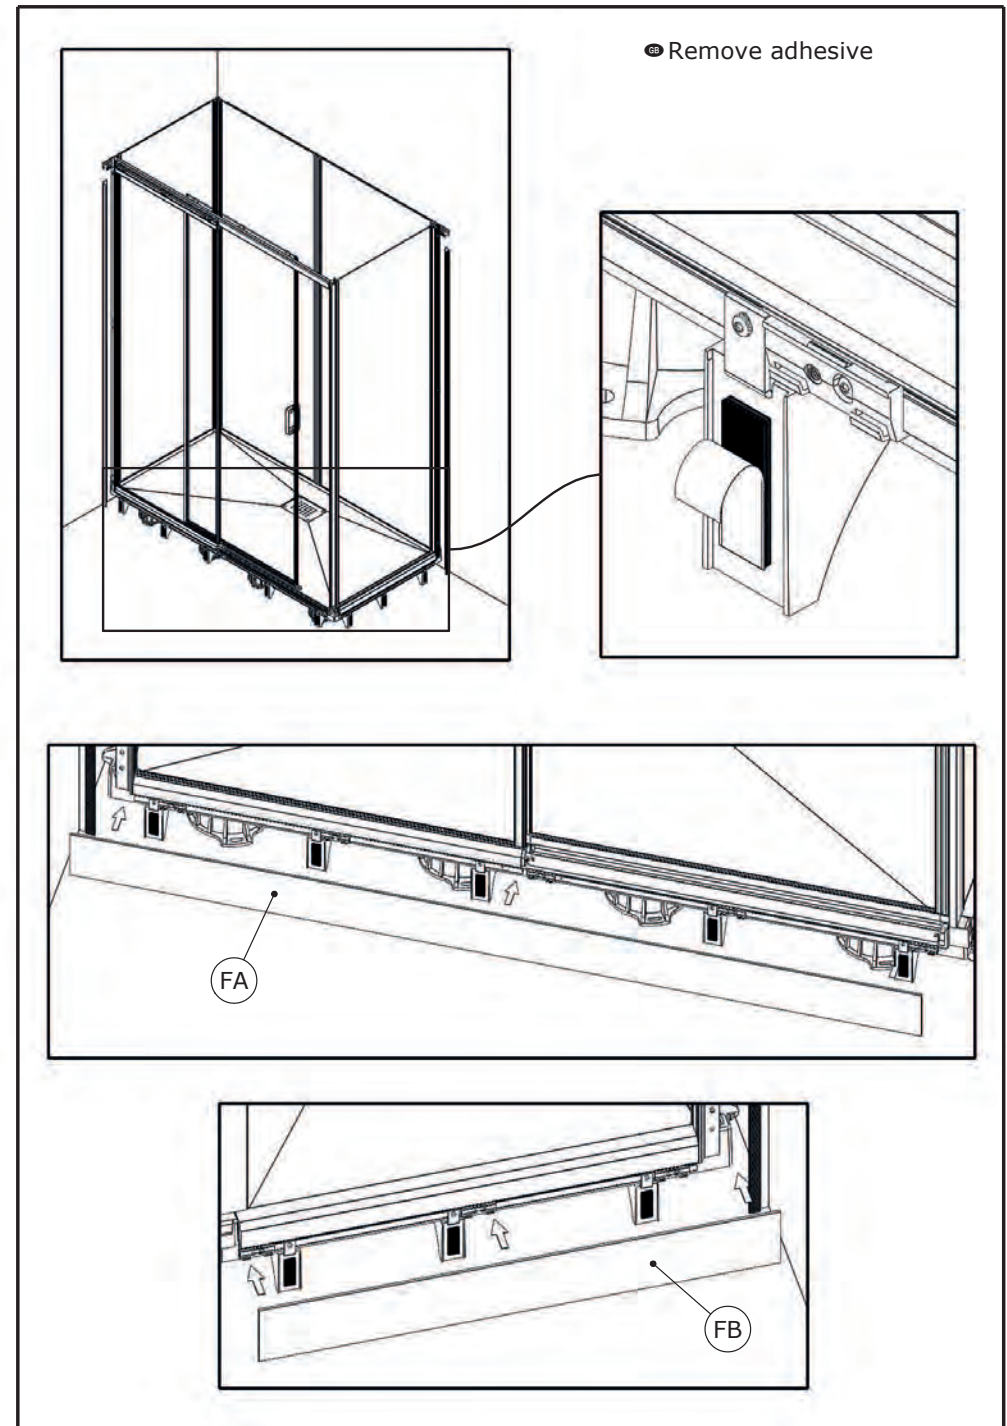
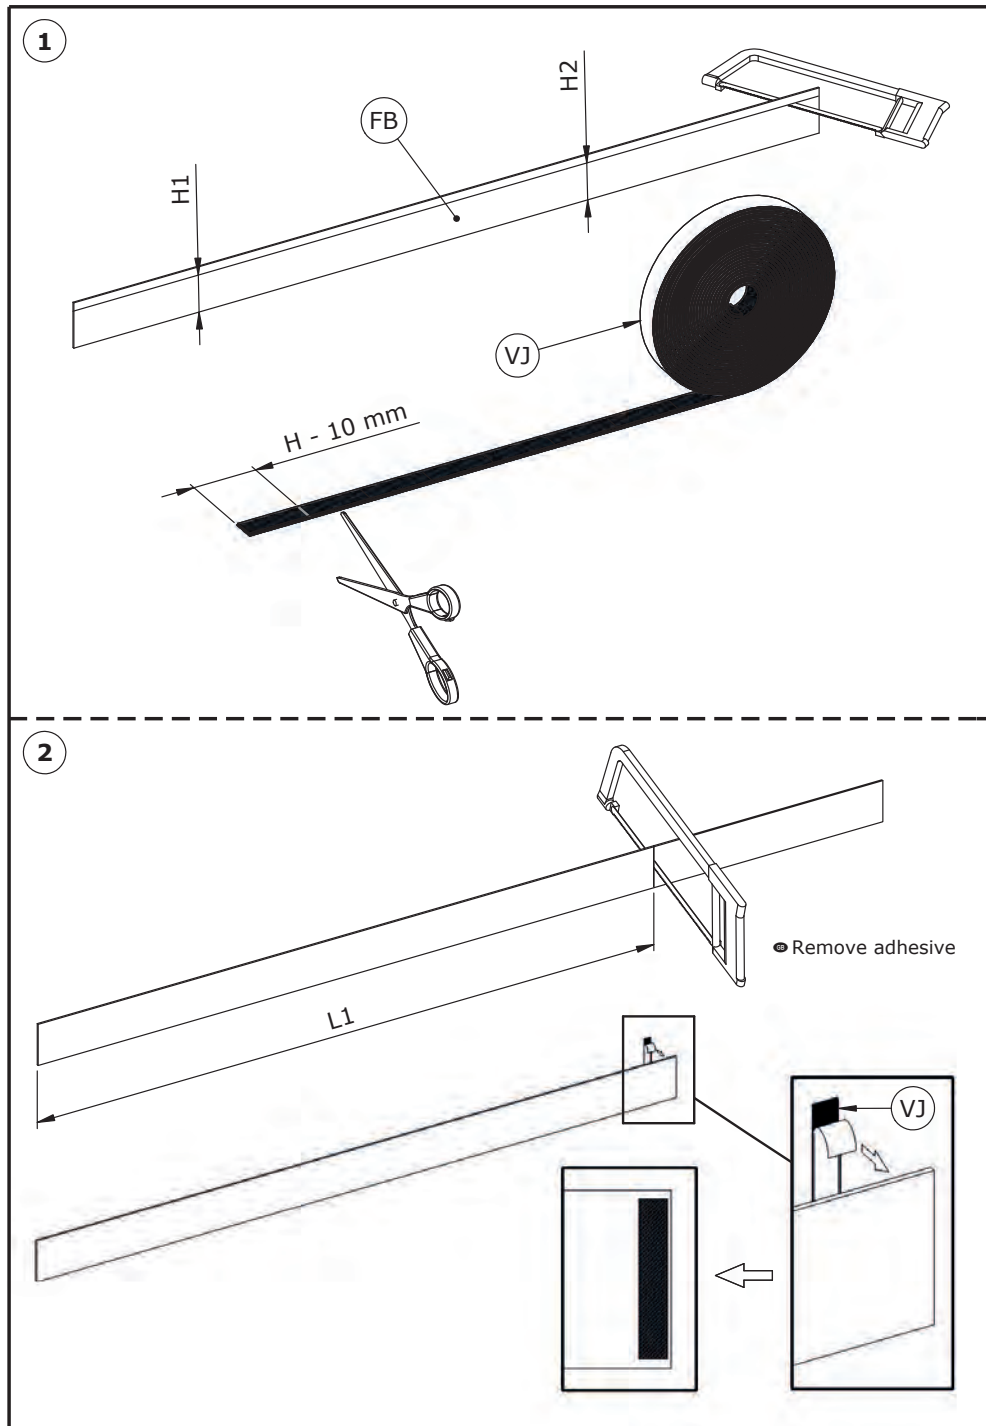


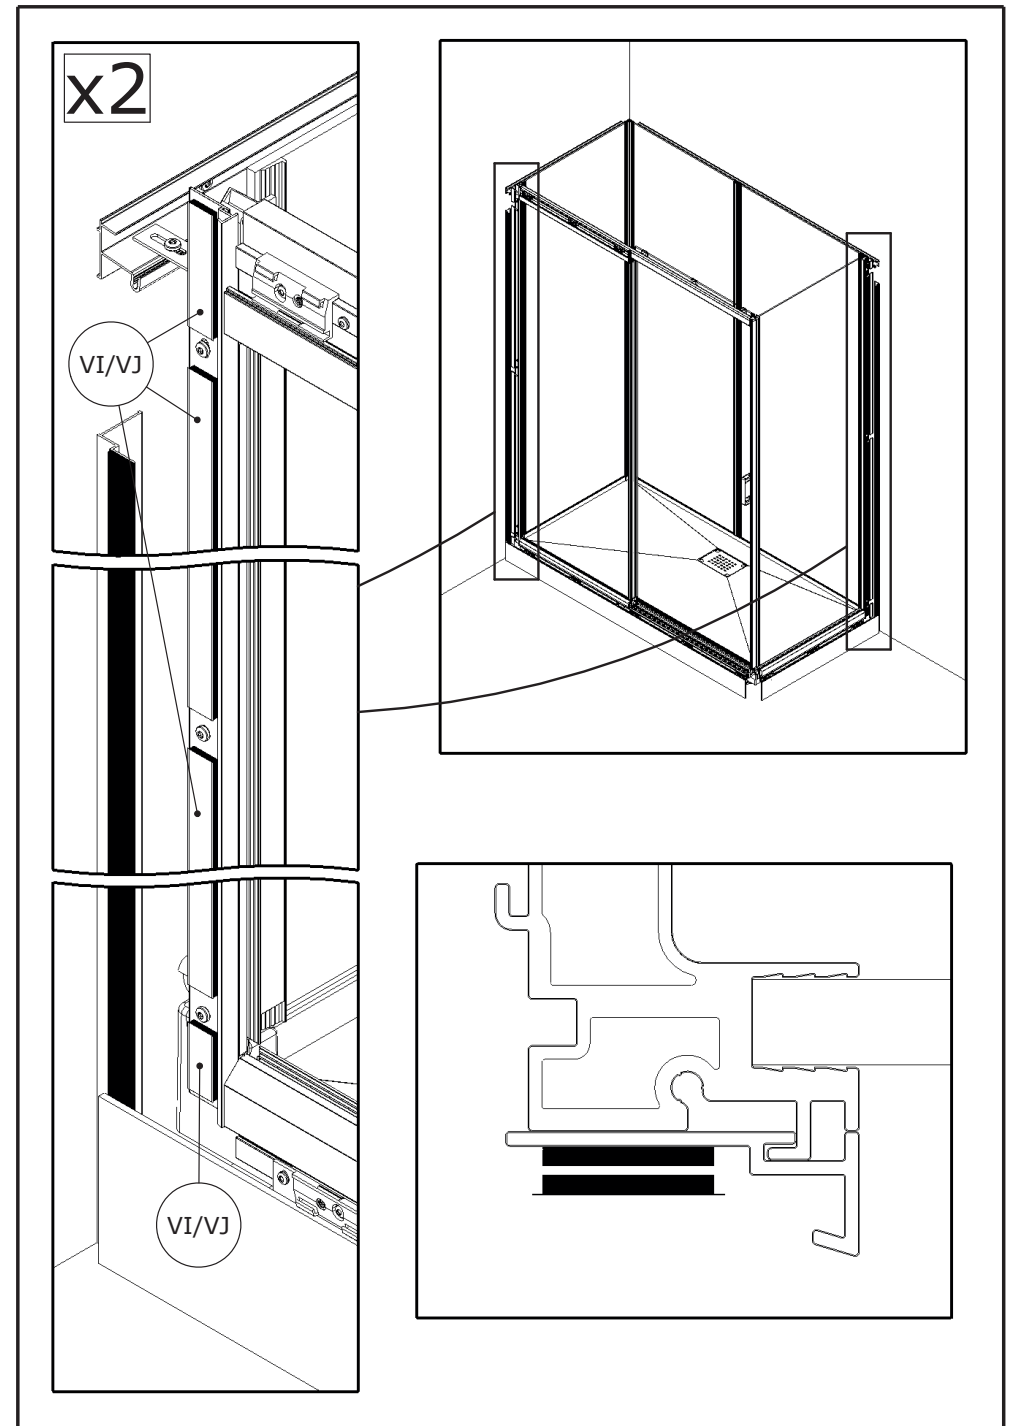
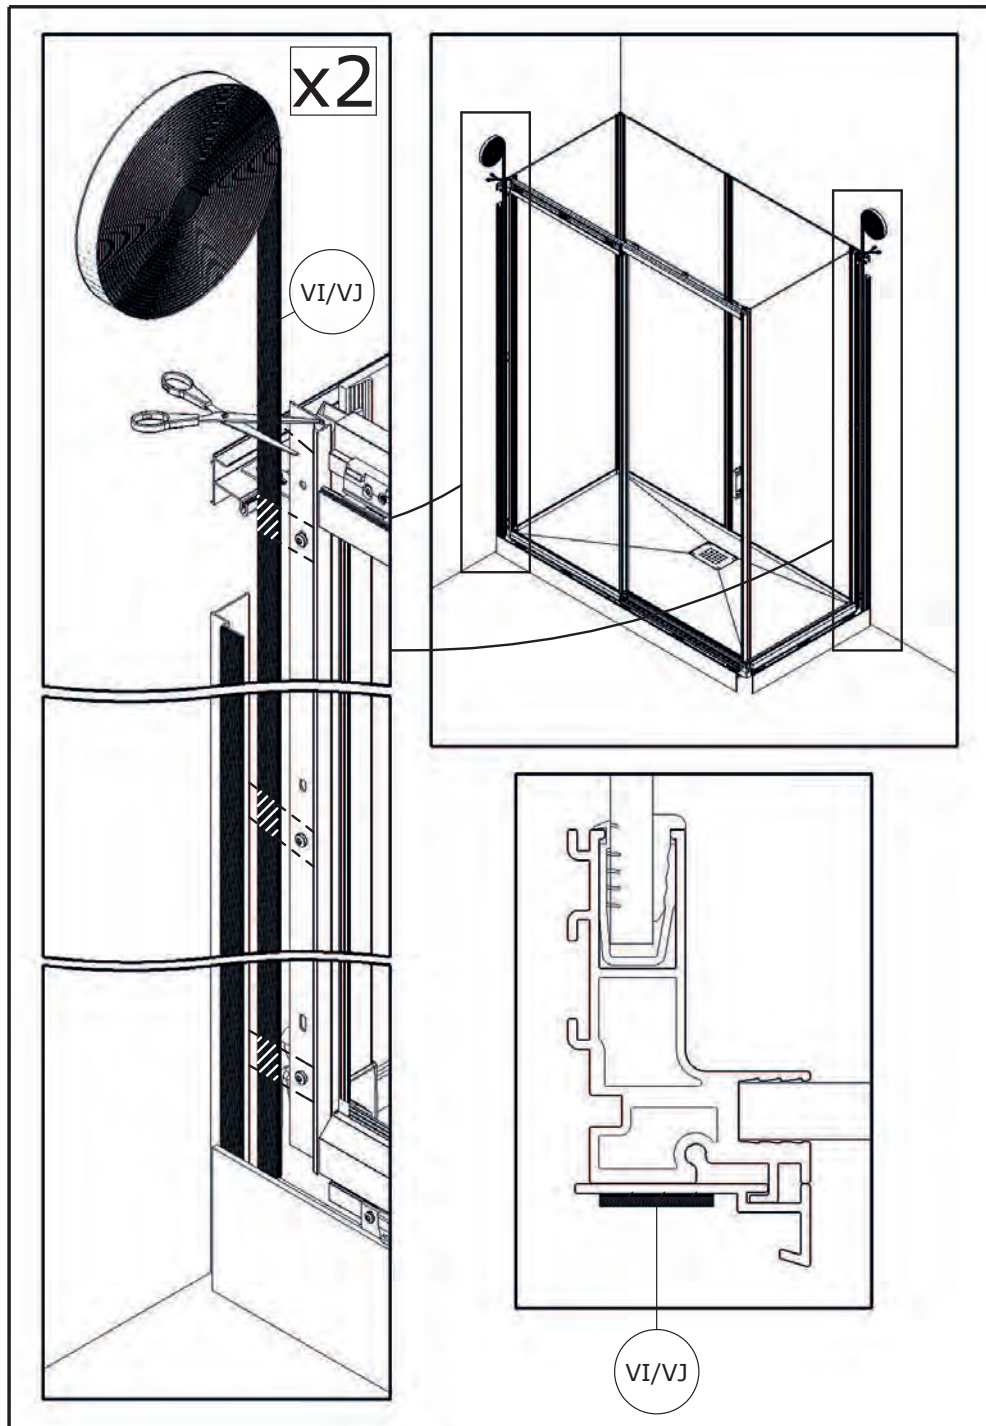


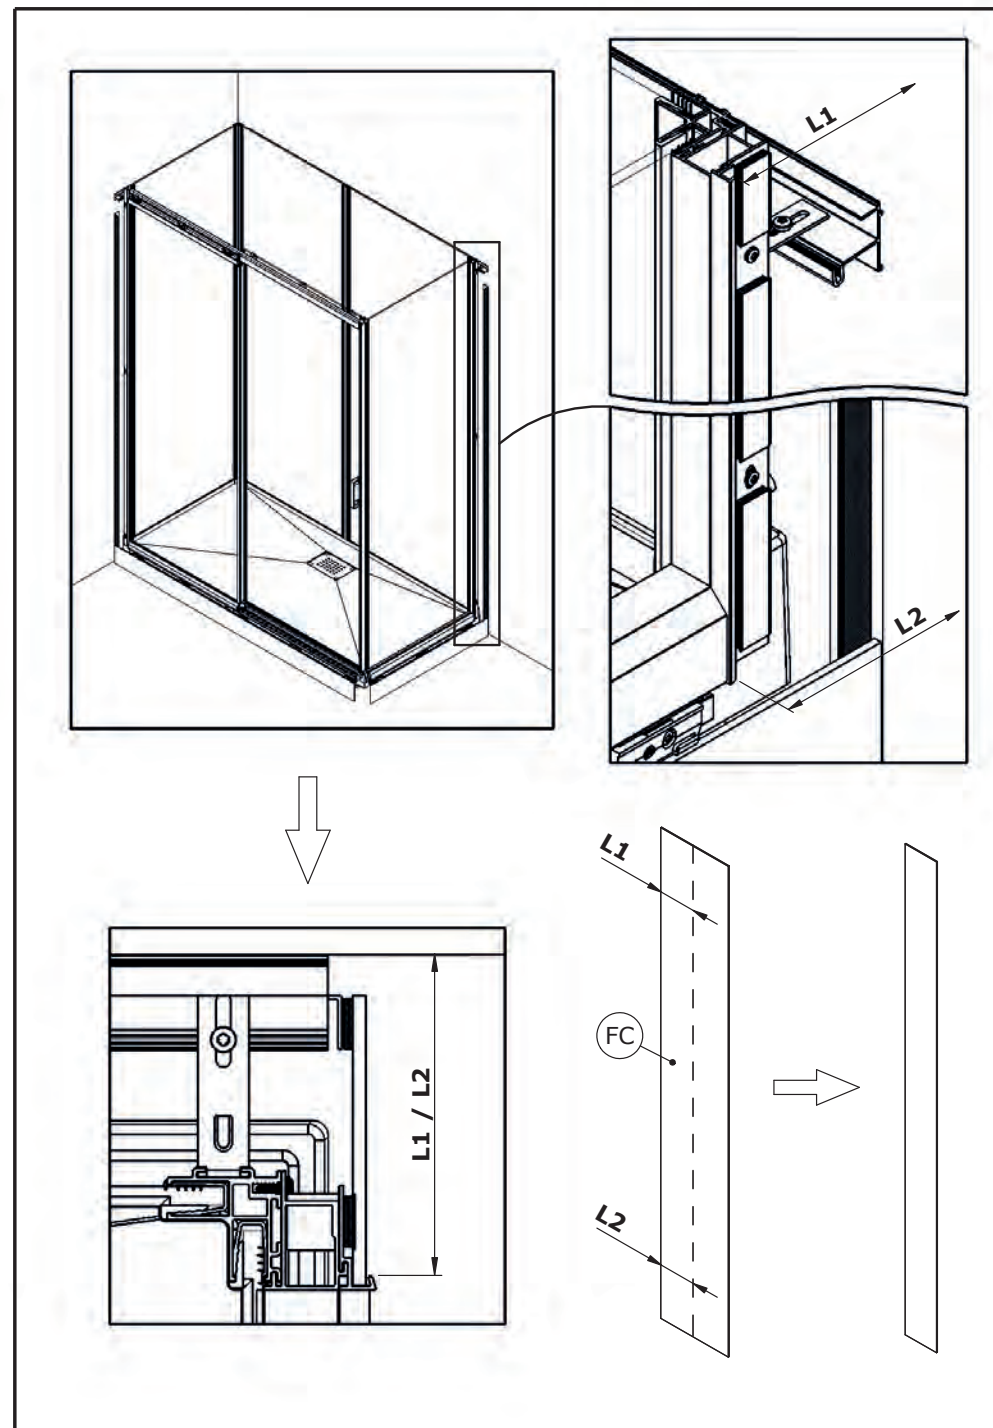
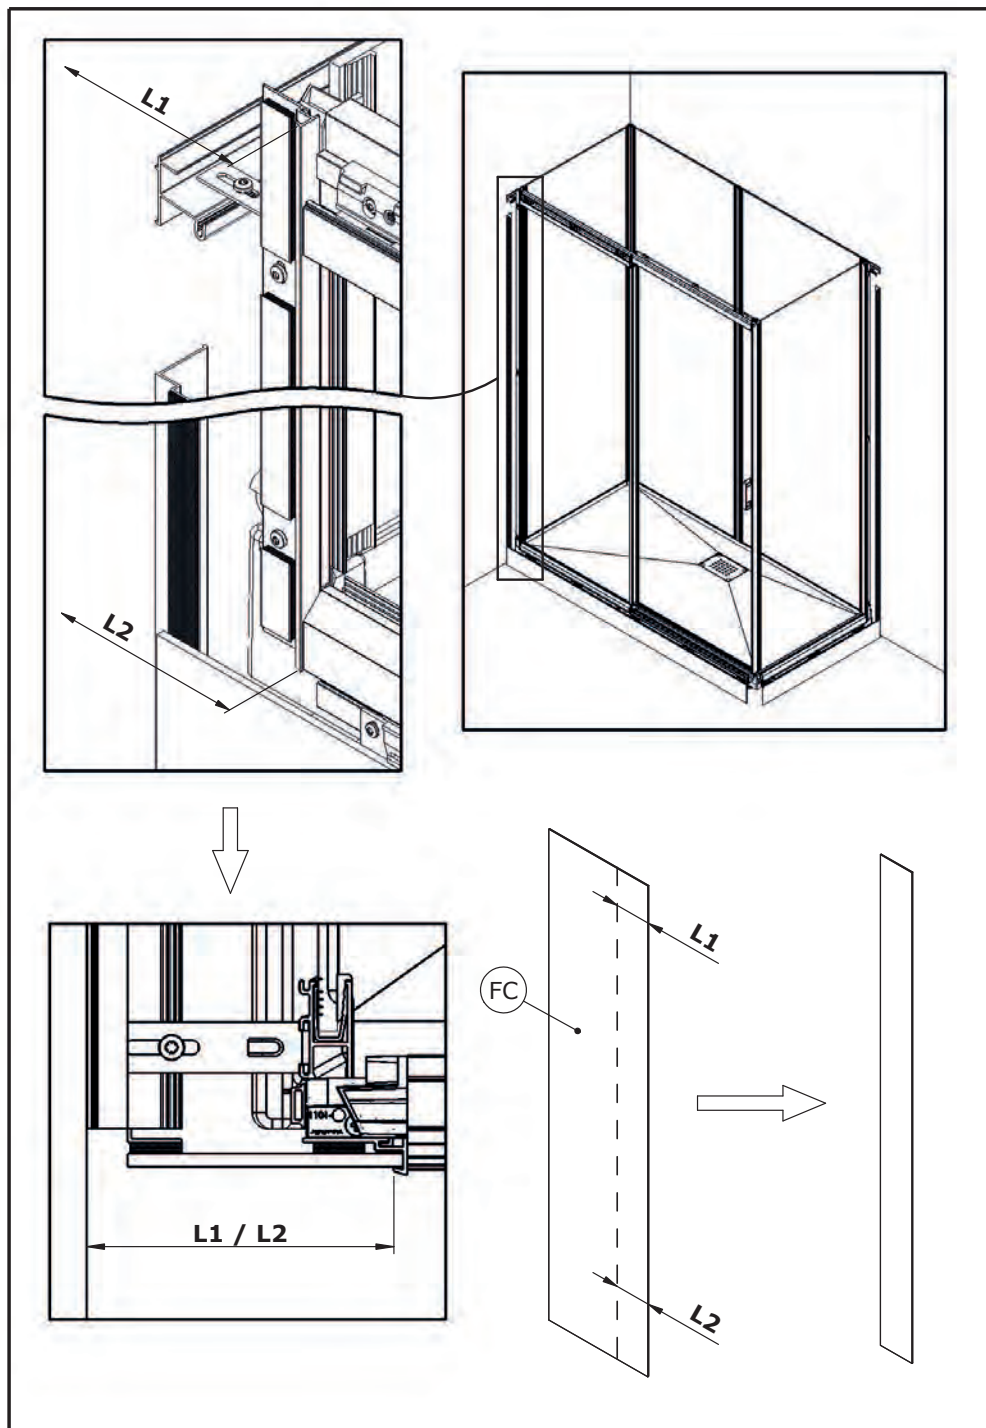




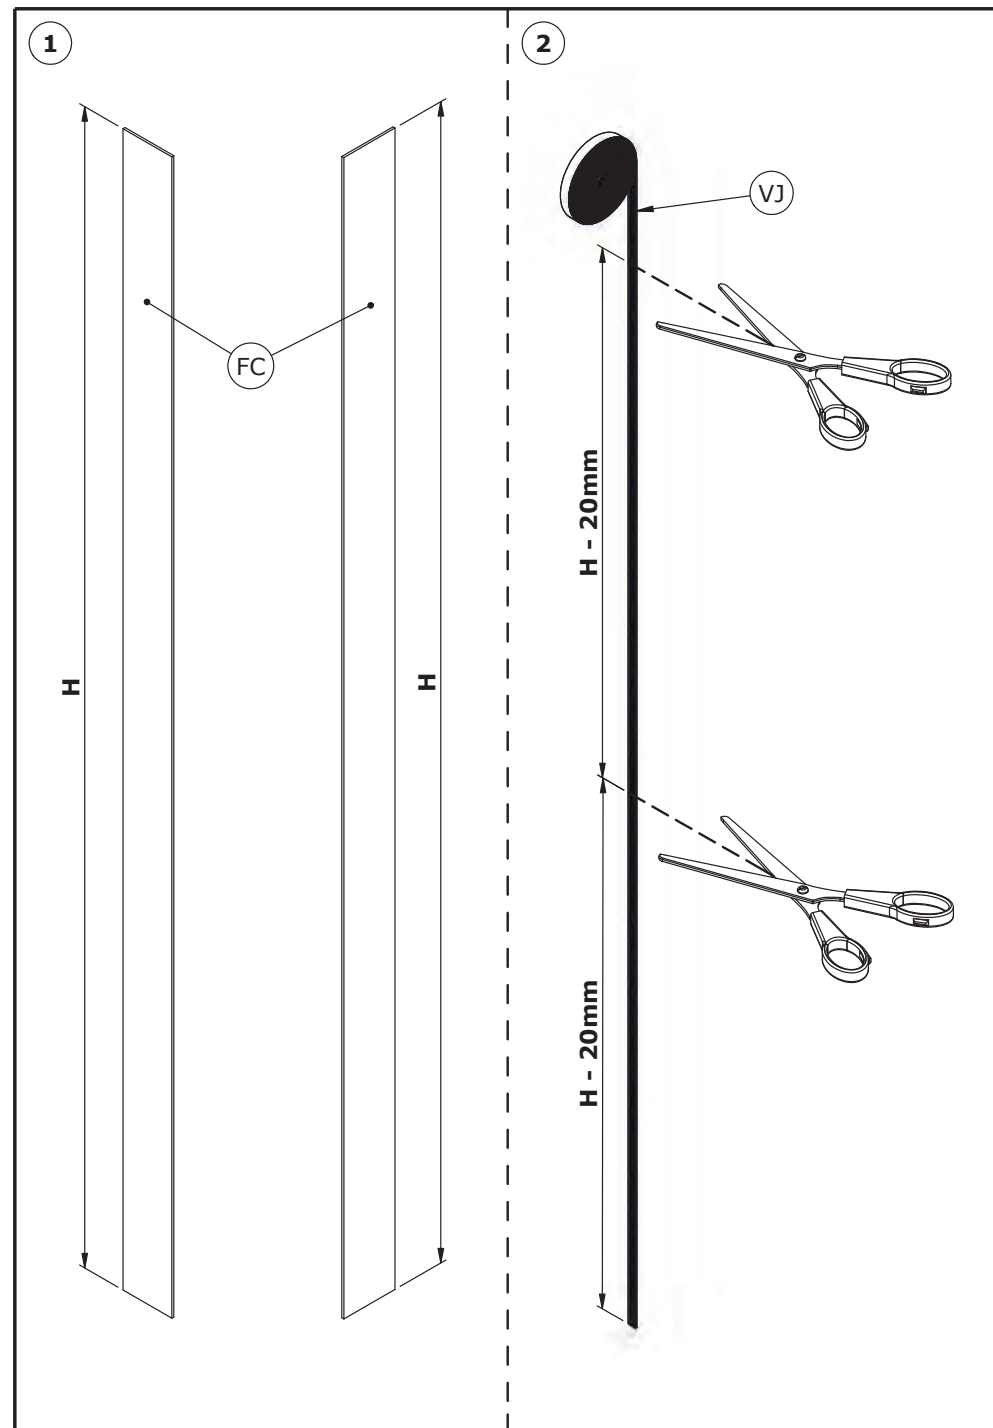
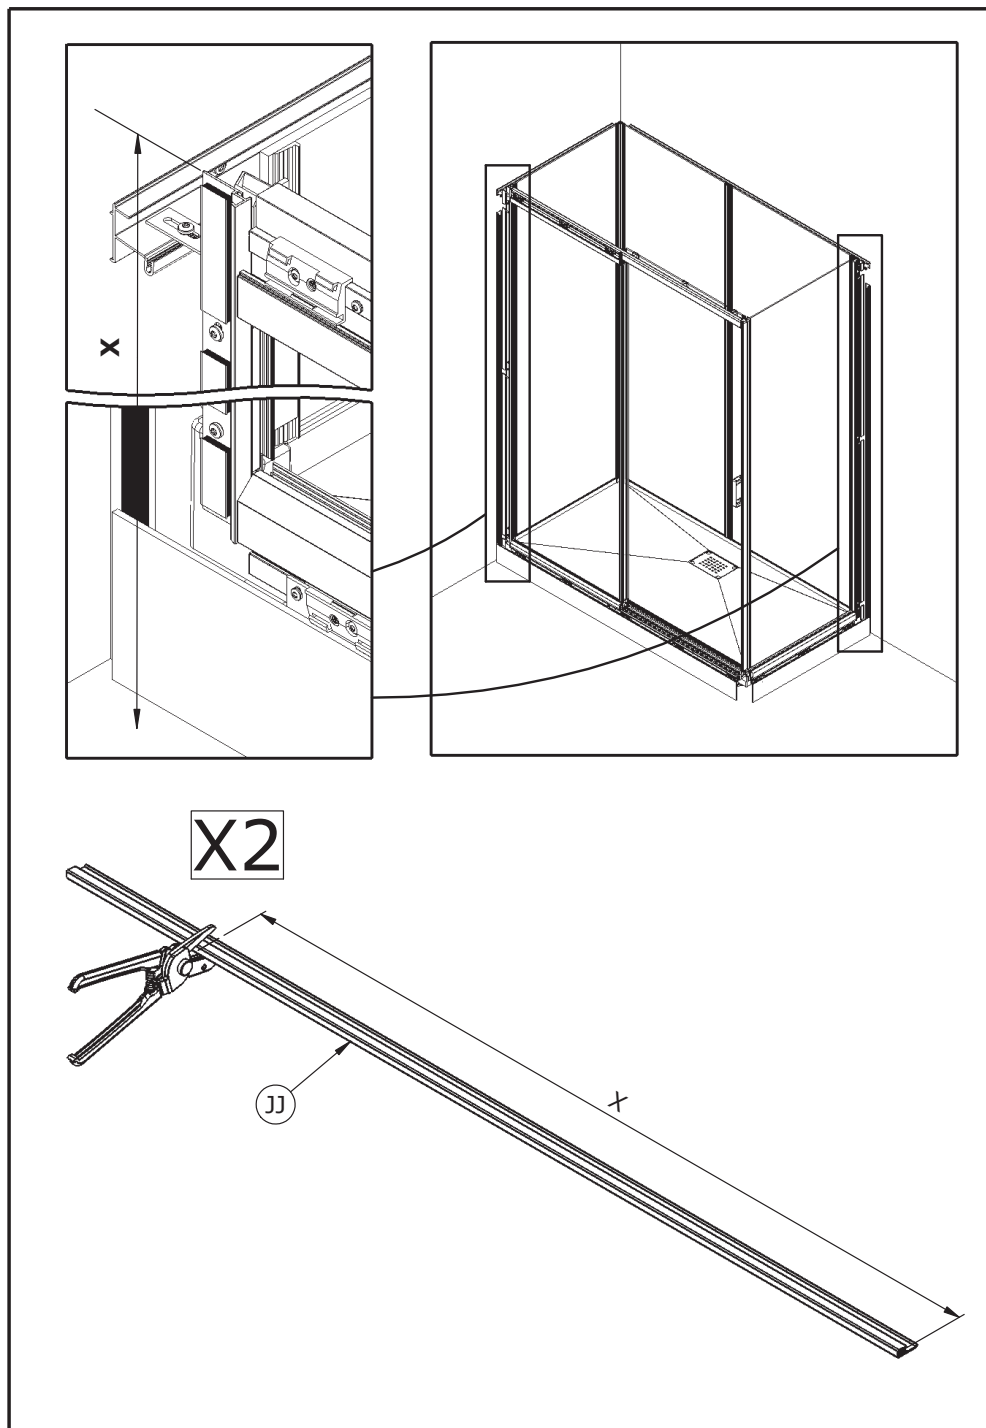


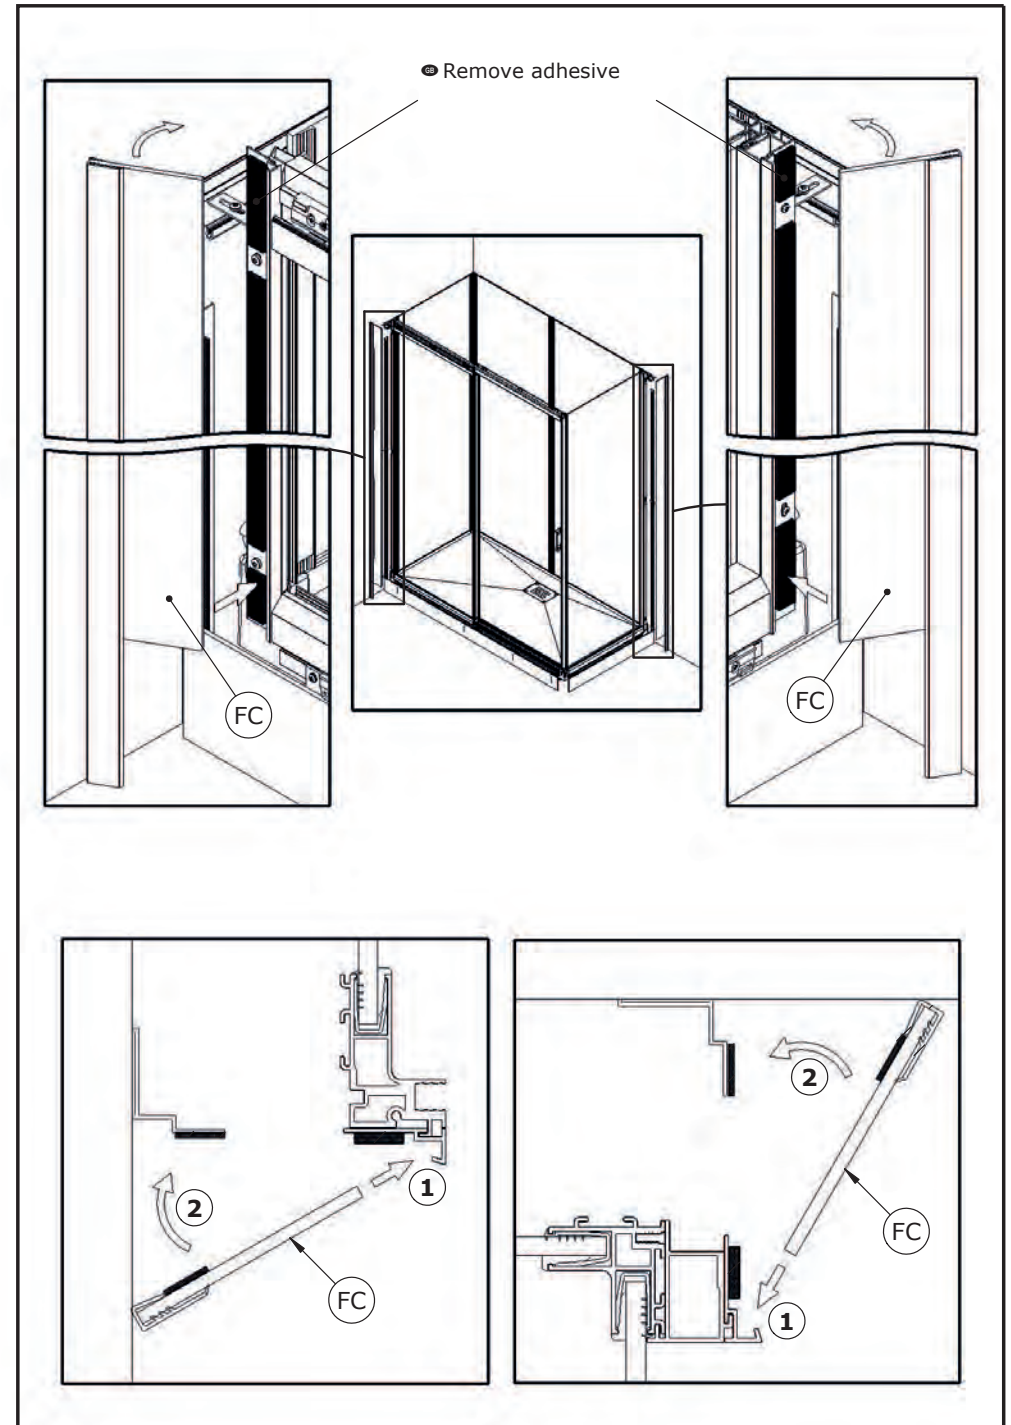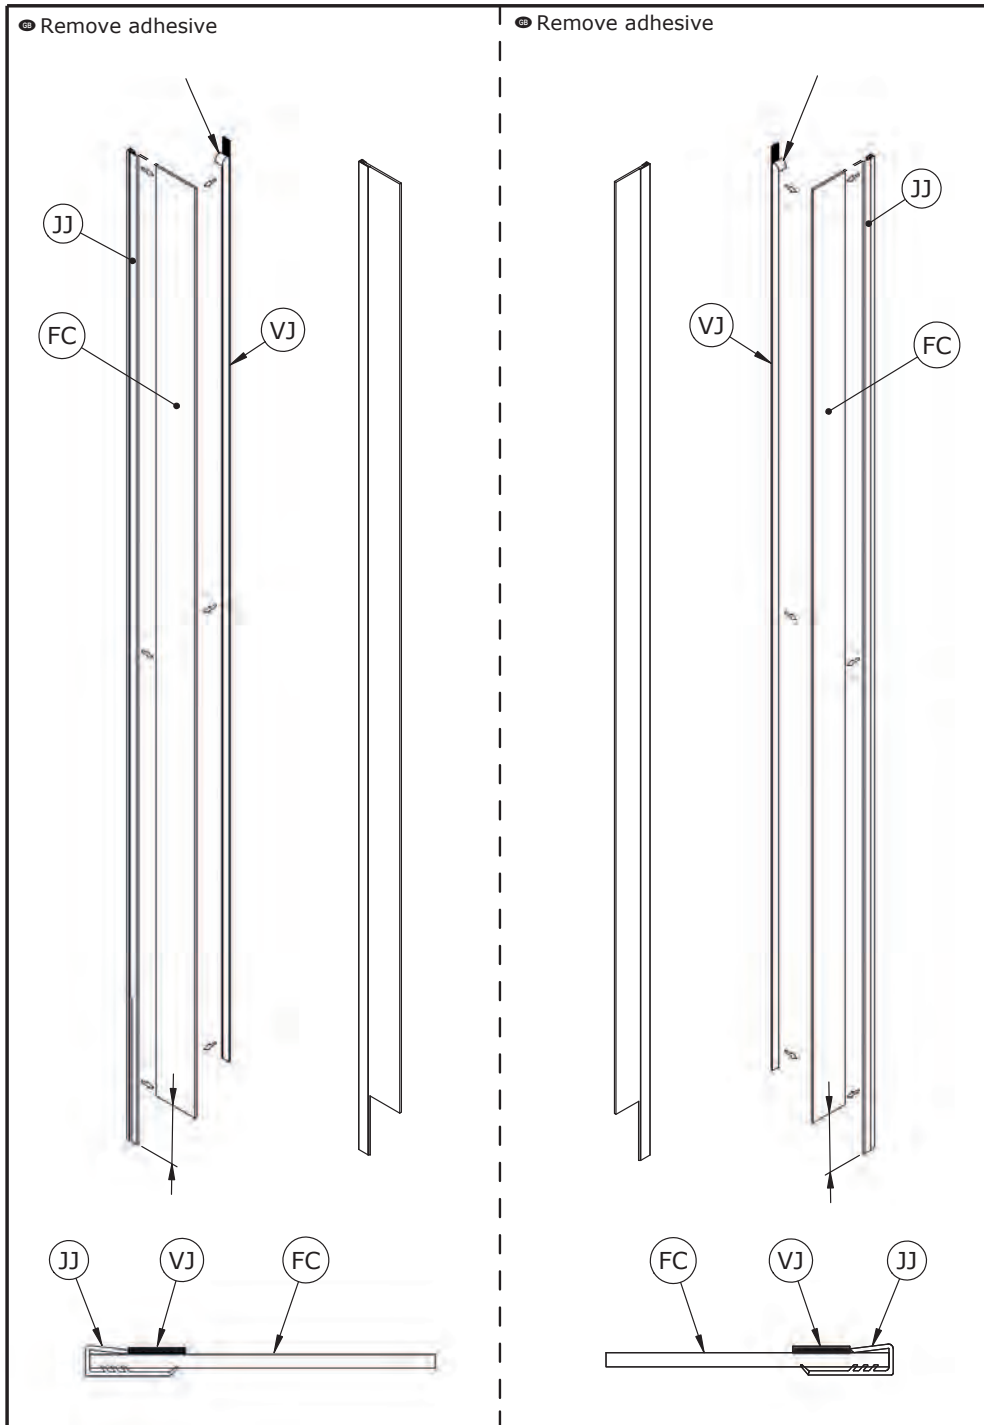





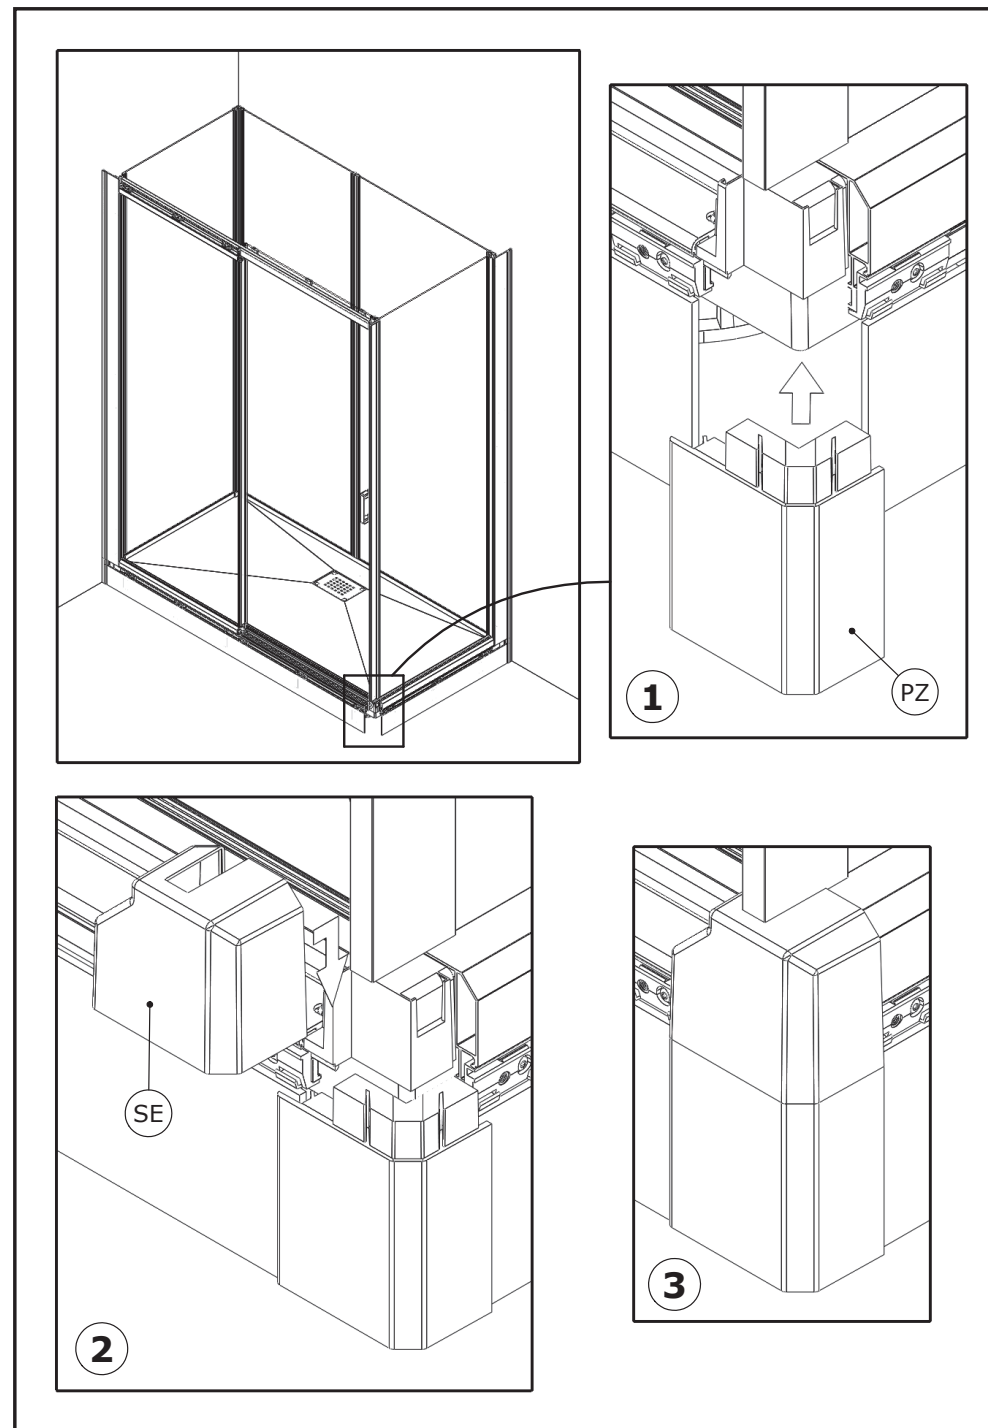
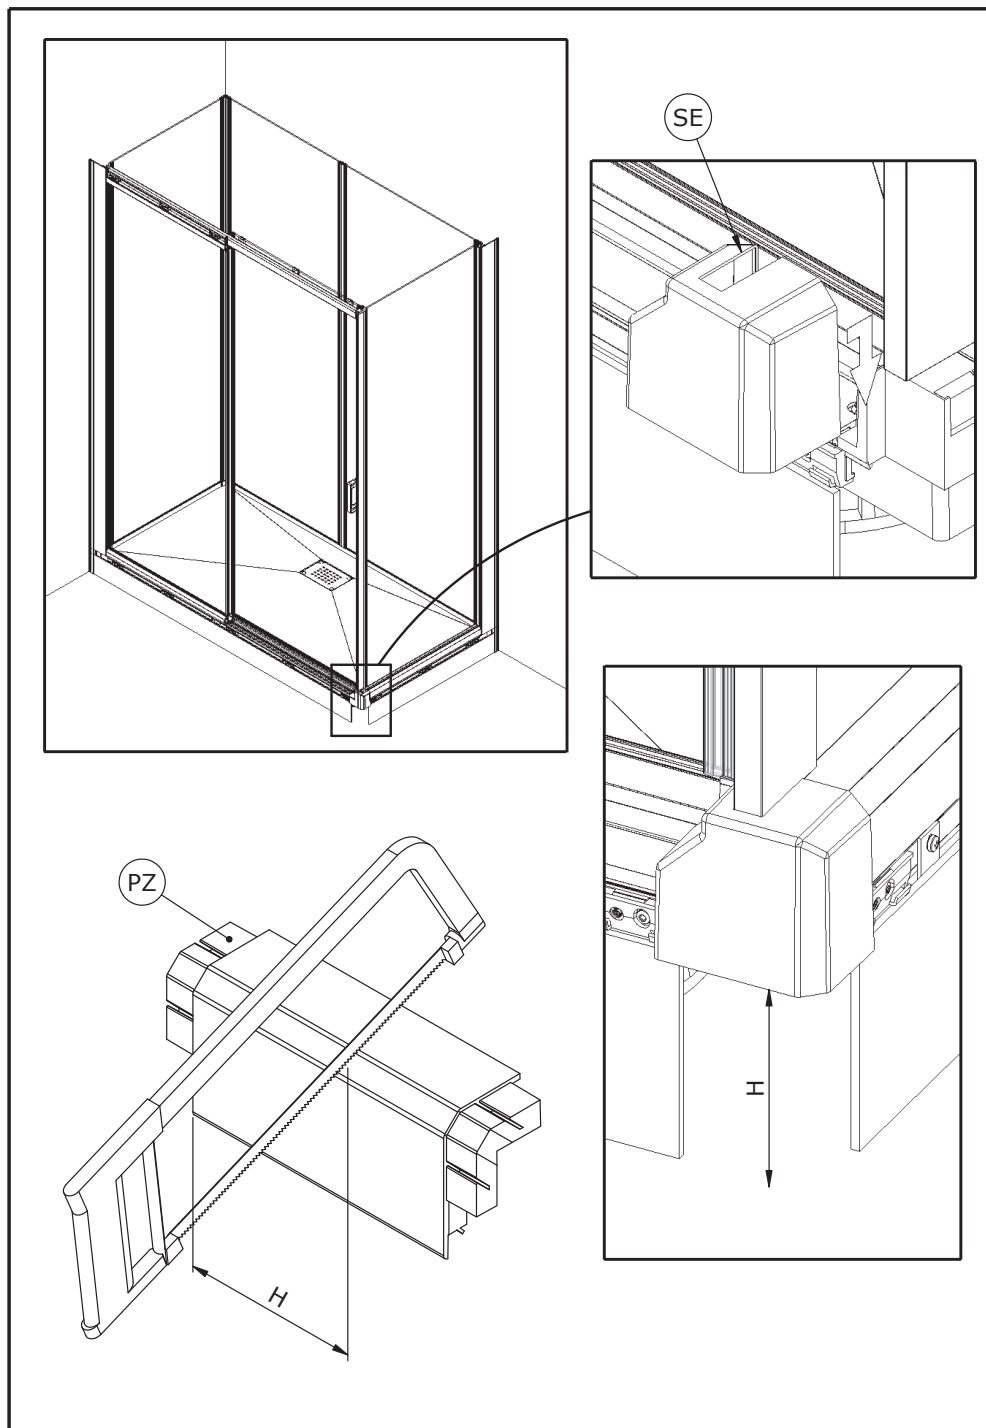



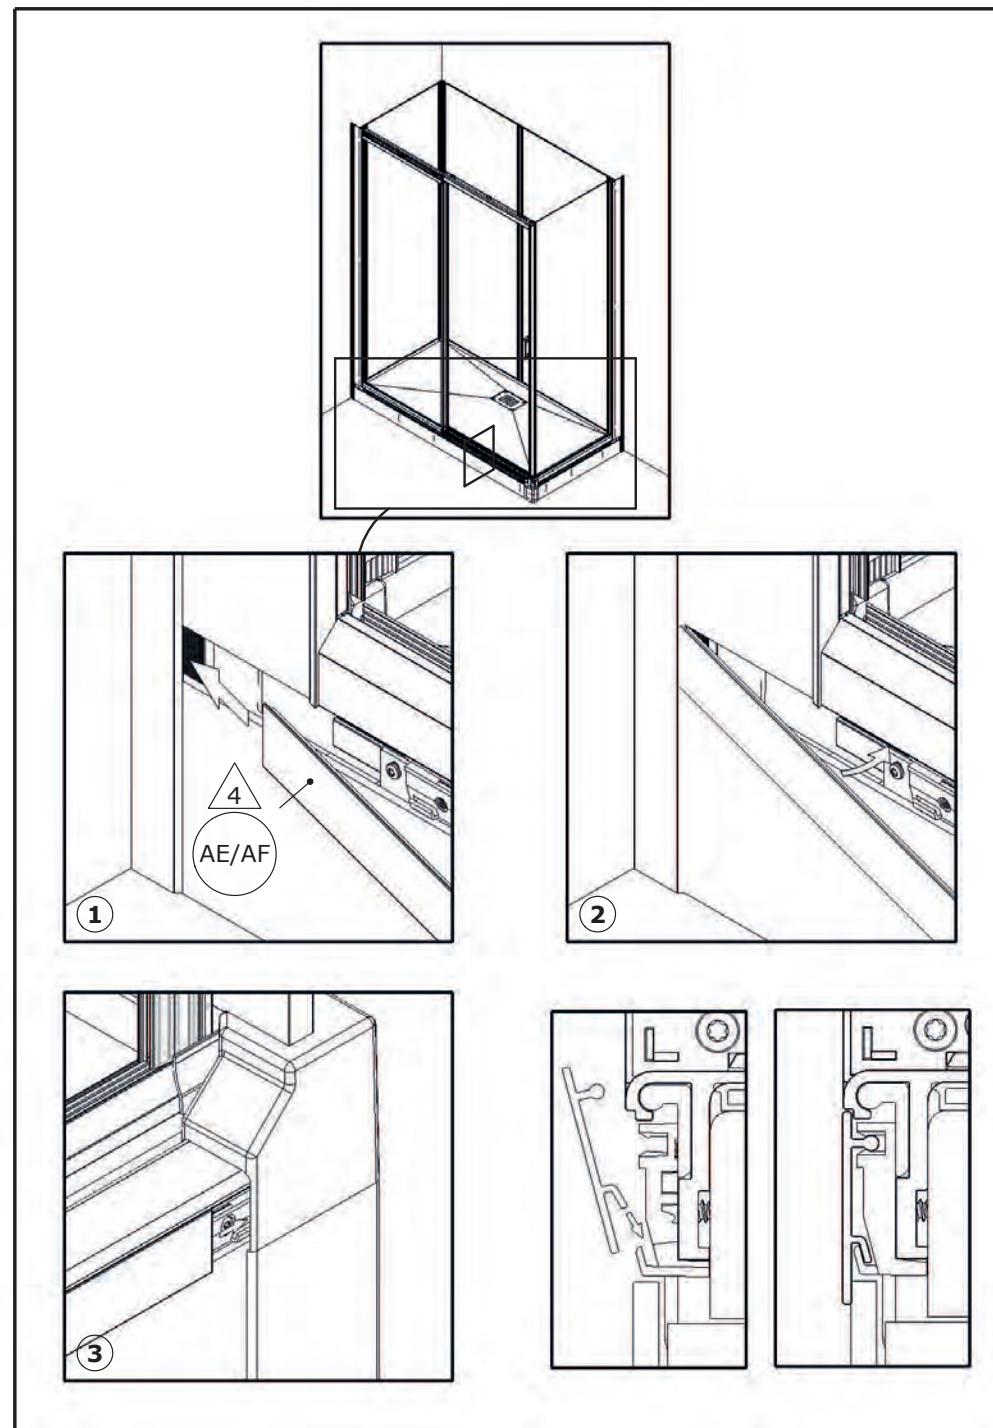
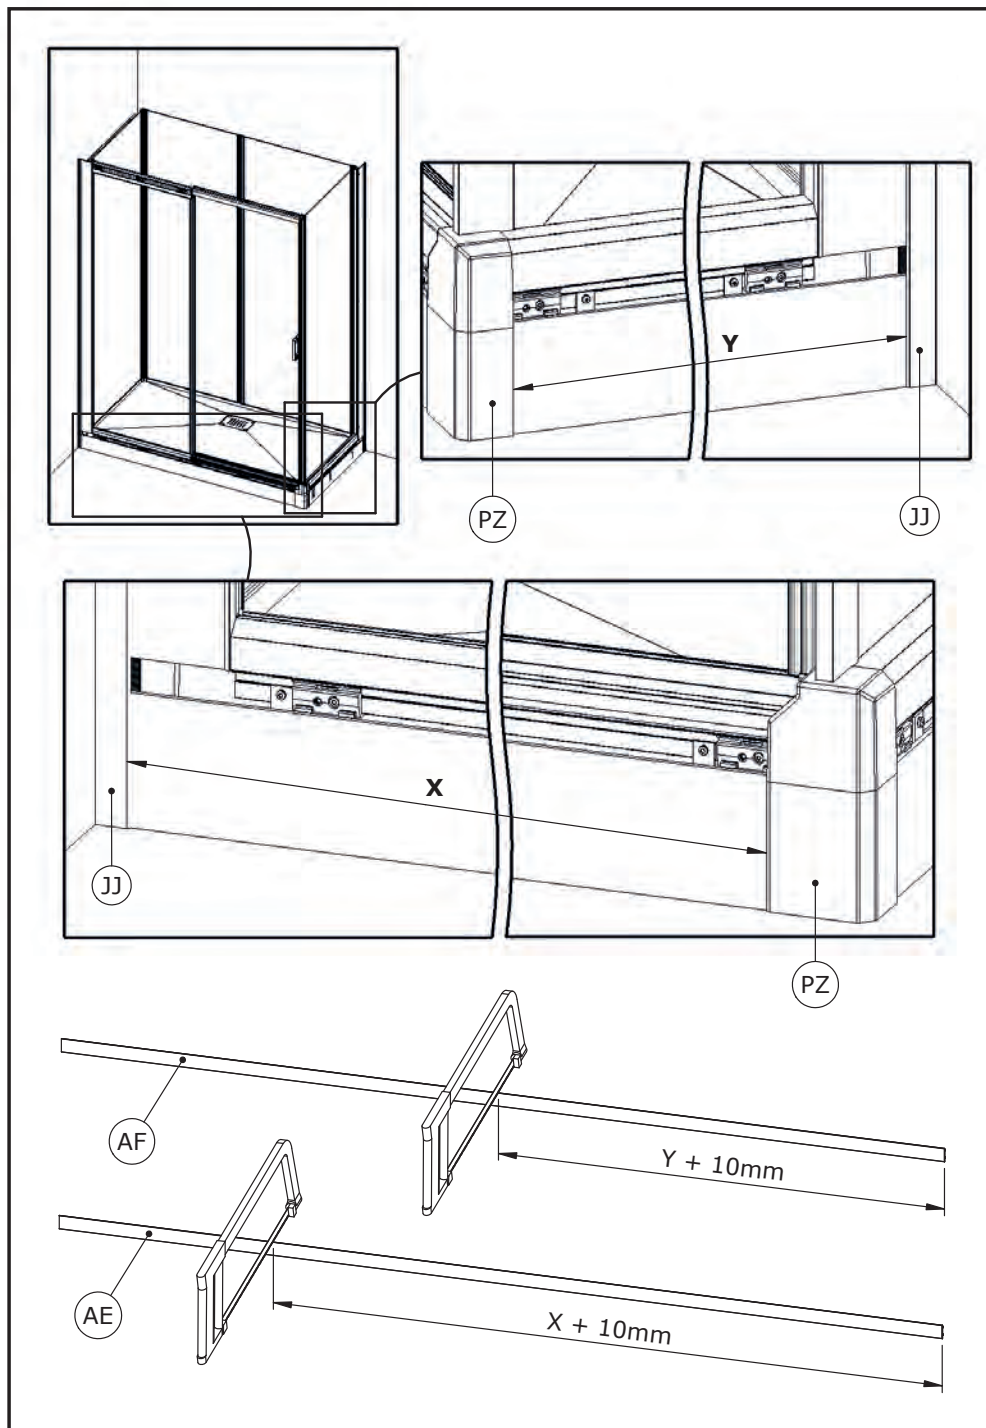


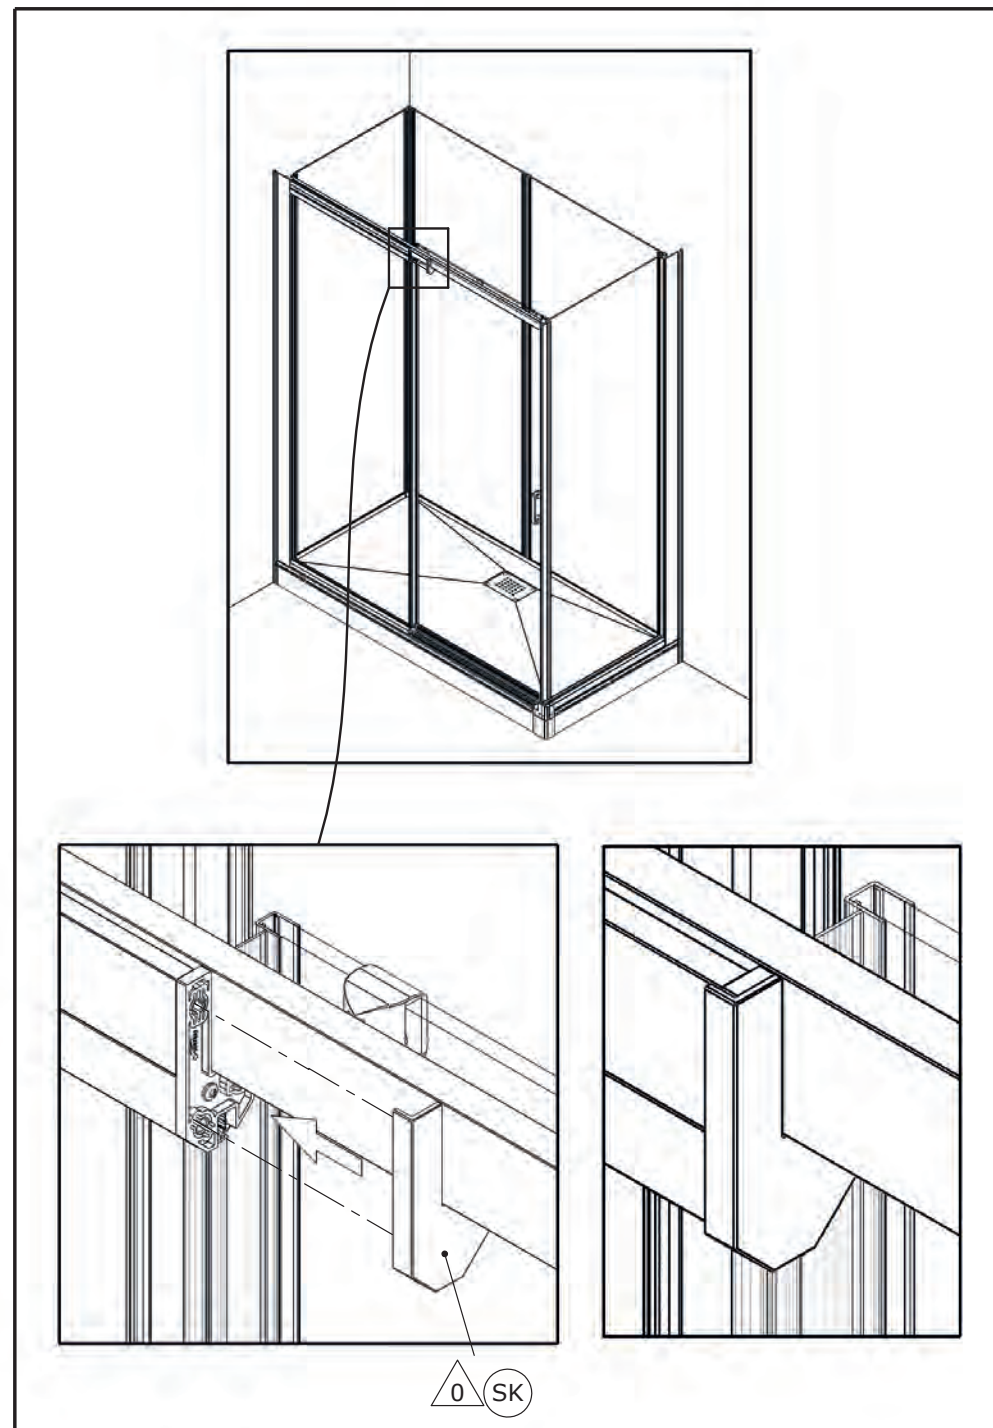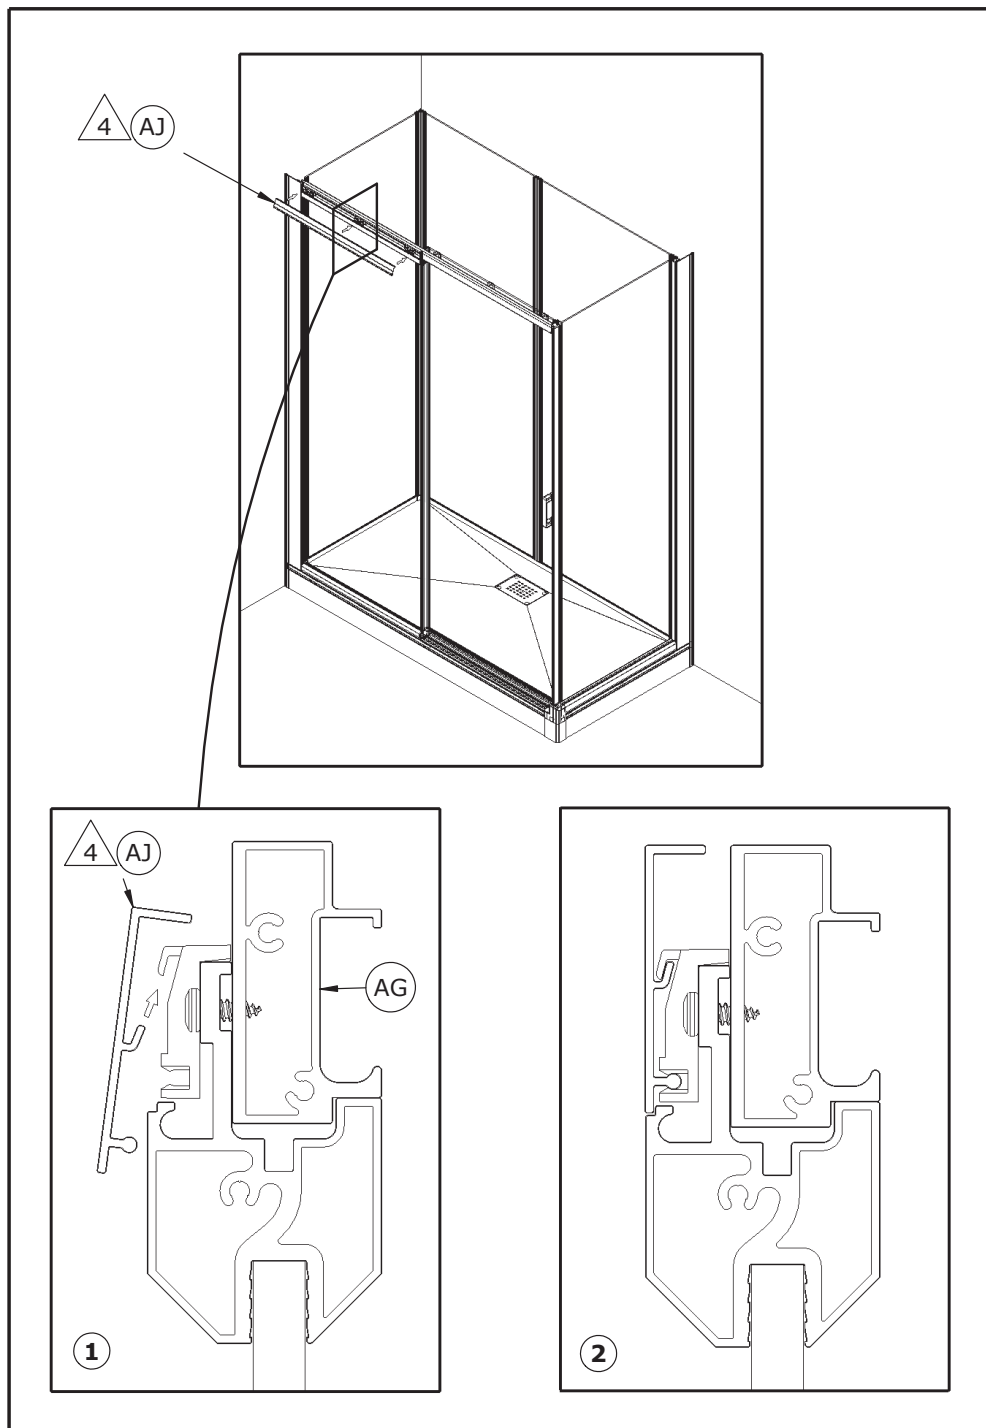

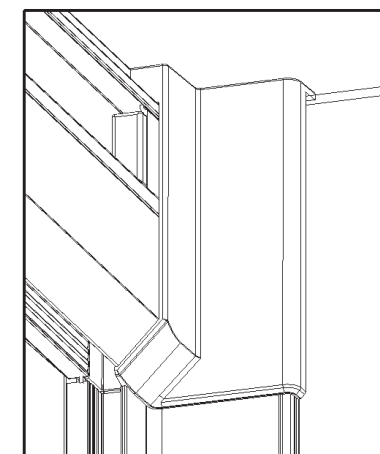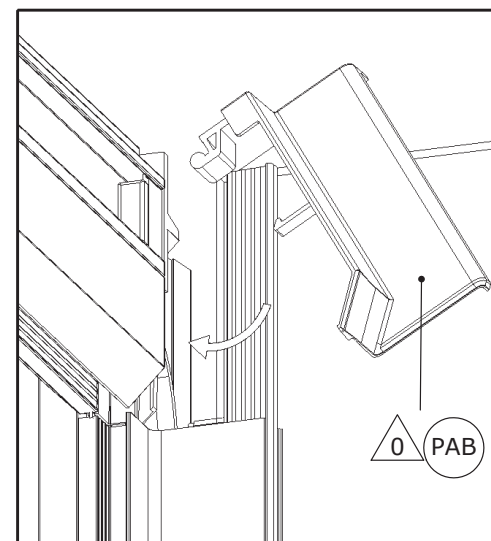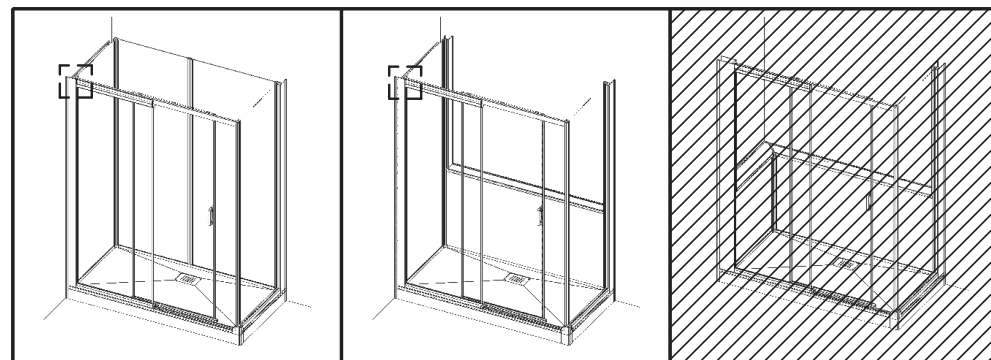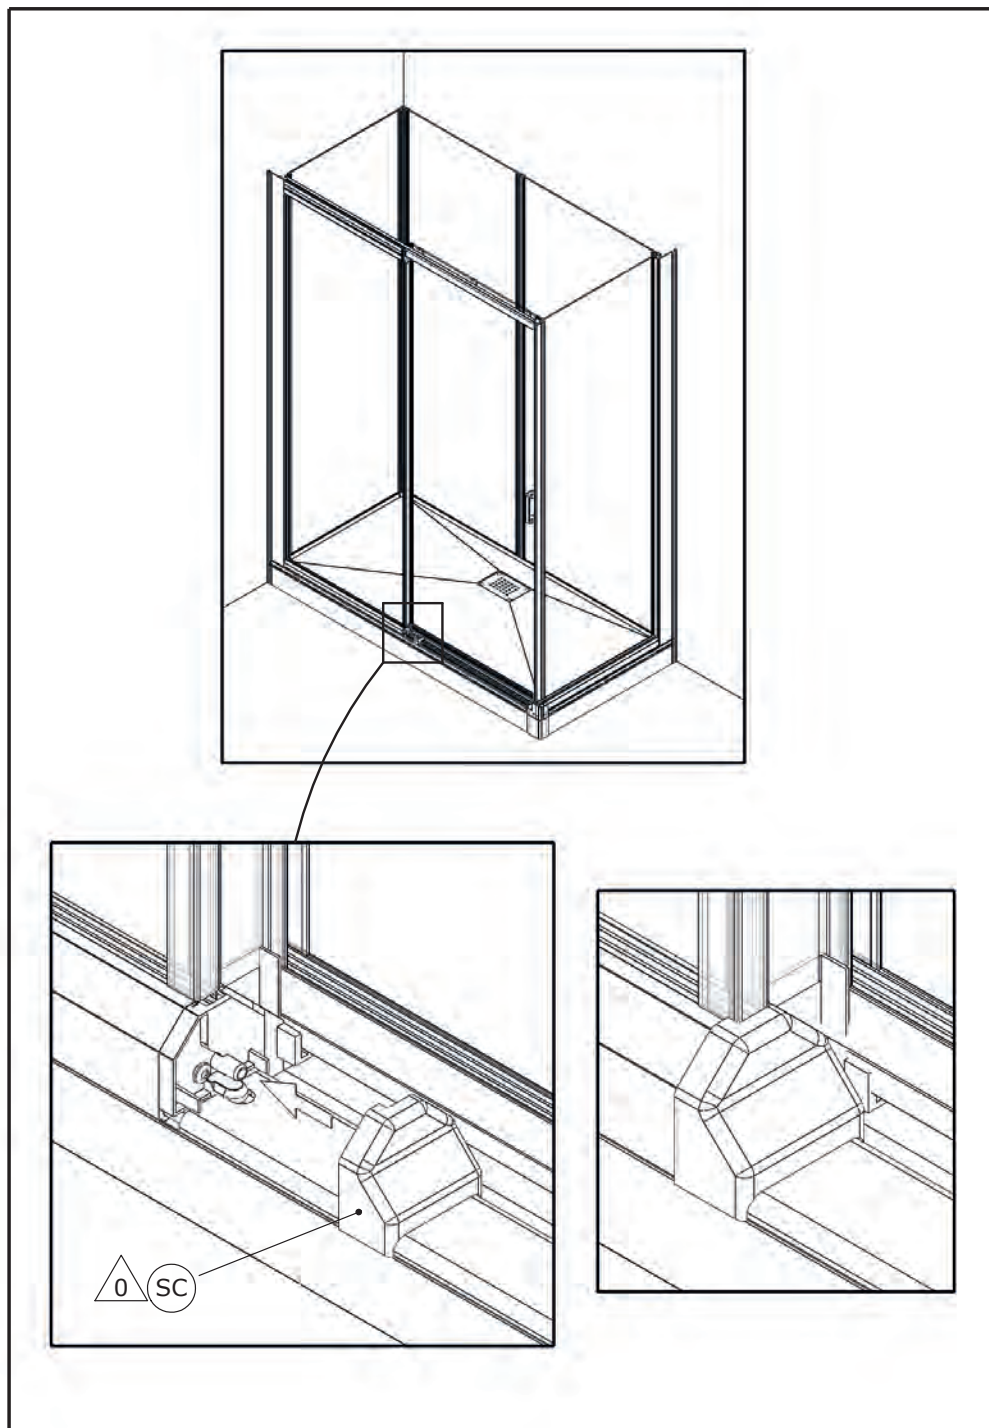

● Inside shower

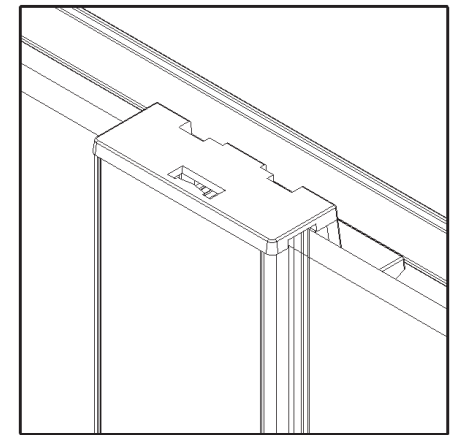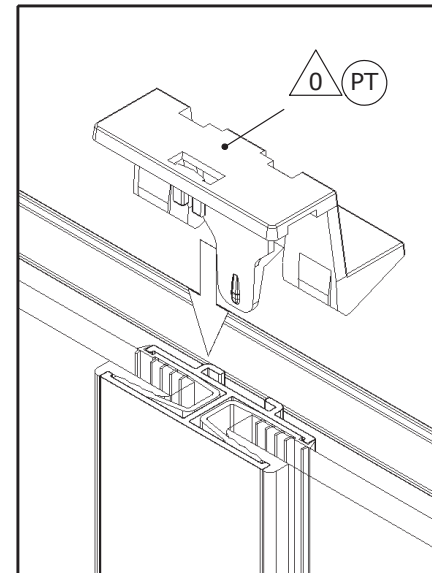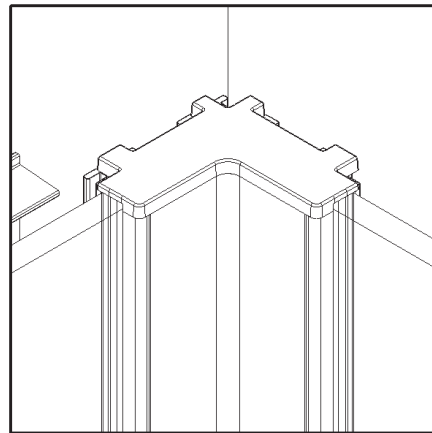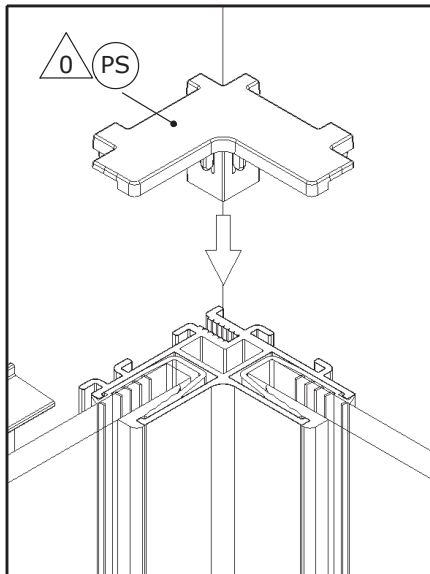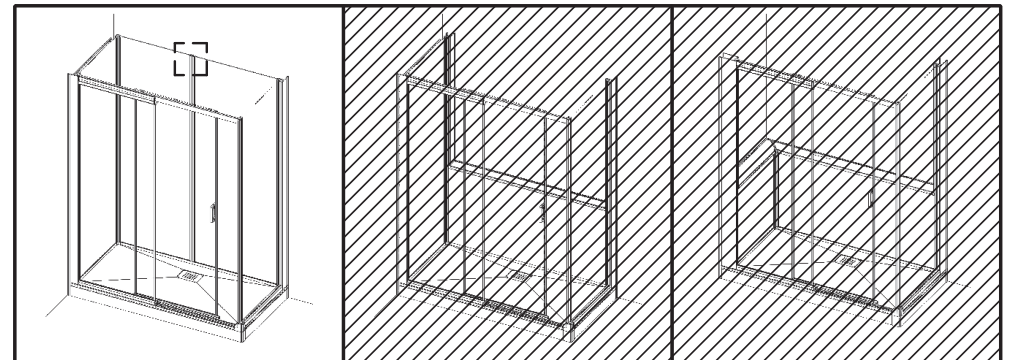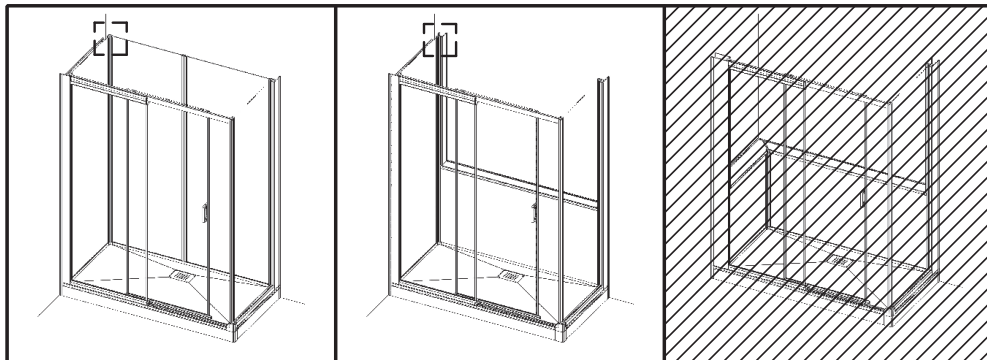

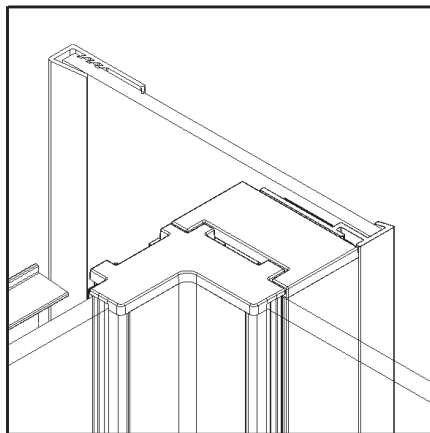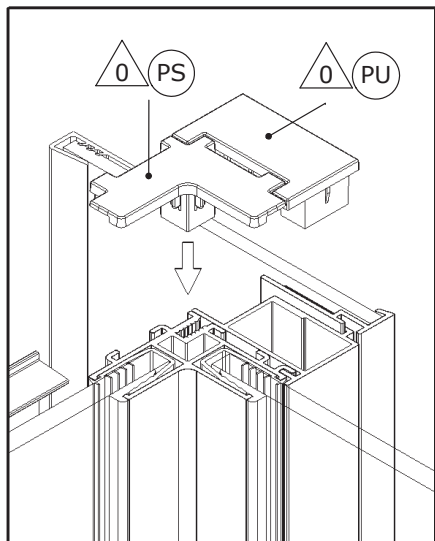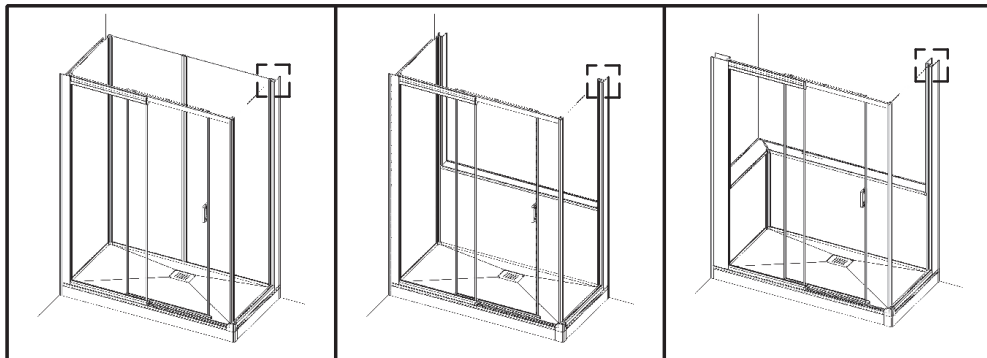

DES1305AG-C