



GB Installation instructions

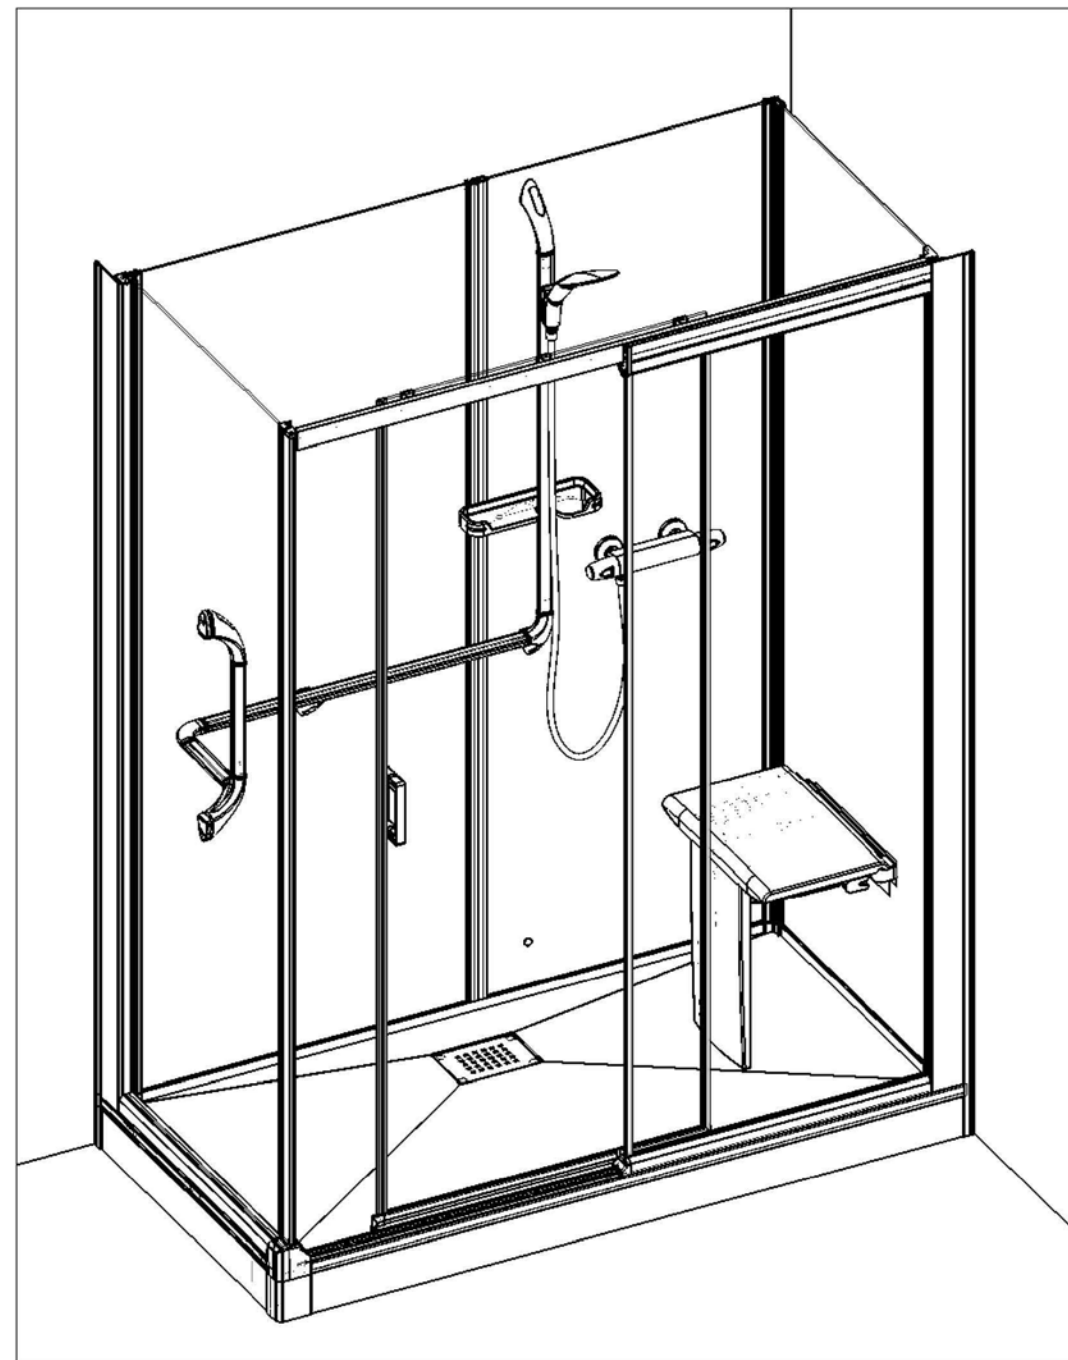


ⓘ Check installation steps :

P. 12 - 24

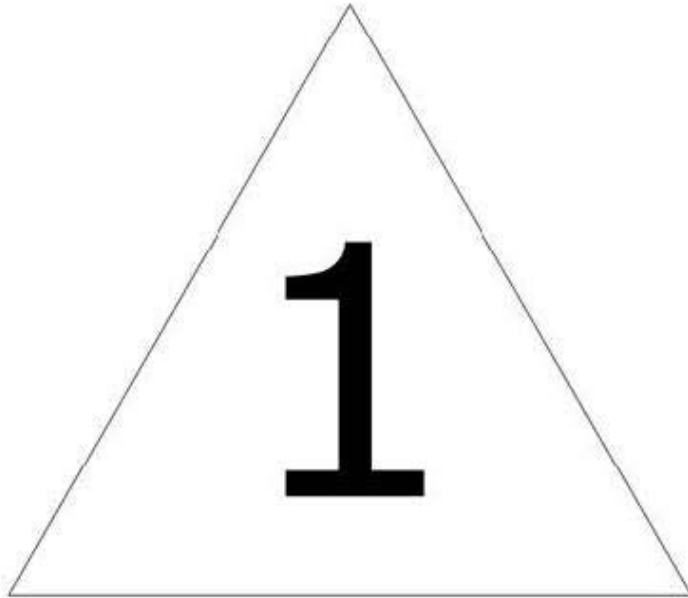

DES1192AD-H

● **NEW:** The seal is now pre-positioned at the factory. Paste it along its entire length before mounting.


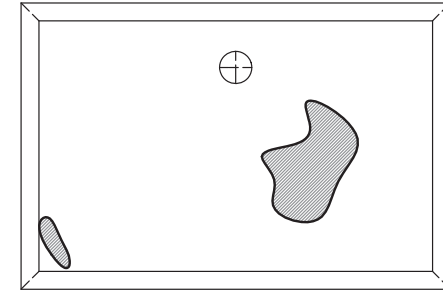


● Any surface irregularities on the underside of the shower tray have no influence on the installation according to the installation recommendations. The adhesive (polyurethane or MS polymer) compensates for these unevenness when bonding the feet off without any problems.




● Vacuum the bottom of the shower tray before installation




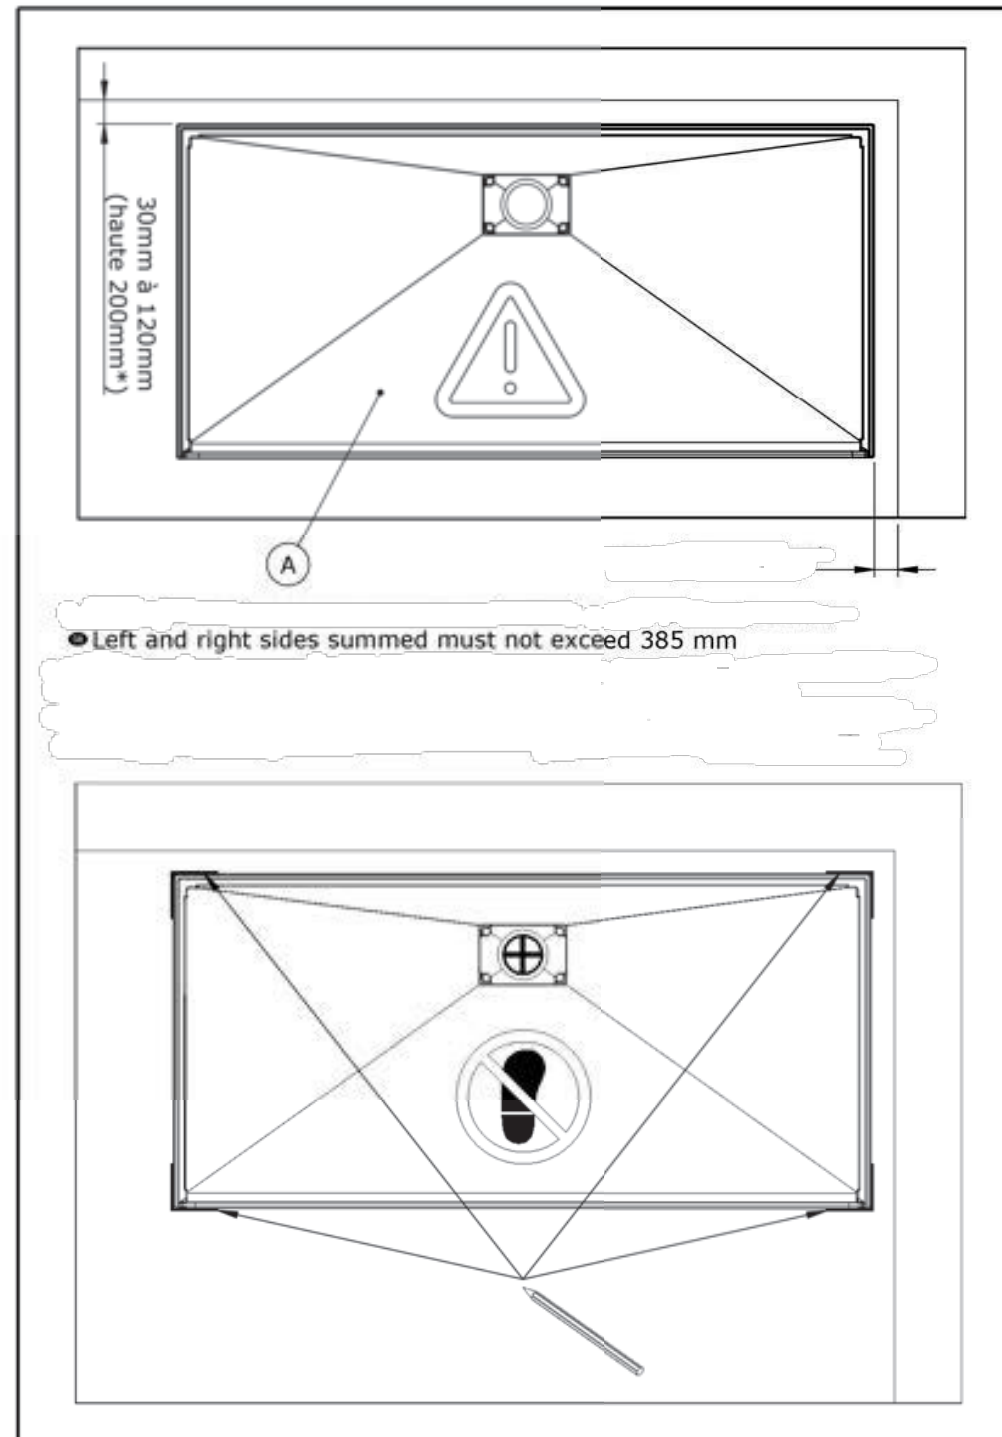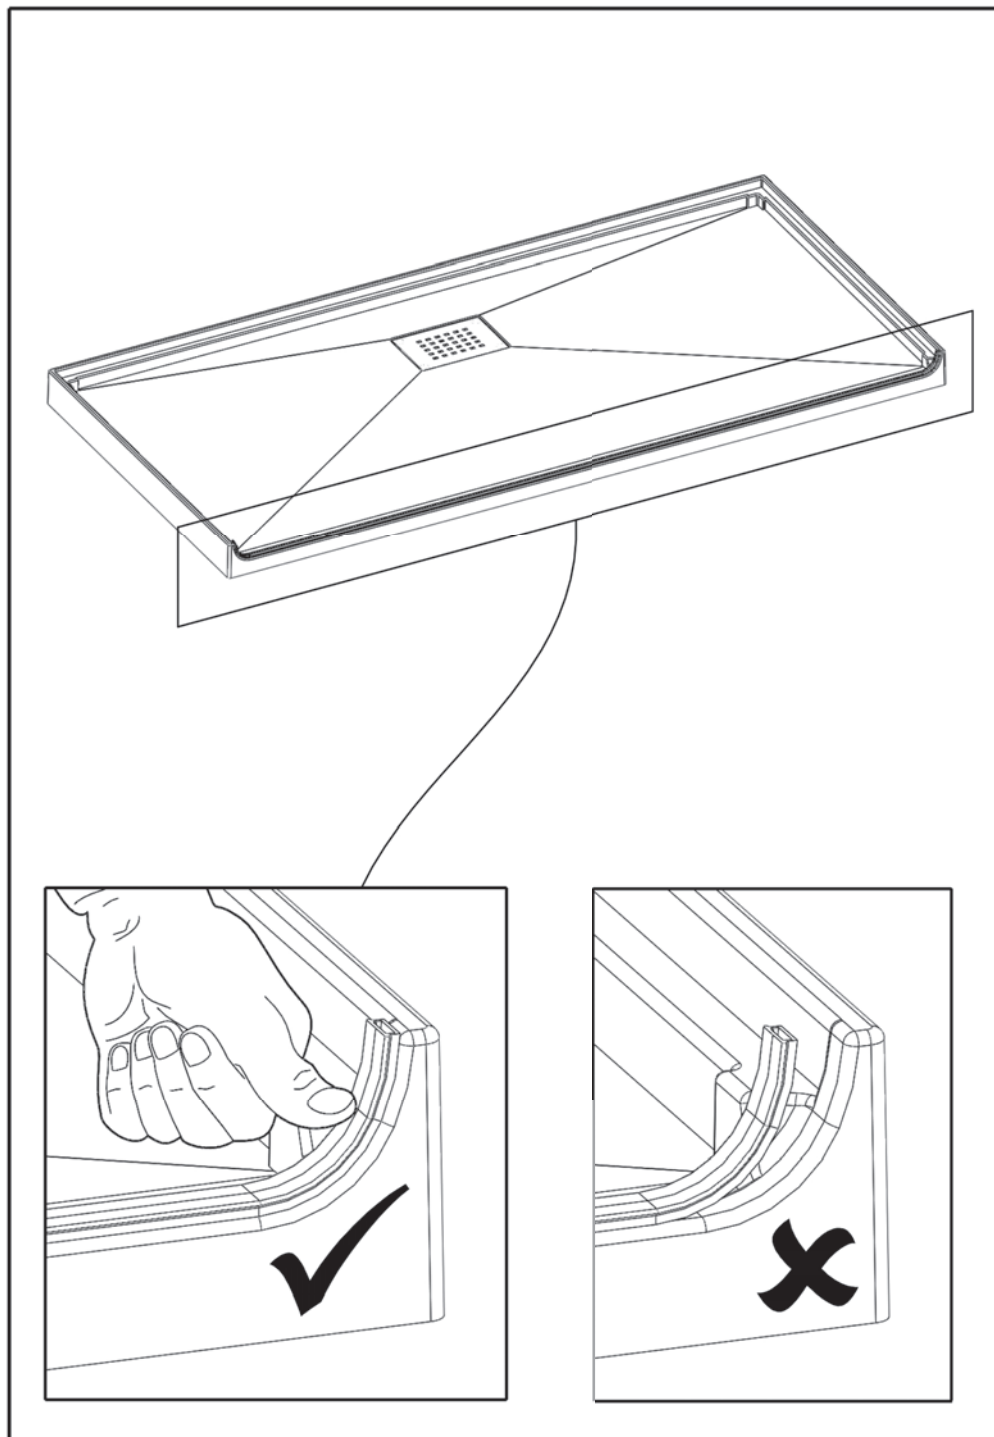


100

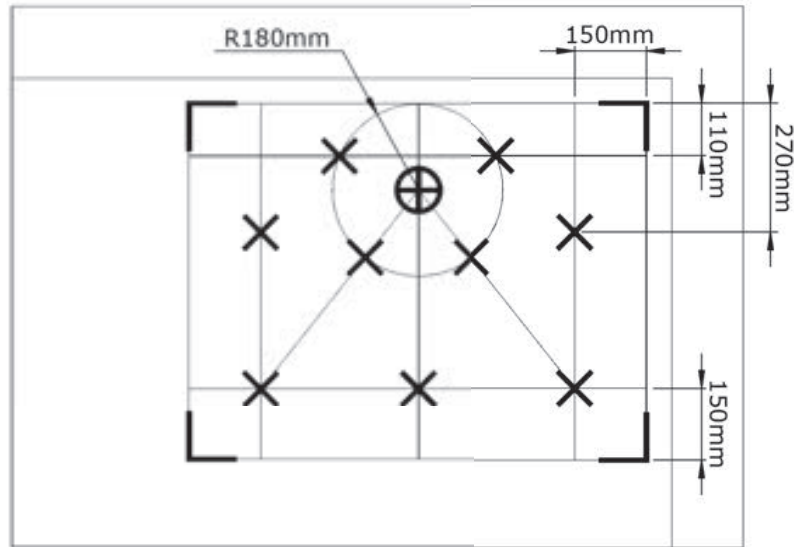




120 / 140 / 160 / 170

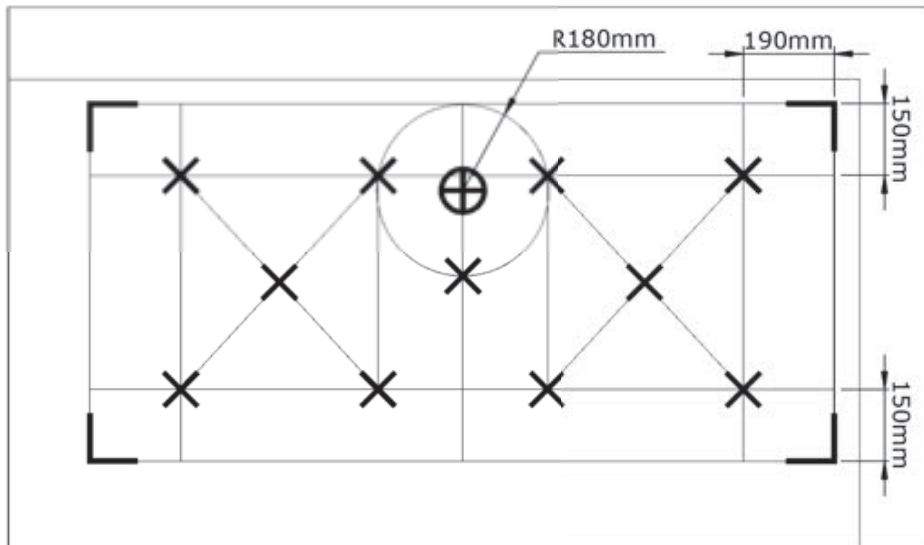


● Laying the tray with adjustable feet

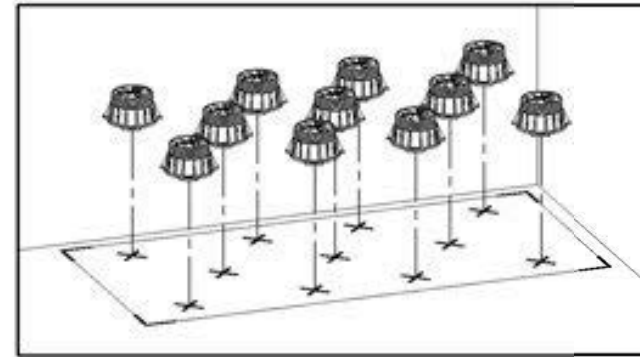


● Polyurethane adhesive

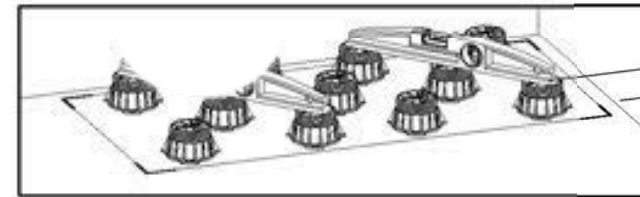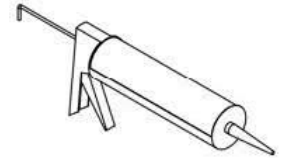
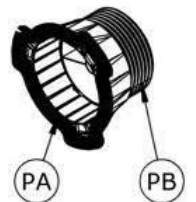
60mm a
110mm


● Laying the tray without feet

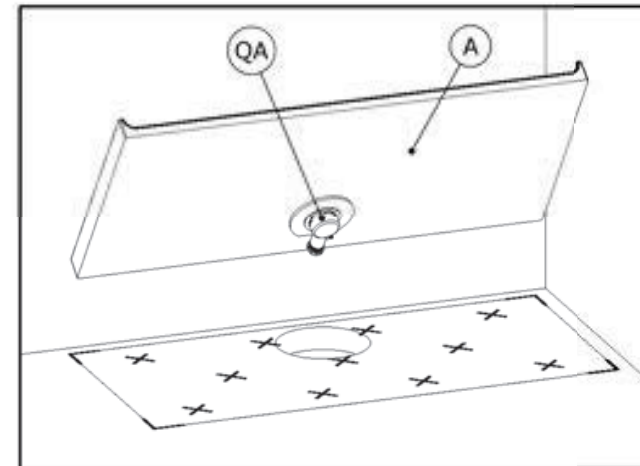


● Polyurethane adhesive

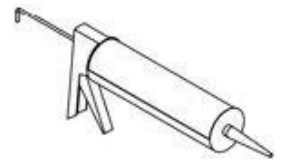


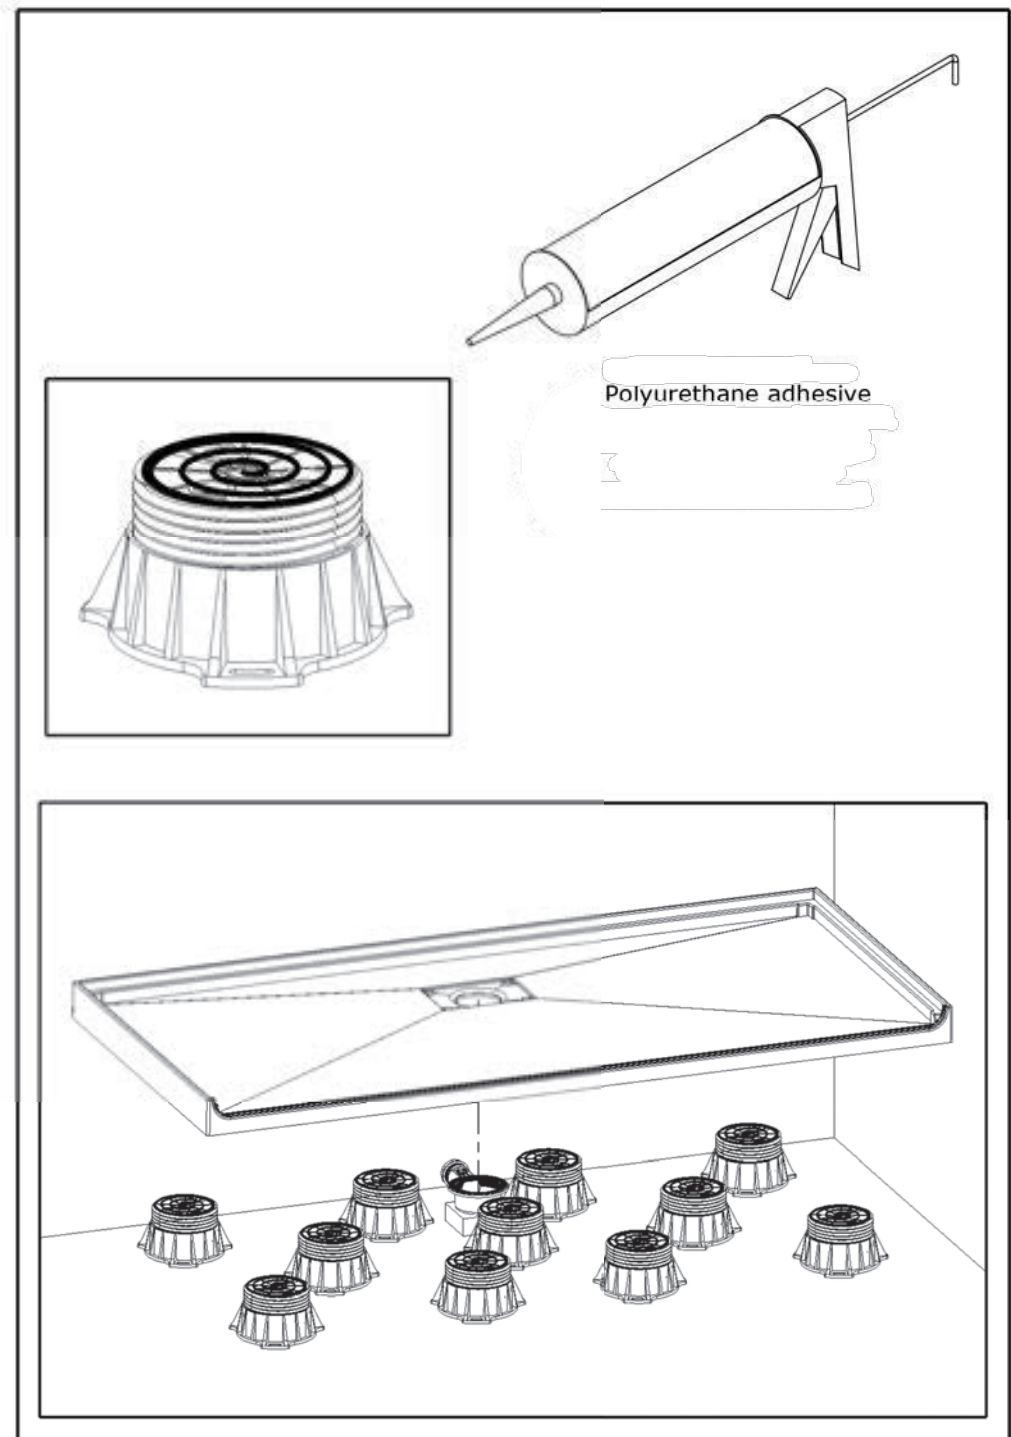
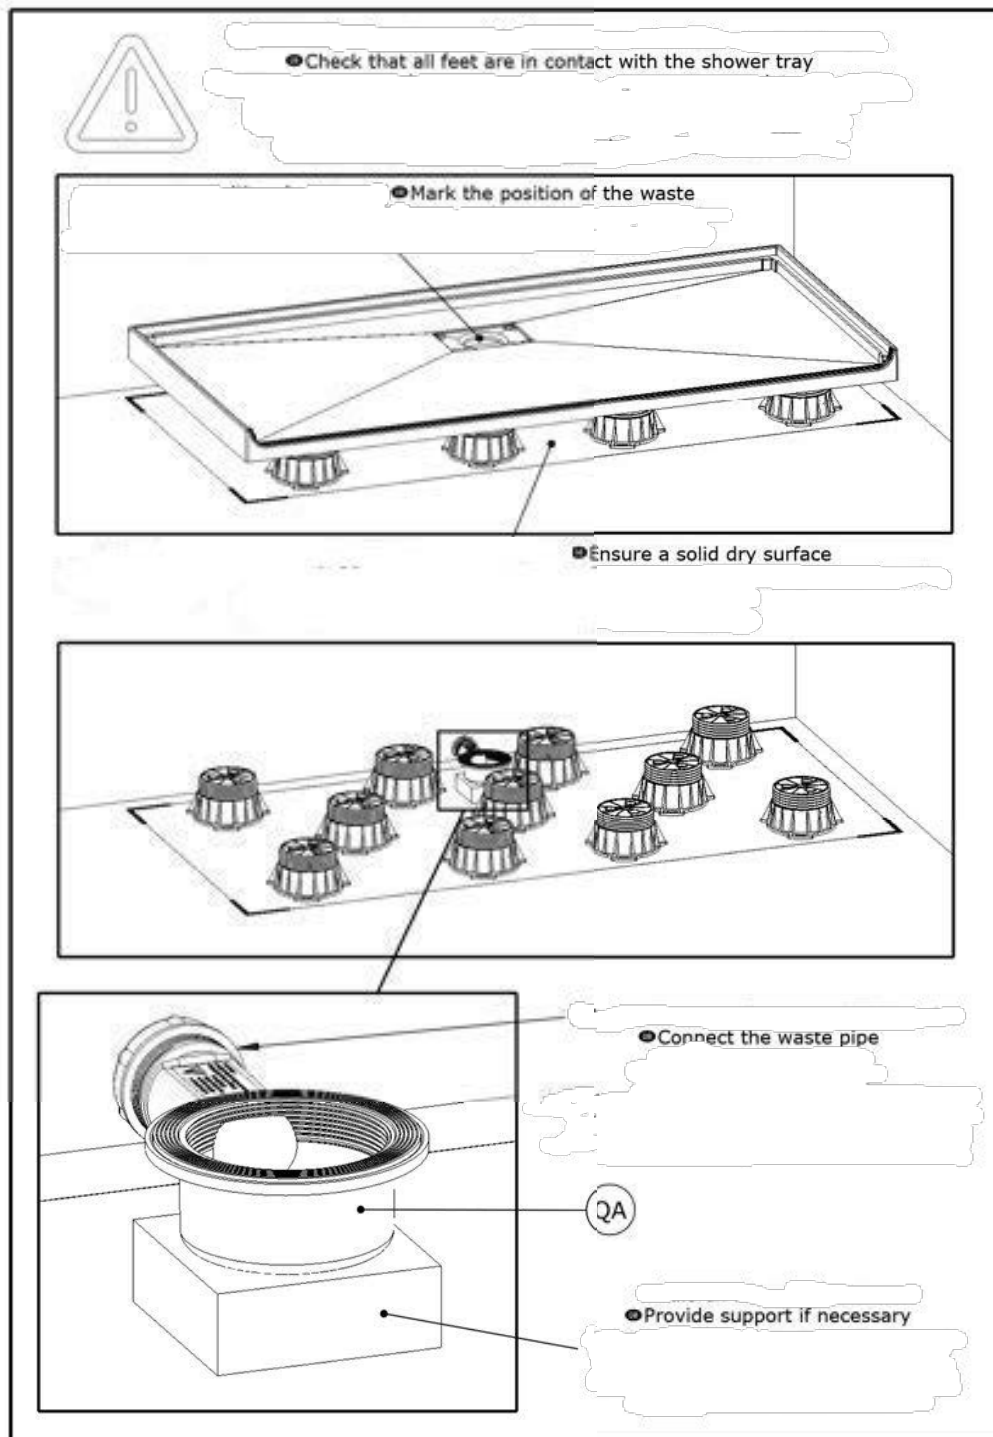



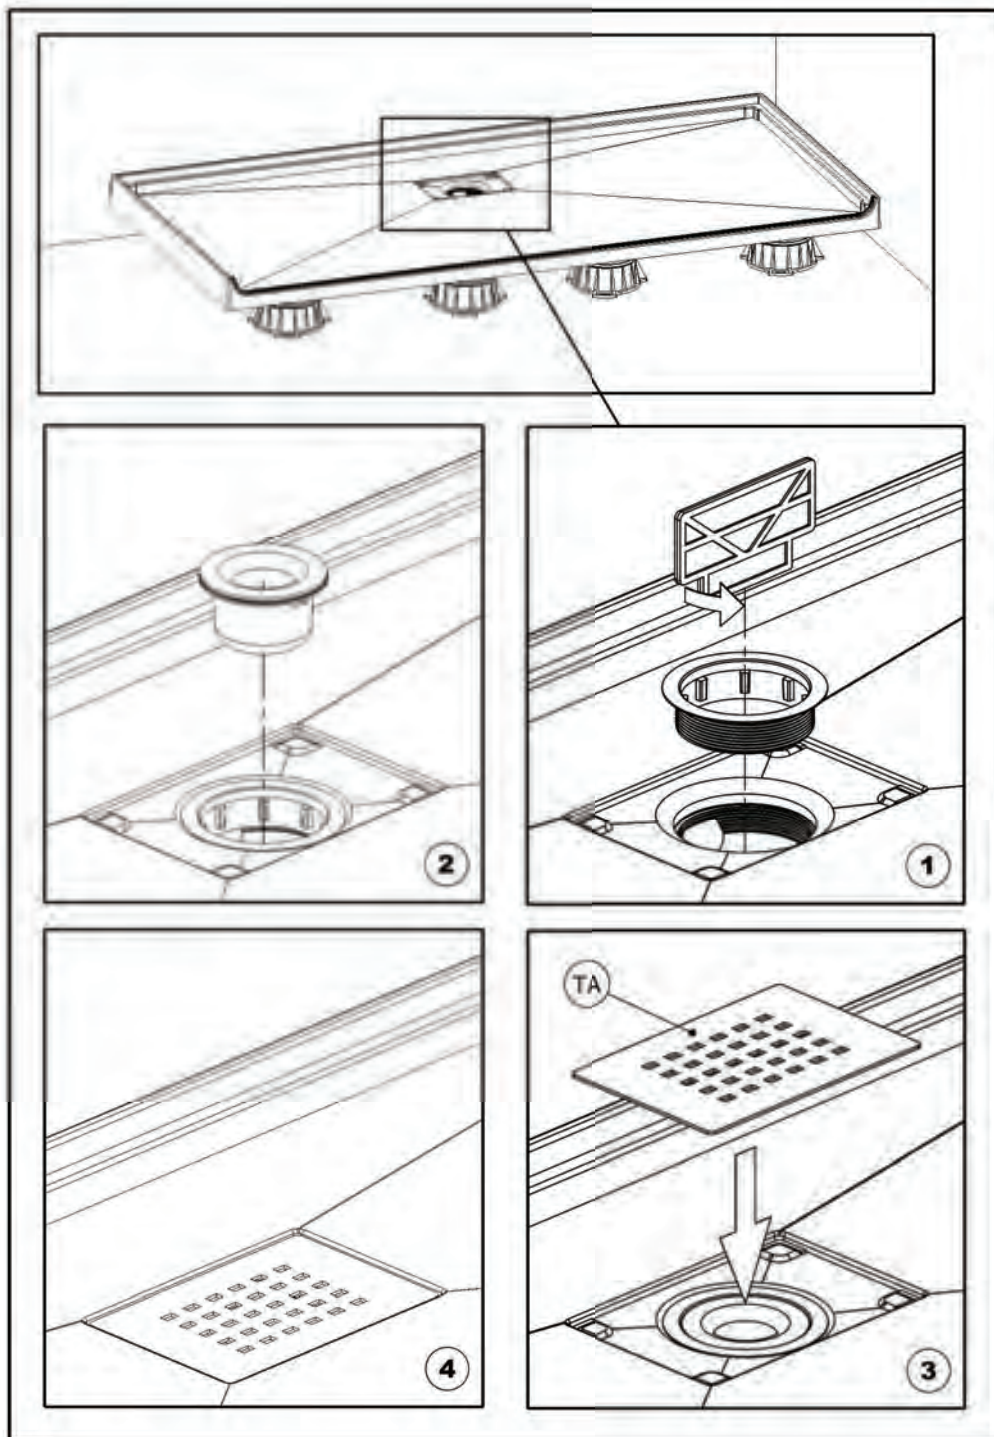


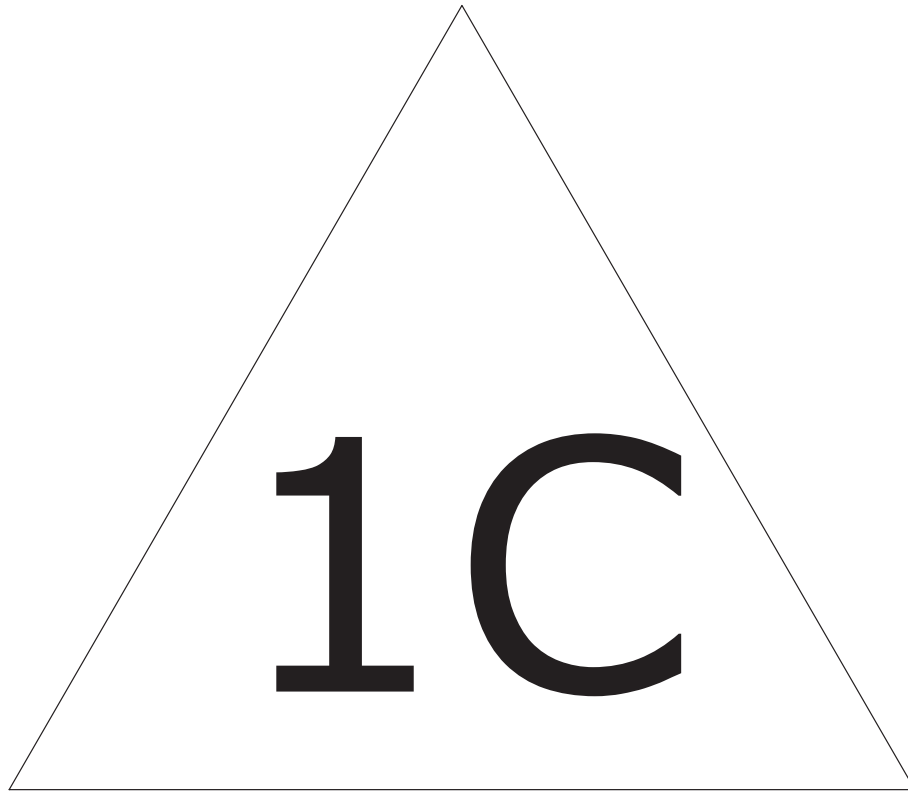




DES1176AD-C


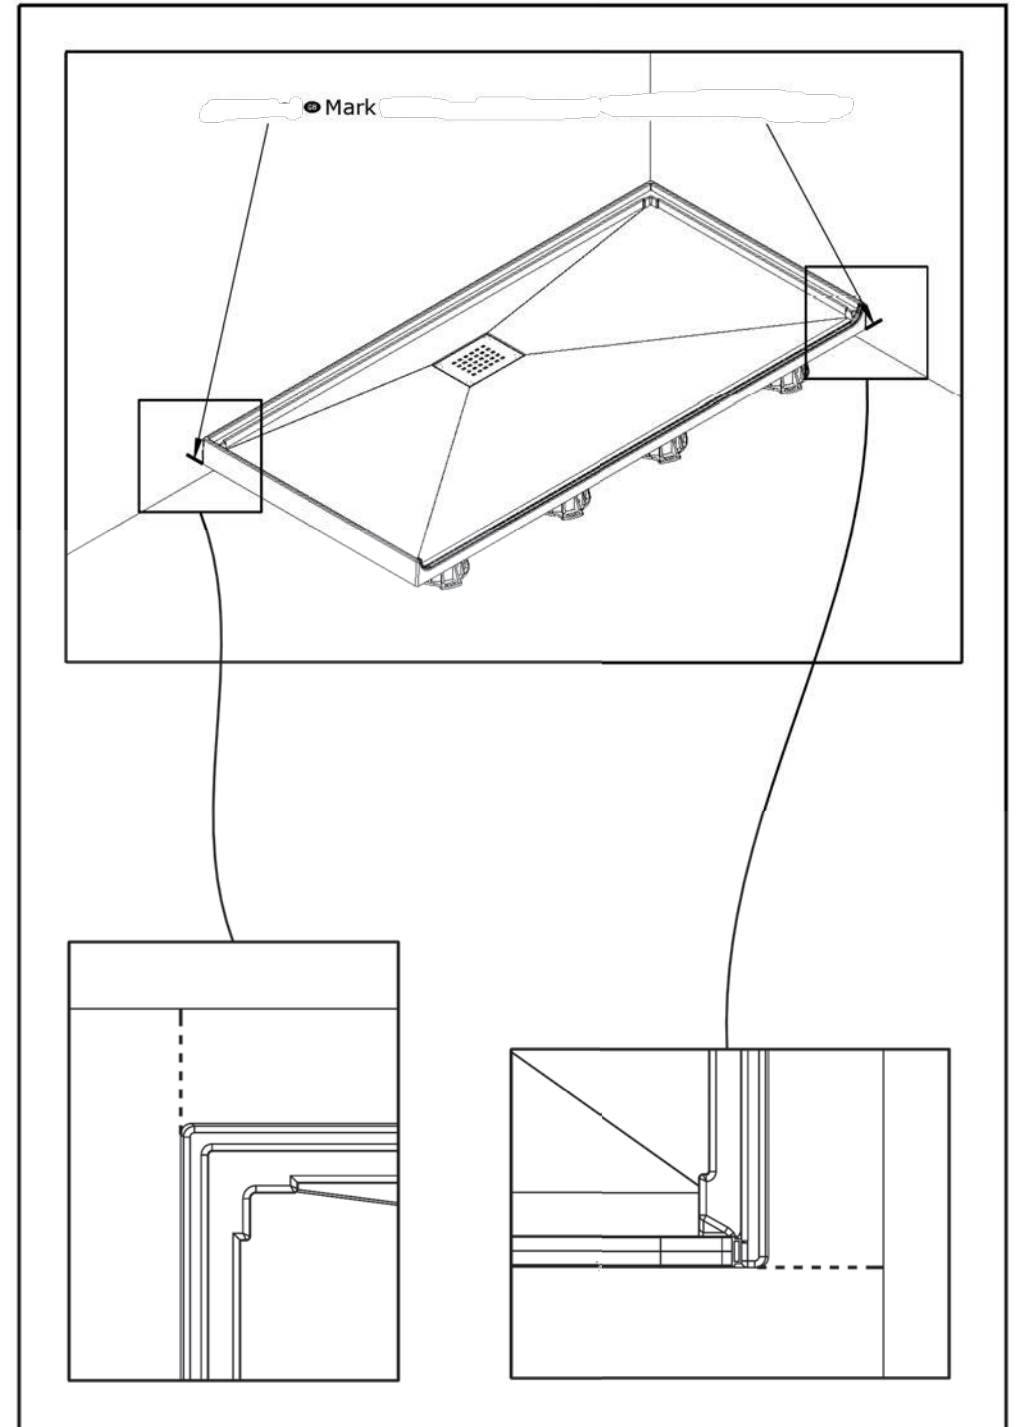



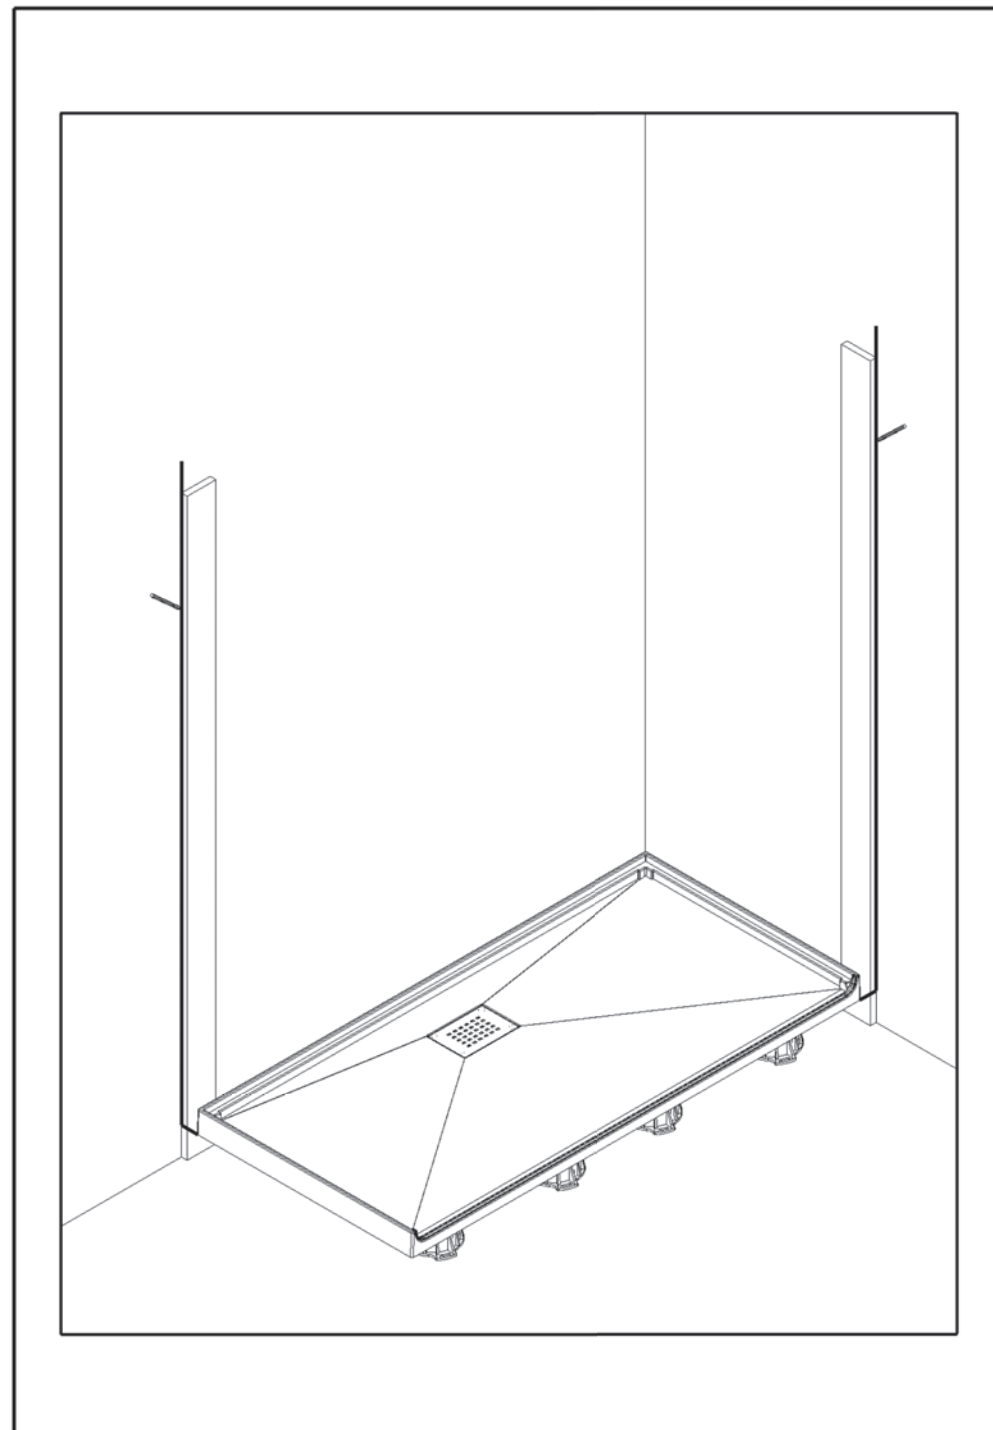
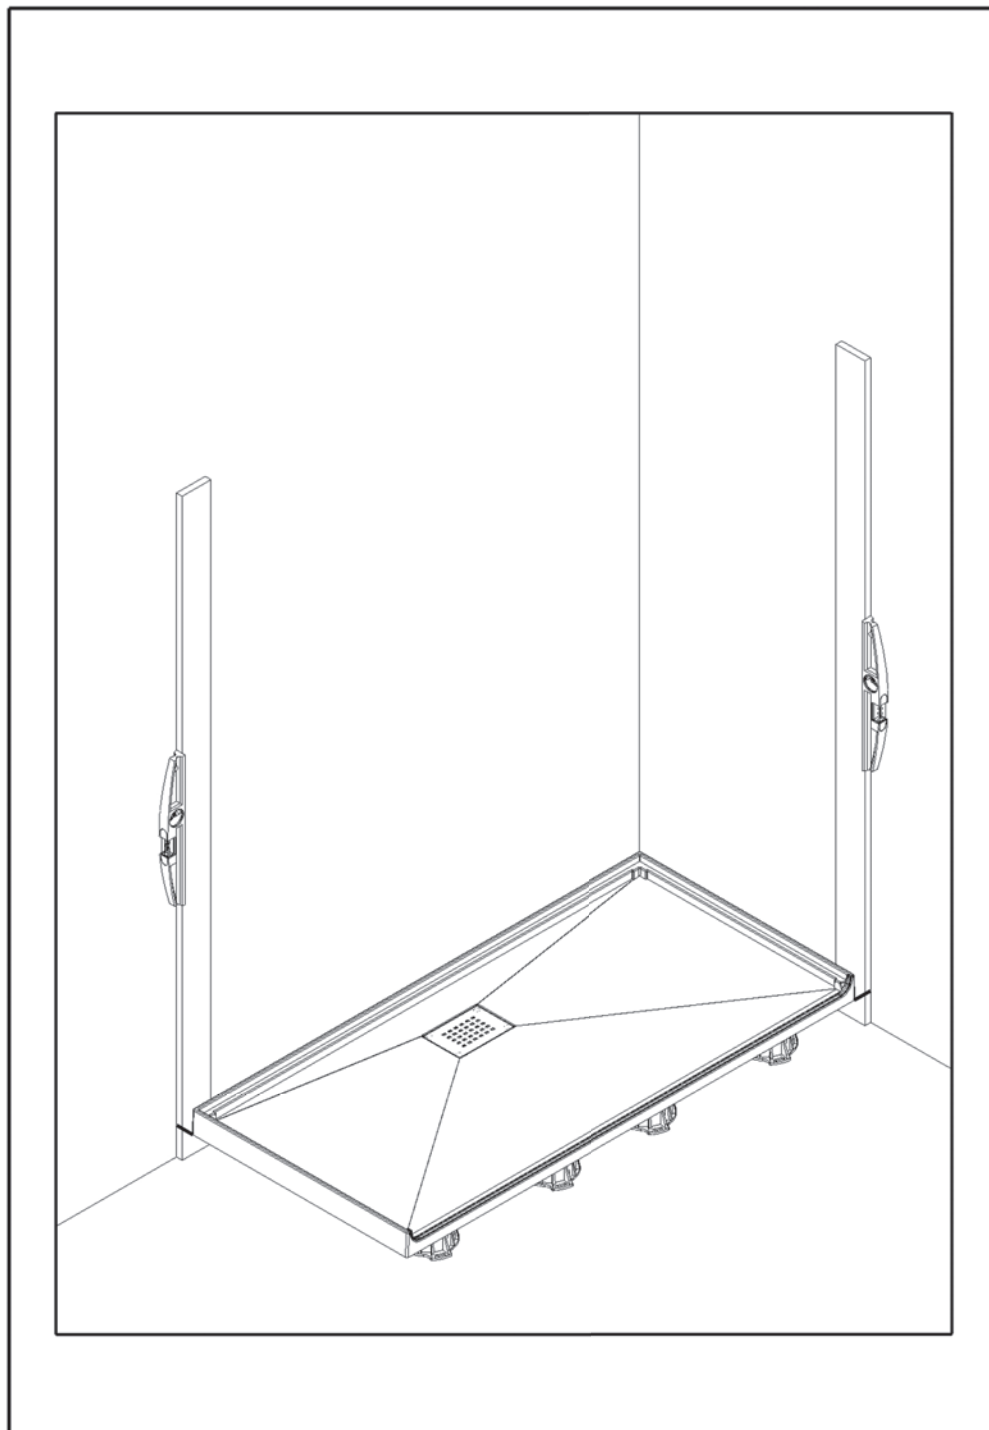



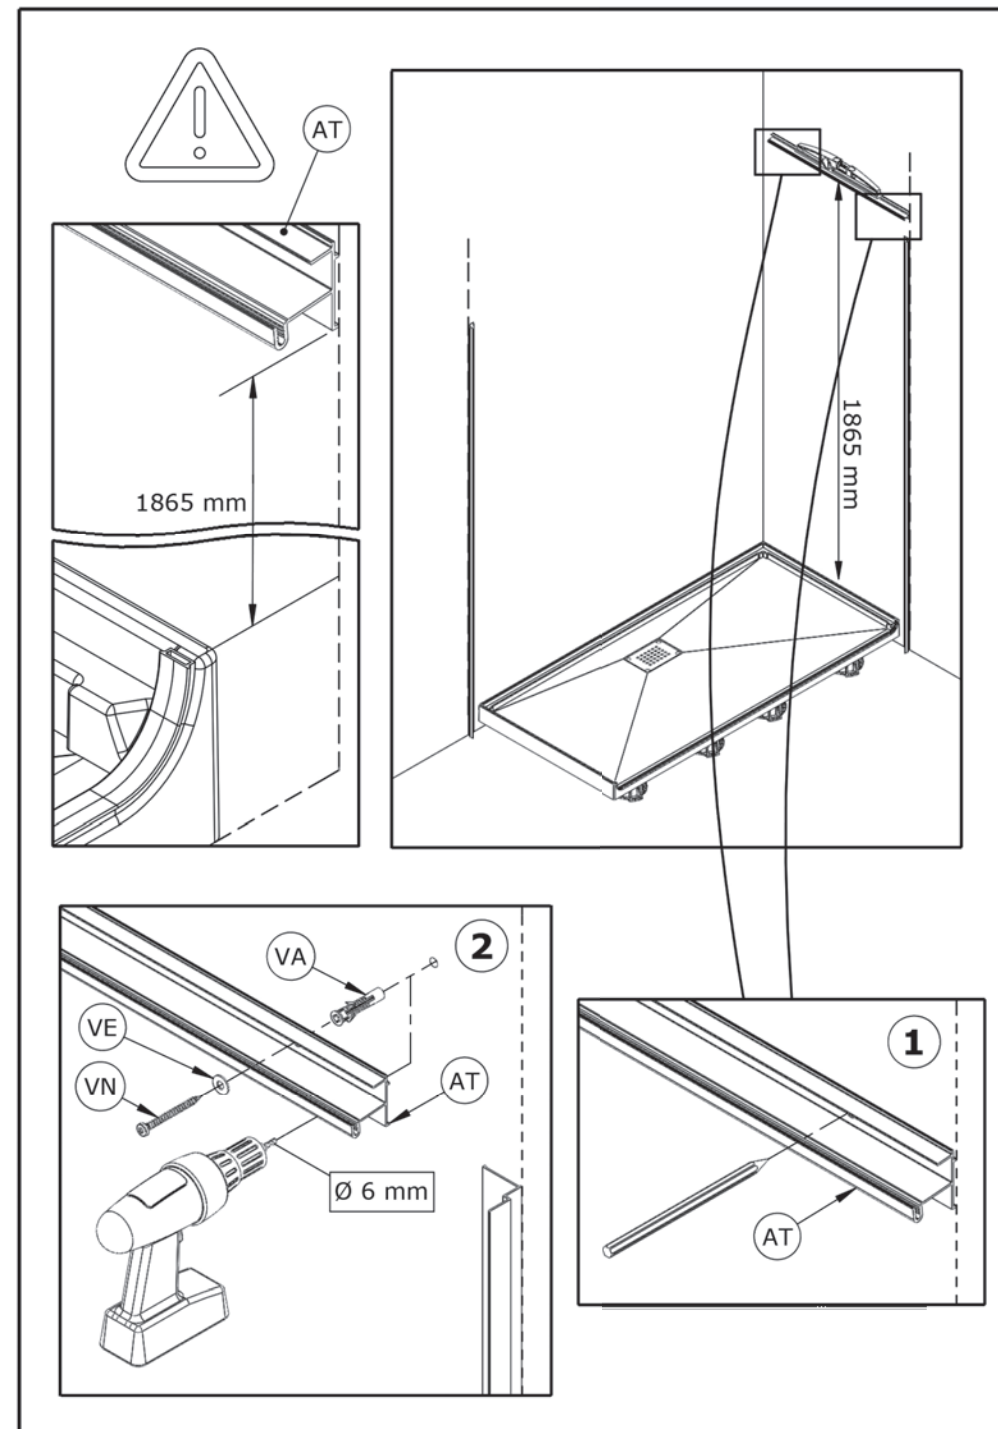
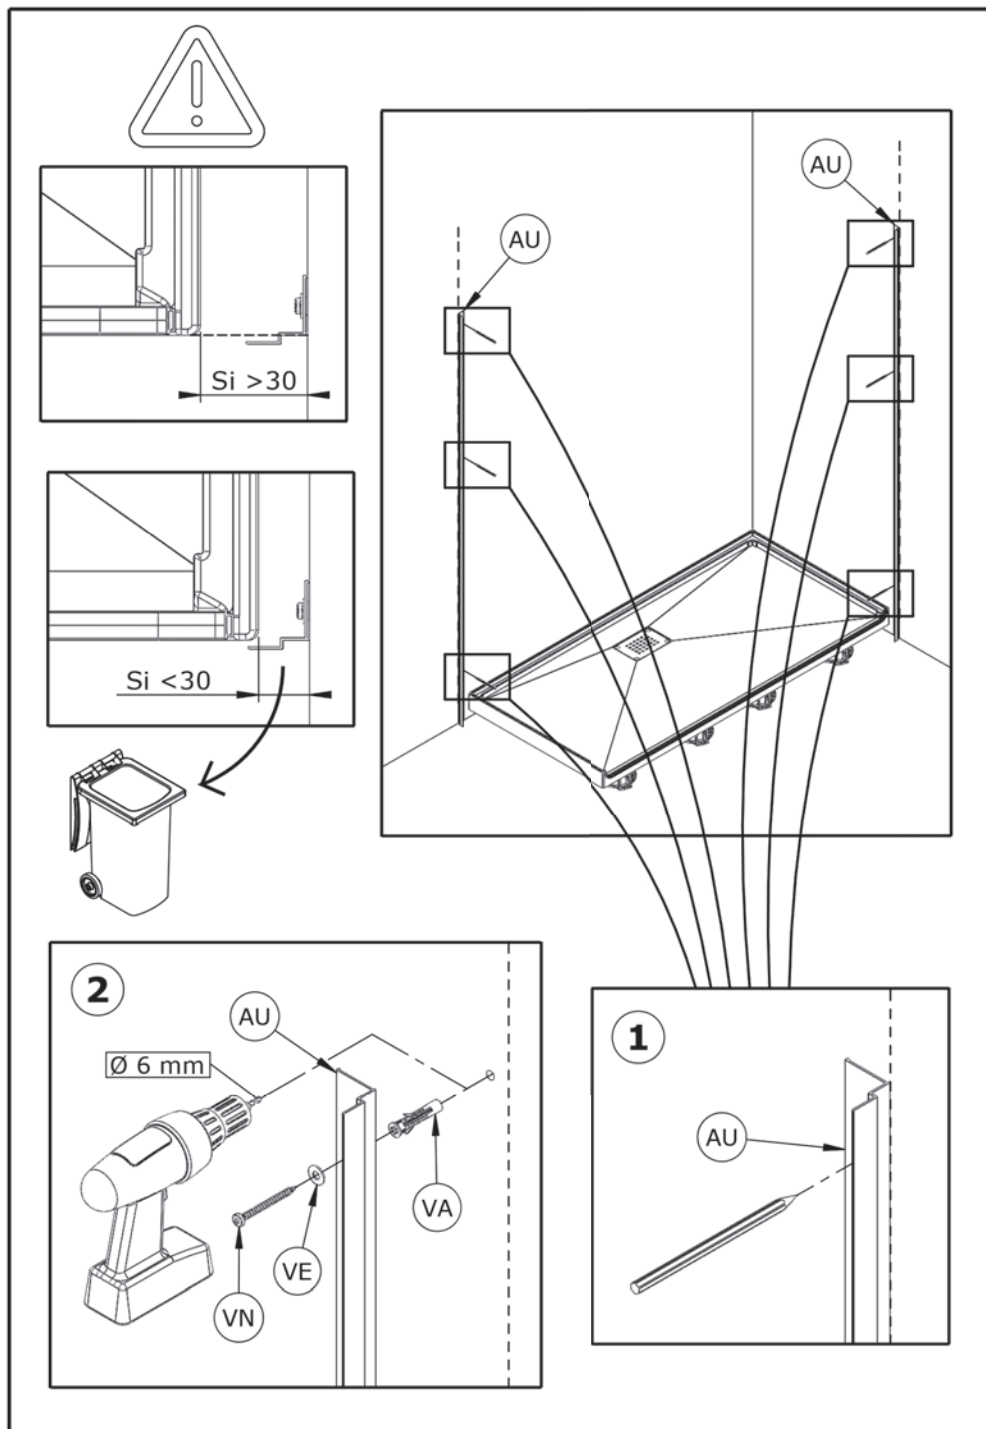


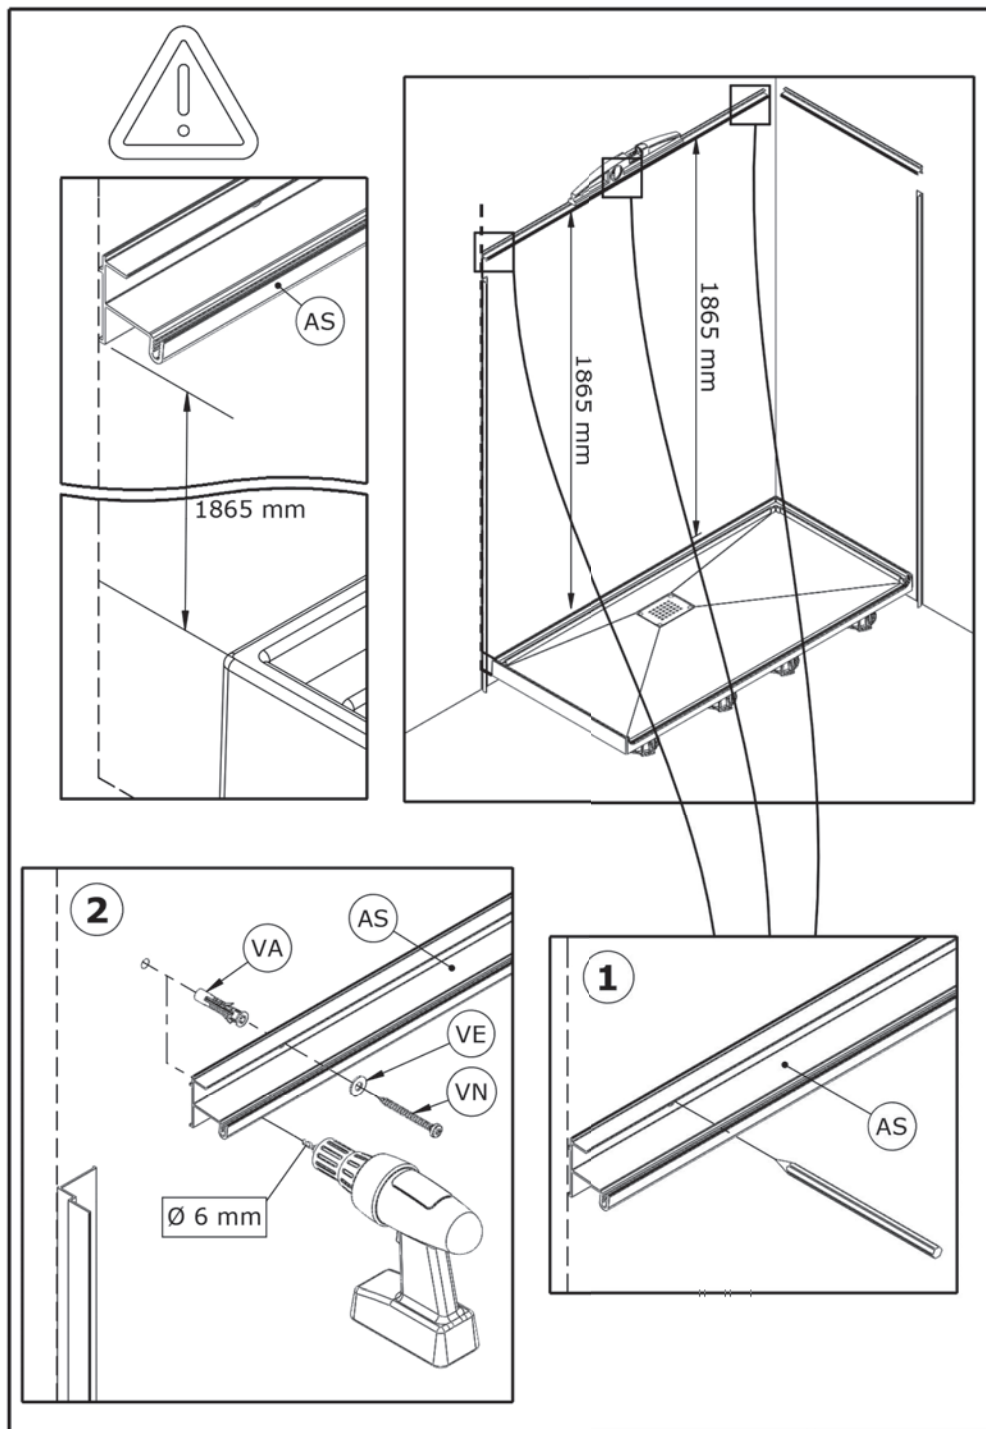






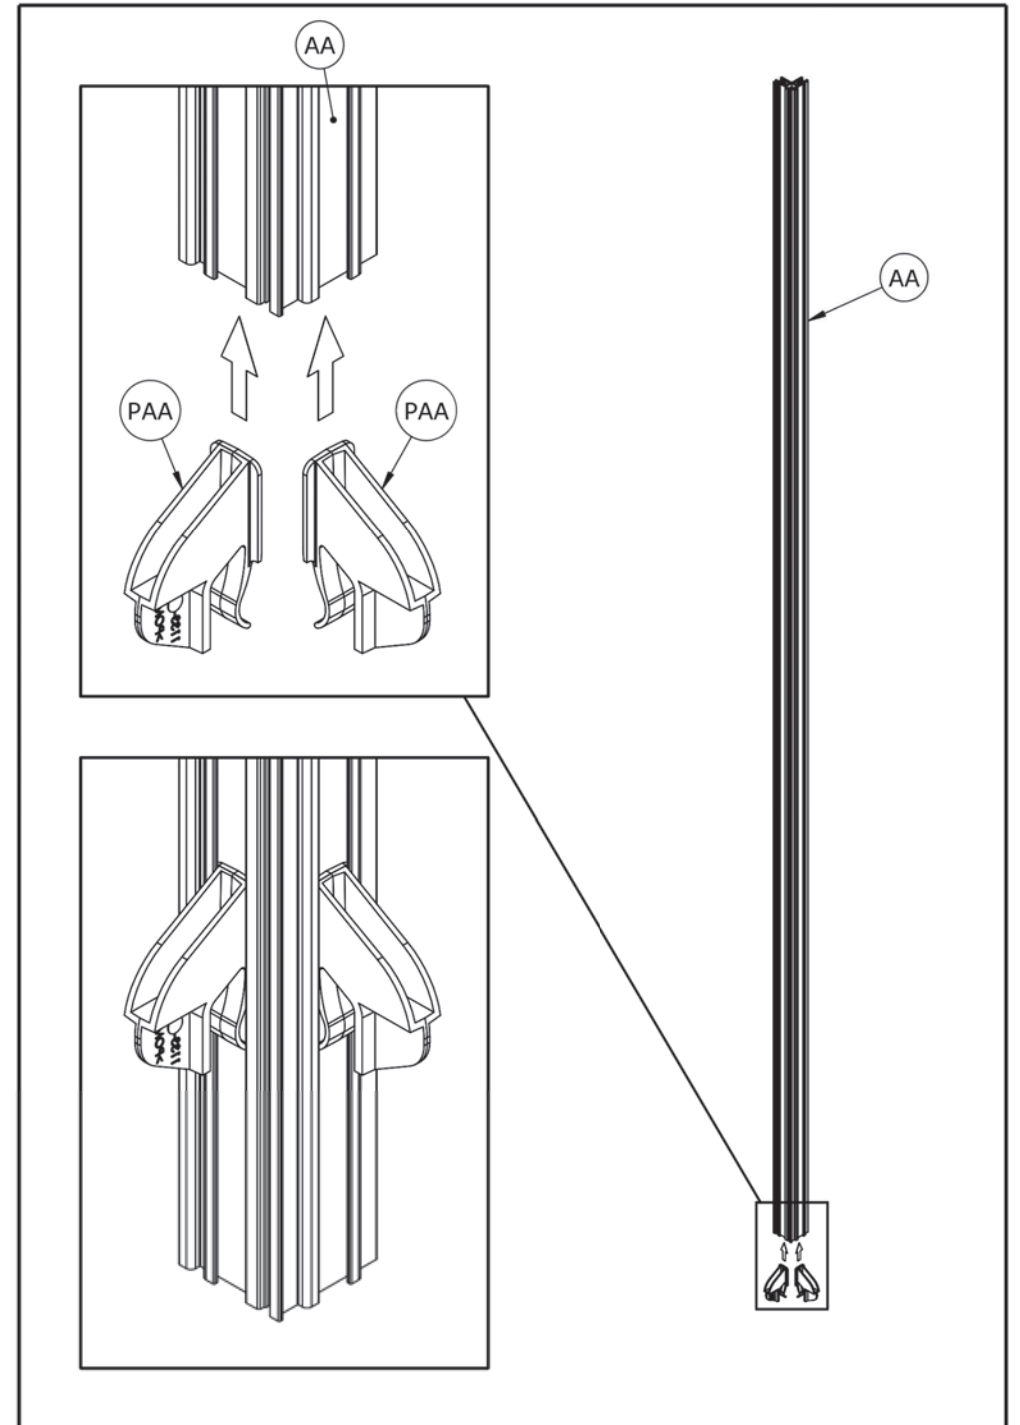
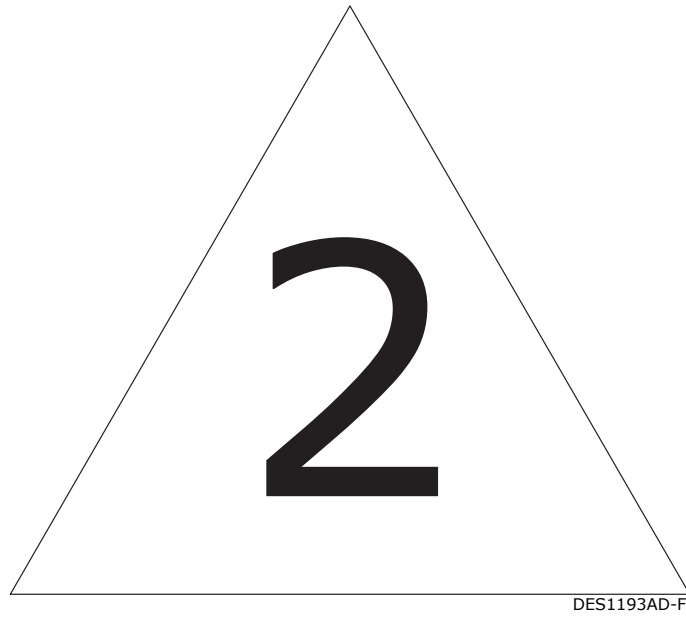


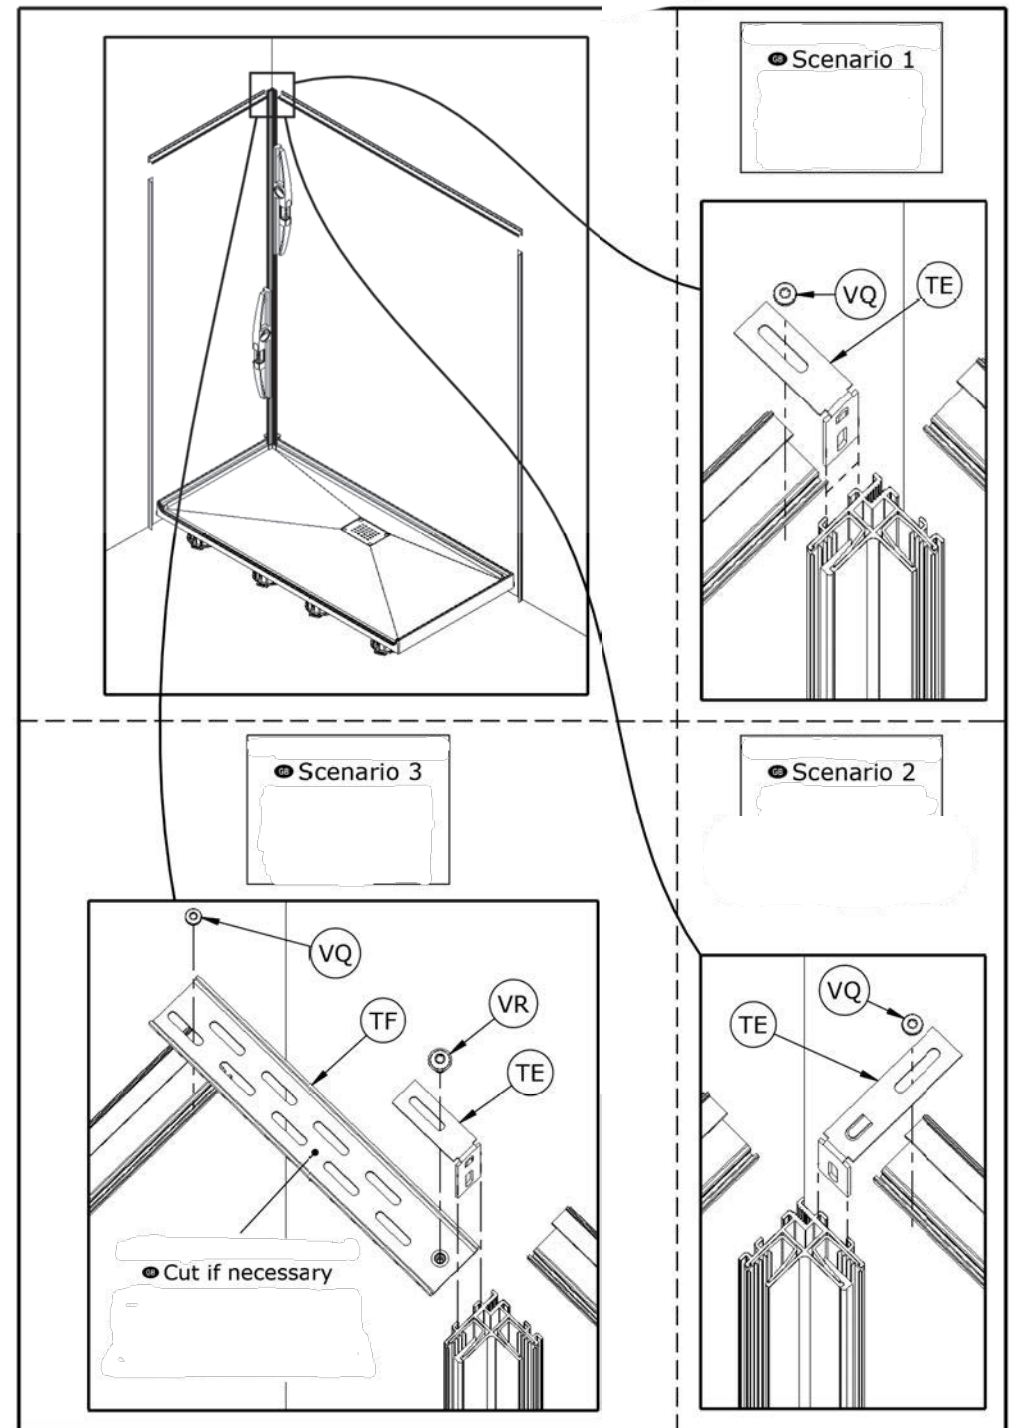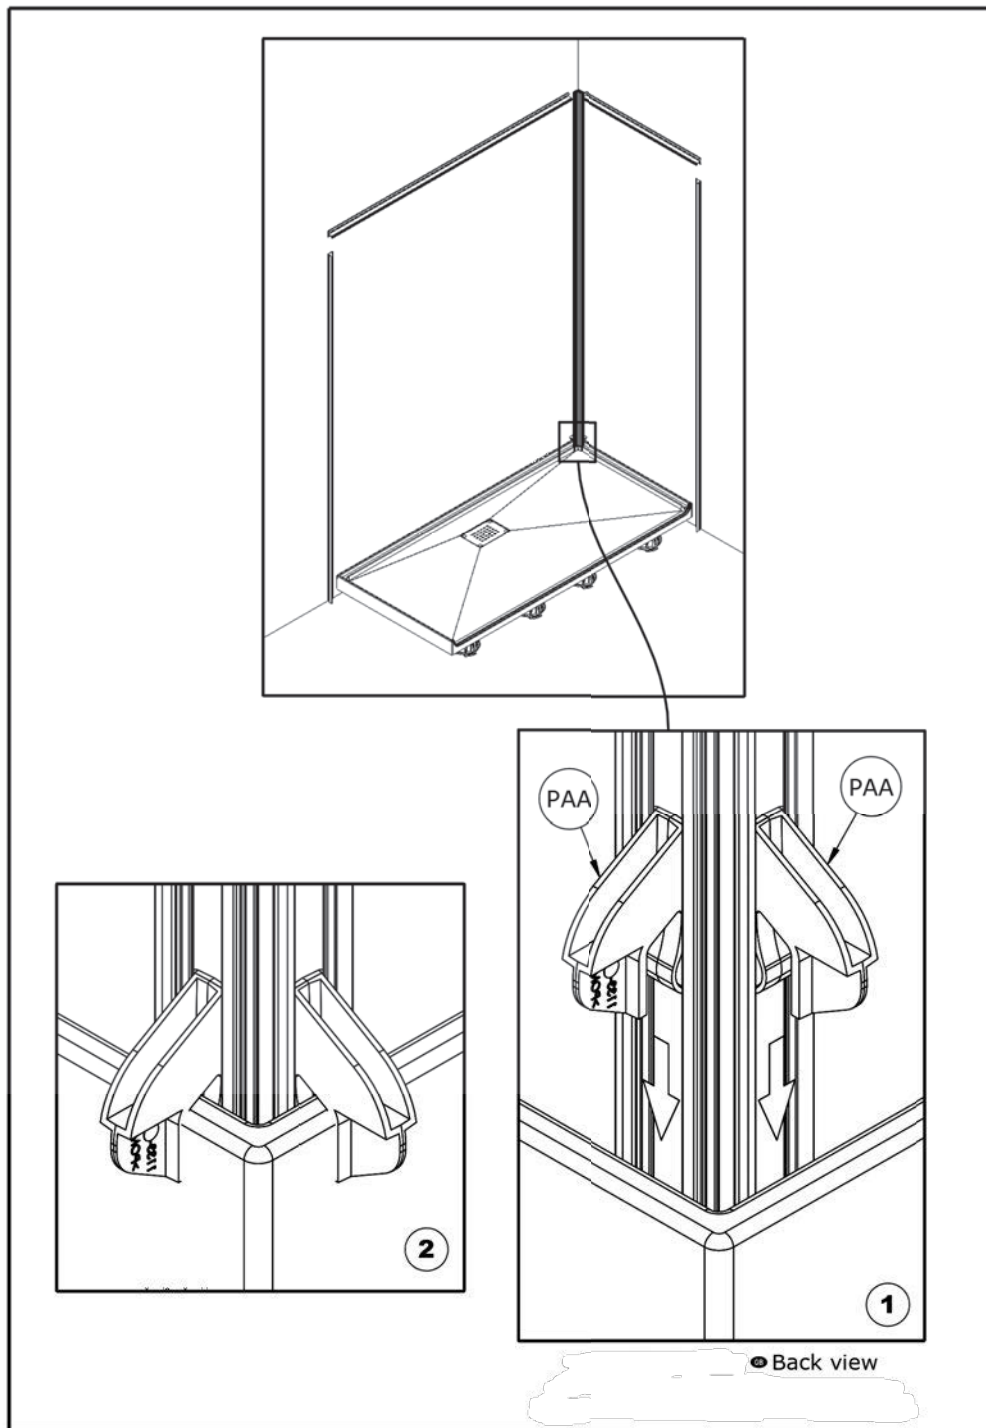


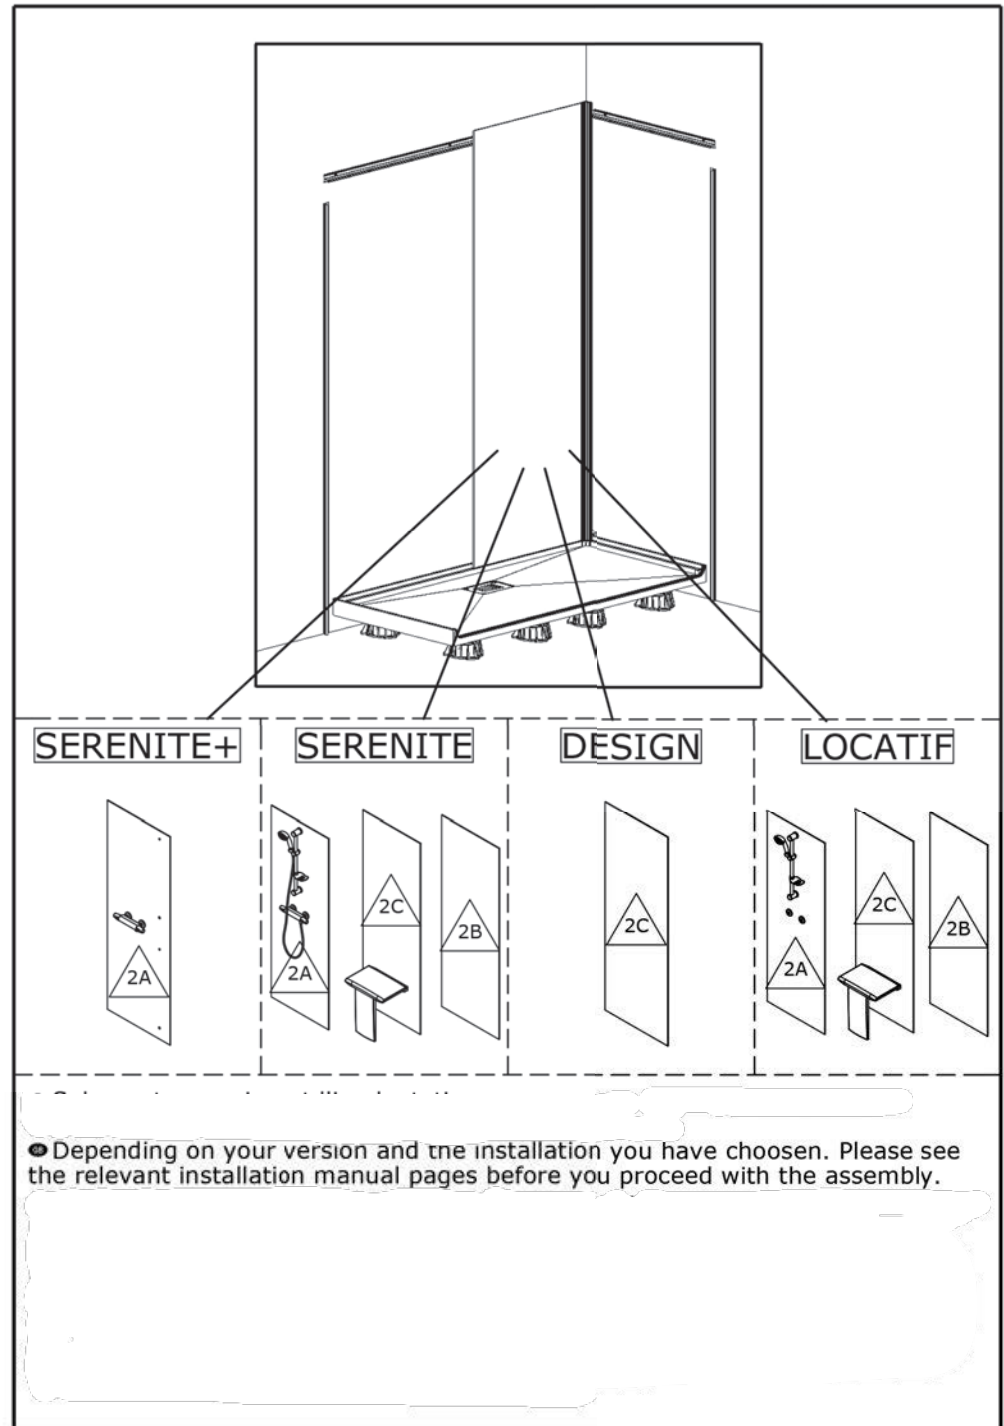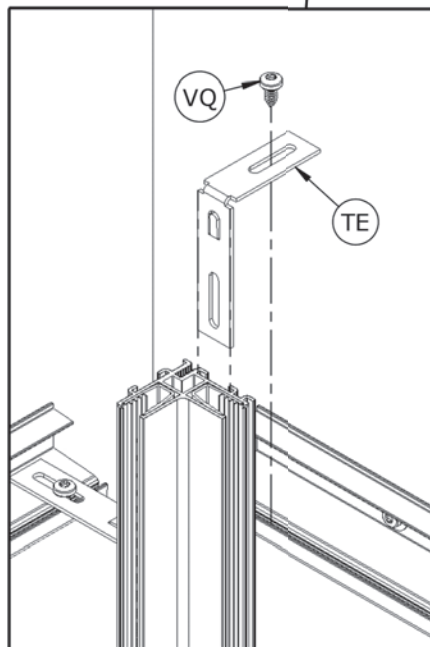
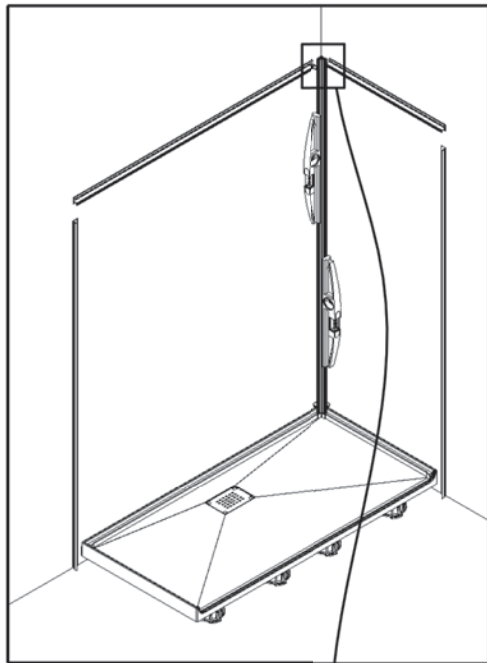


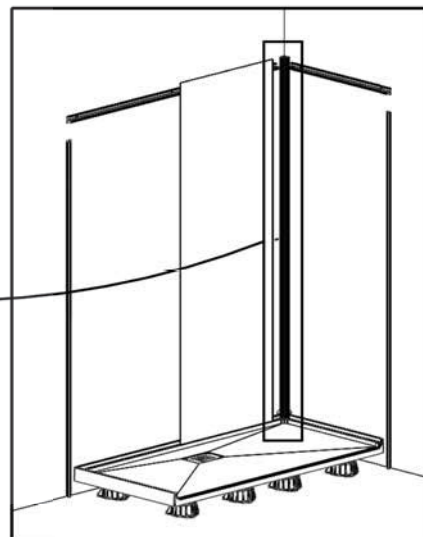
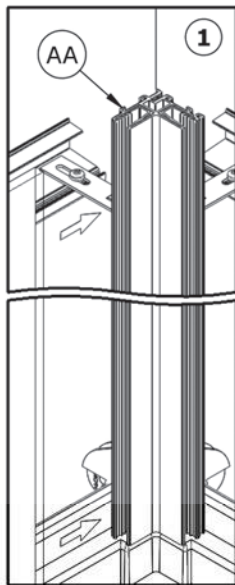
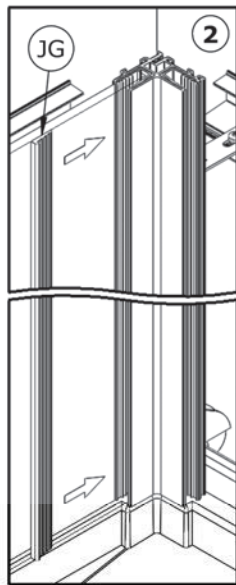




Do not block

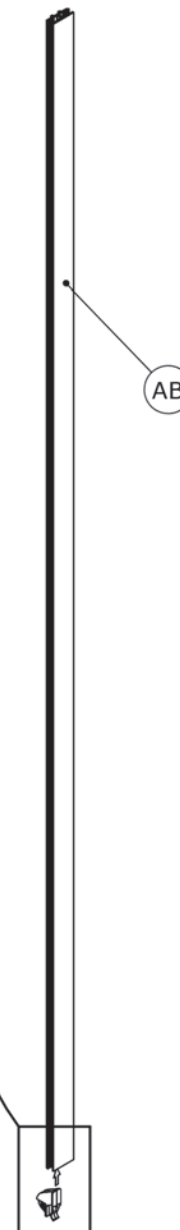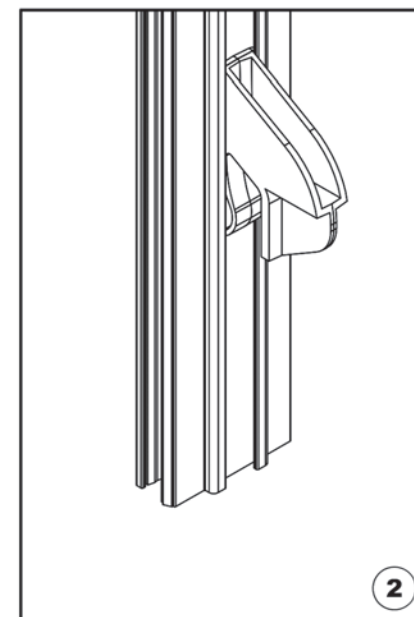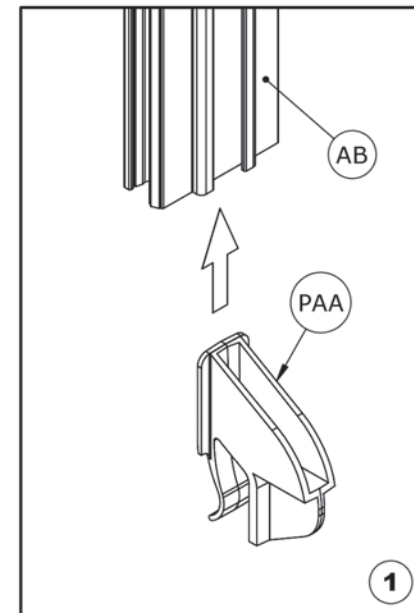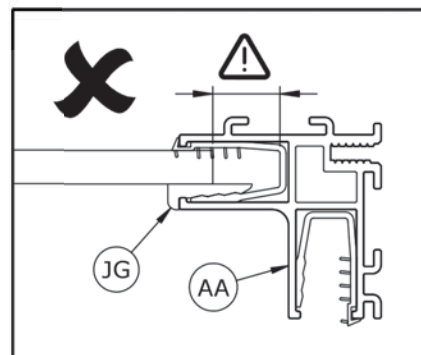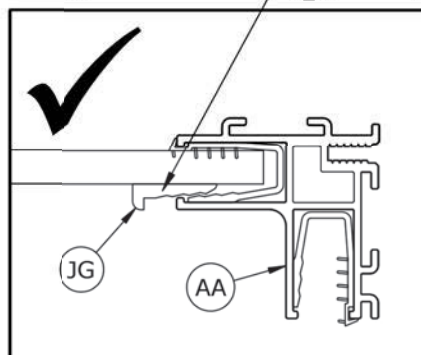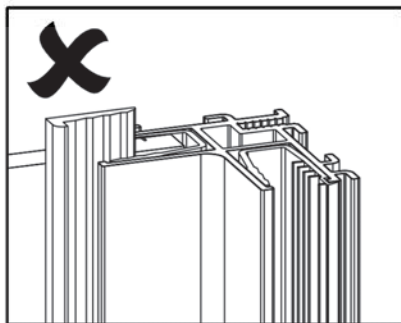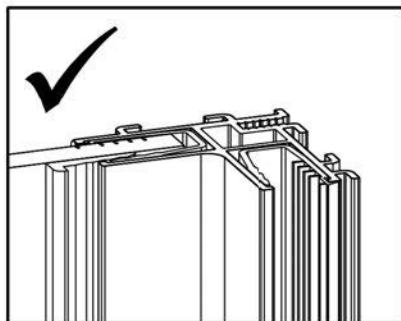



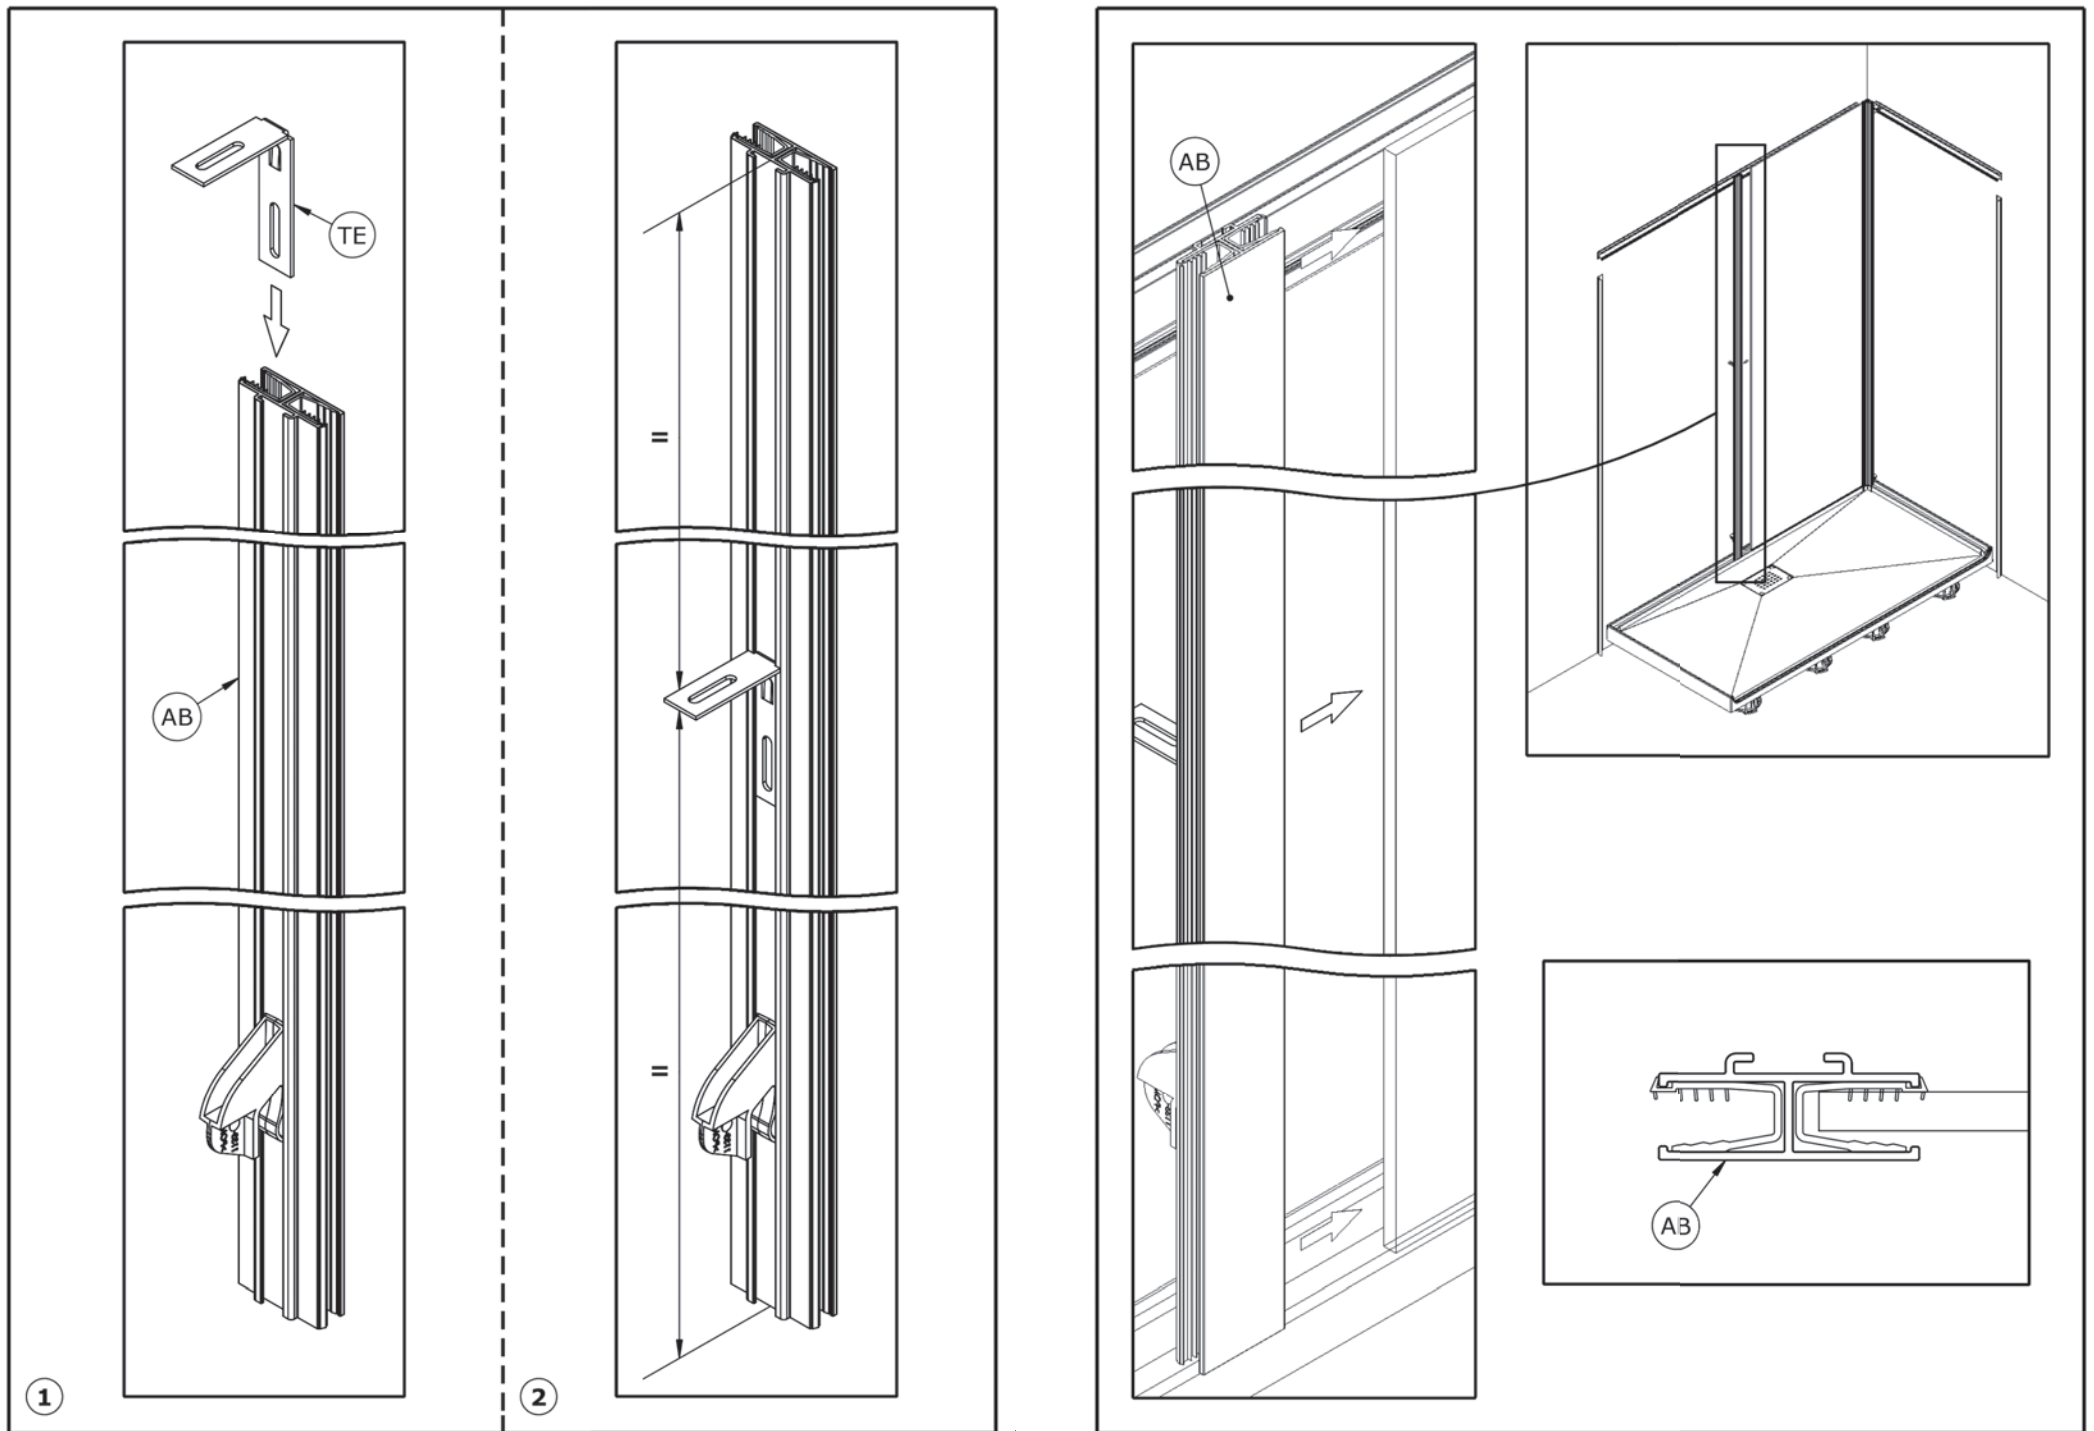






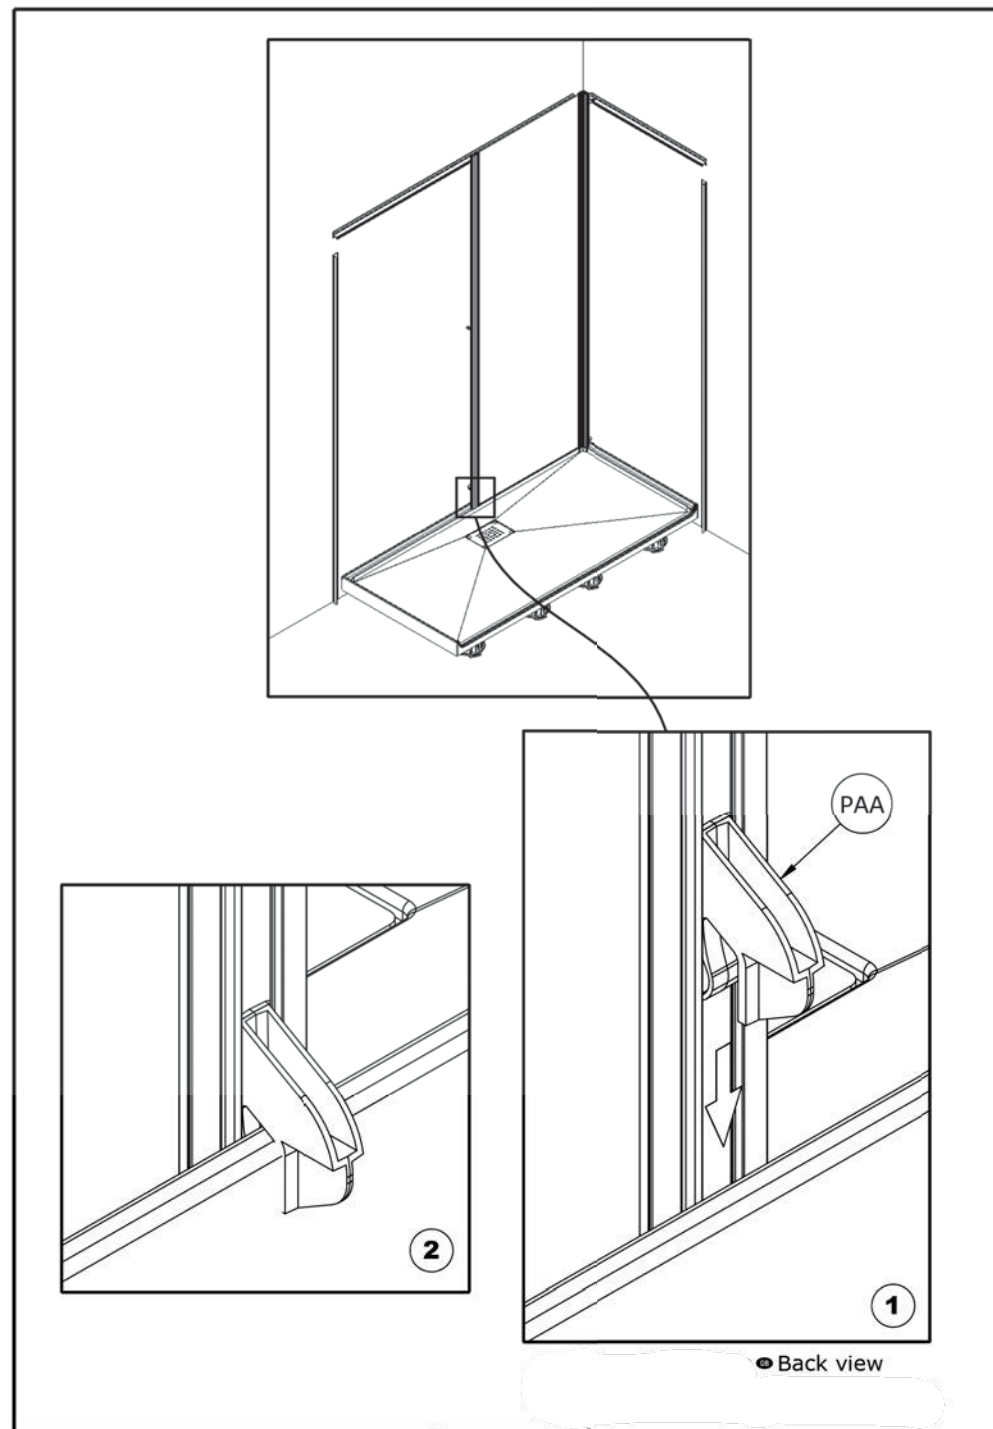
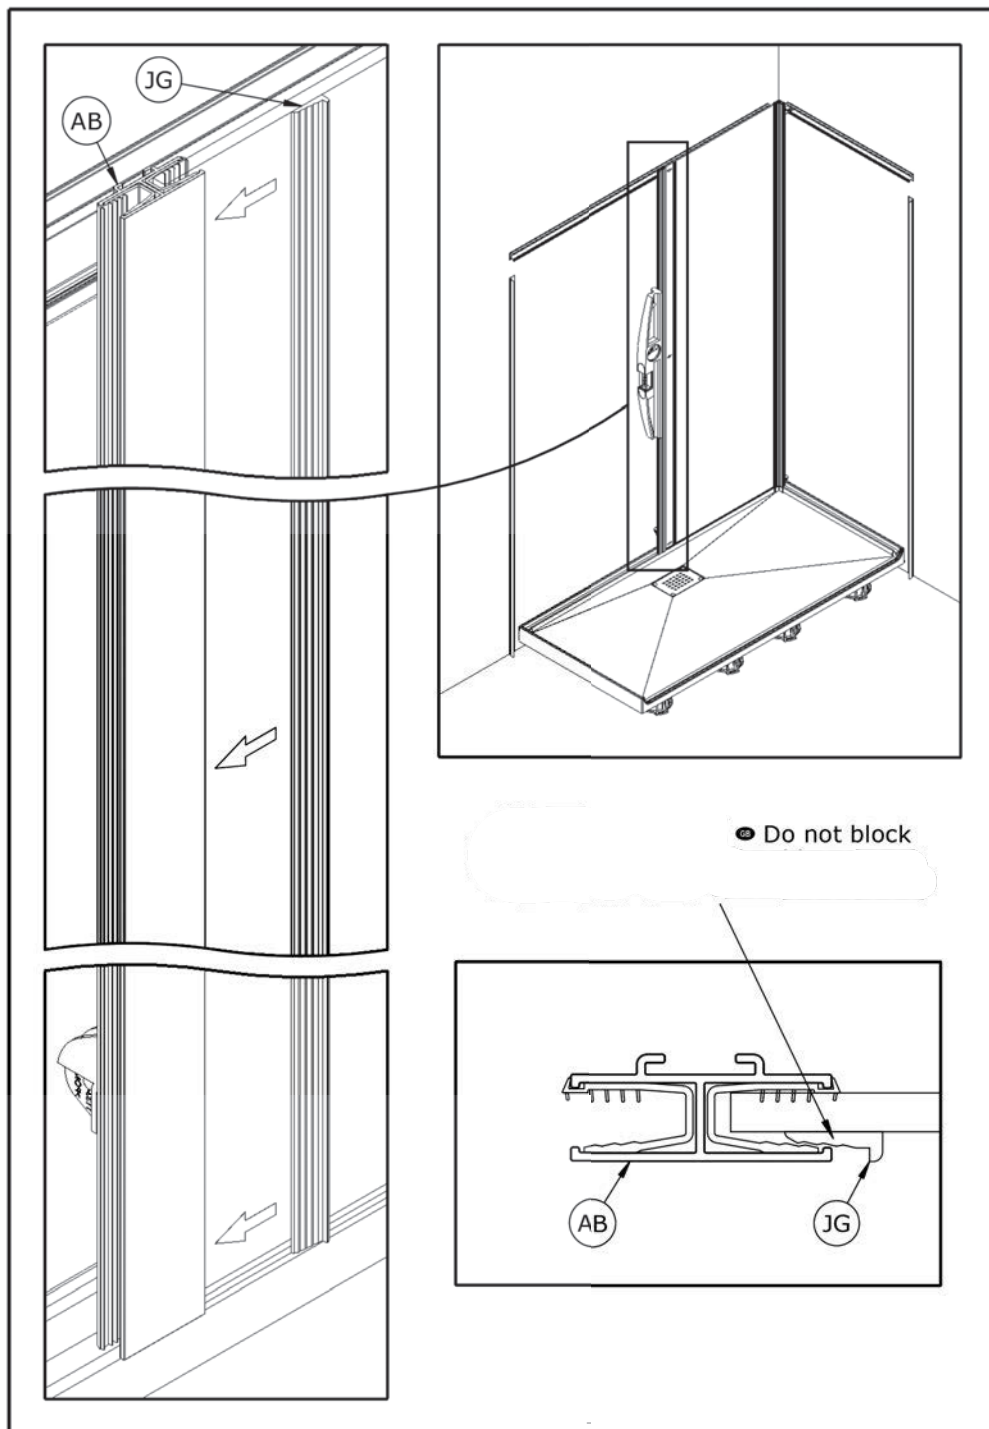


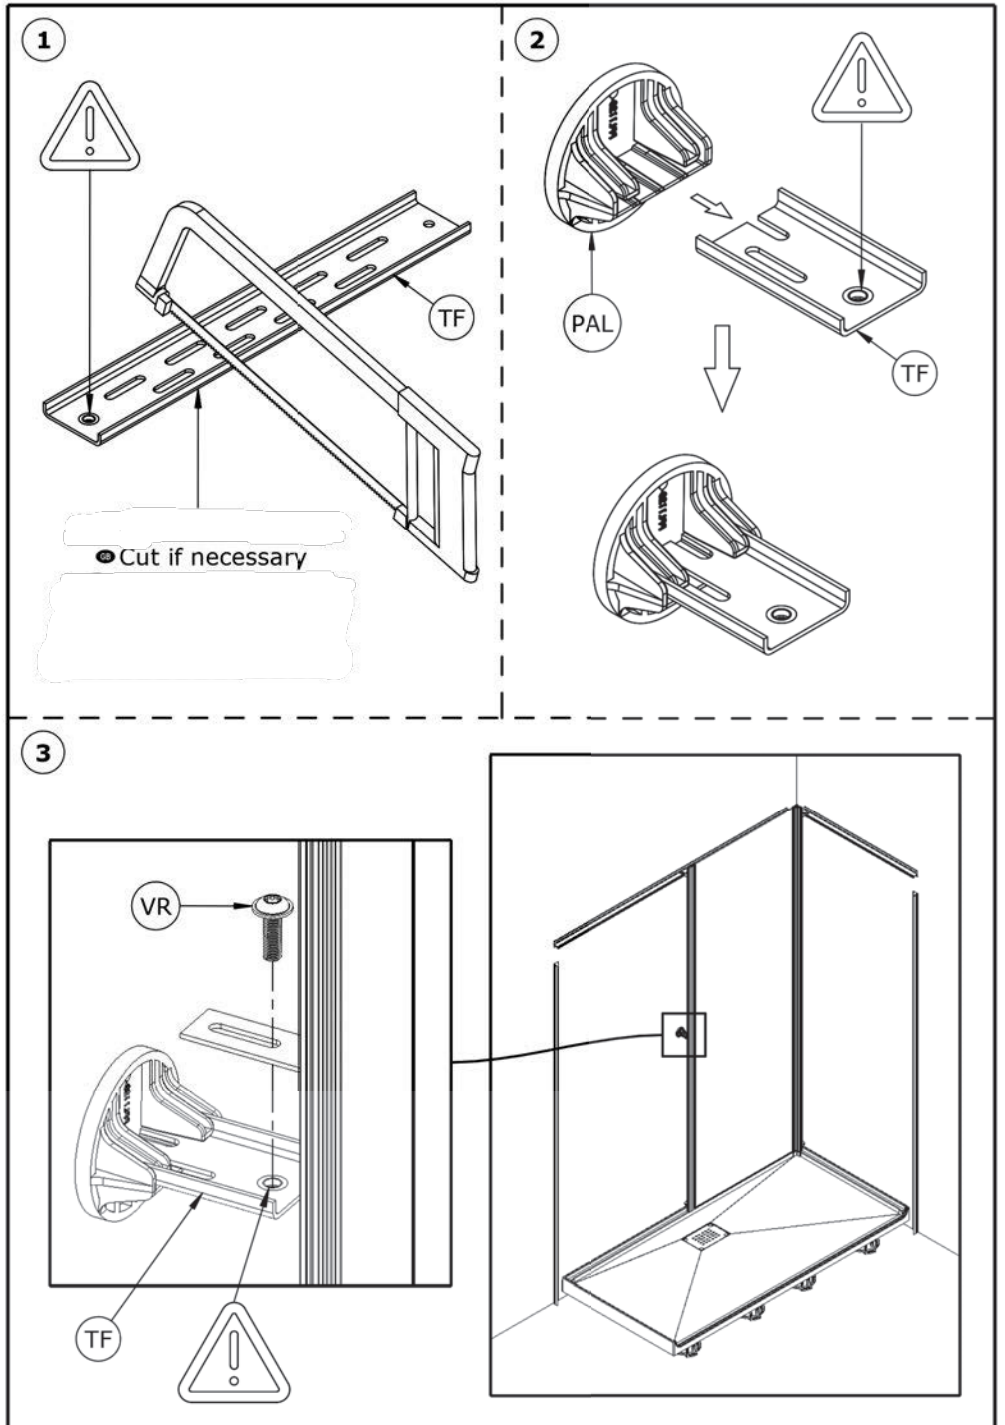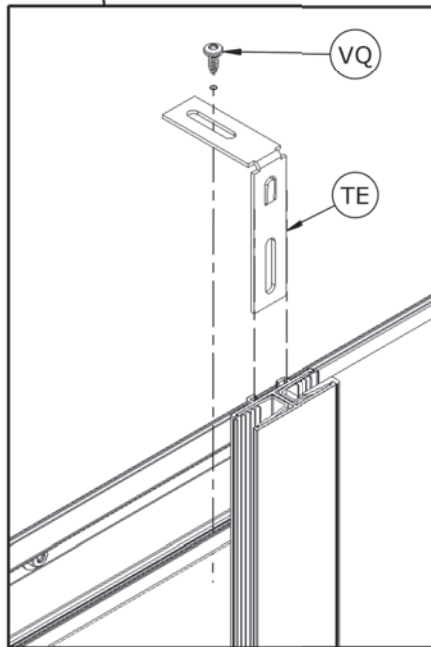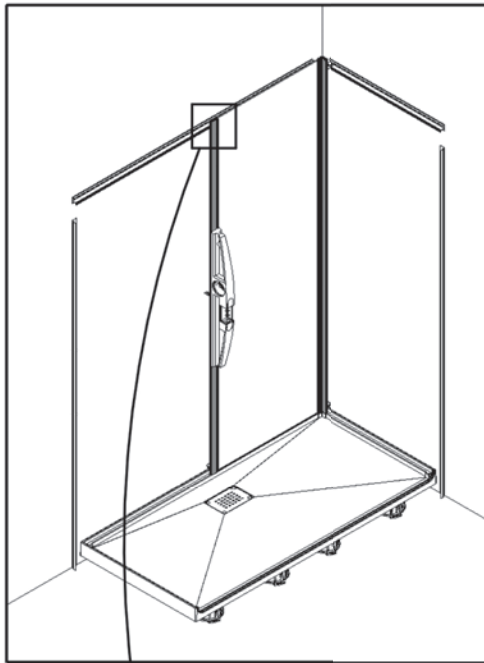

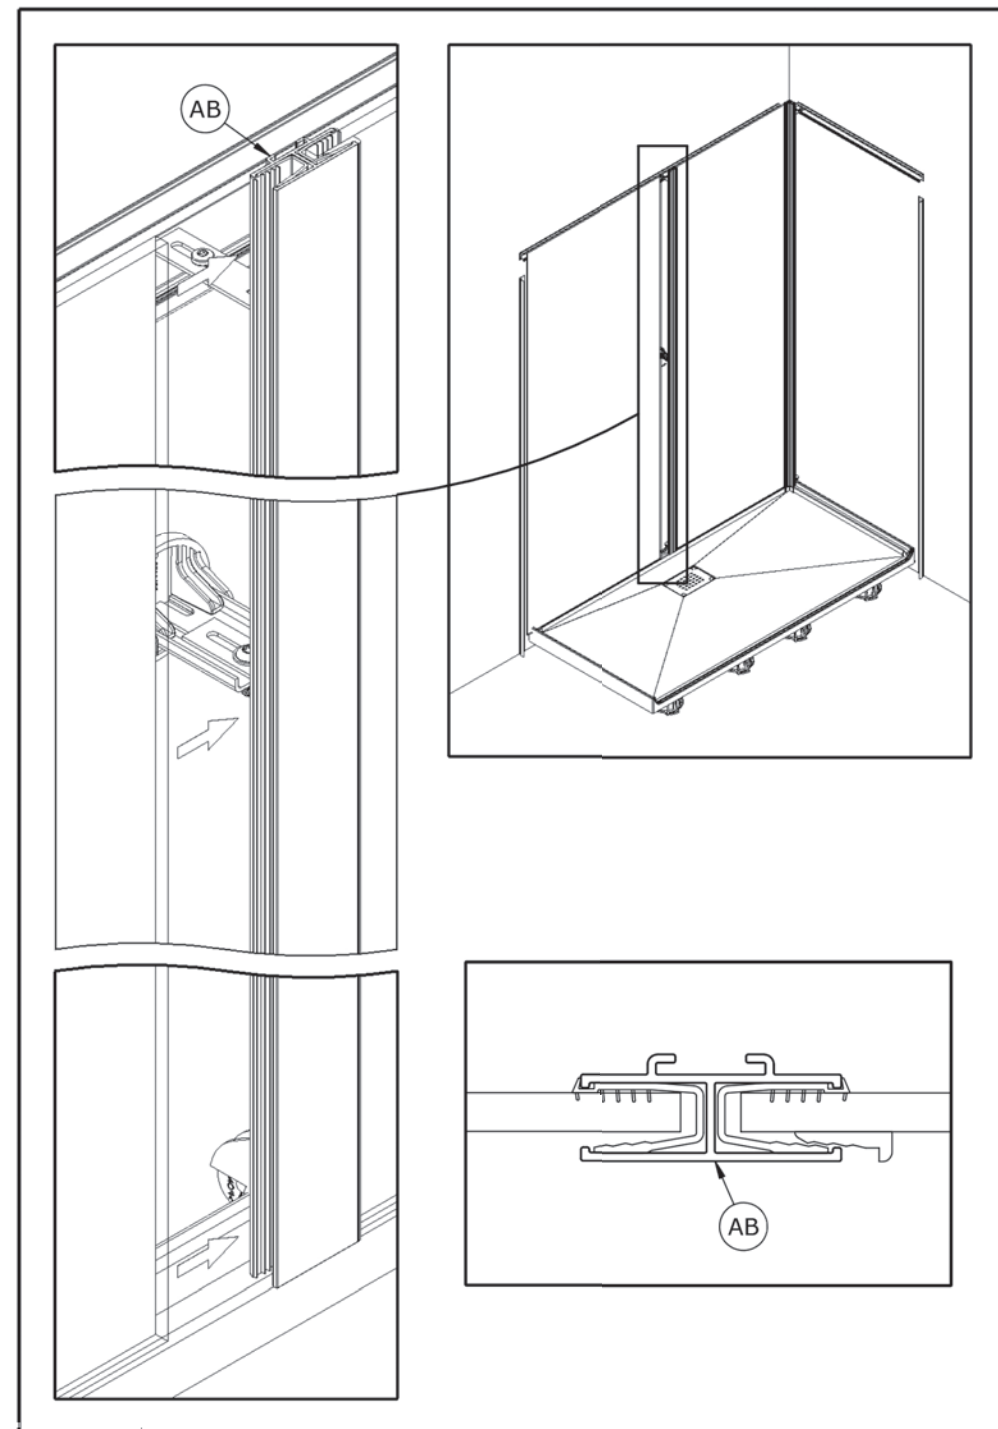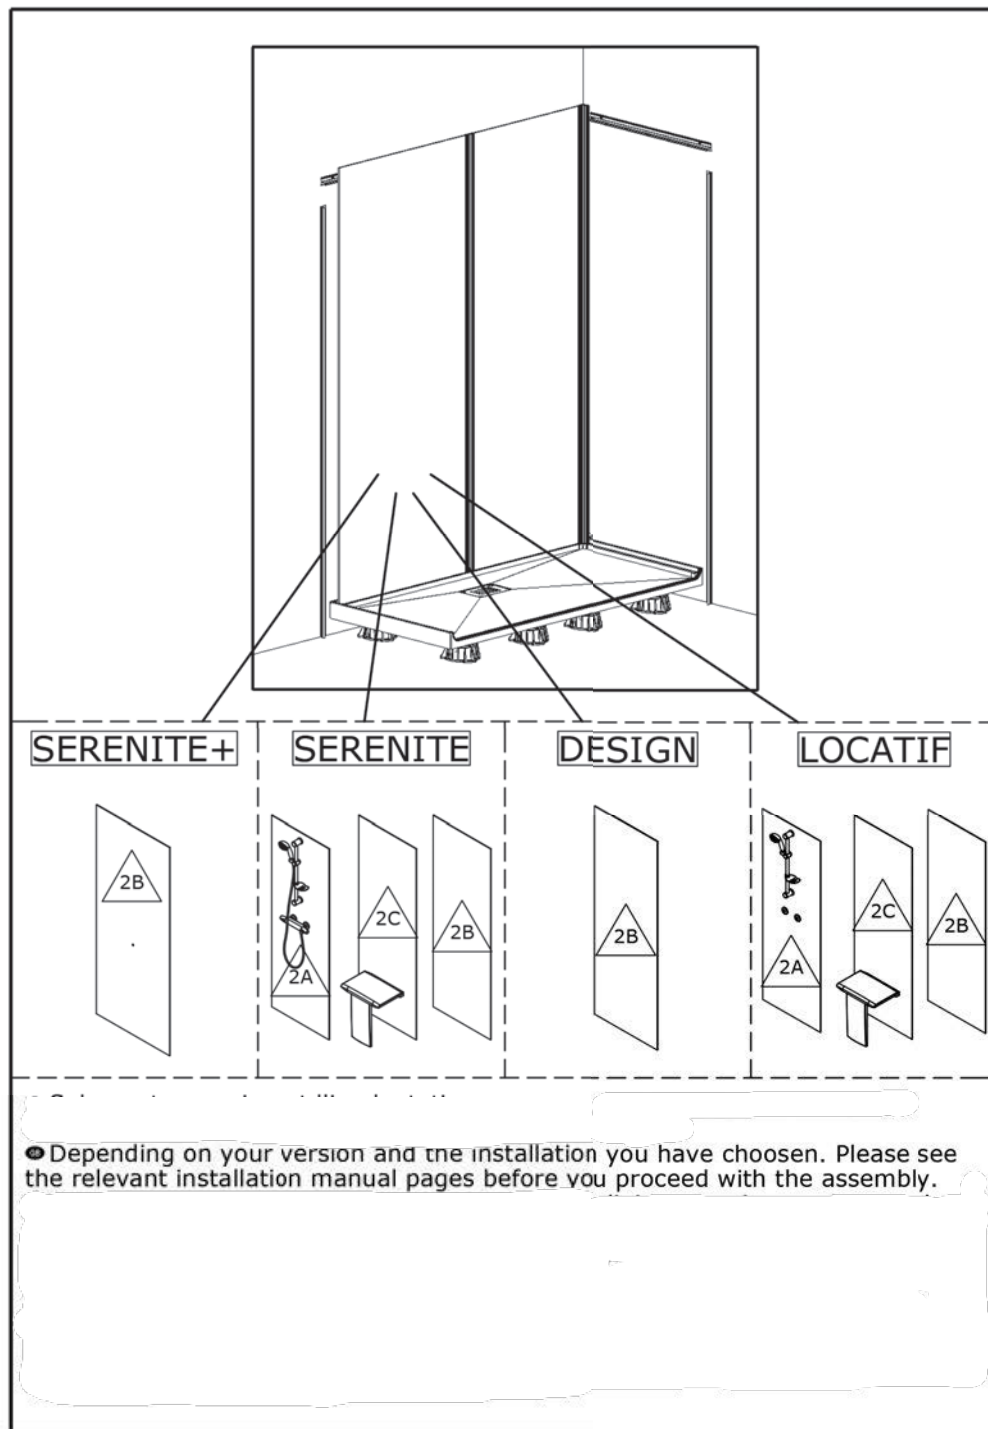



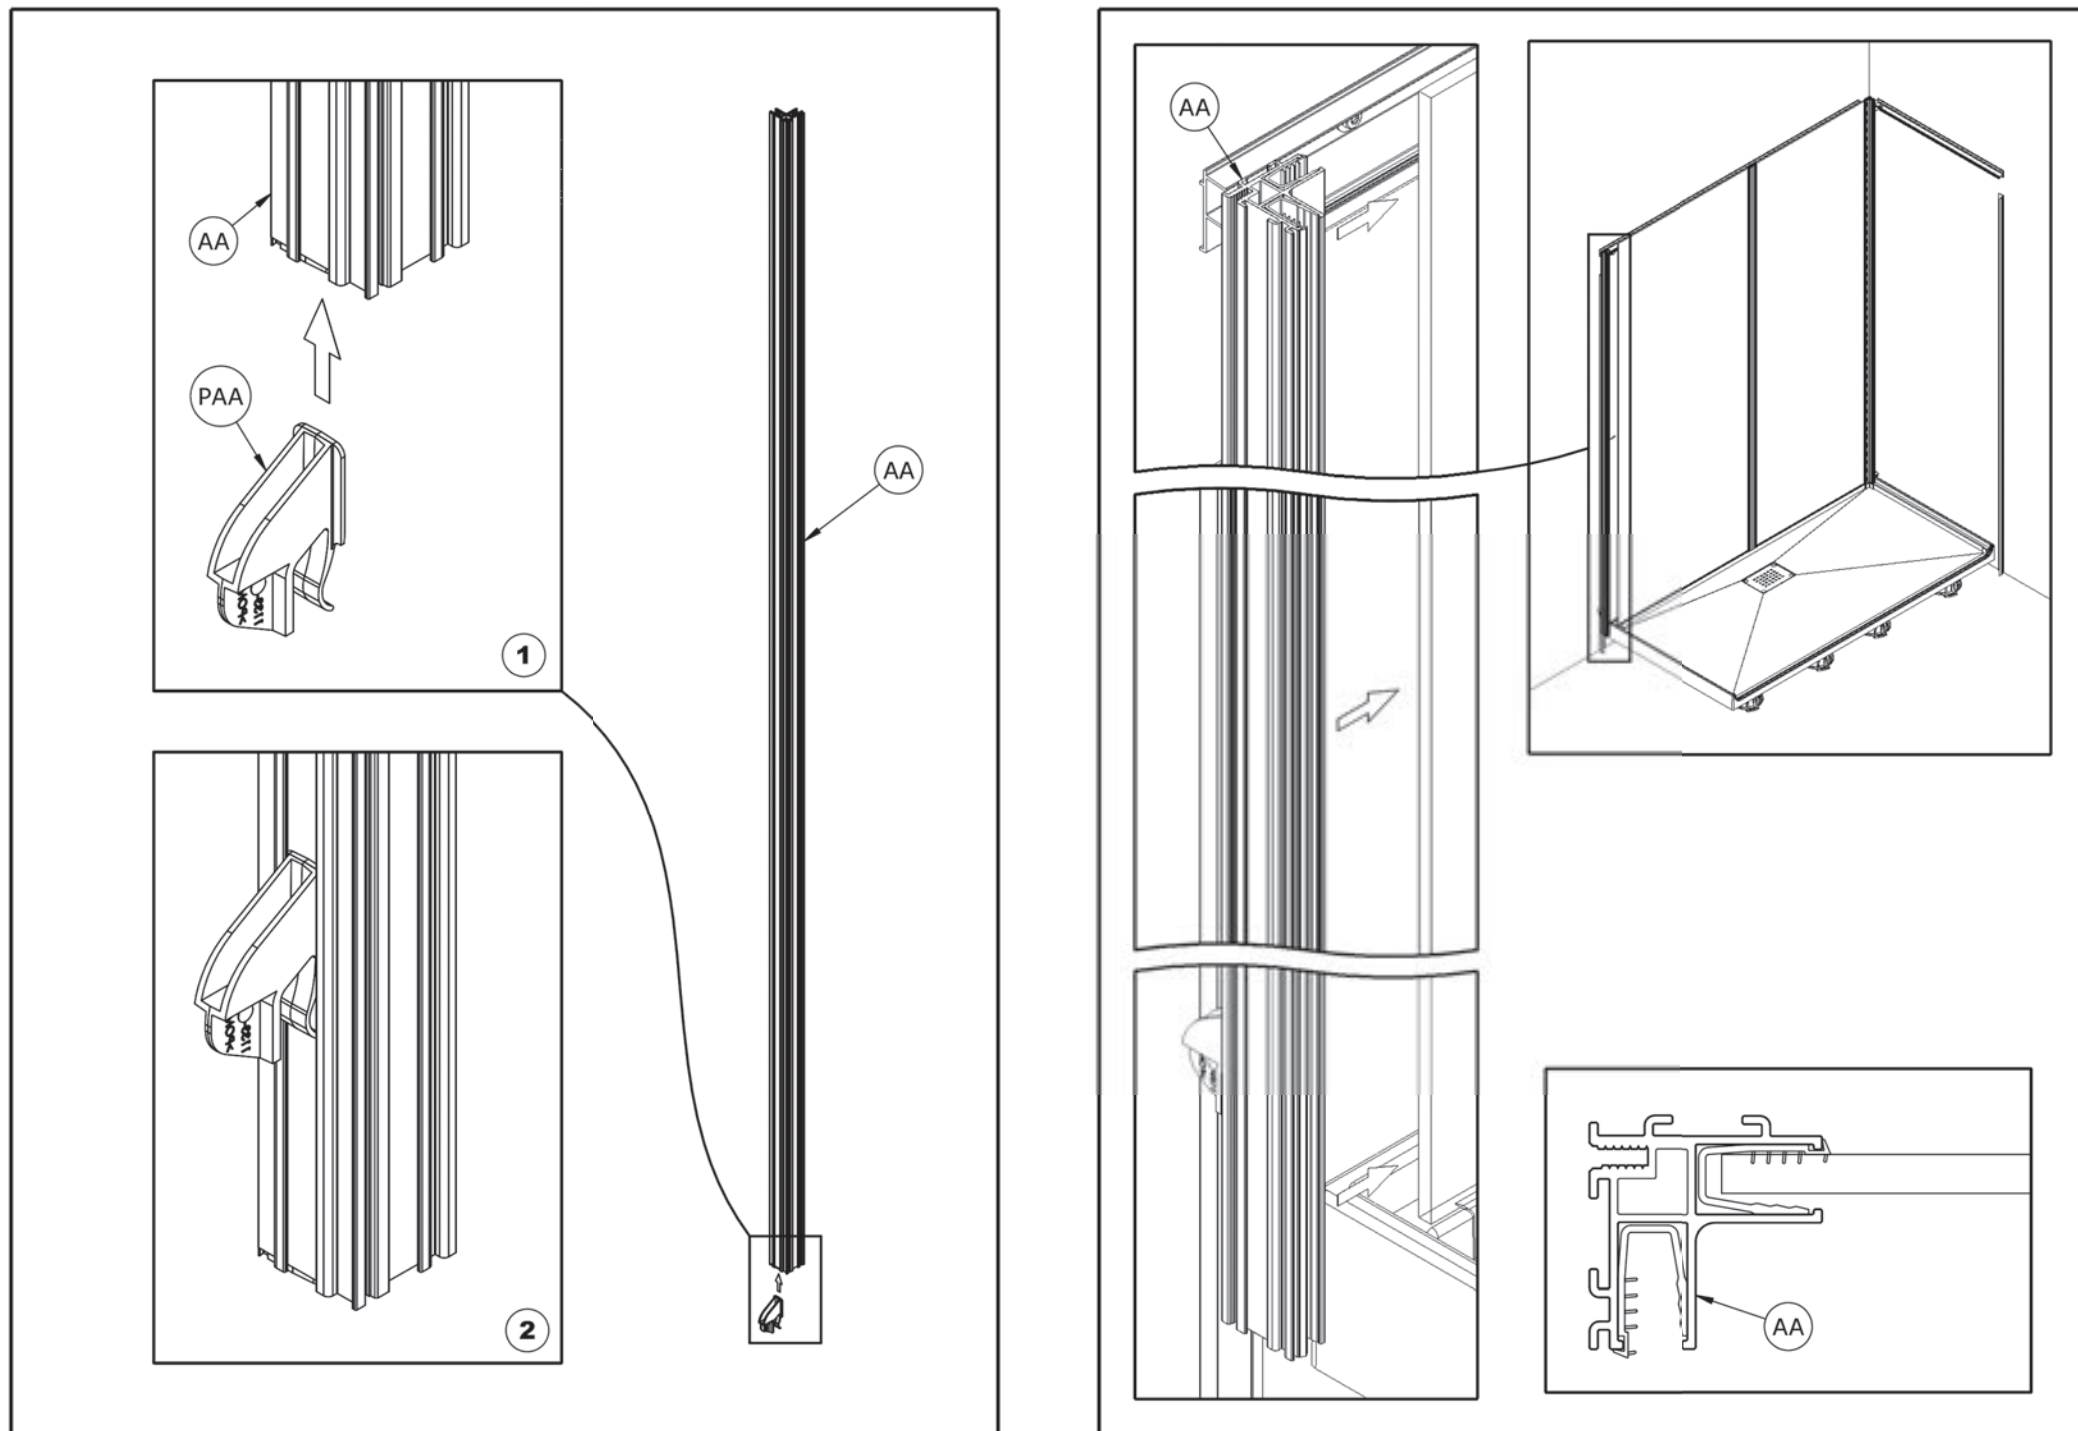


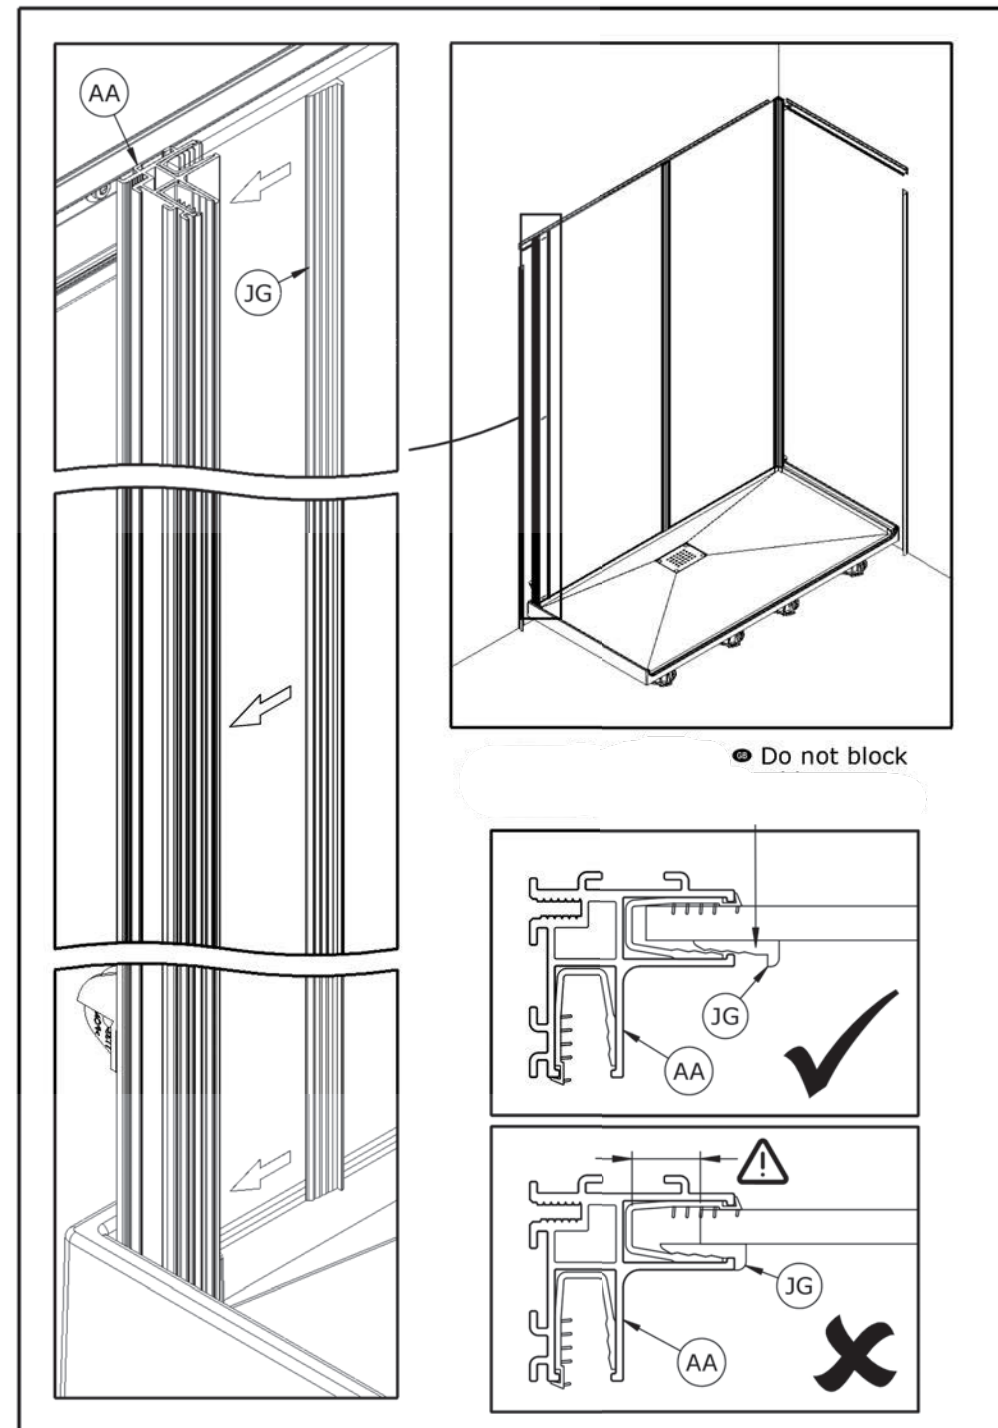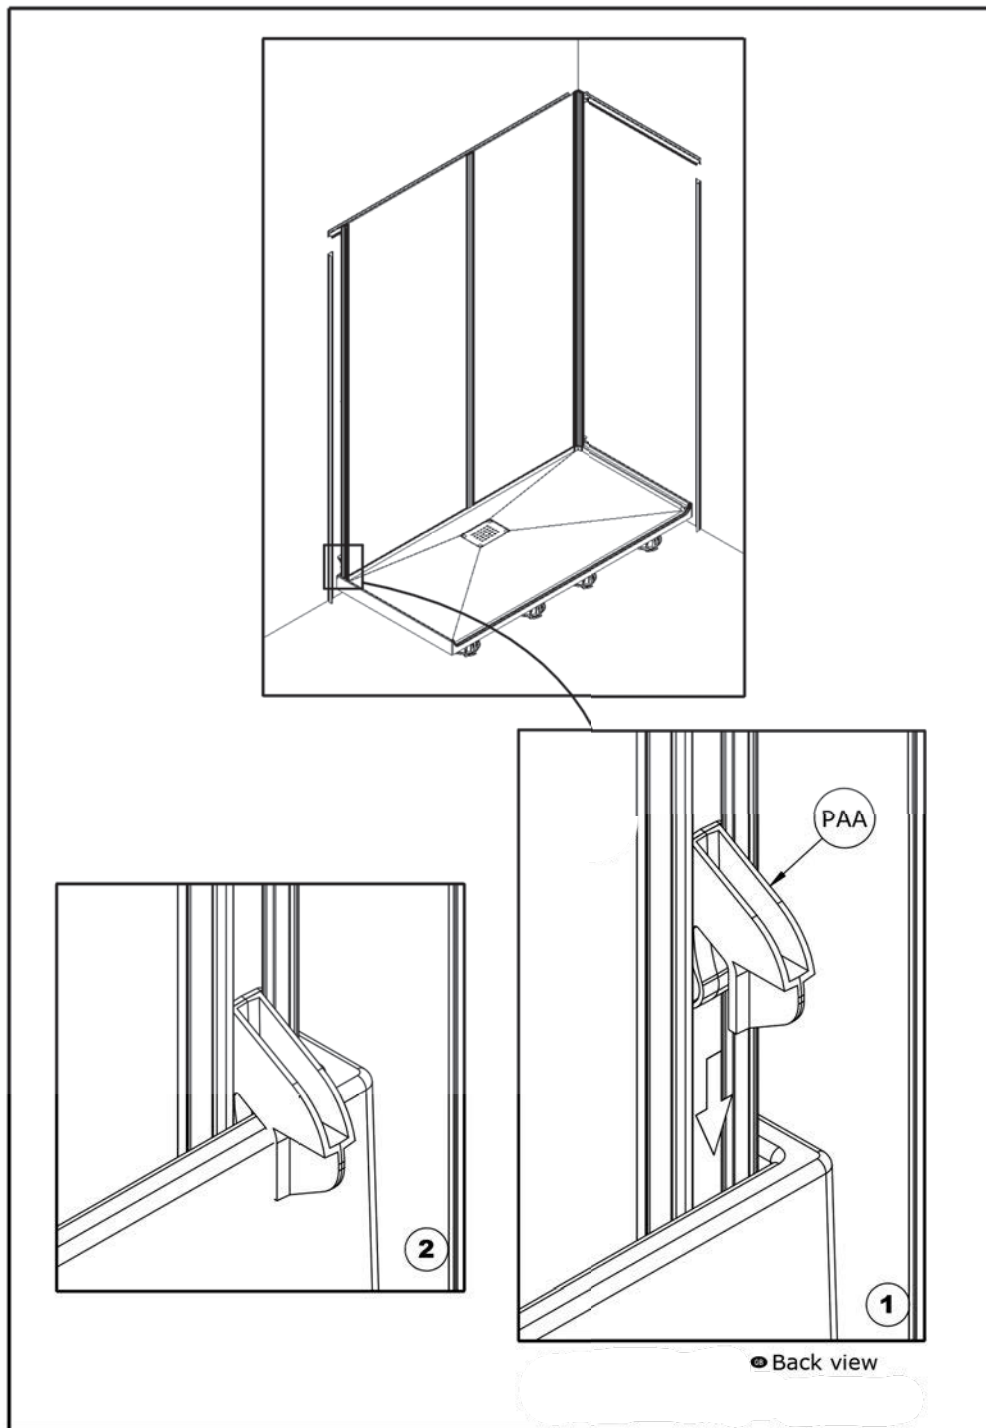


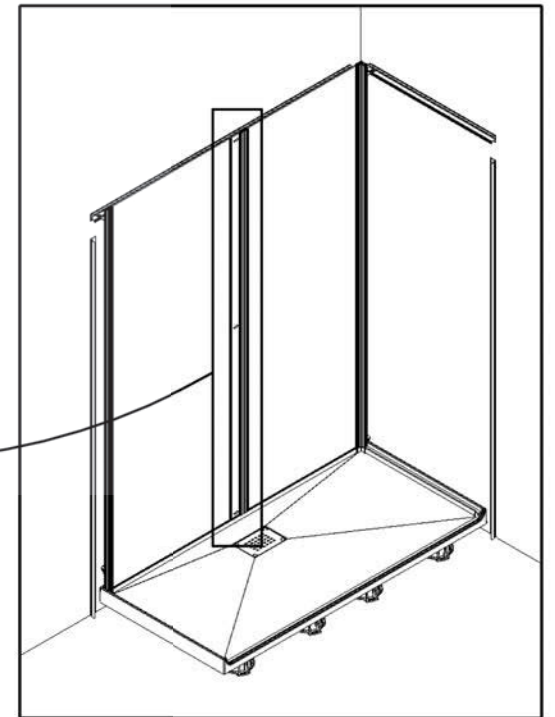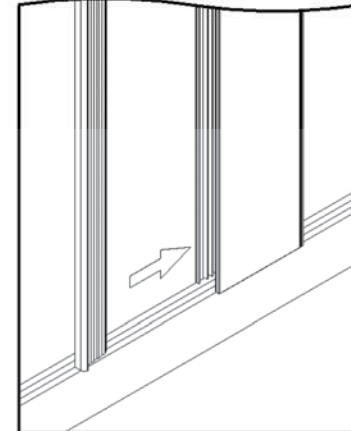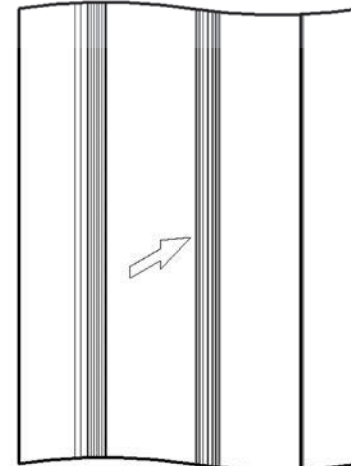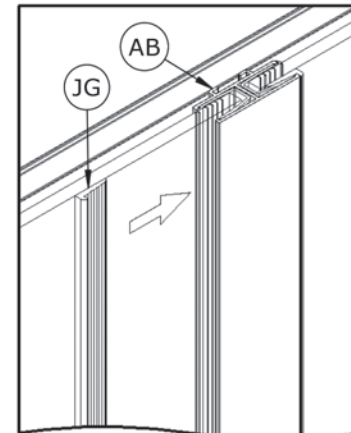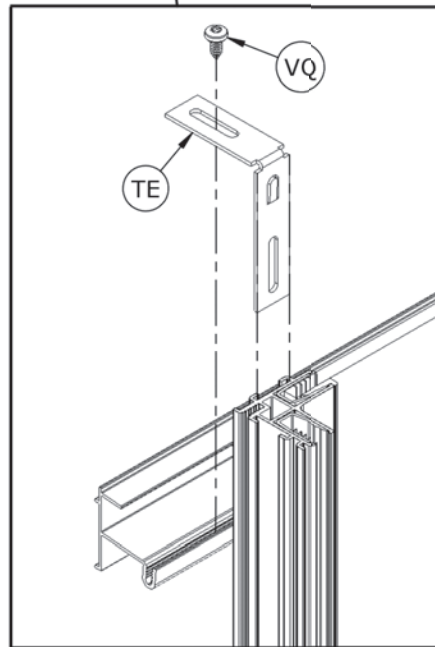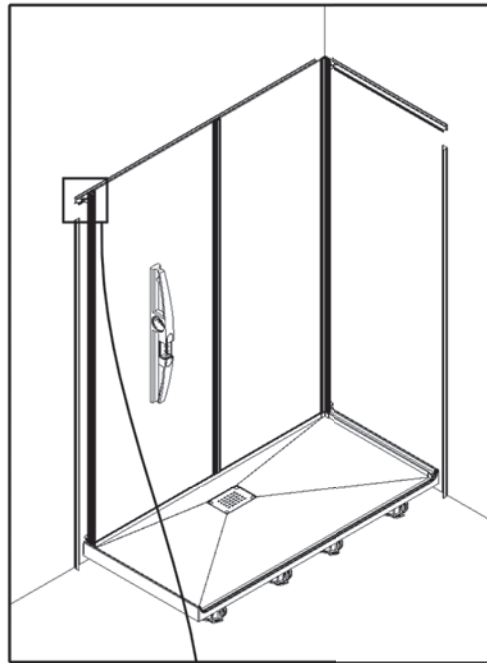




Do not block


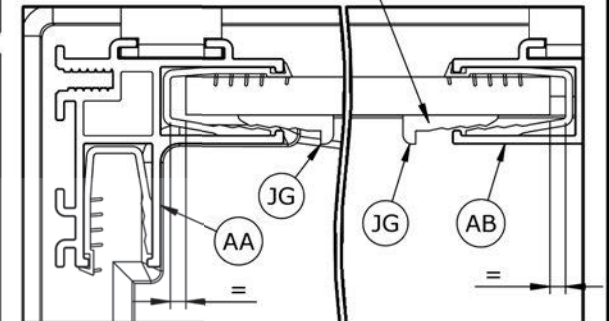


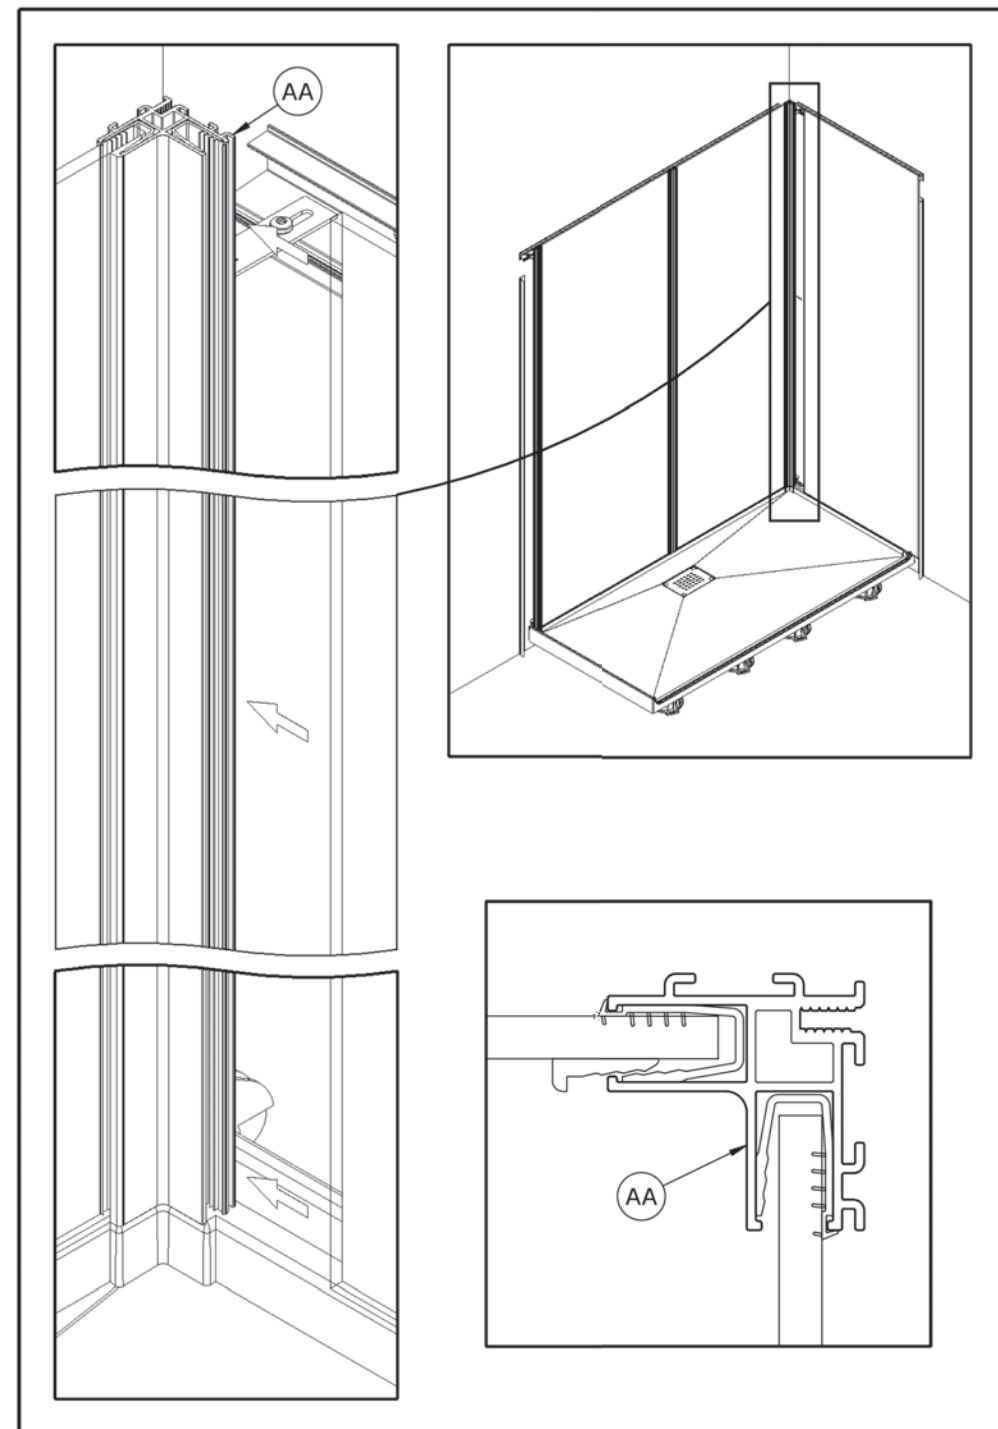
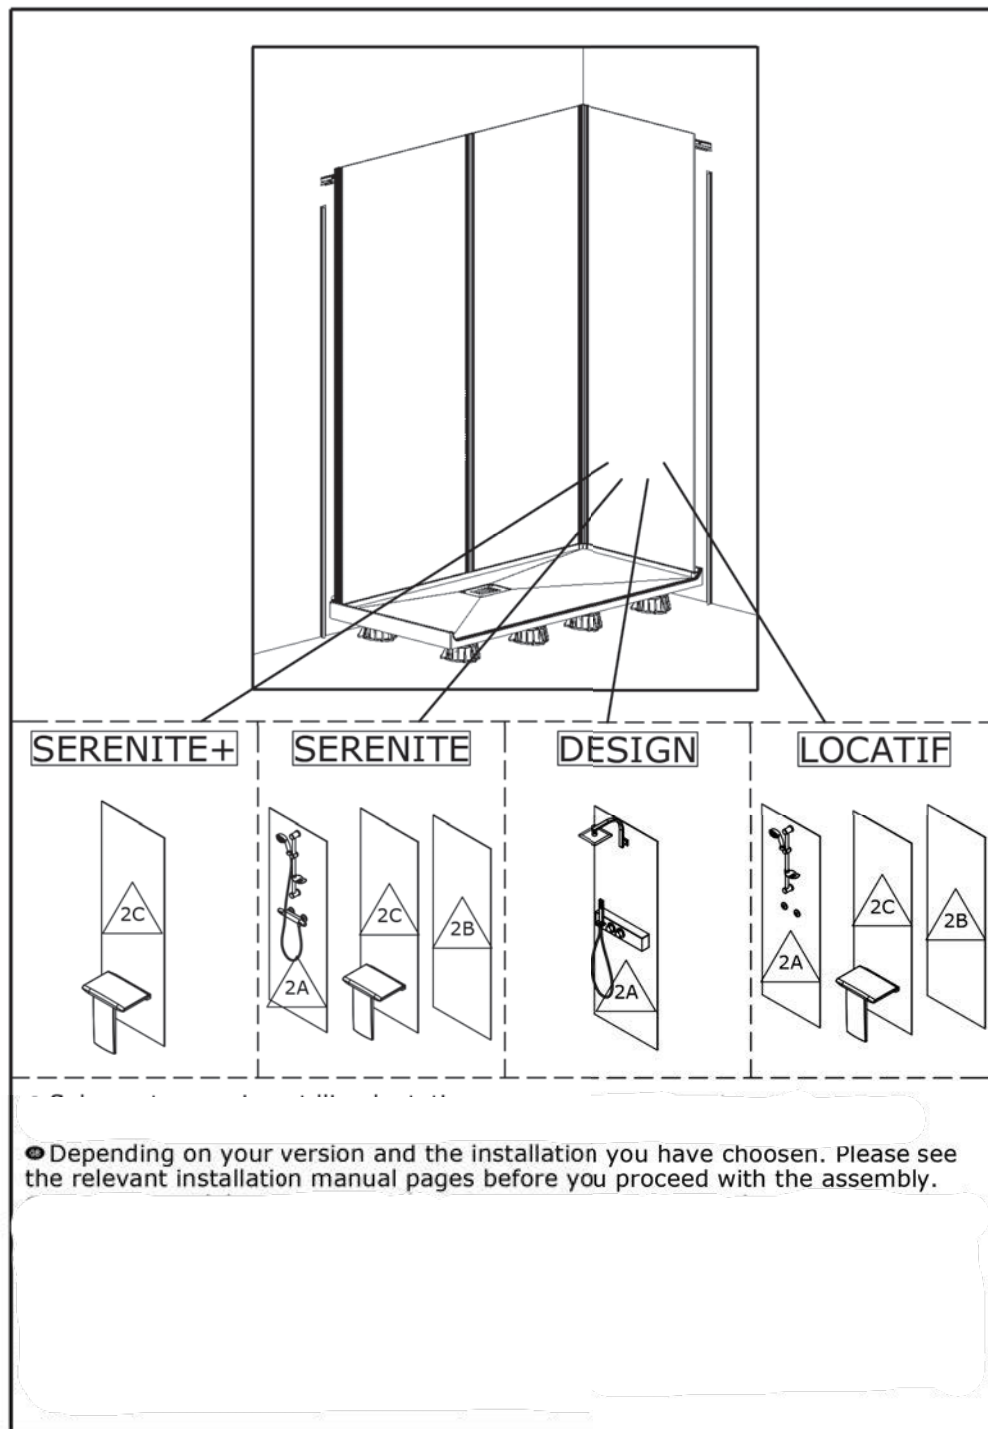



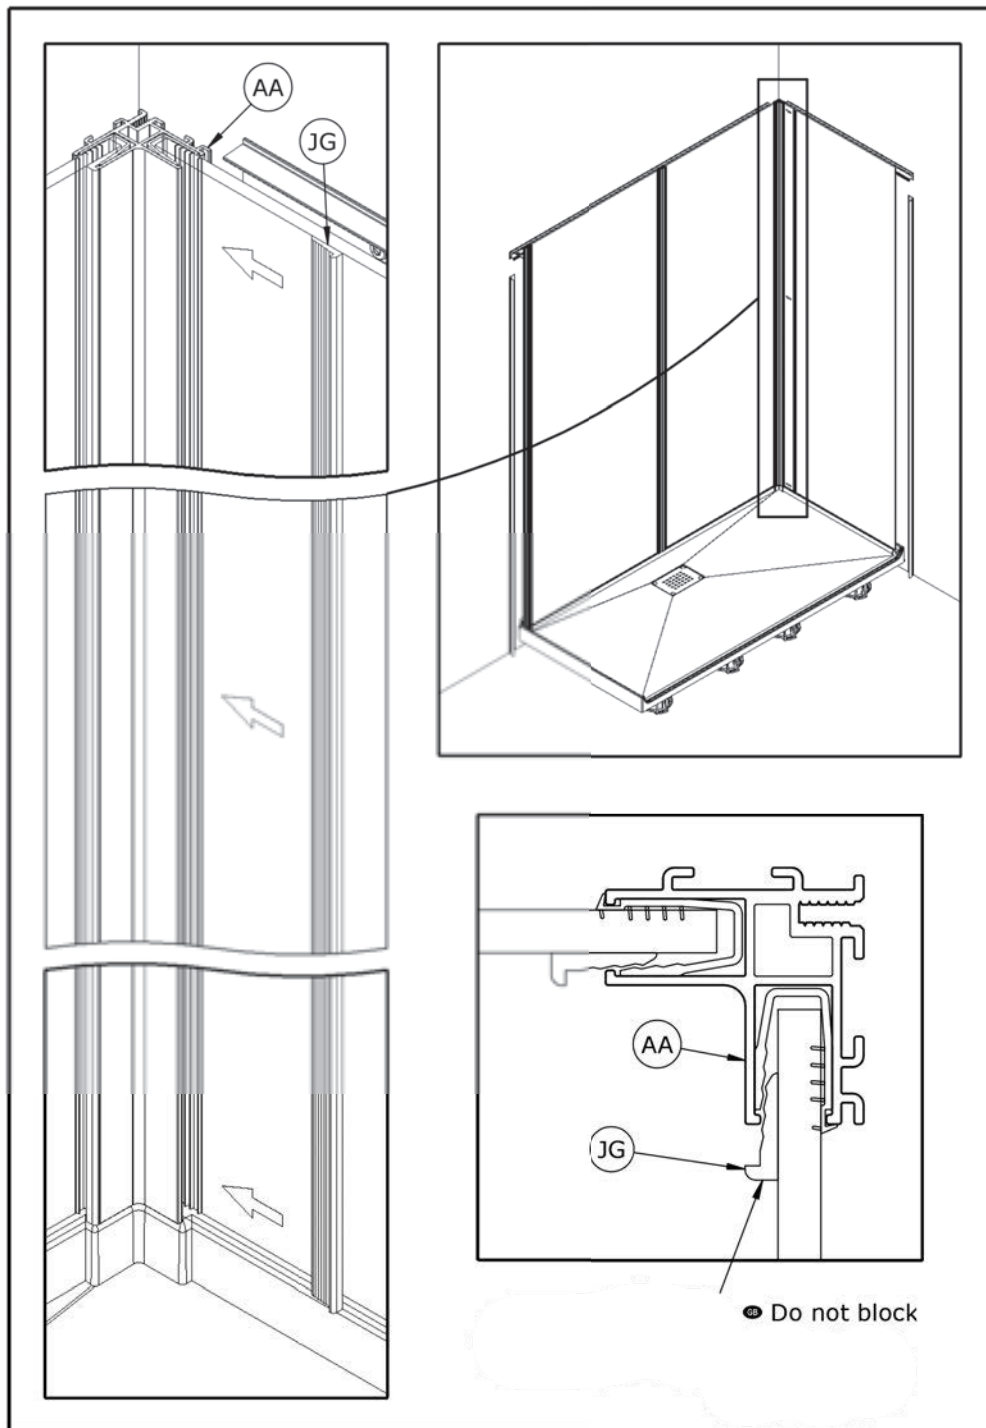



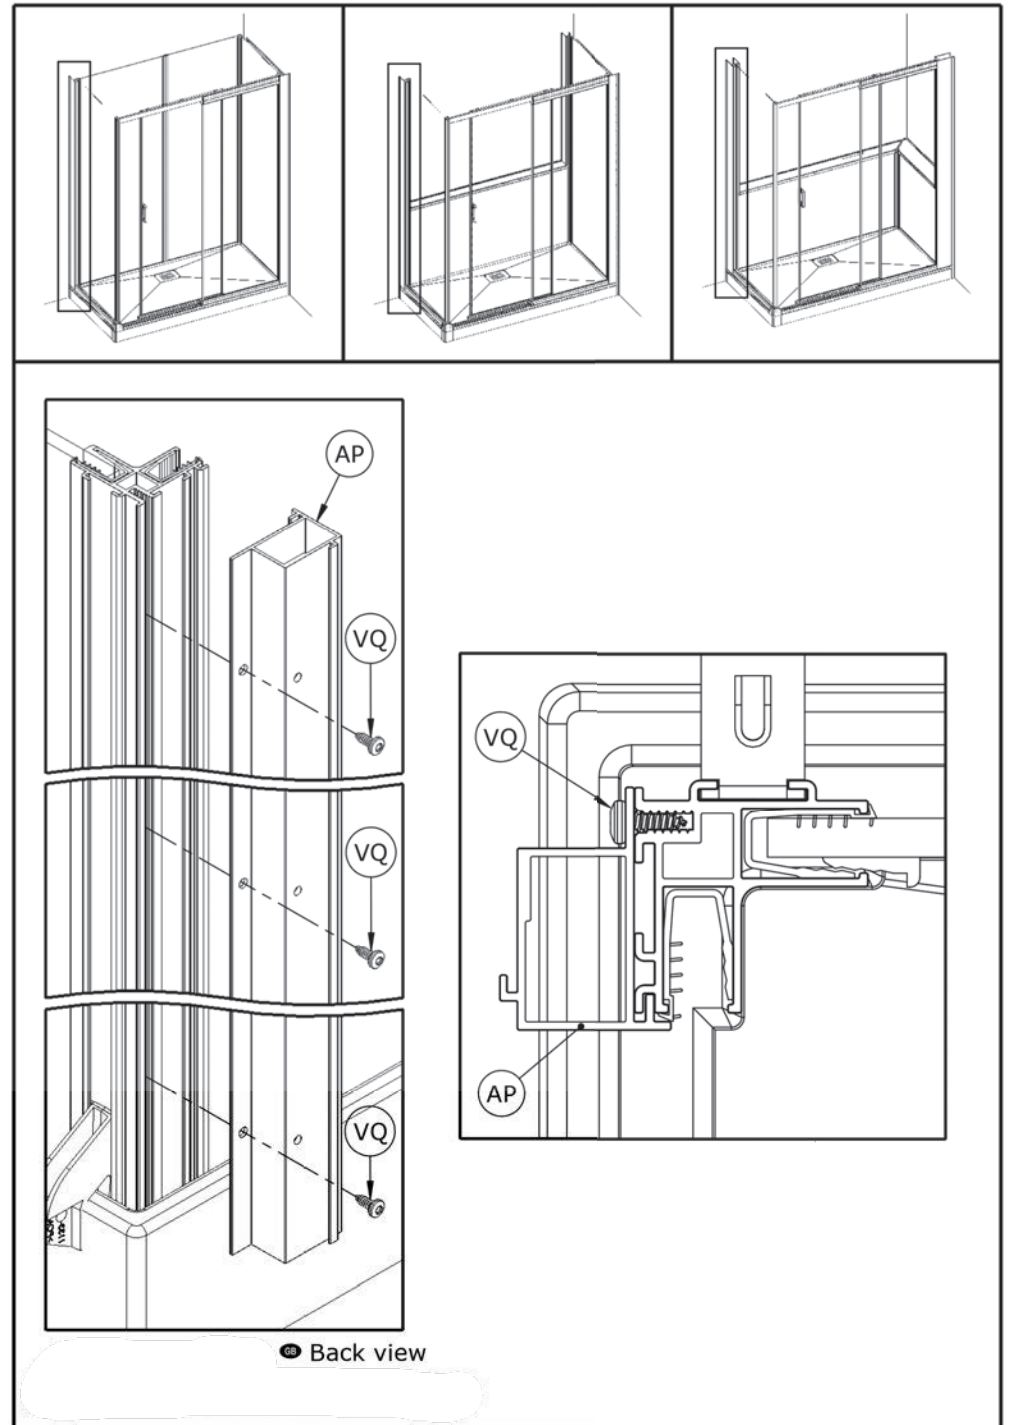


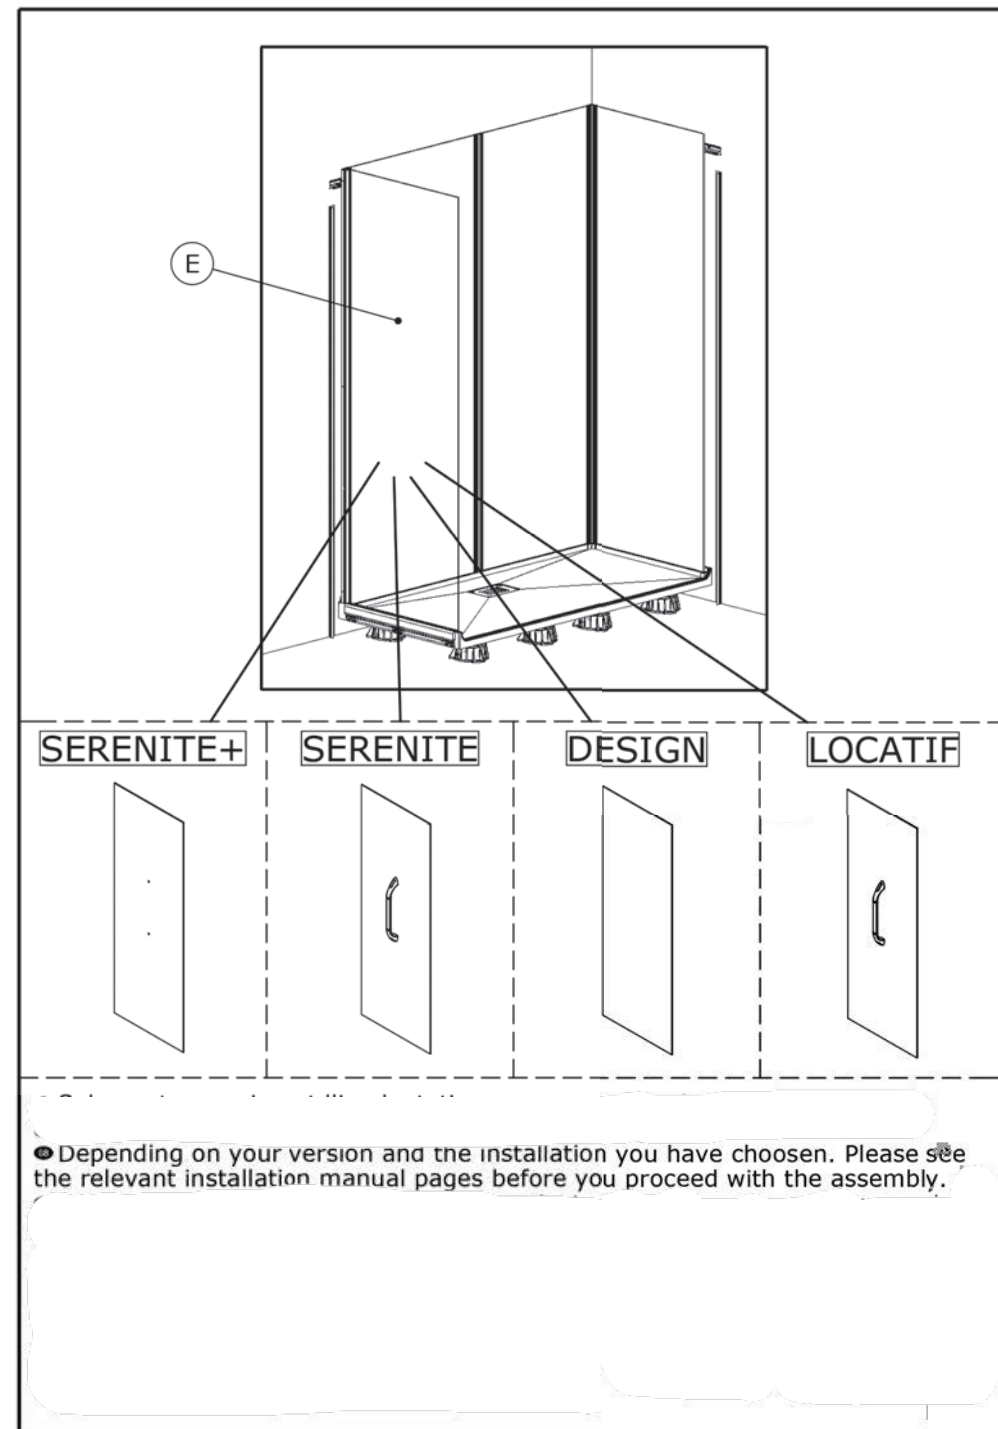
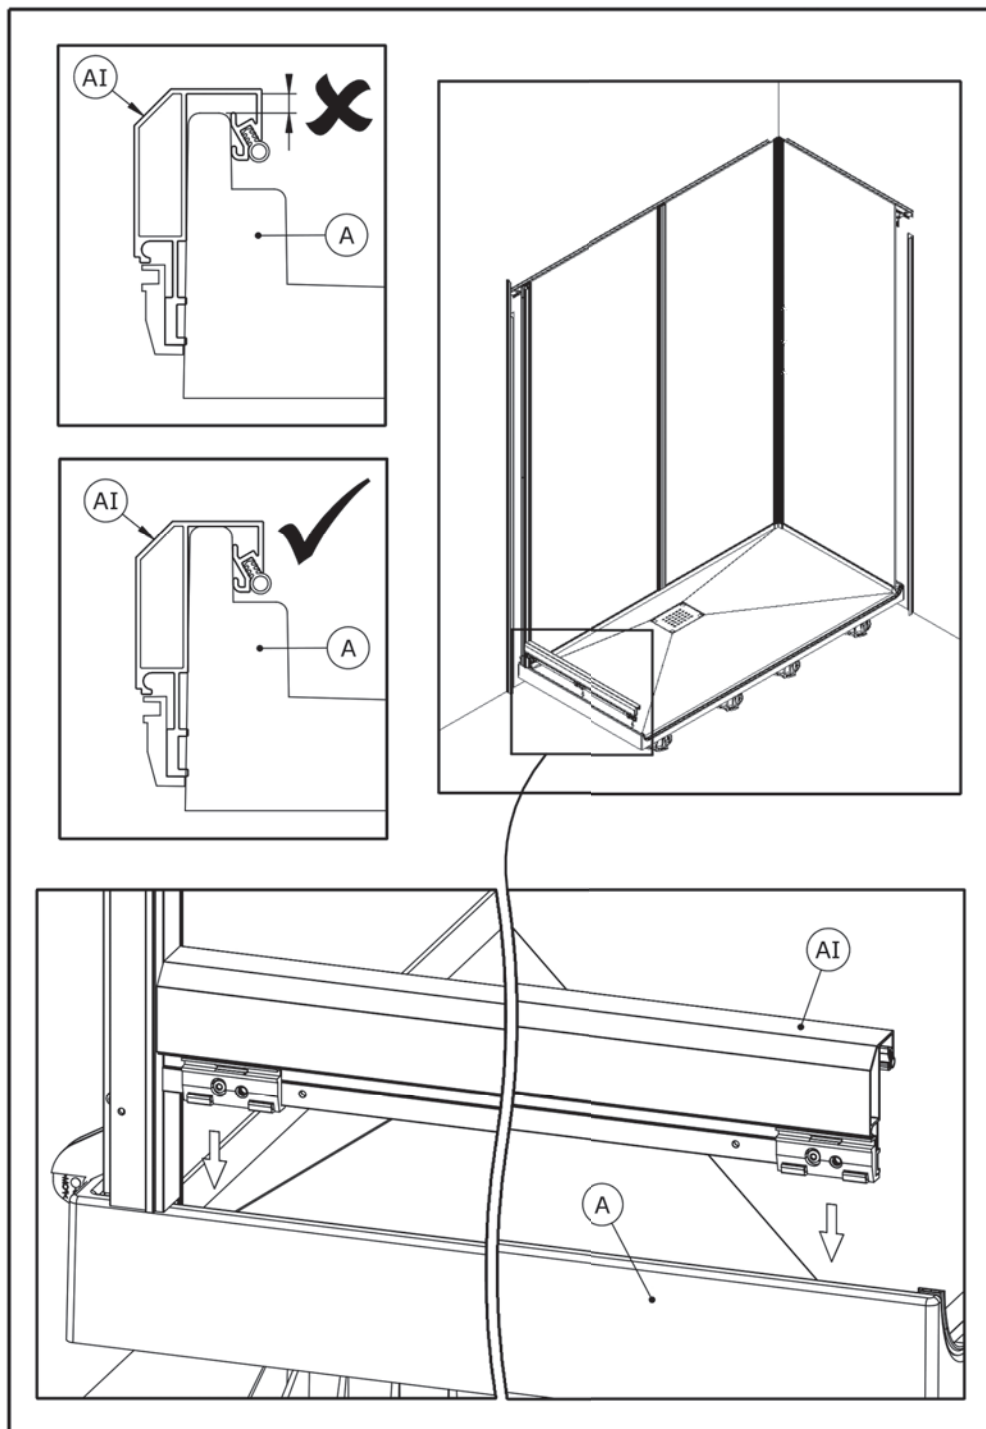


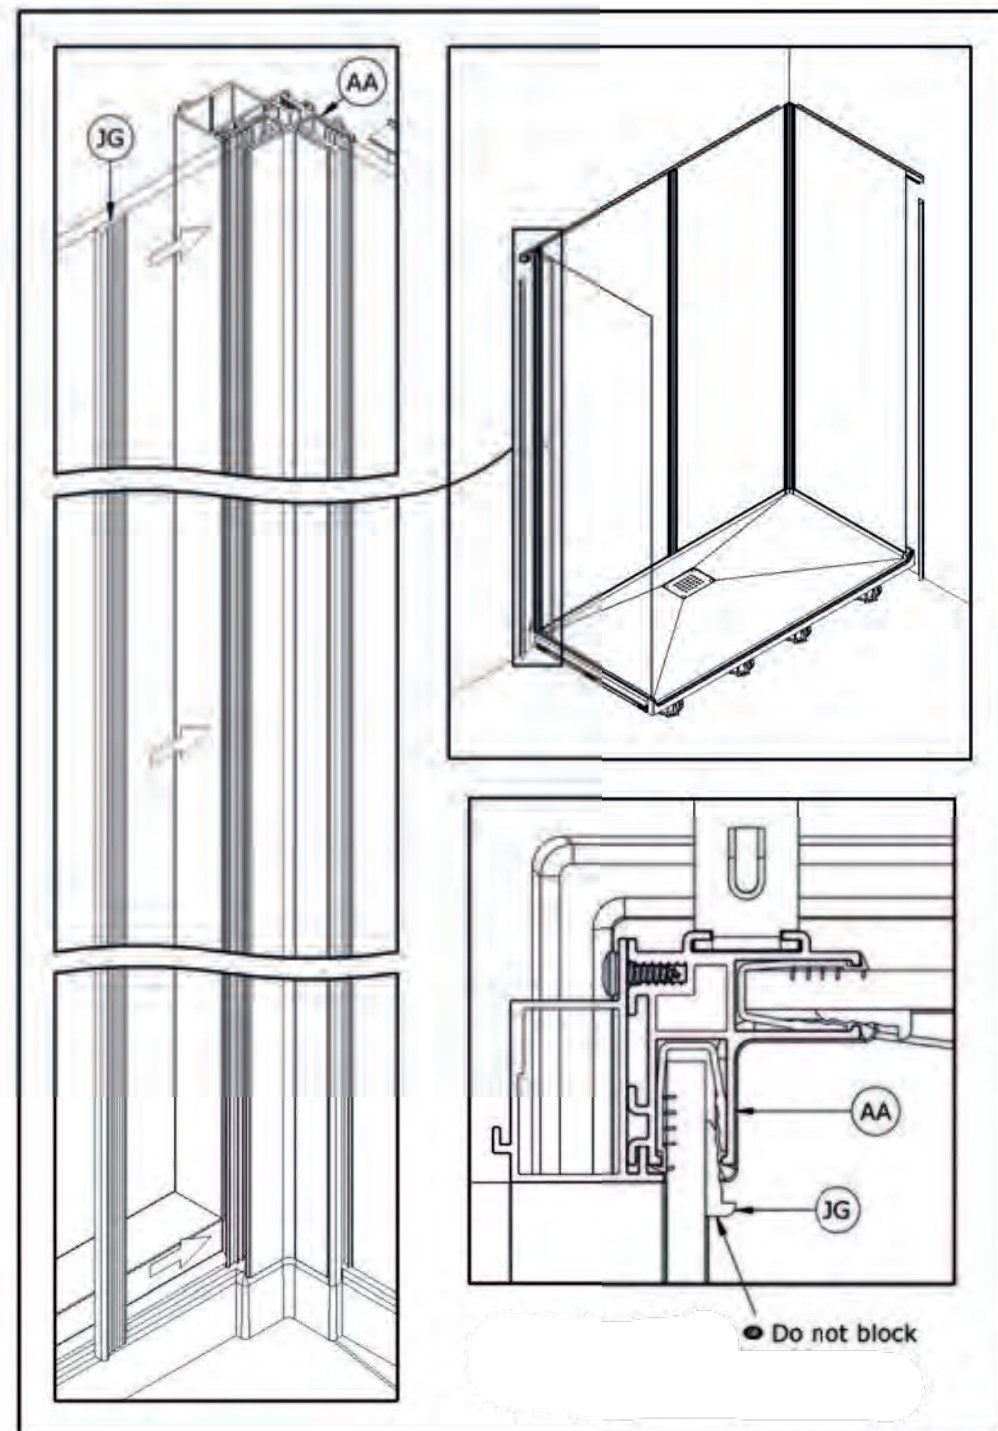
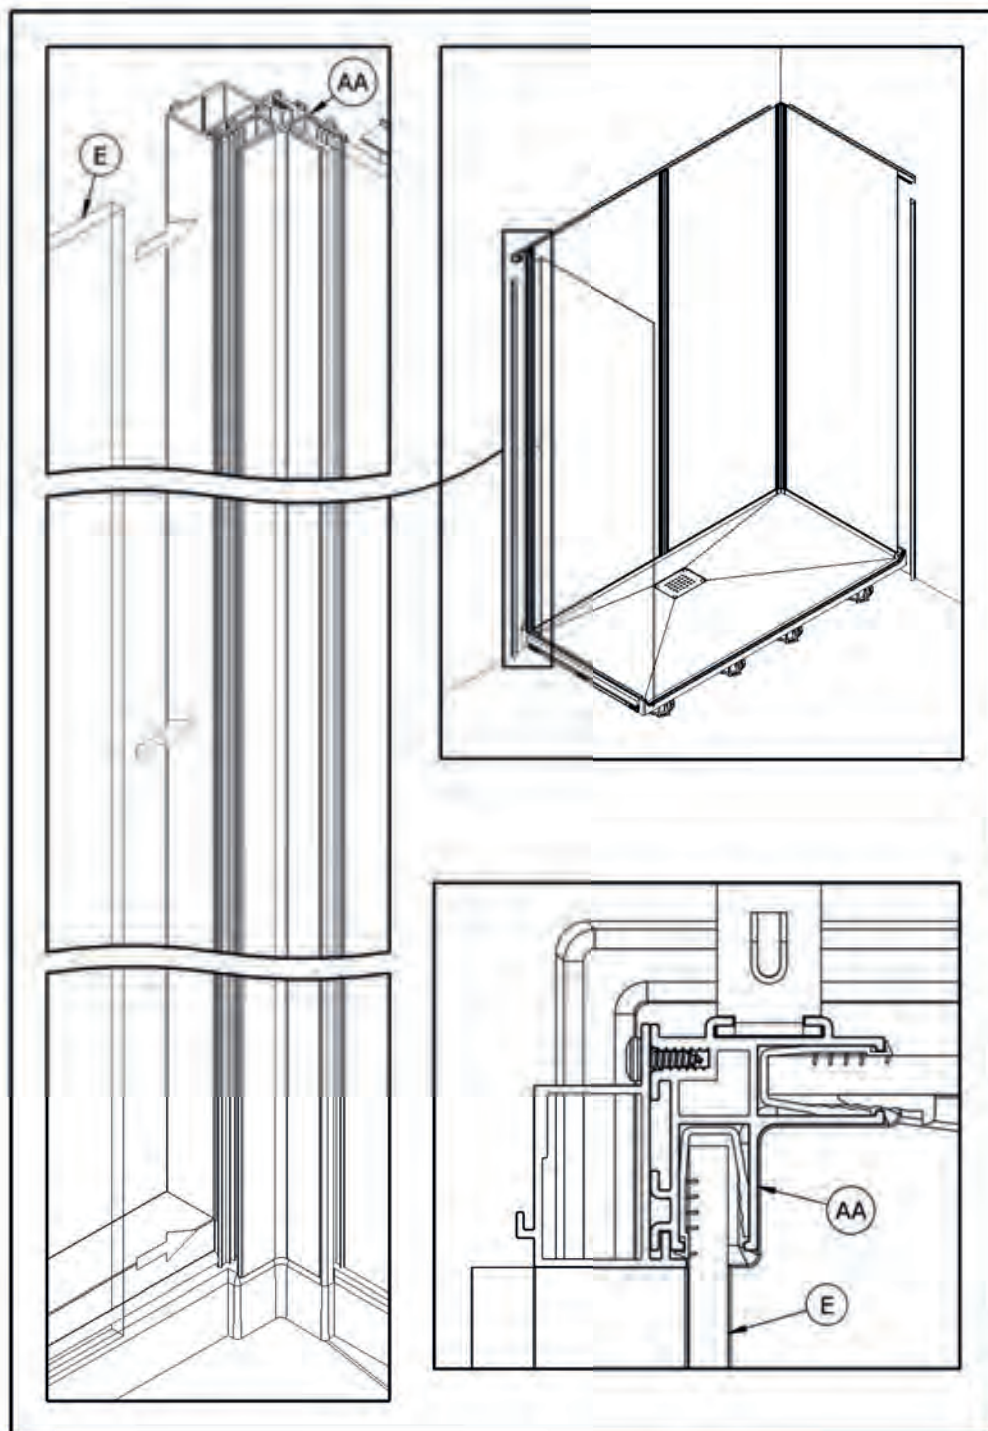



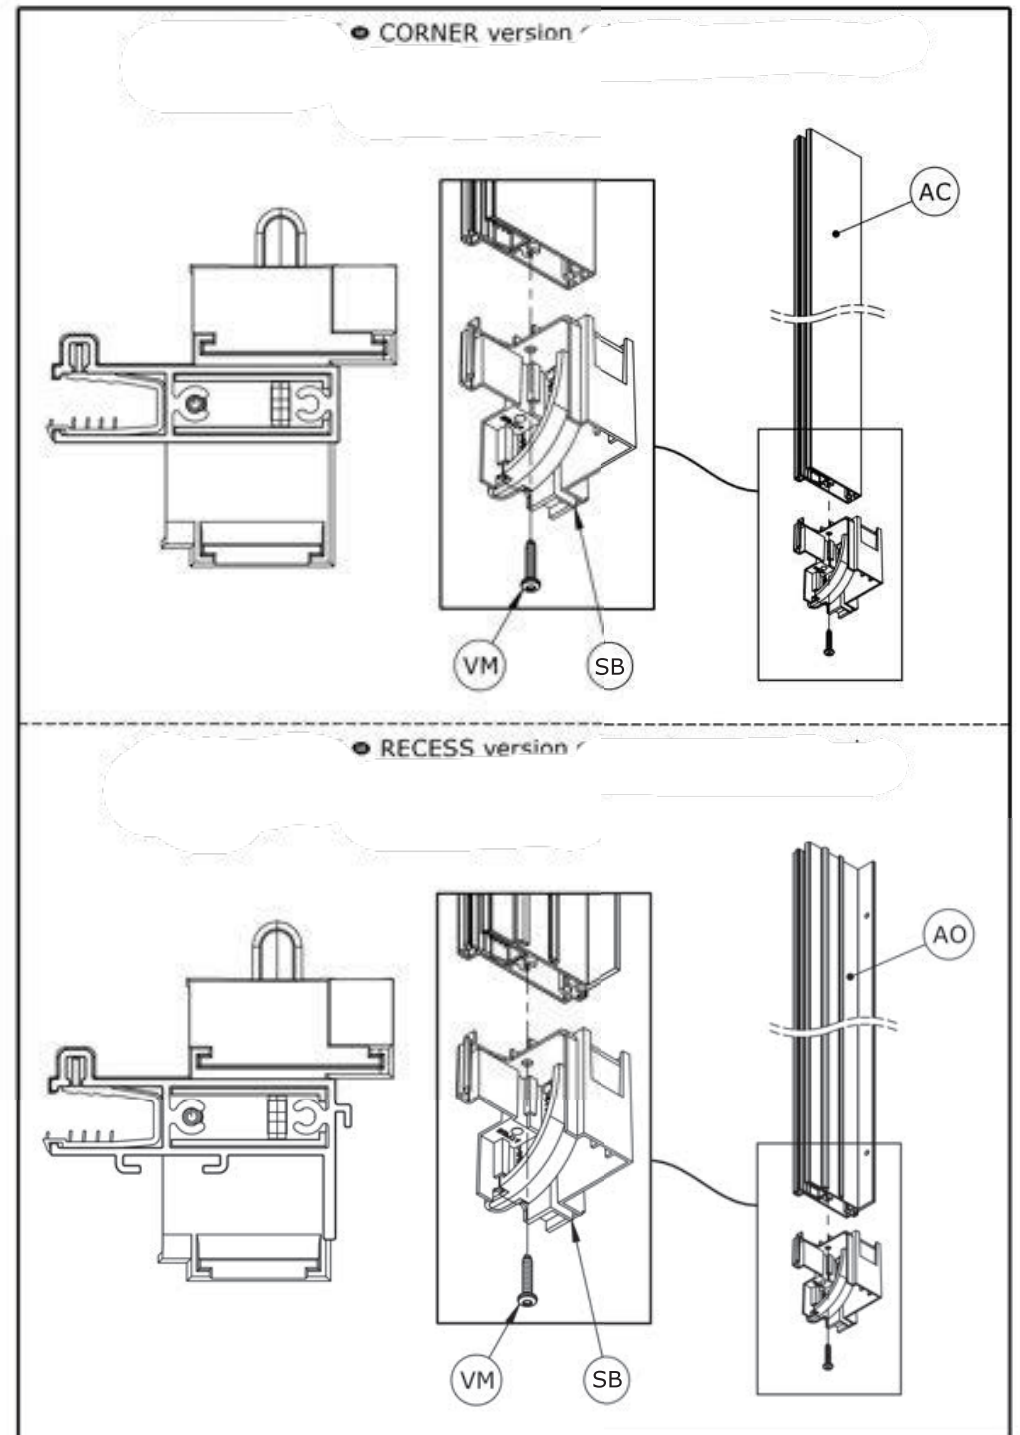
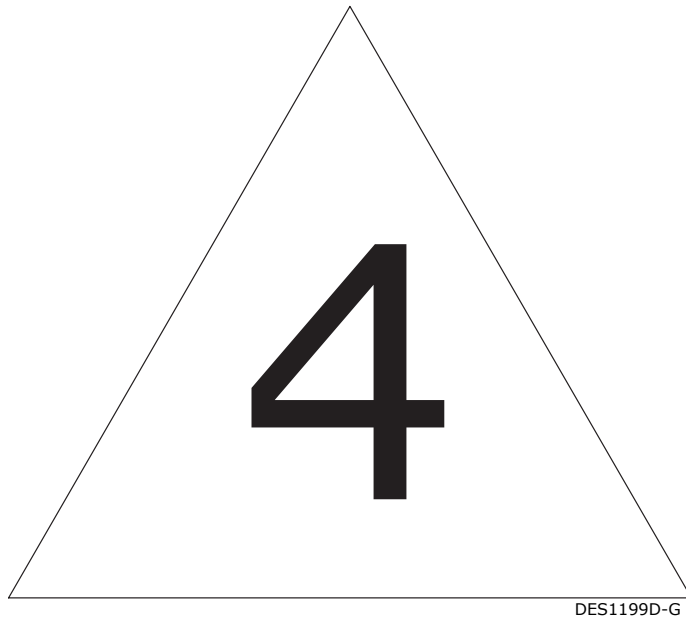


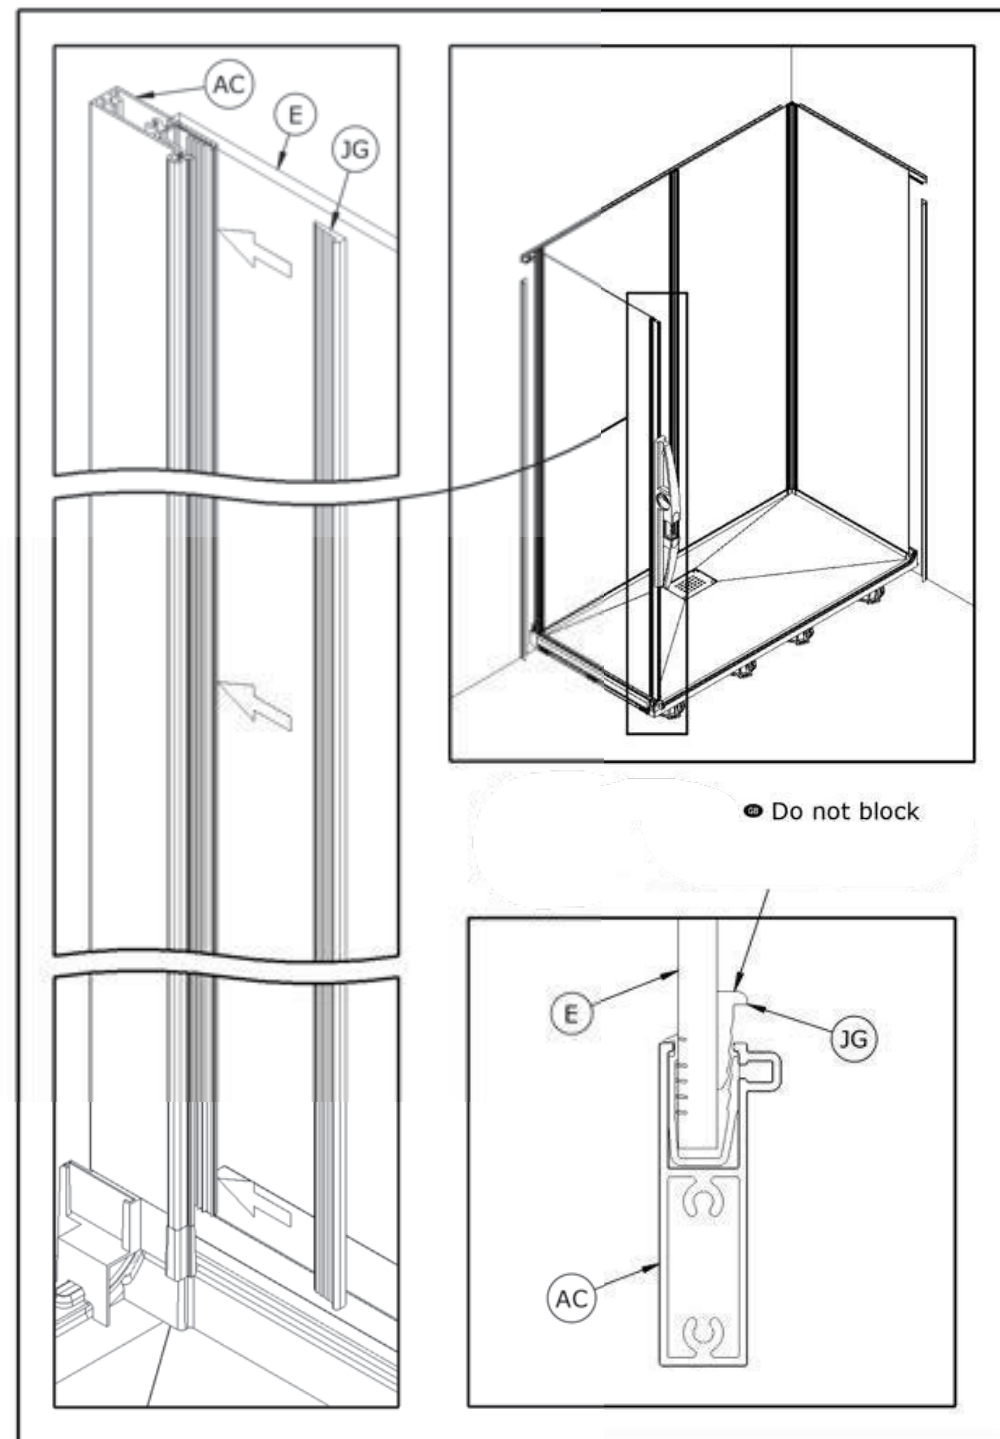
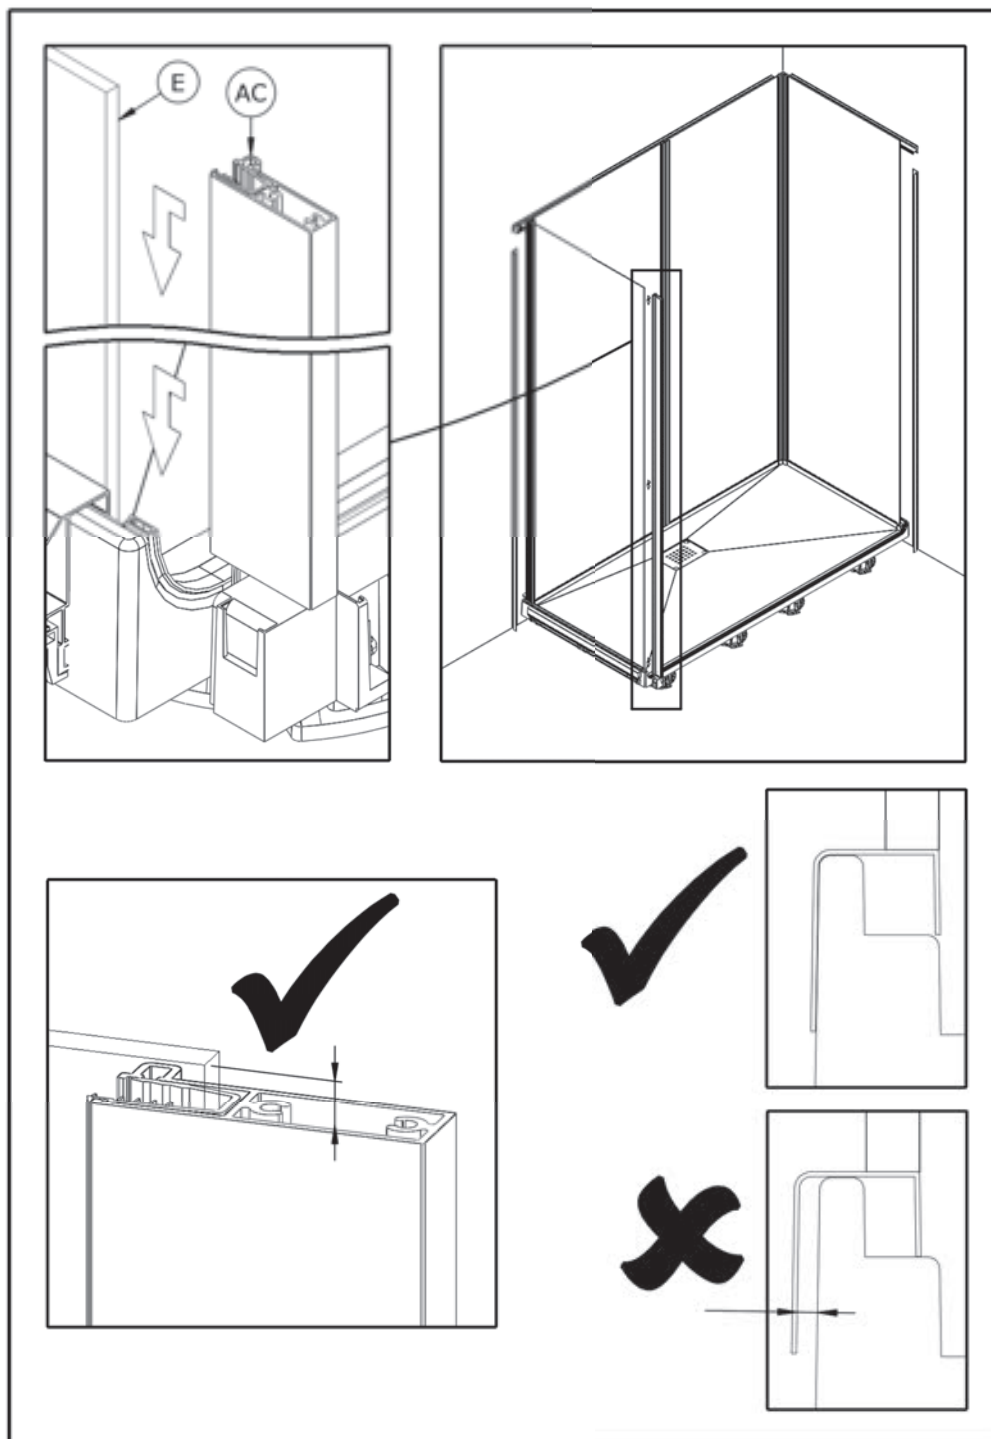







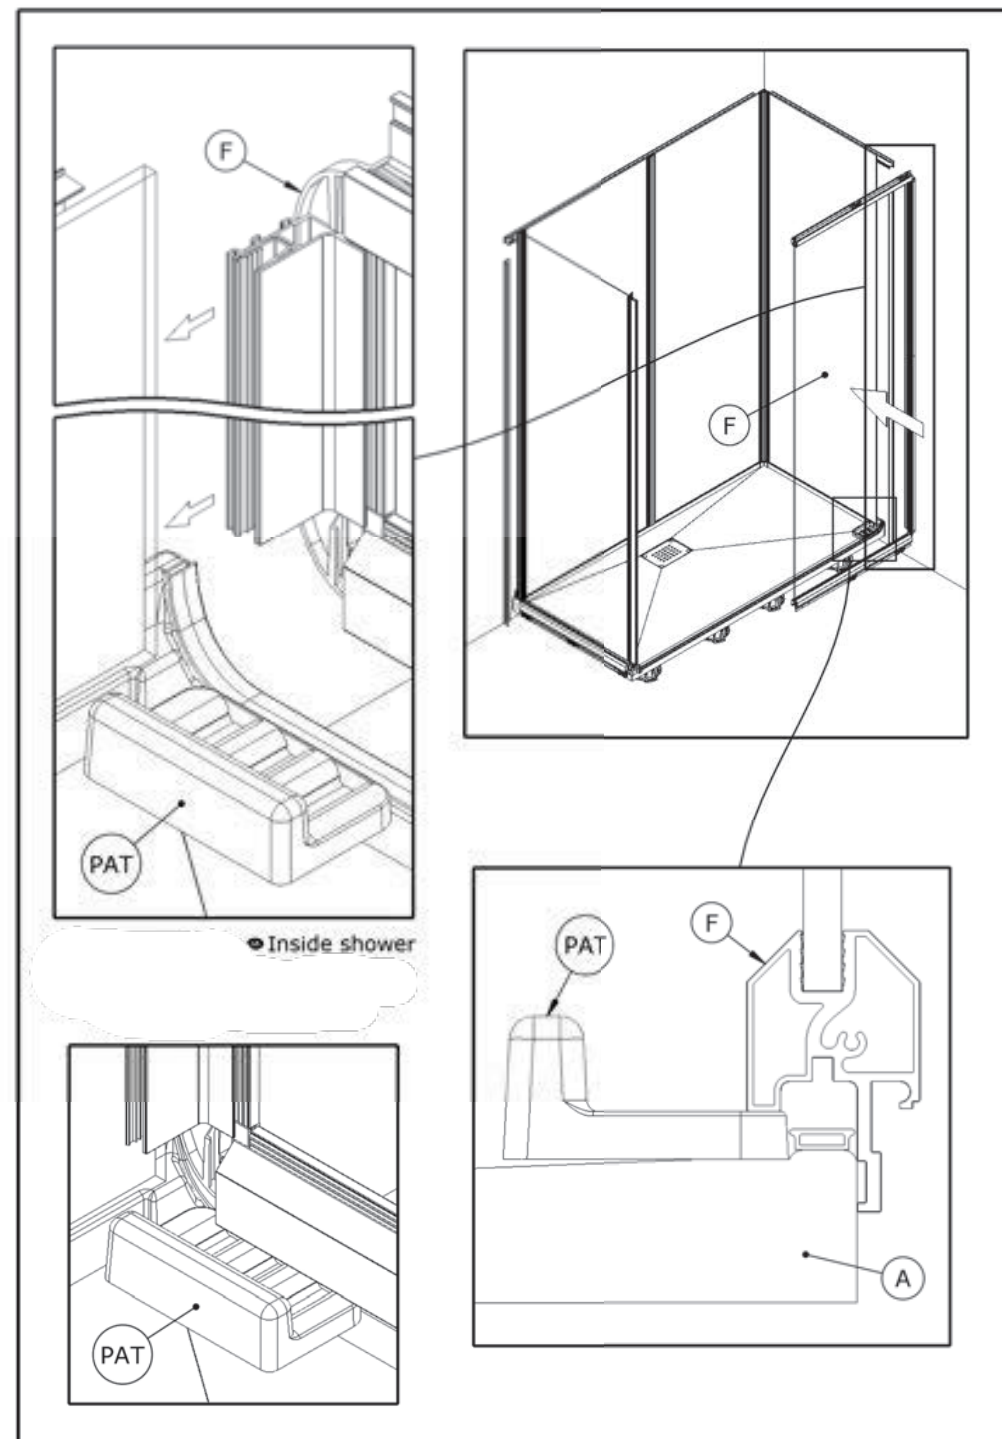
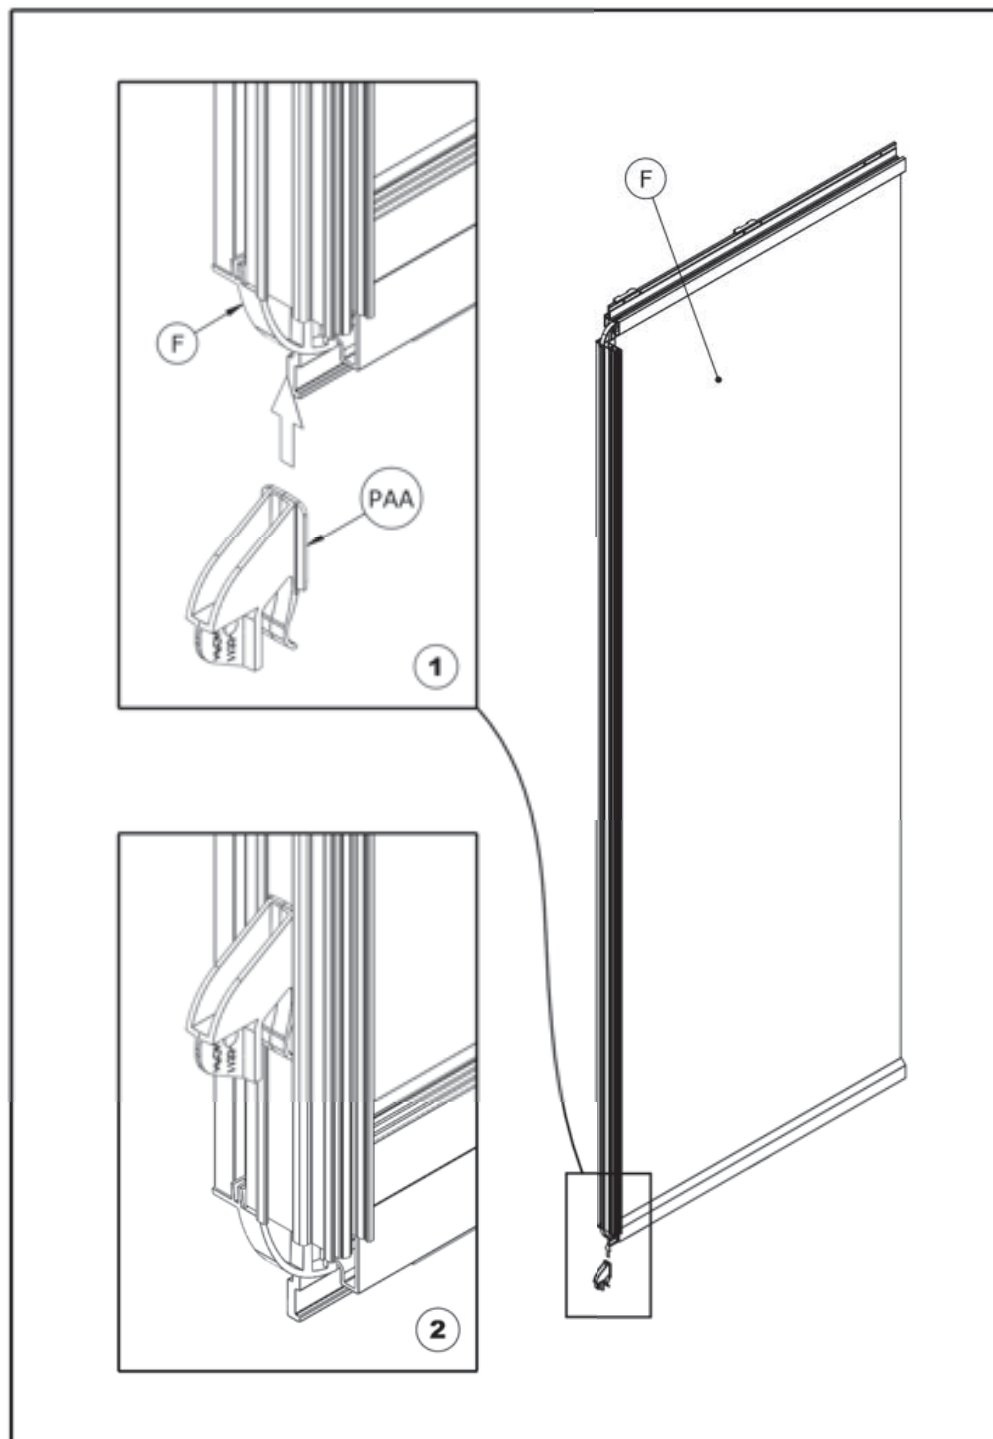


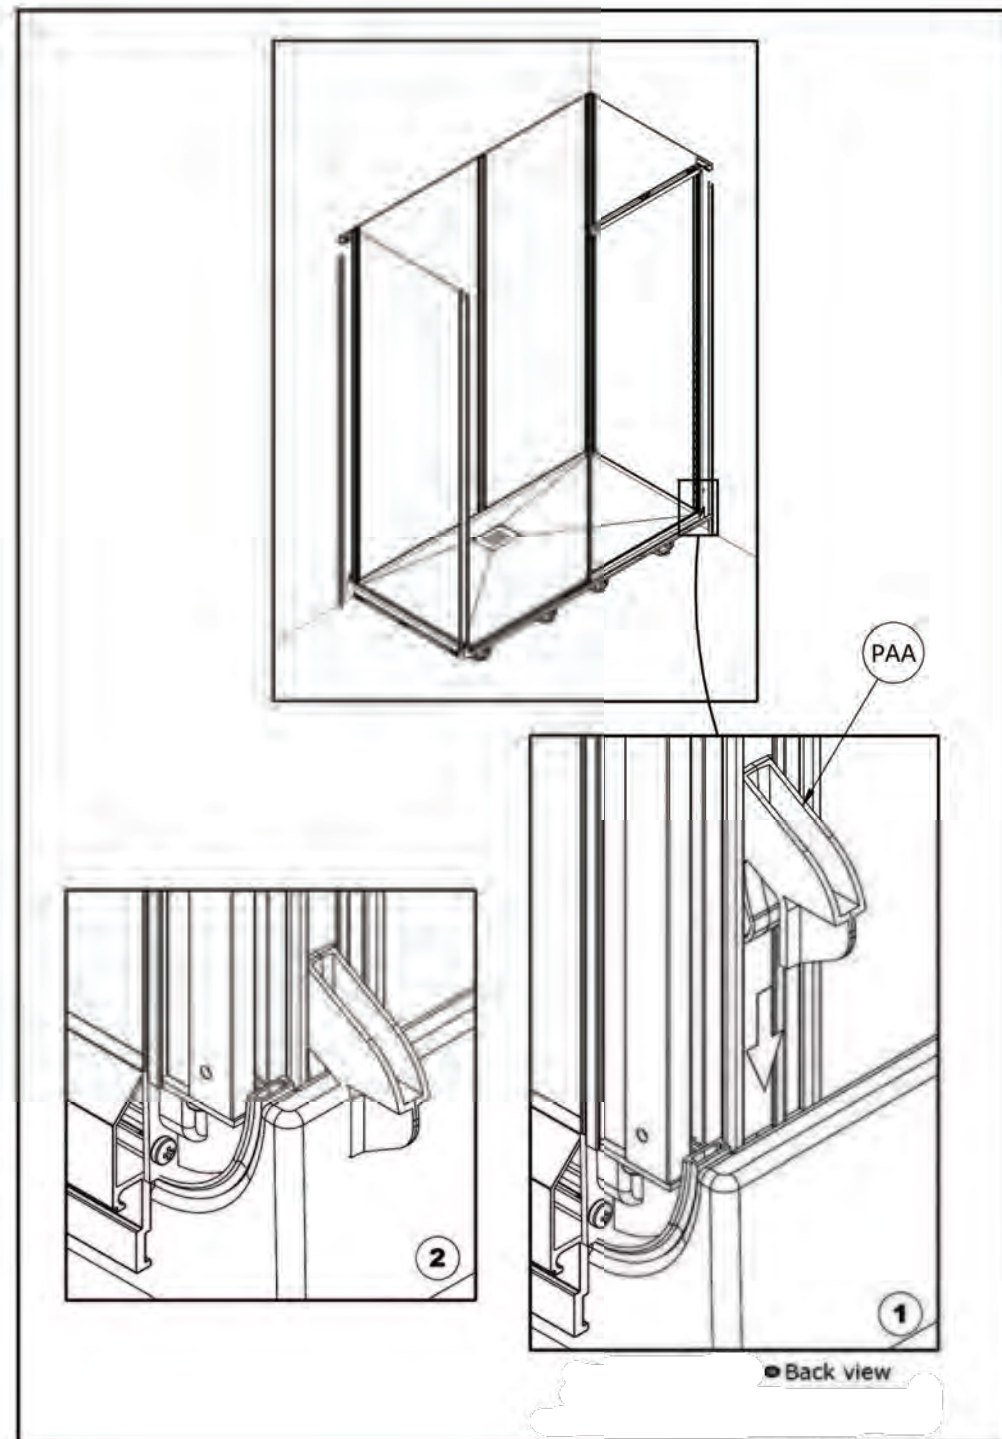
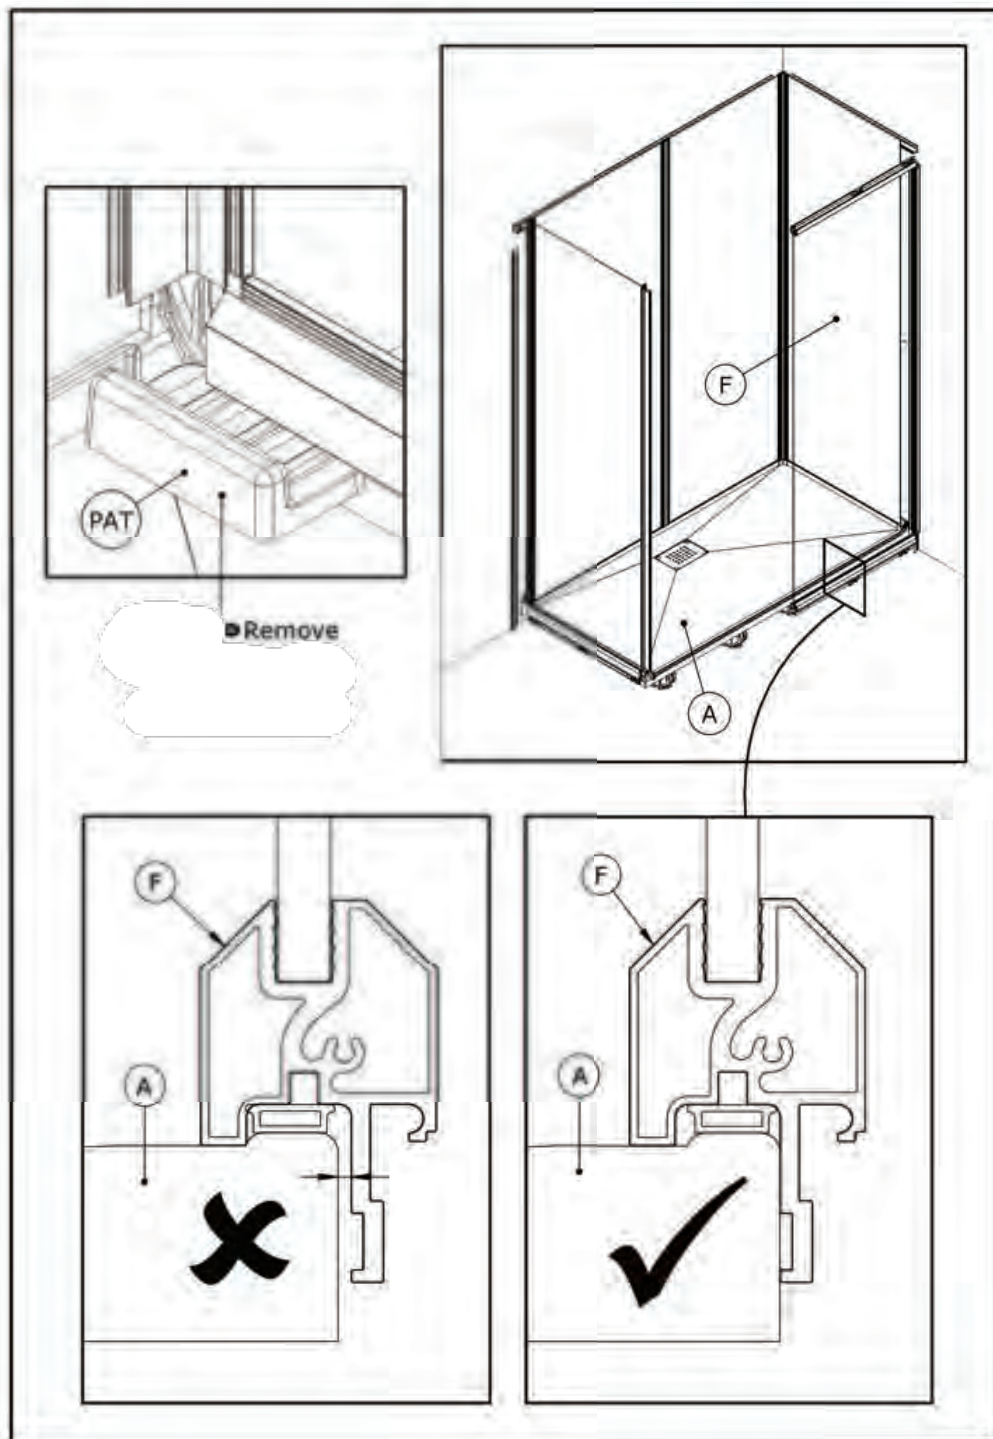


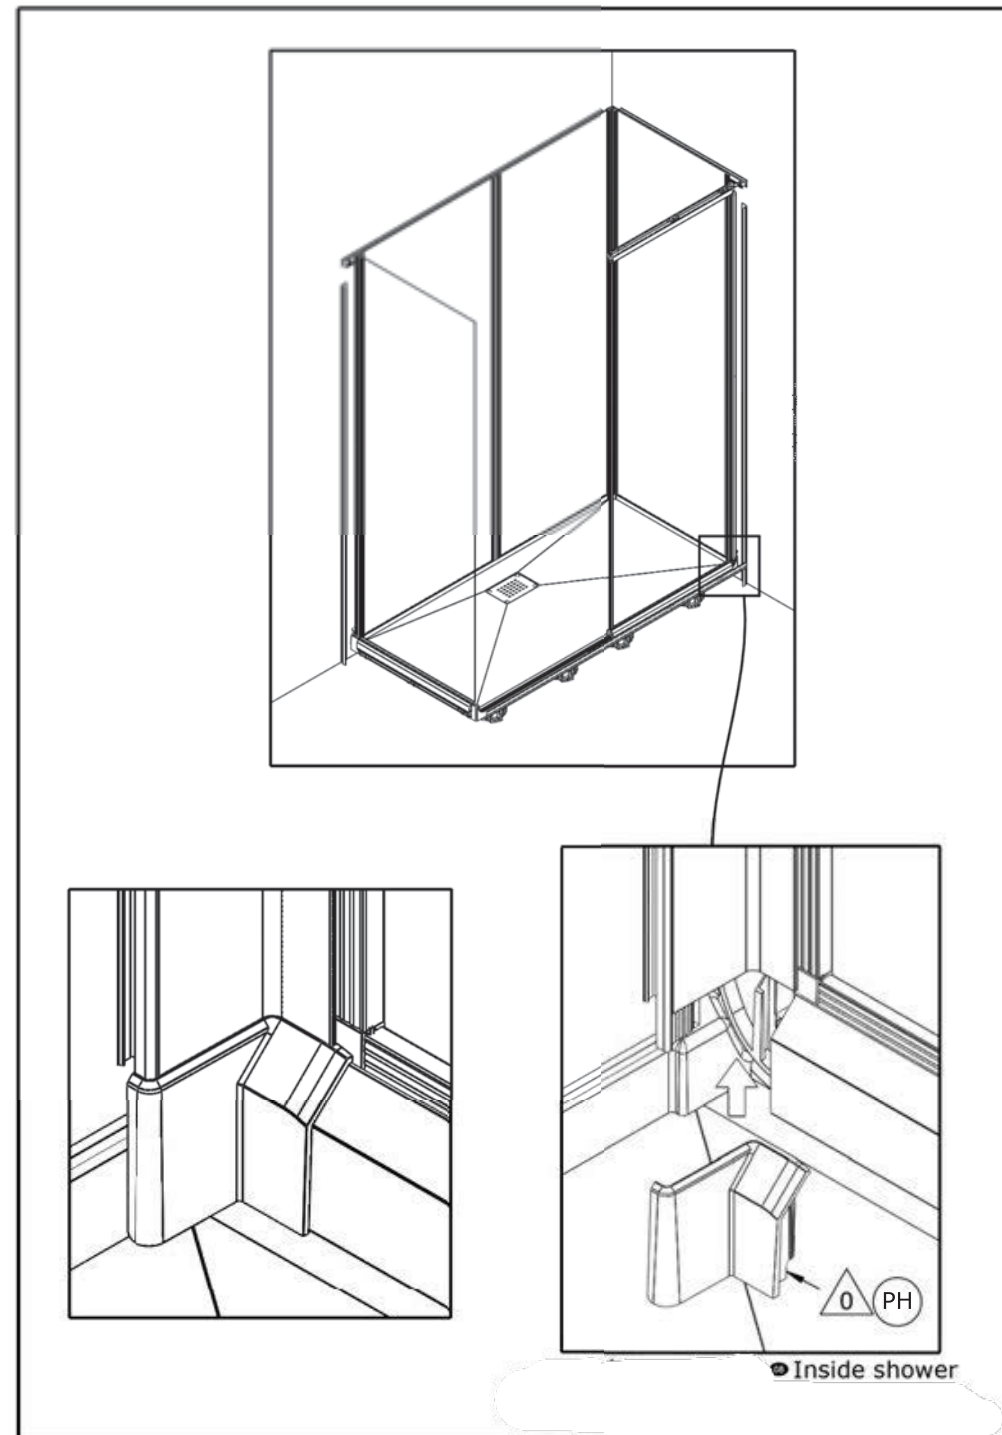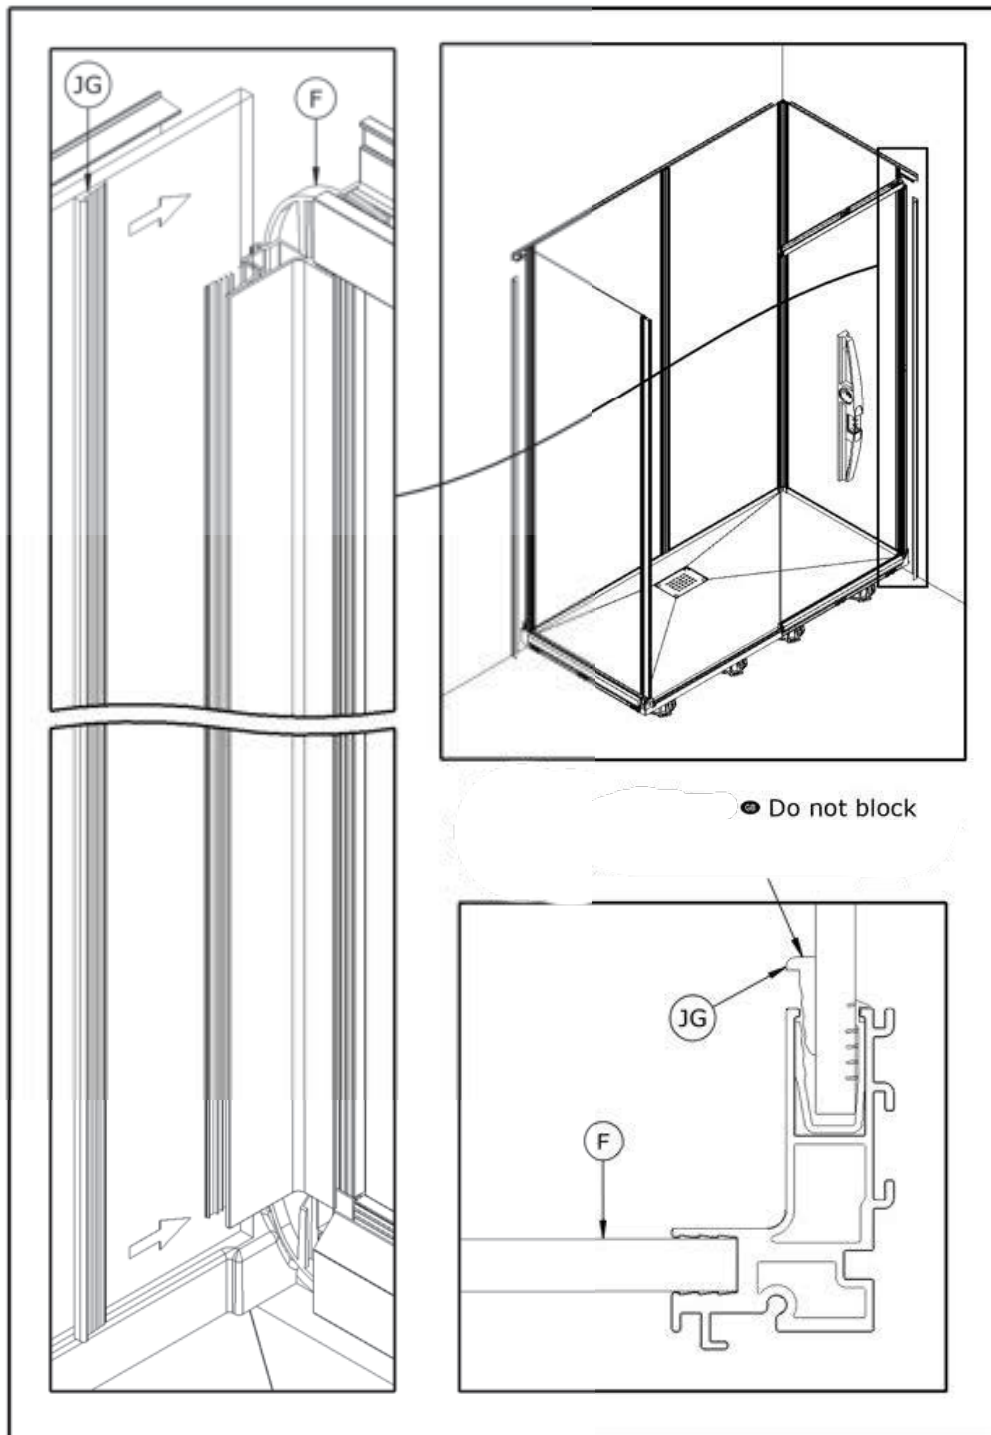


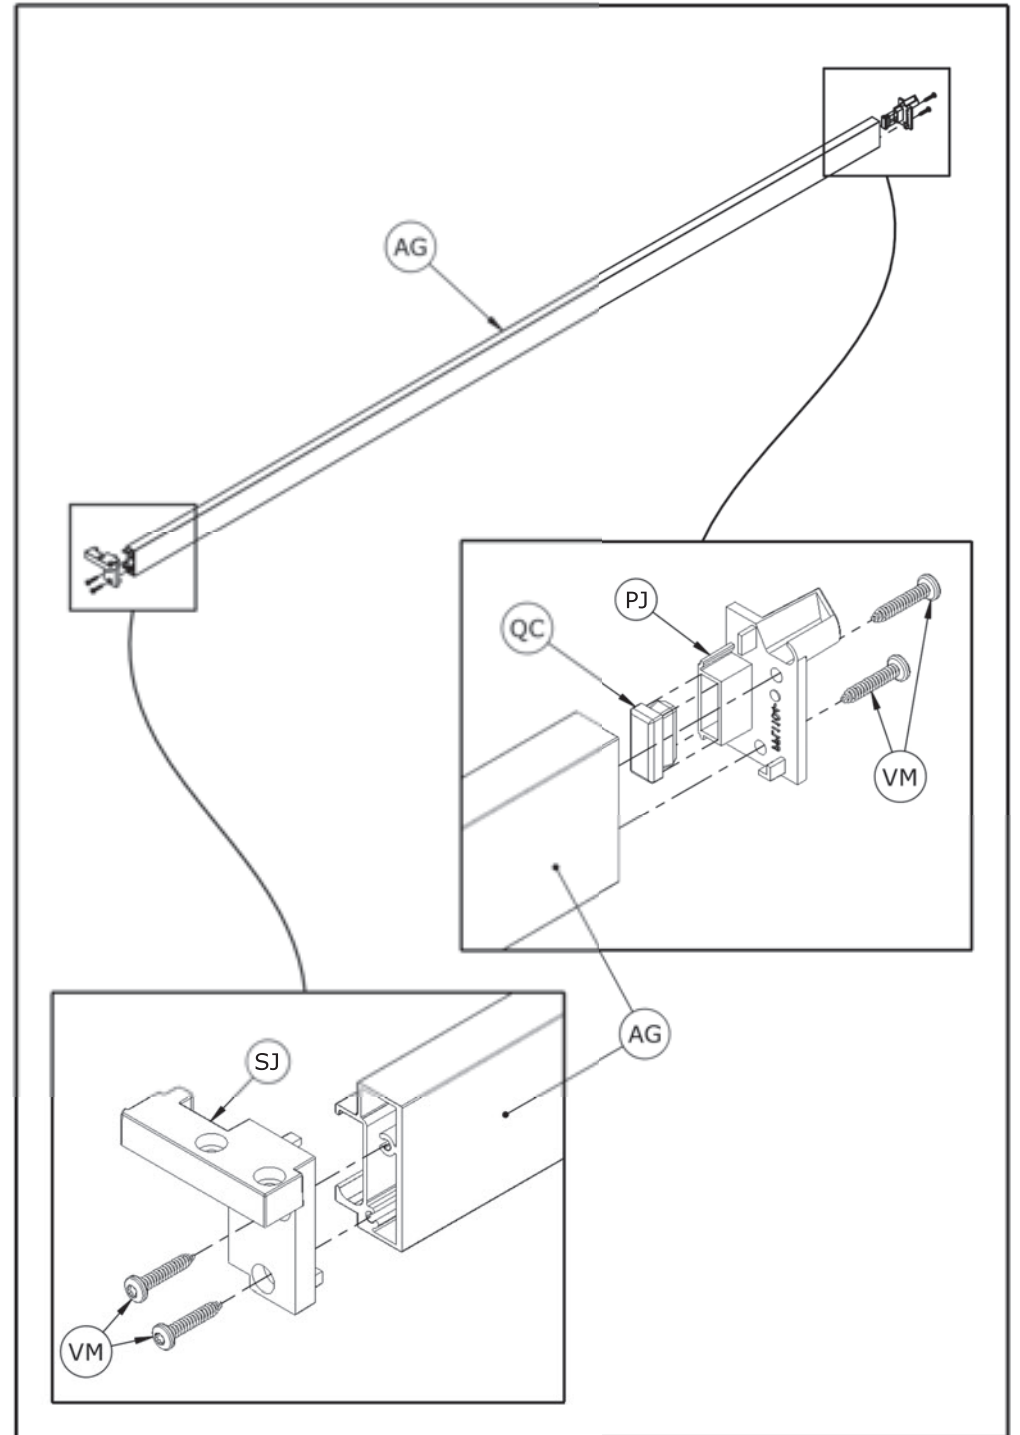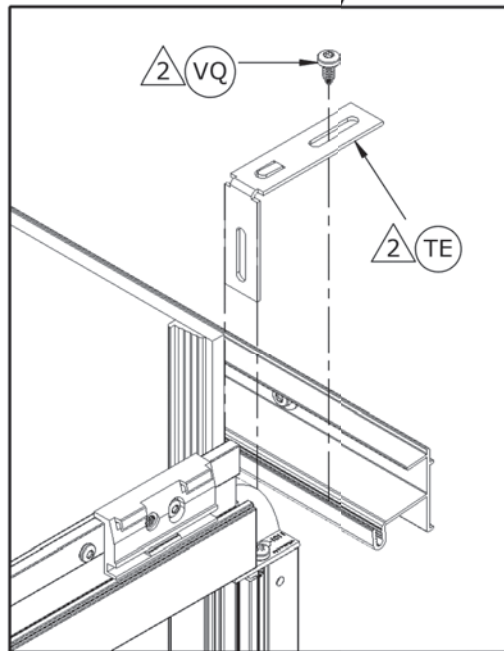
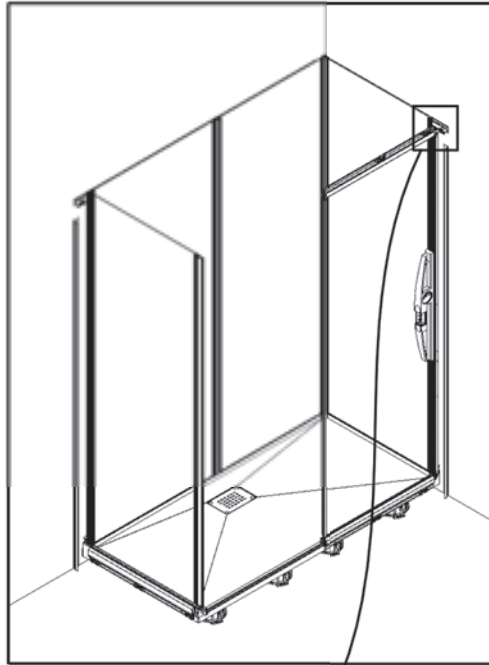


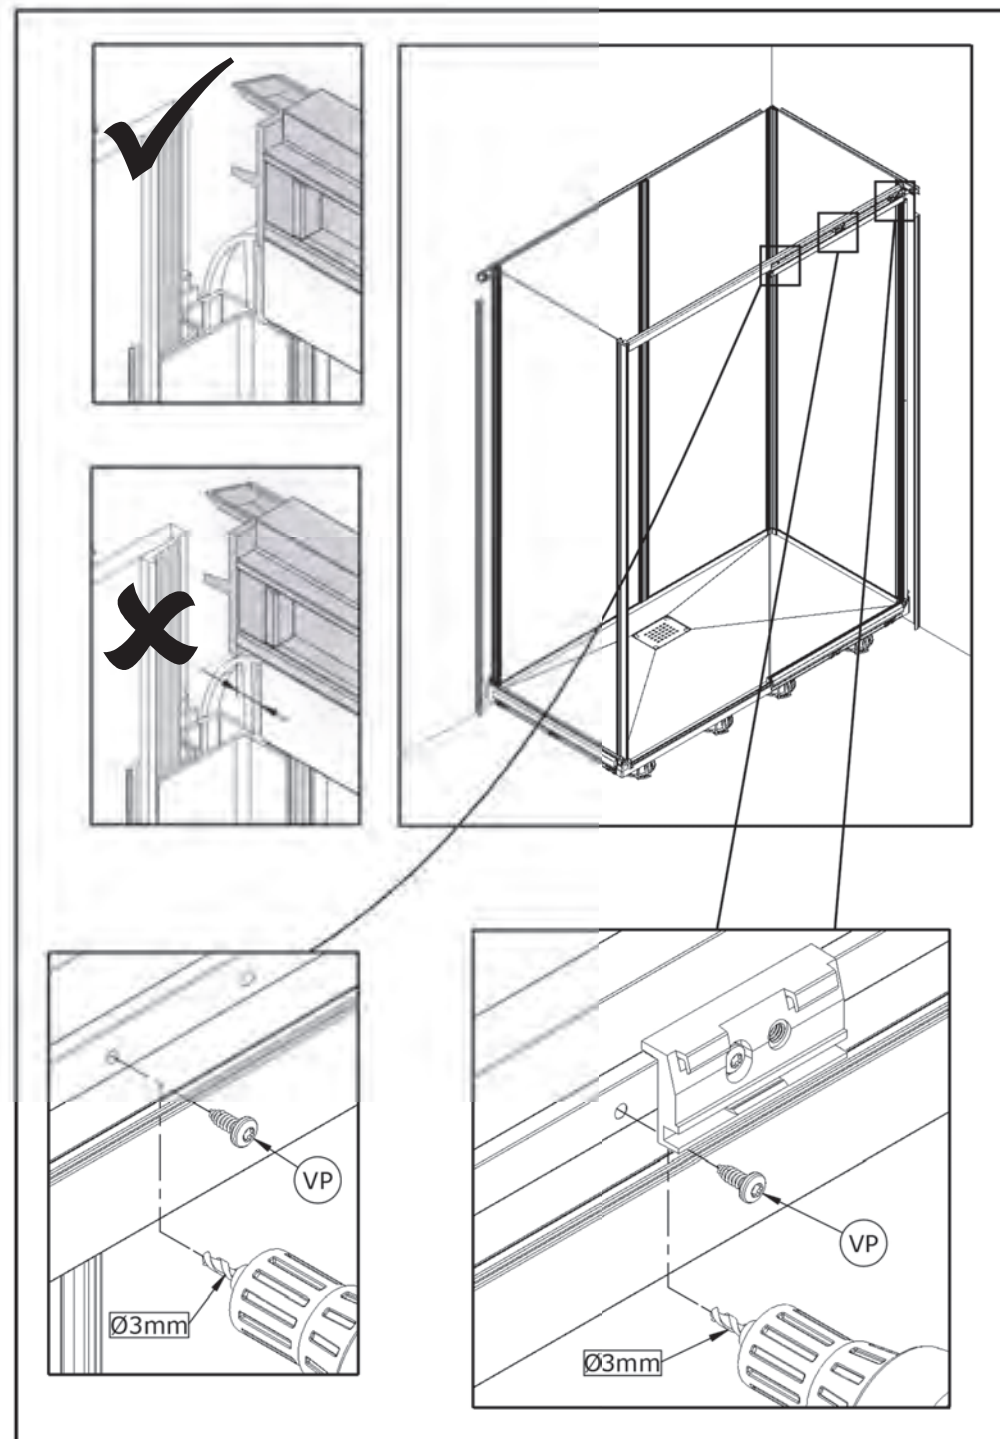
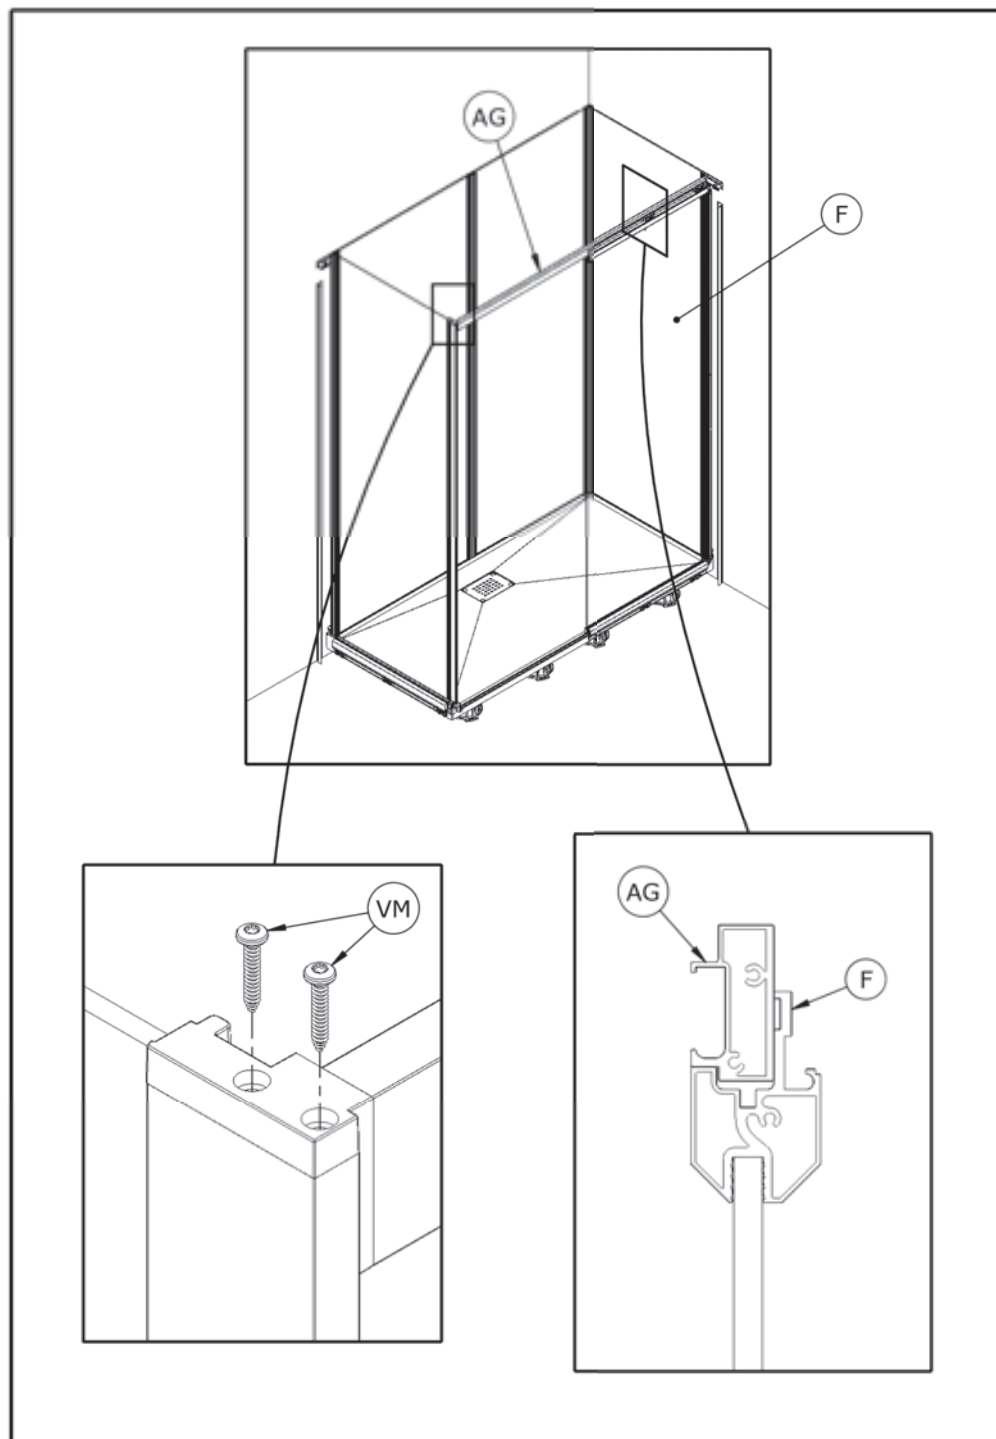


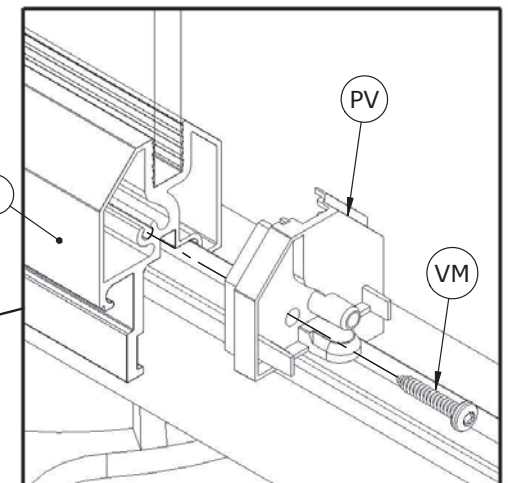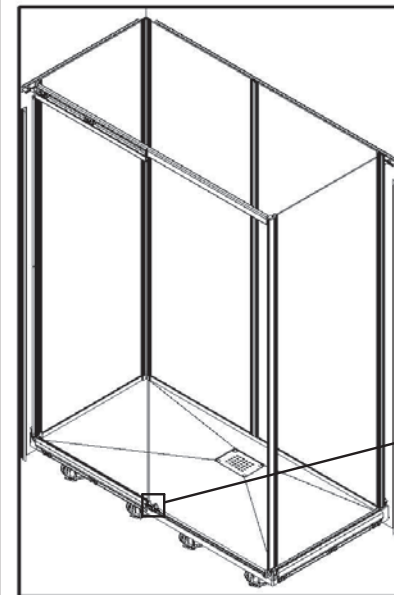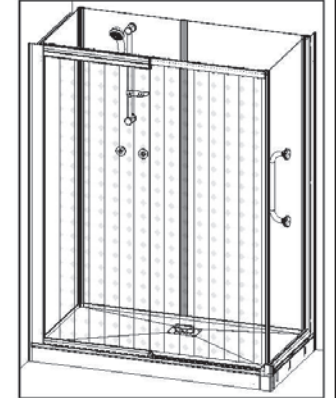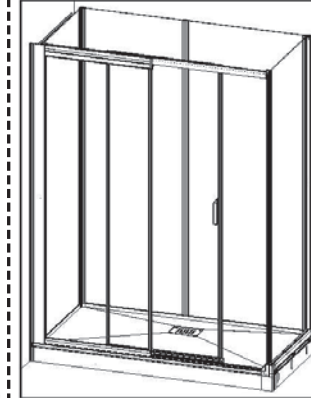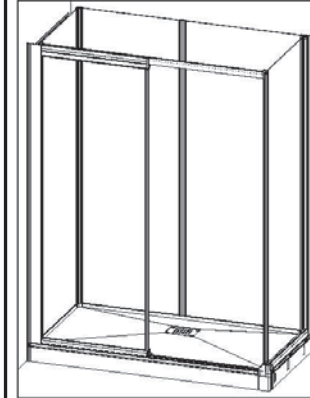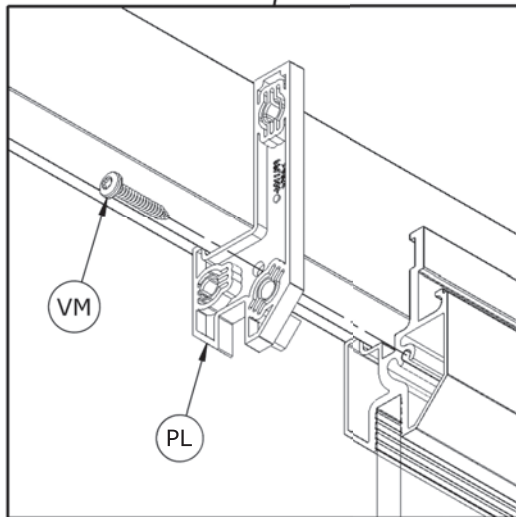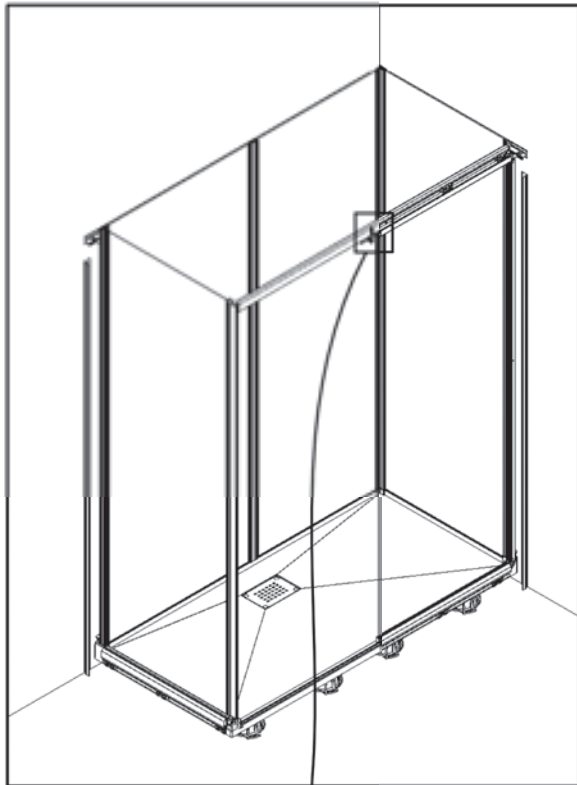


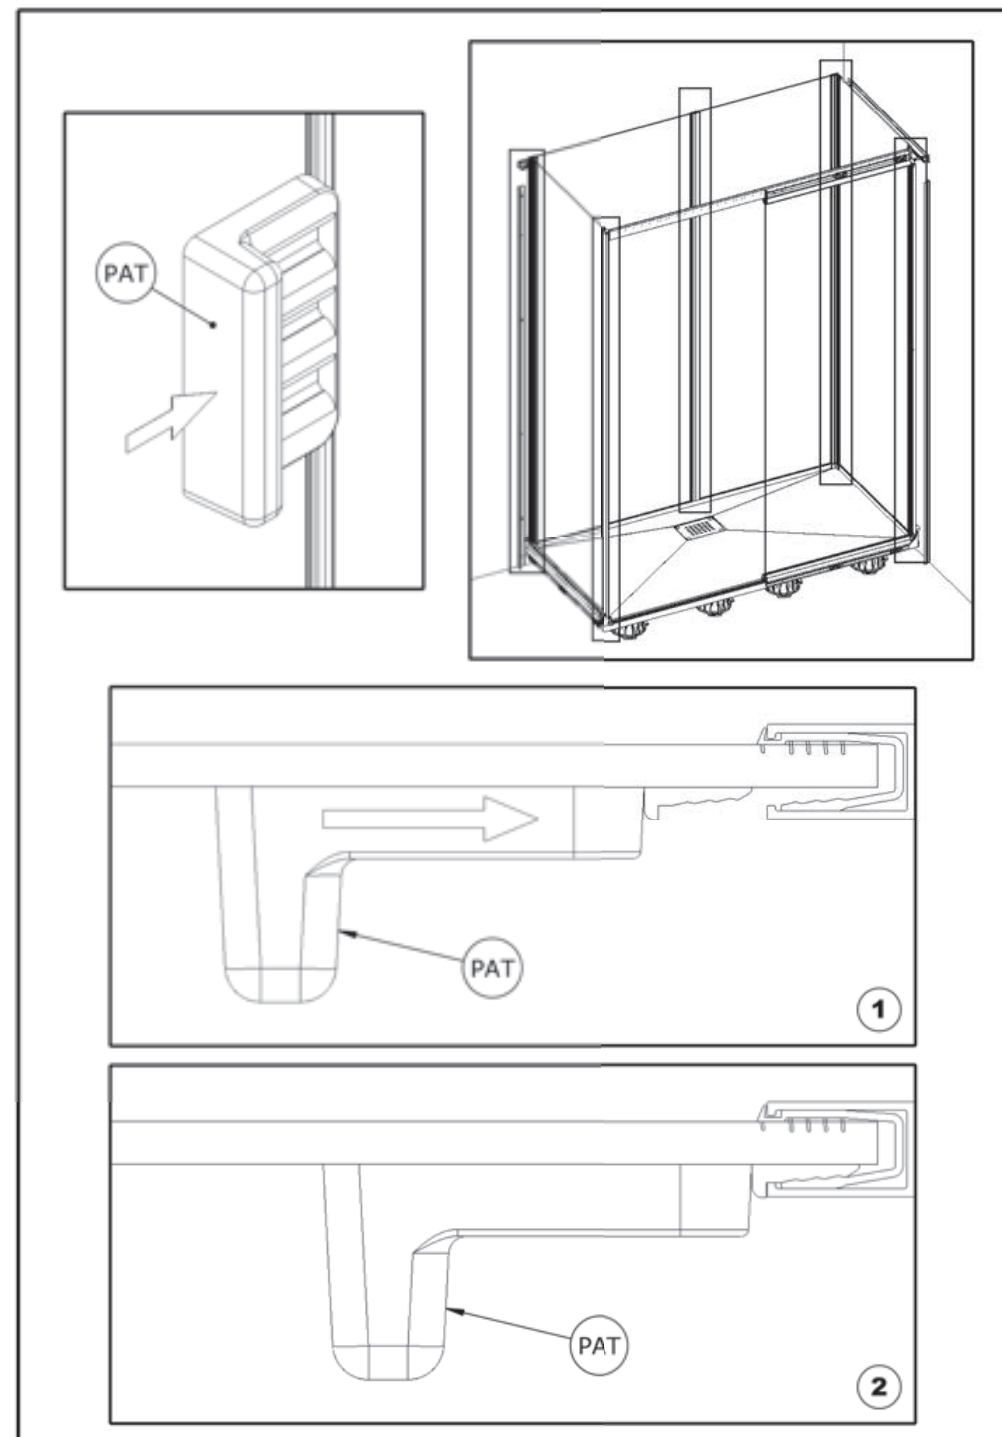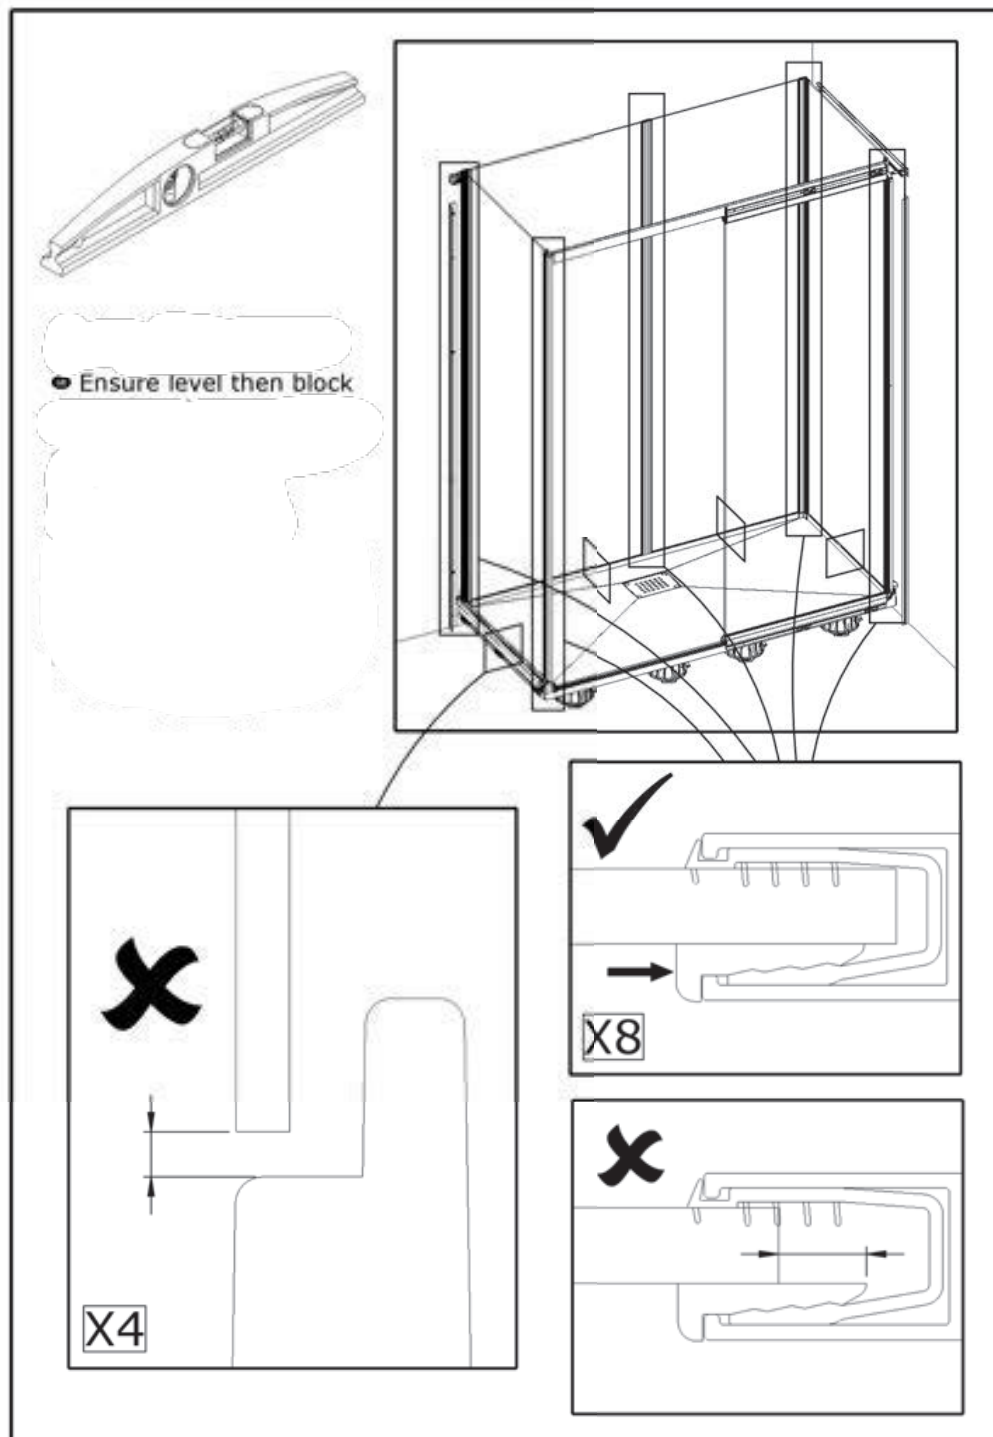


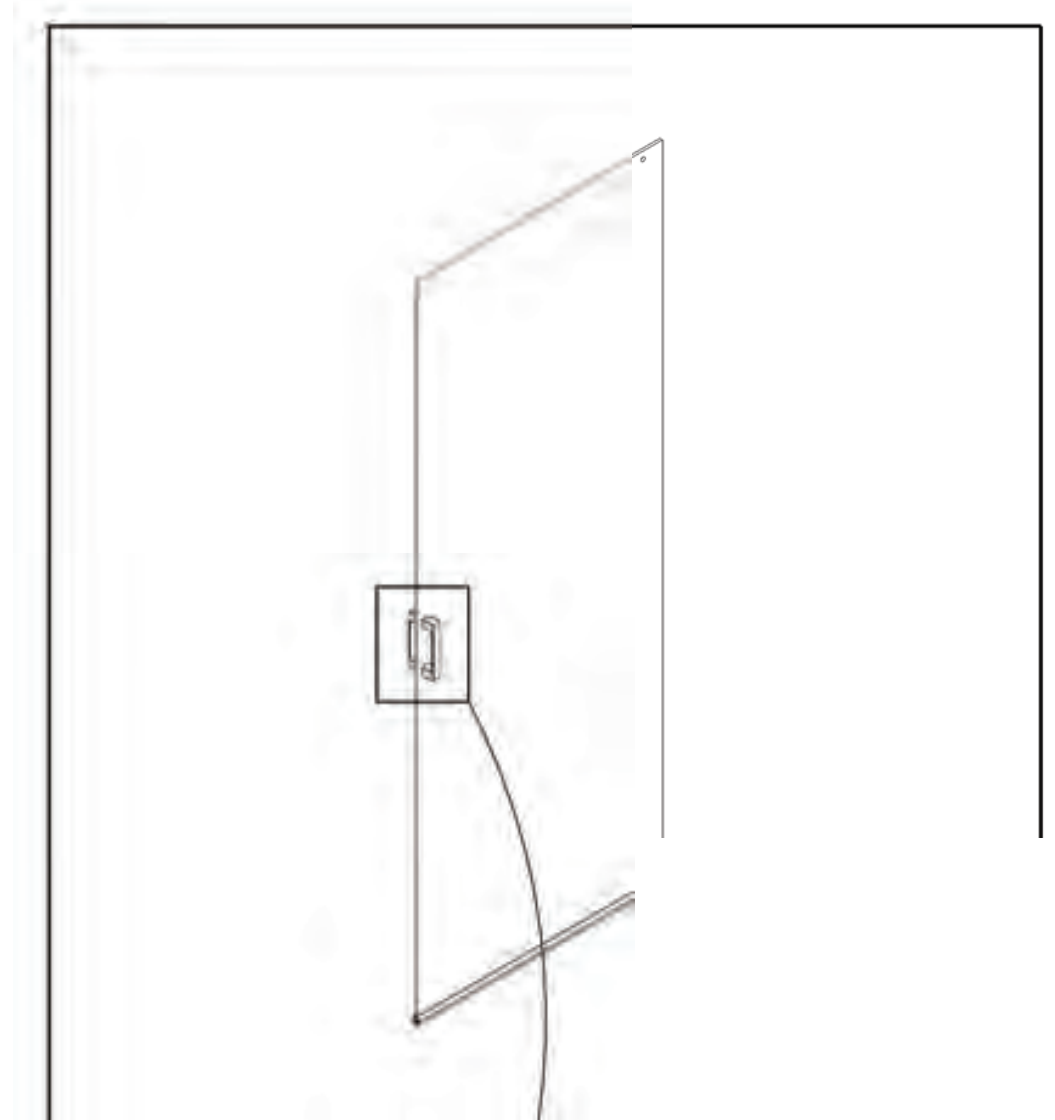


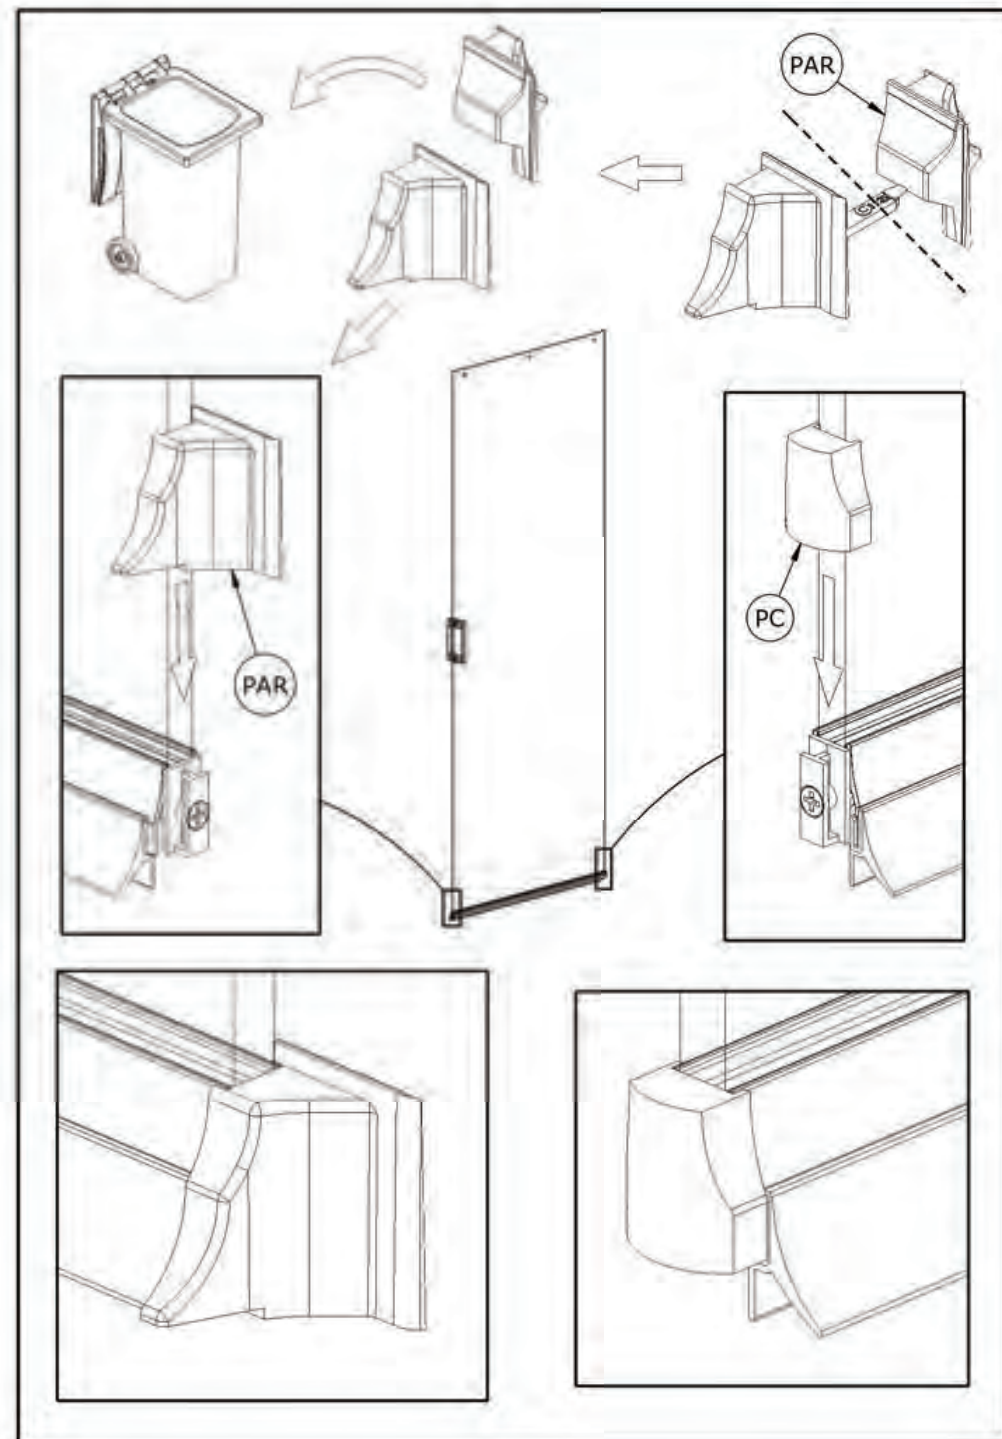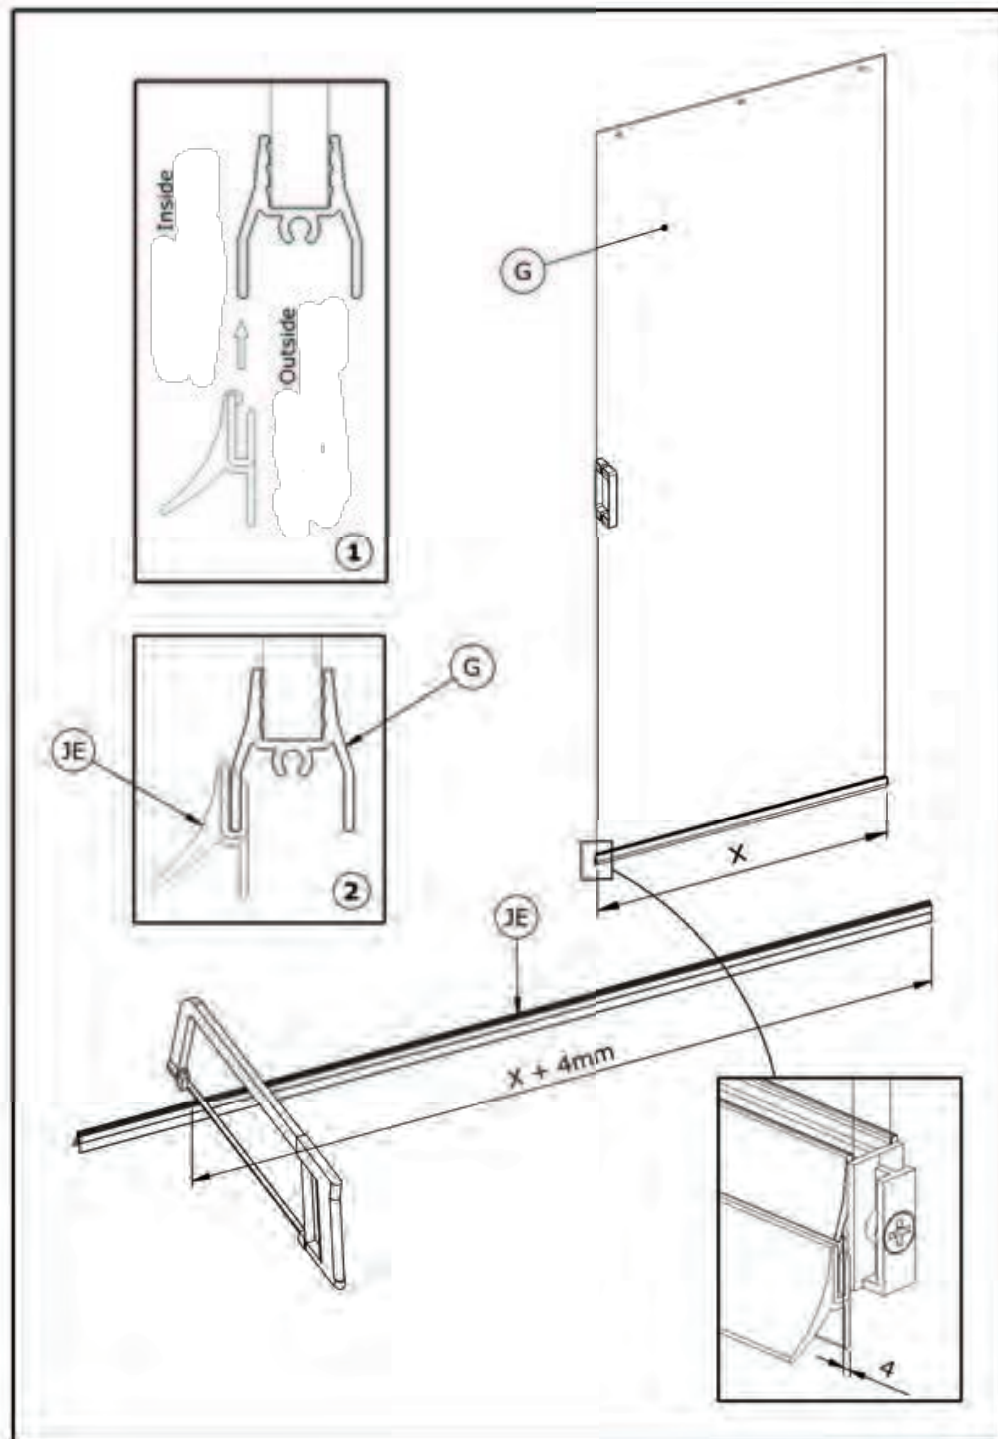

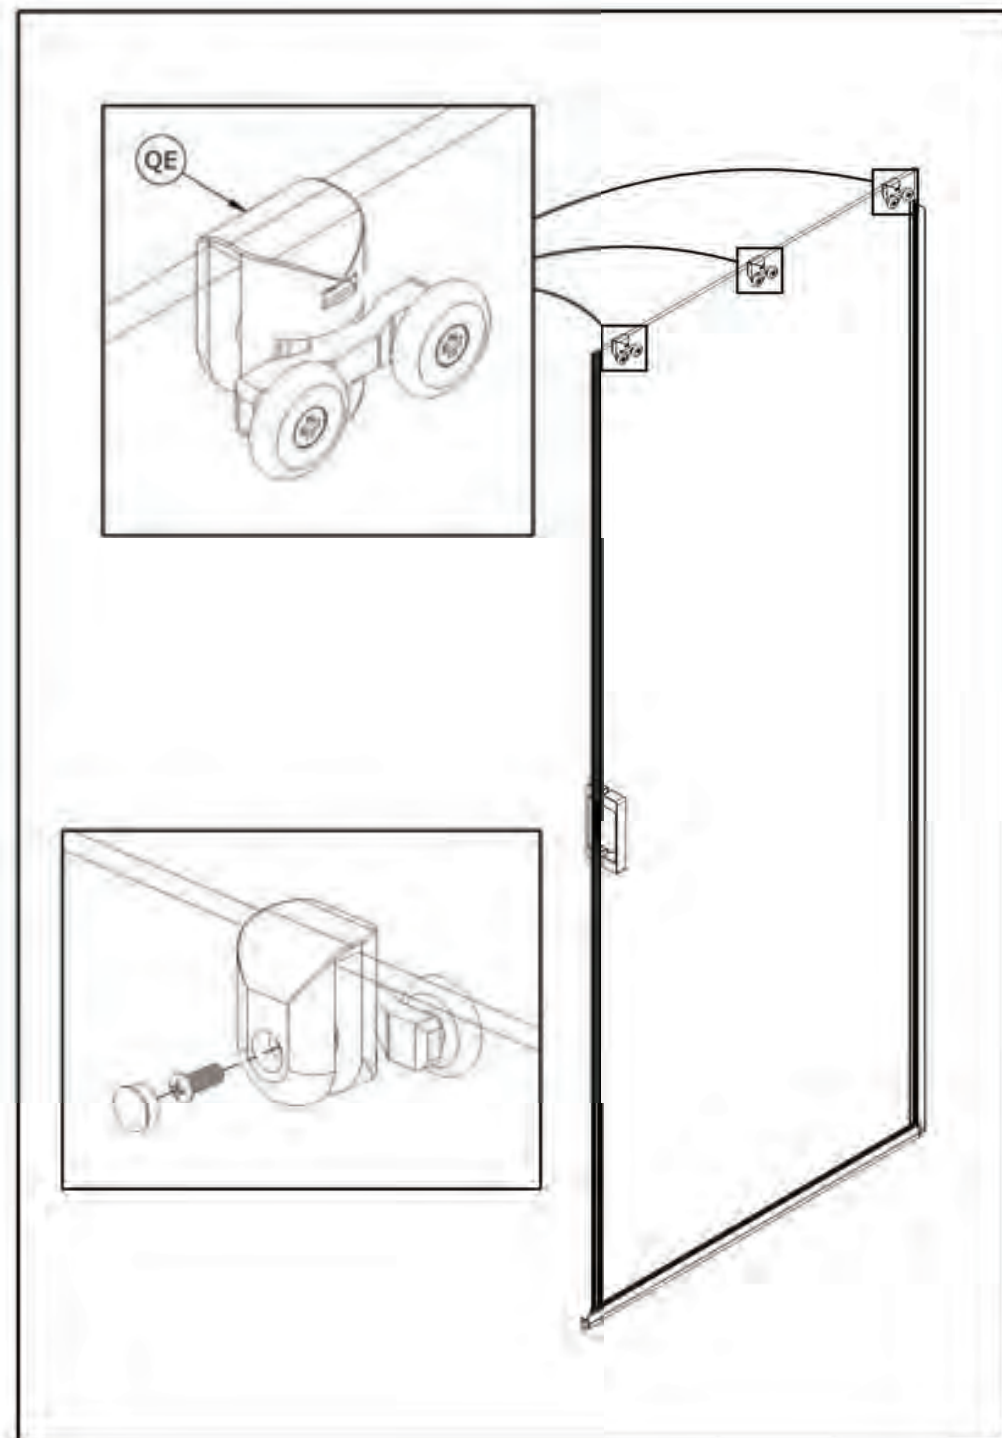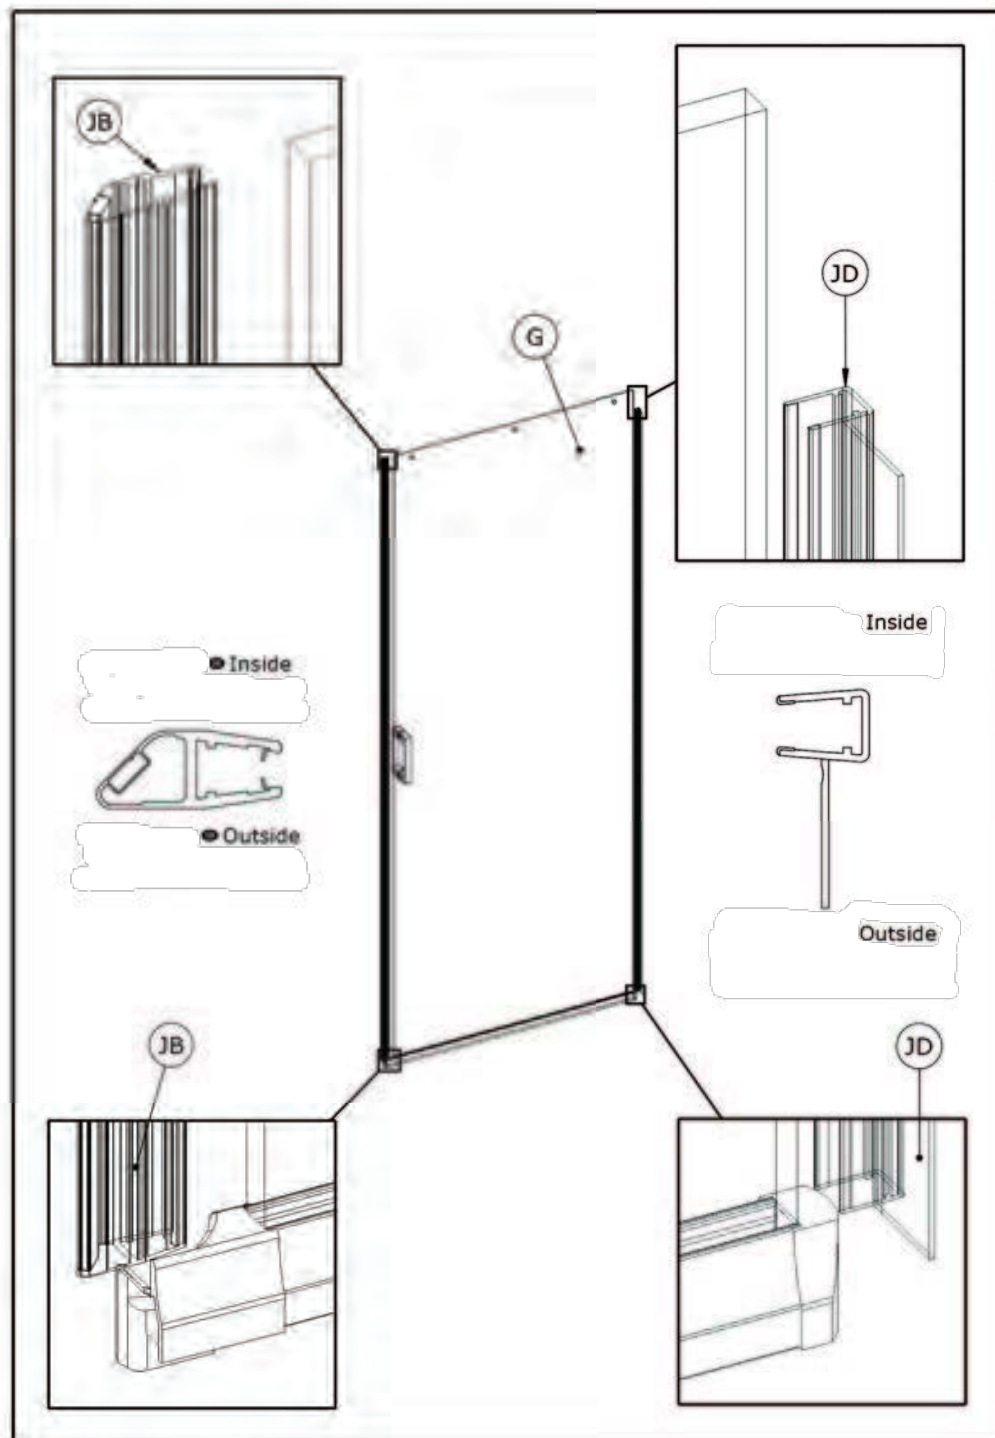


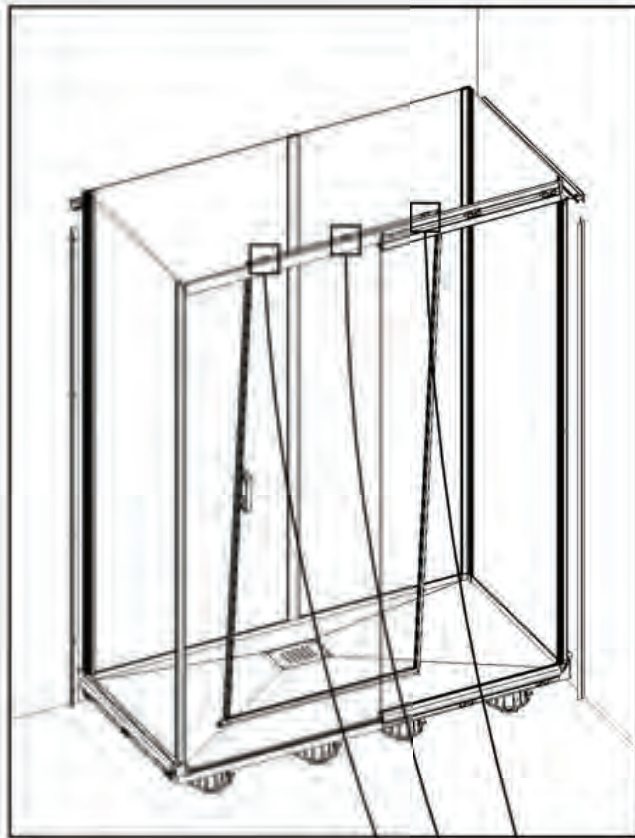

AG

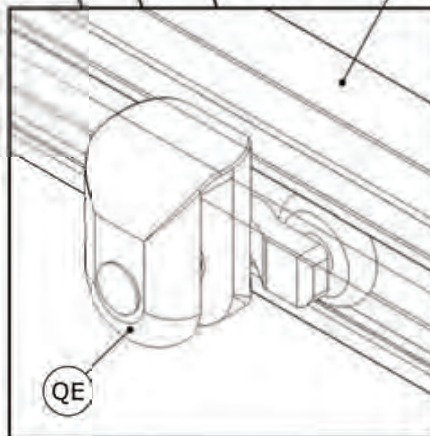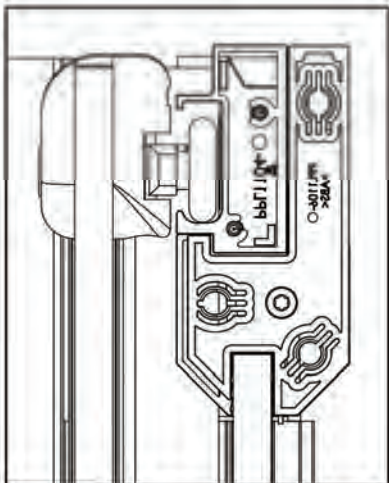


QE

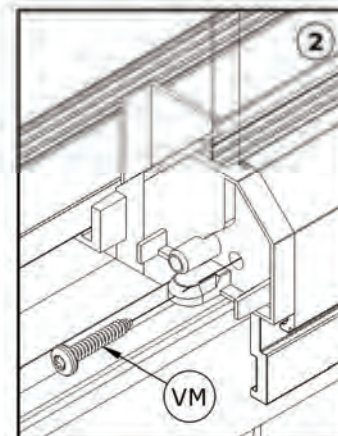



2


VM


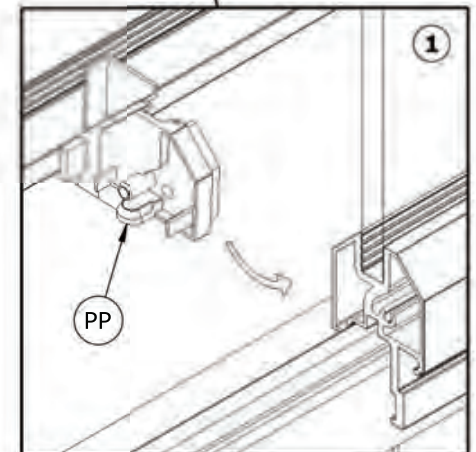




1



PP





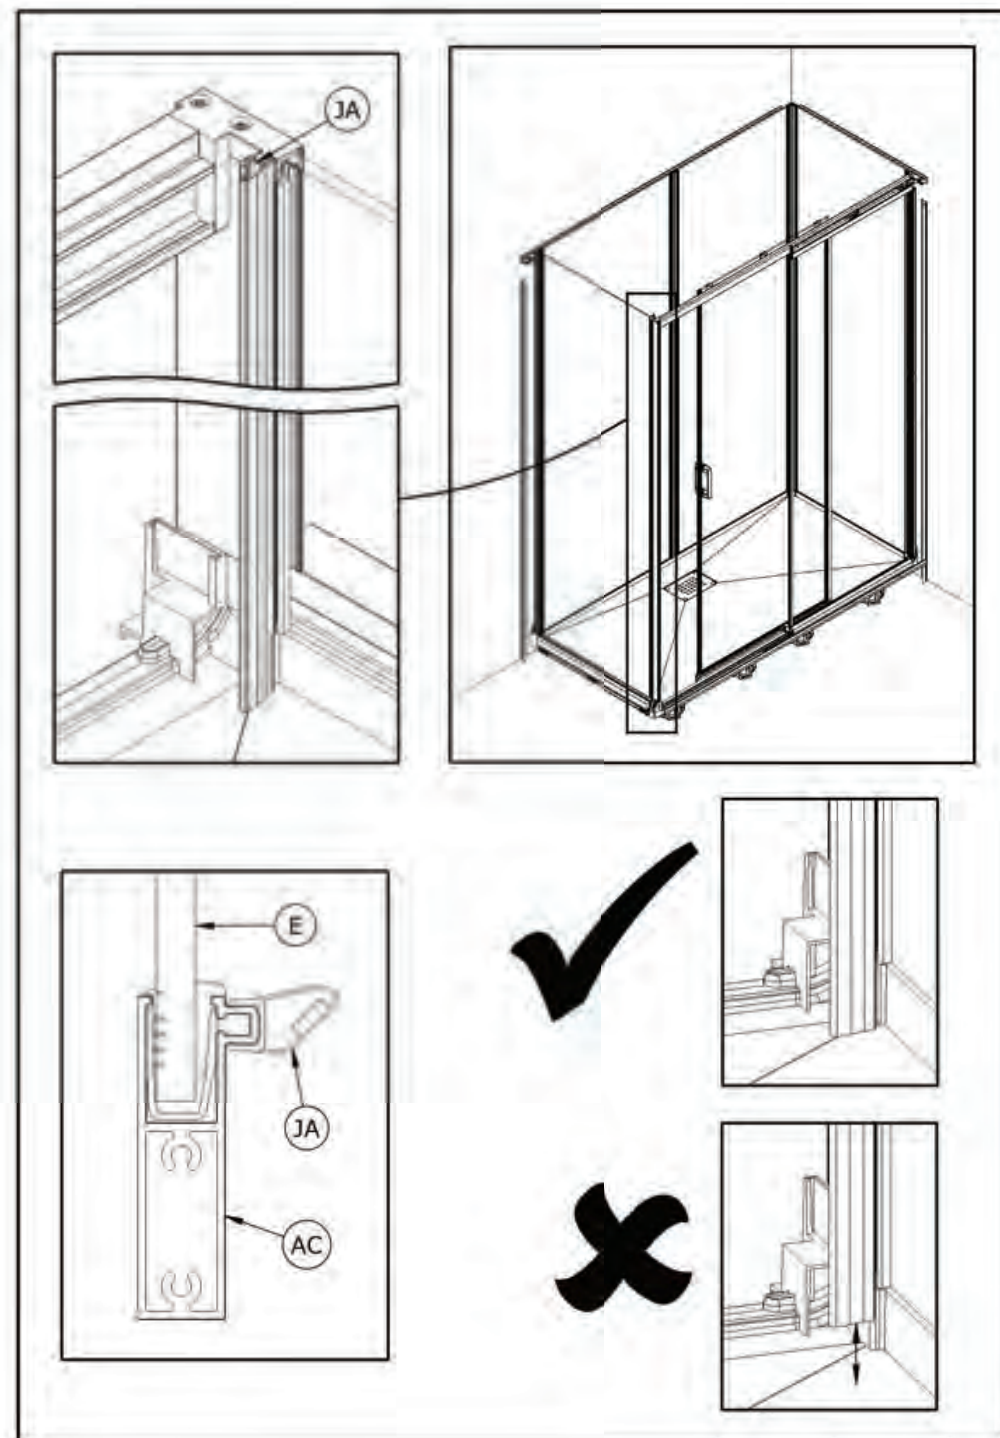
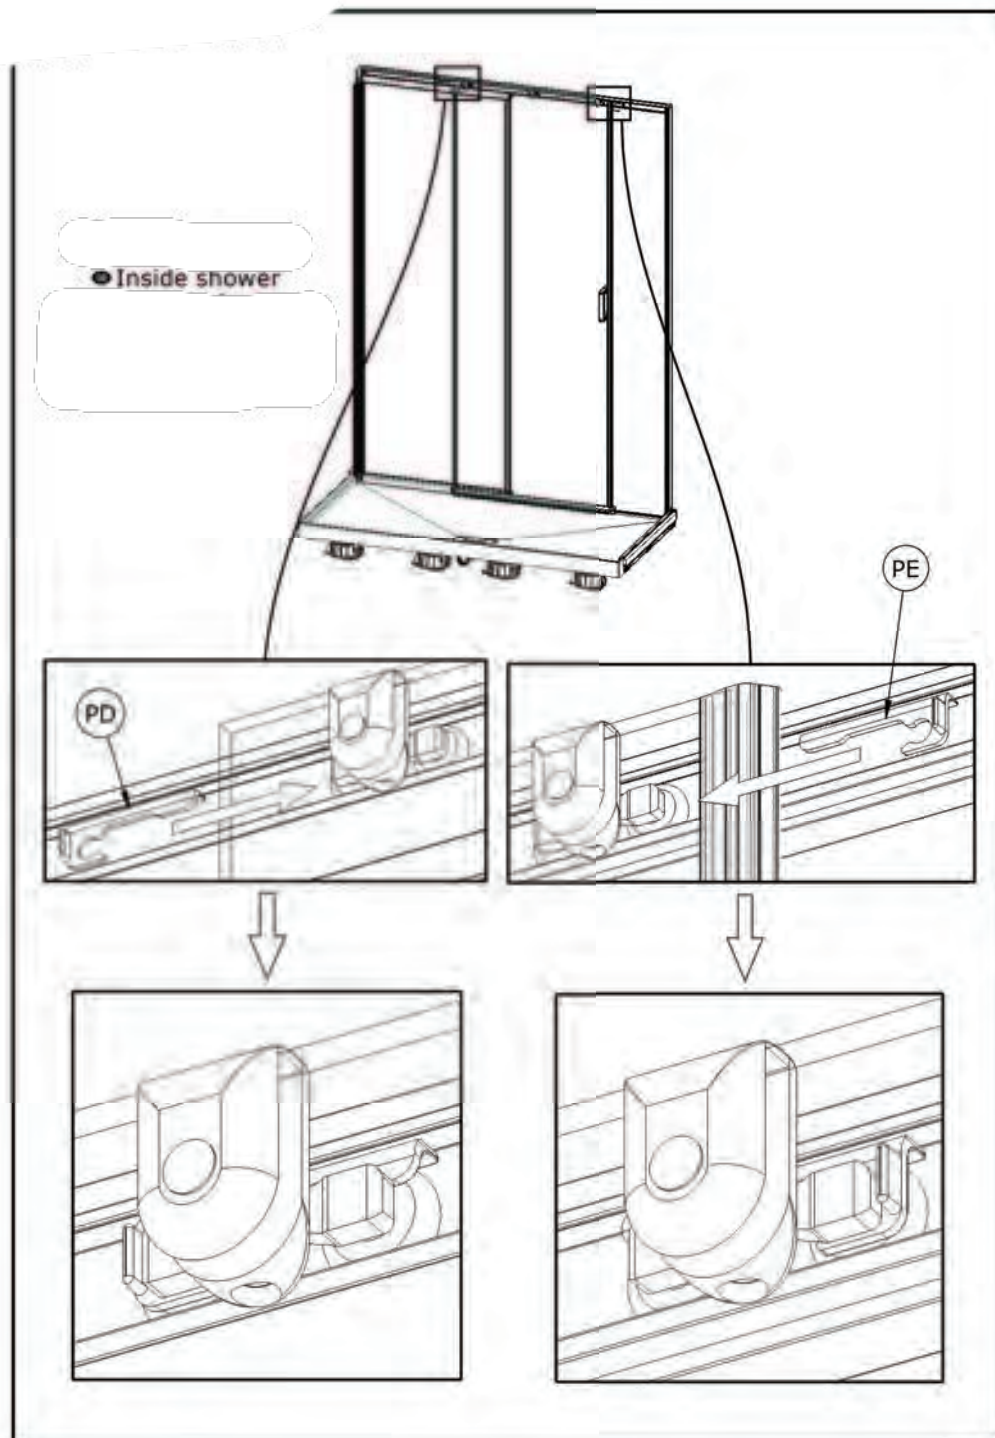





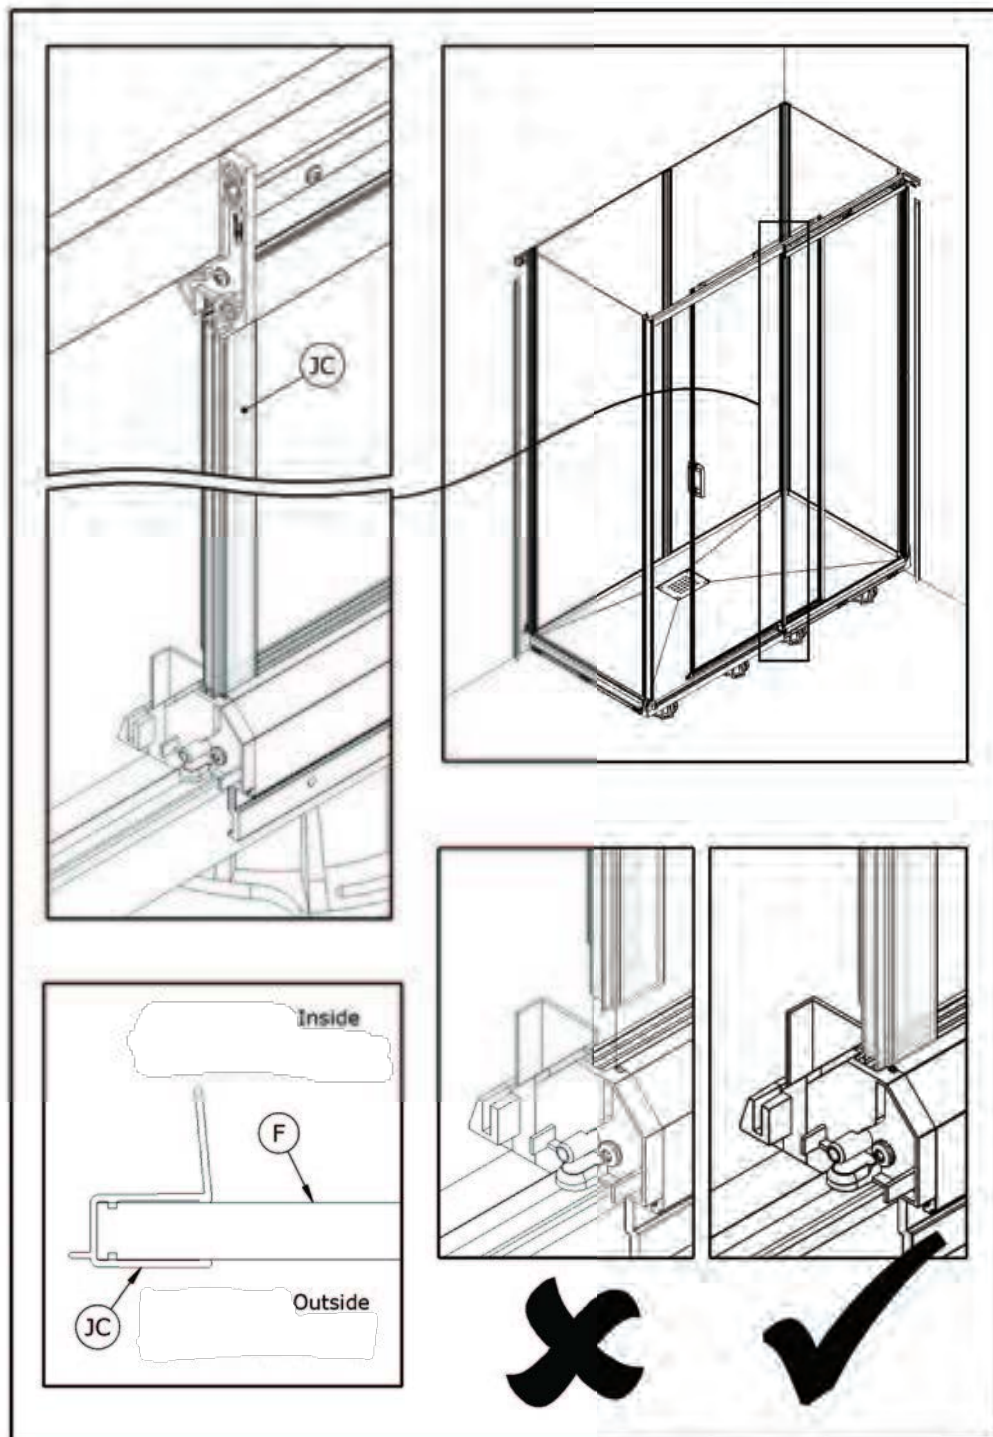


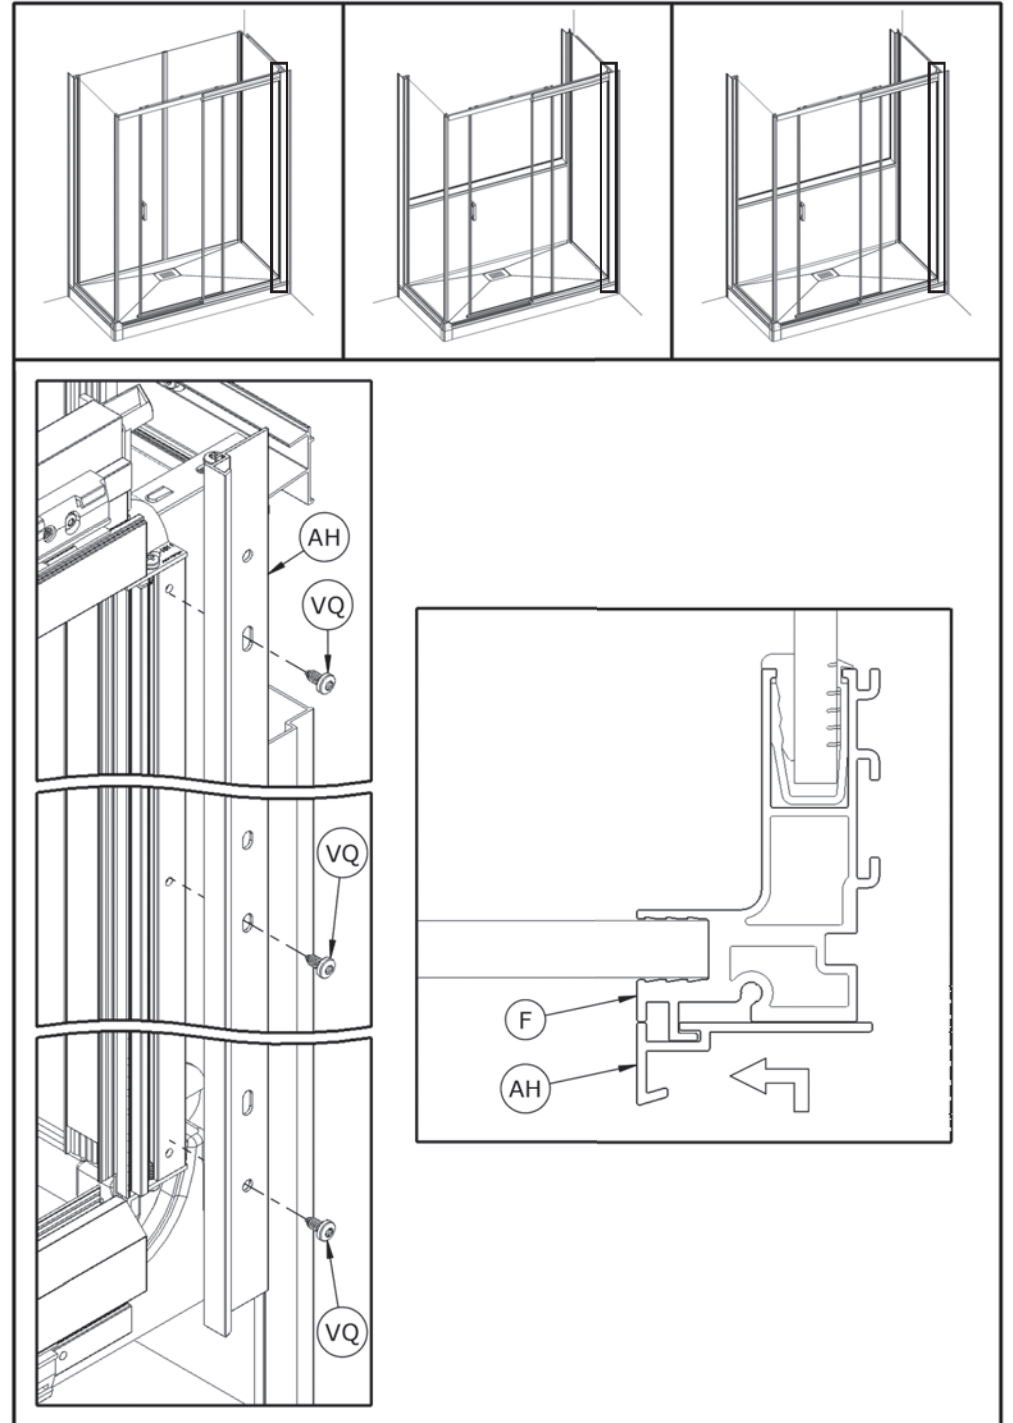
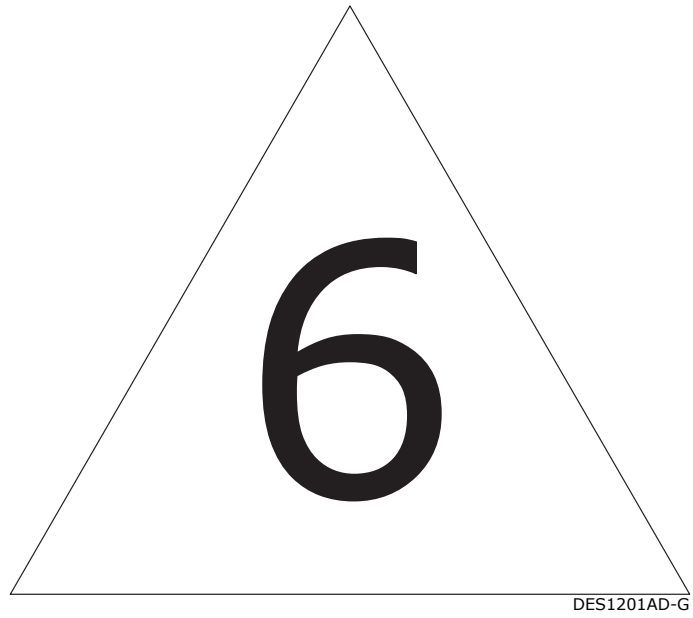


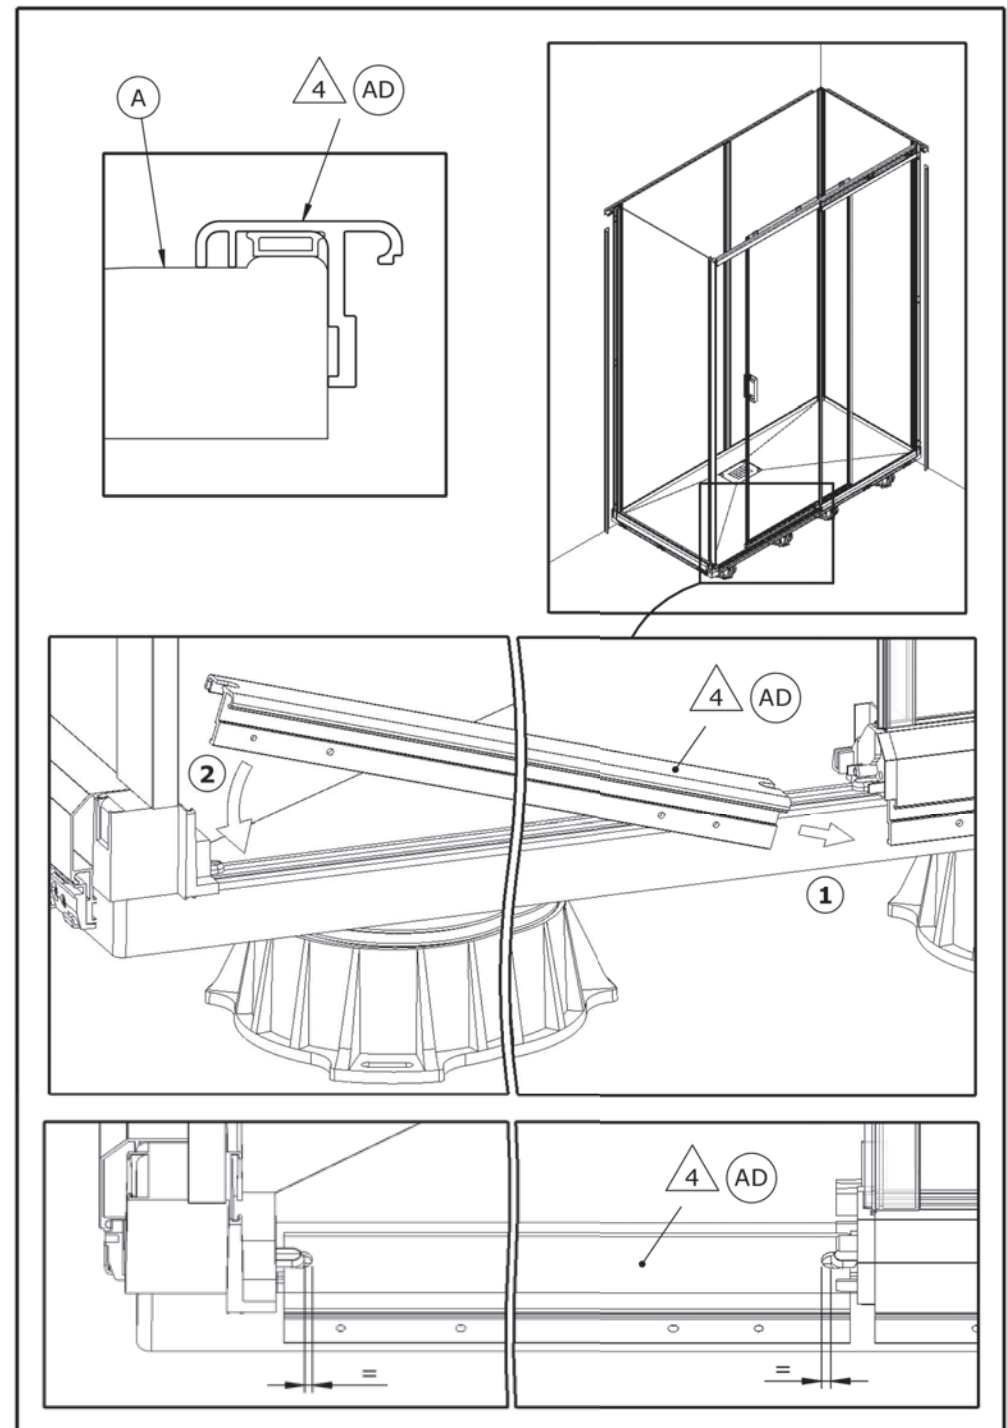
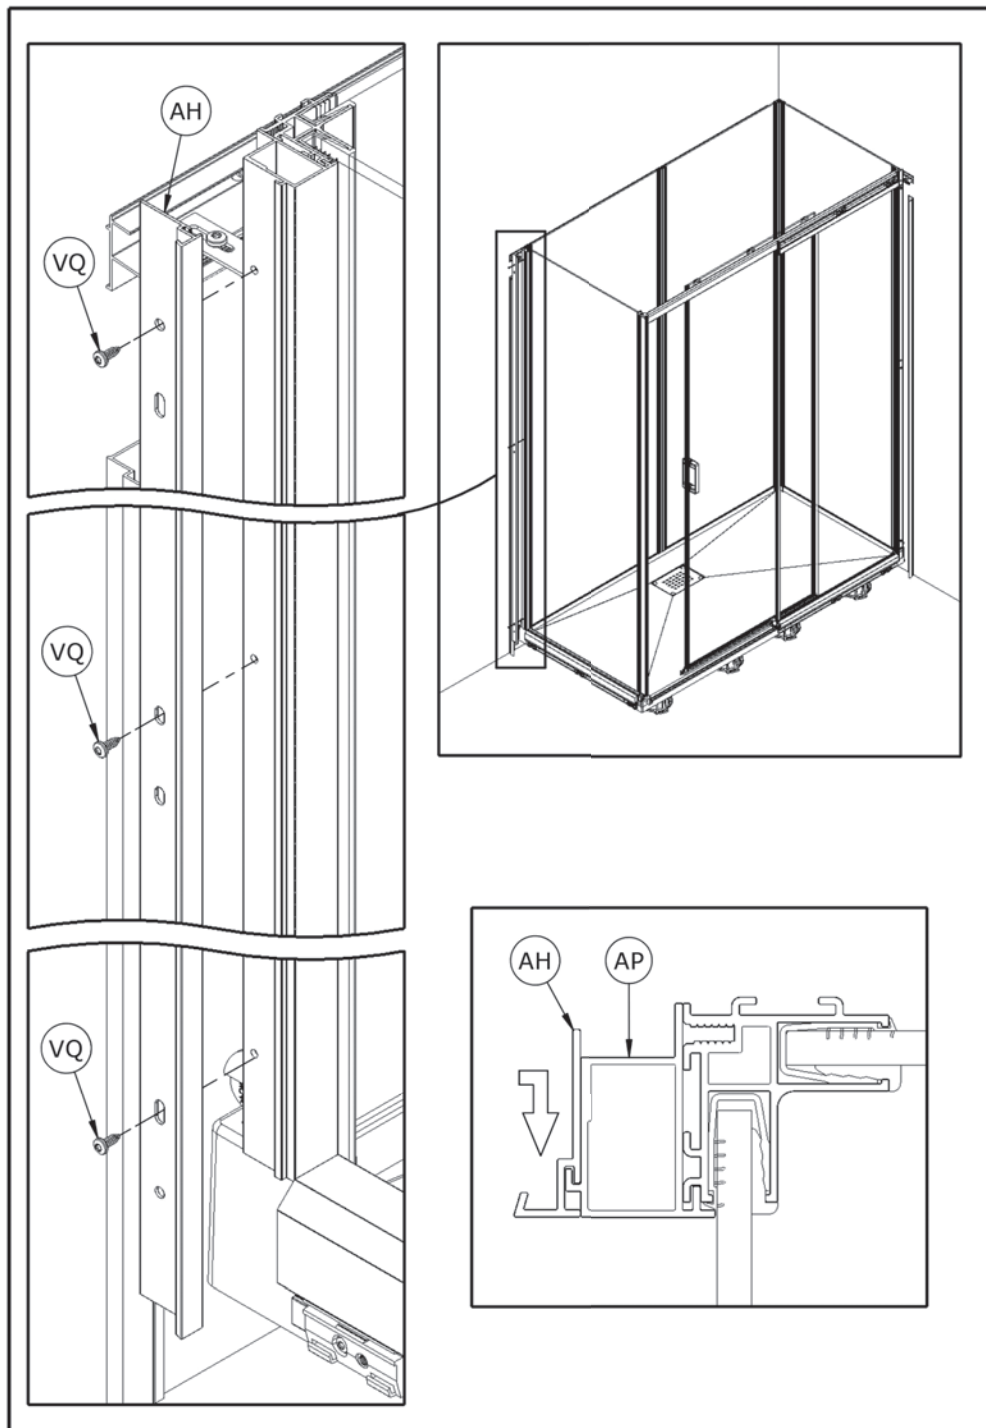


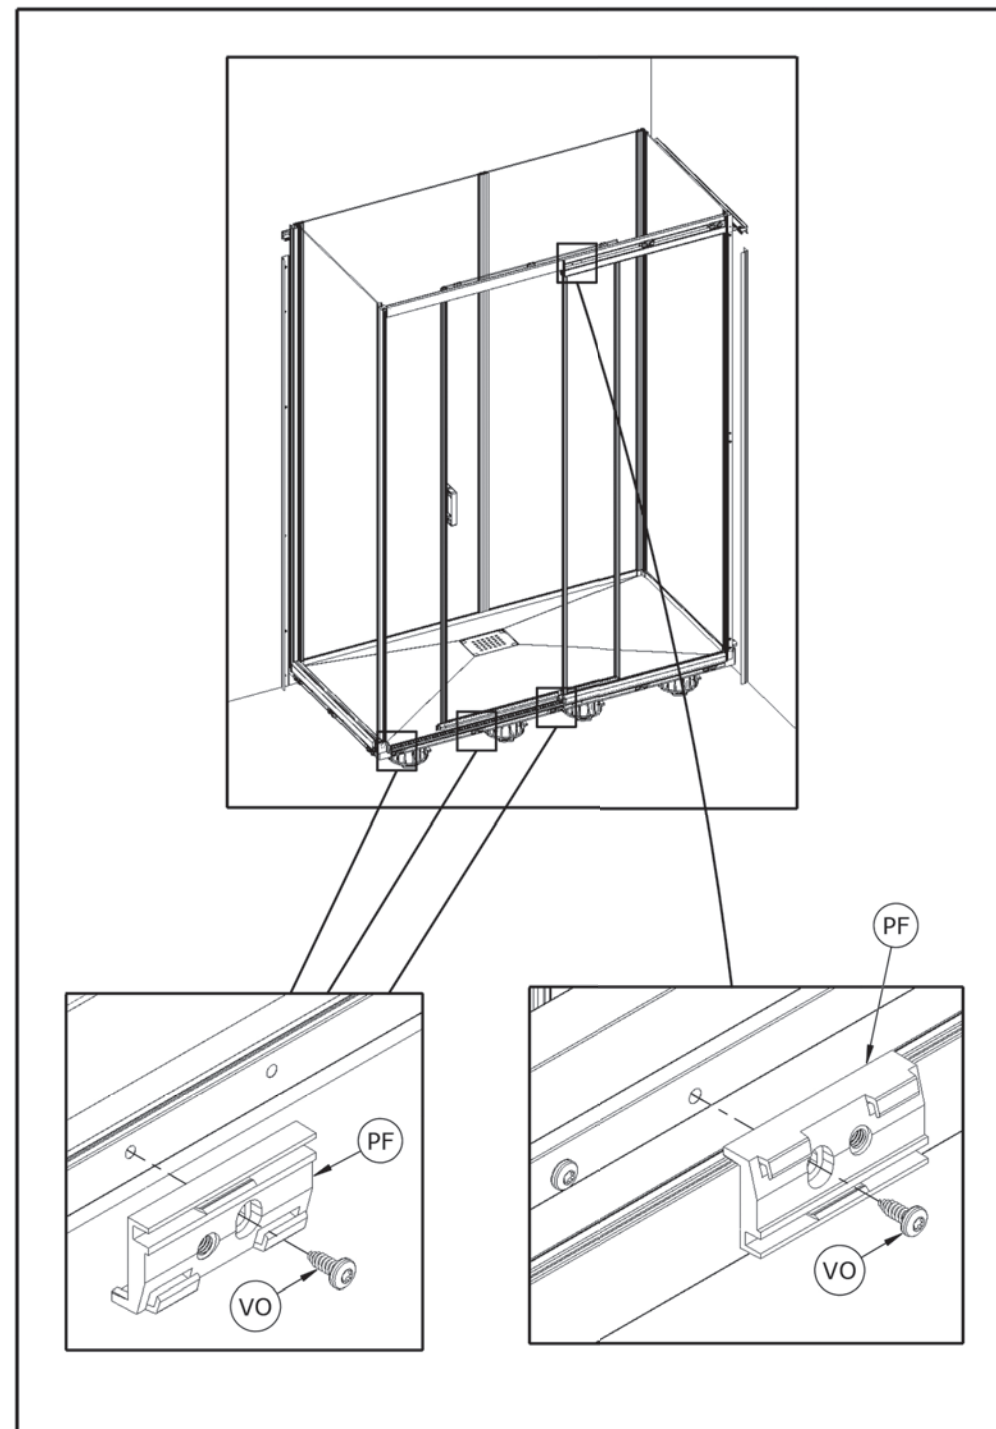
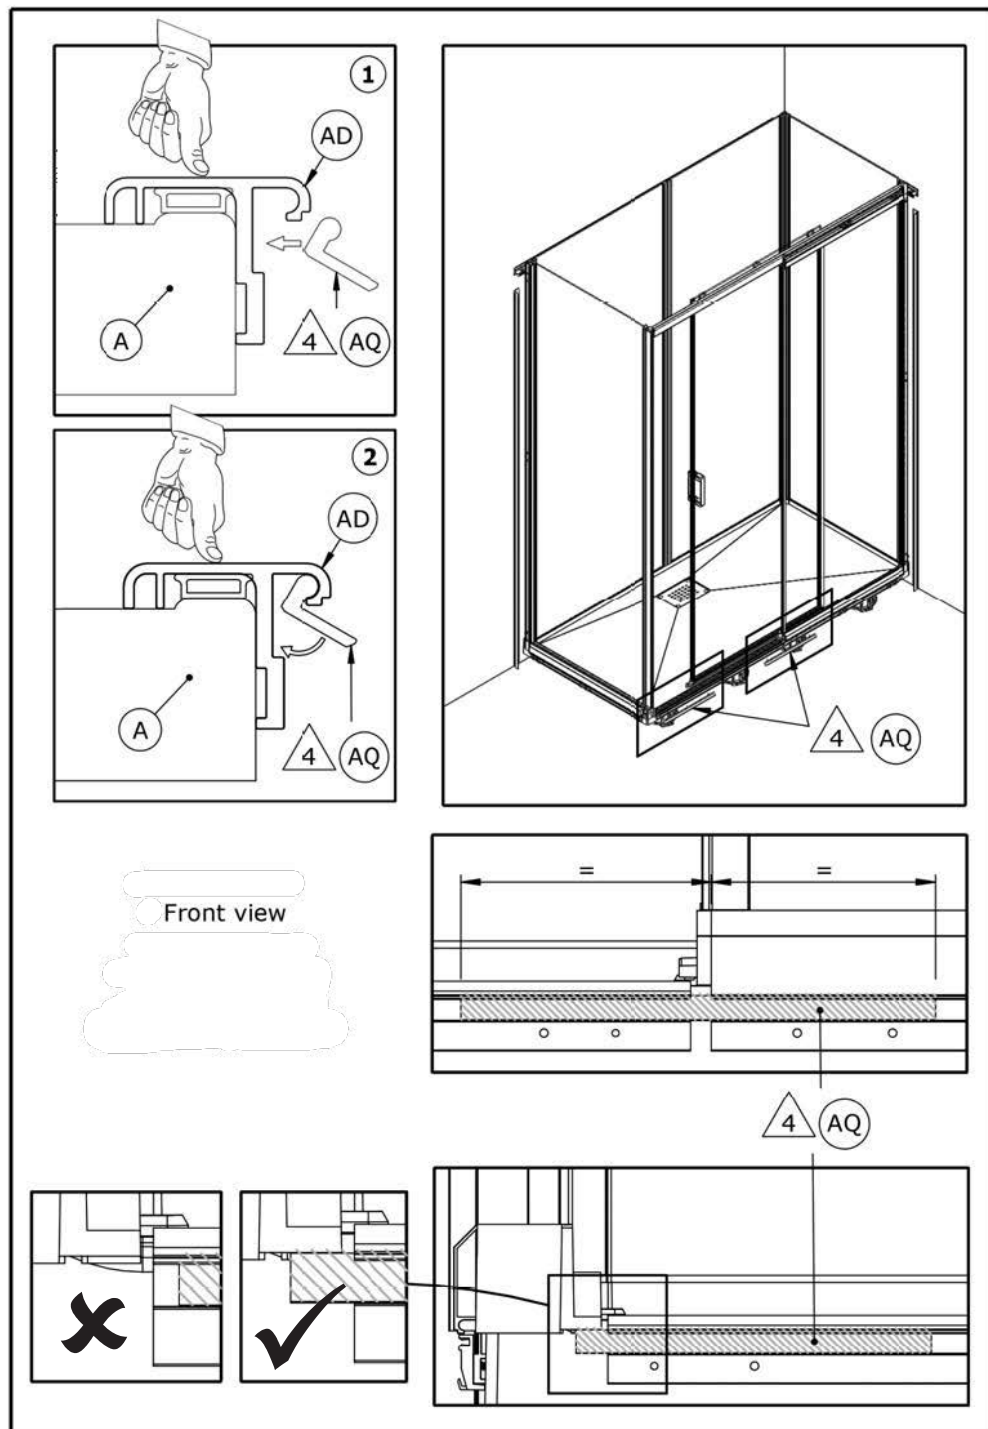


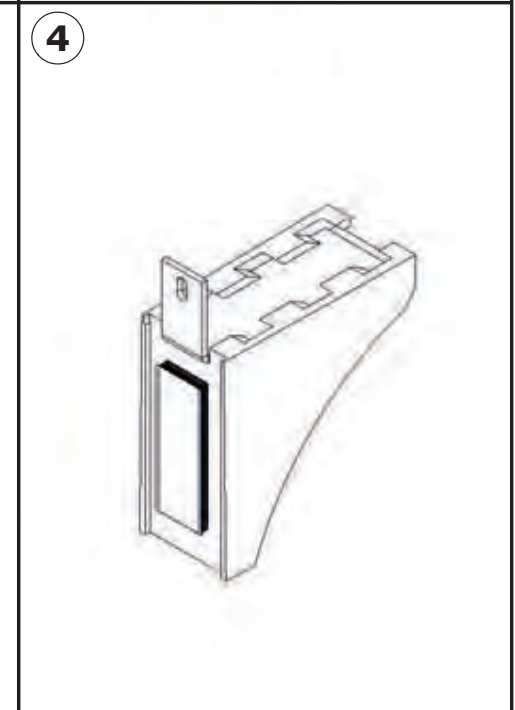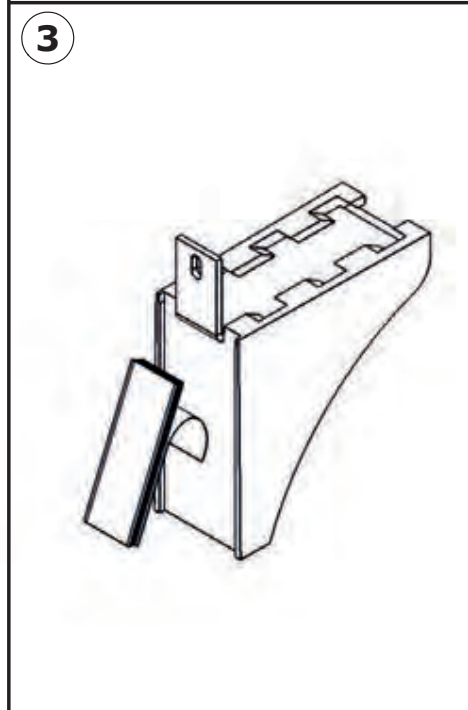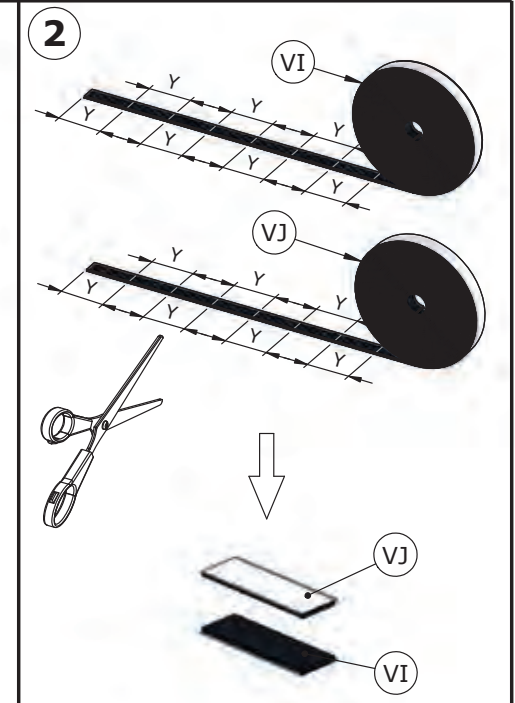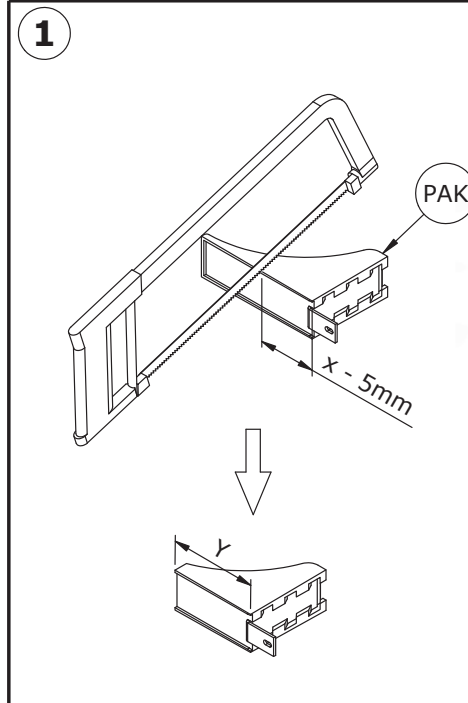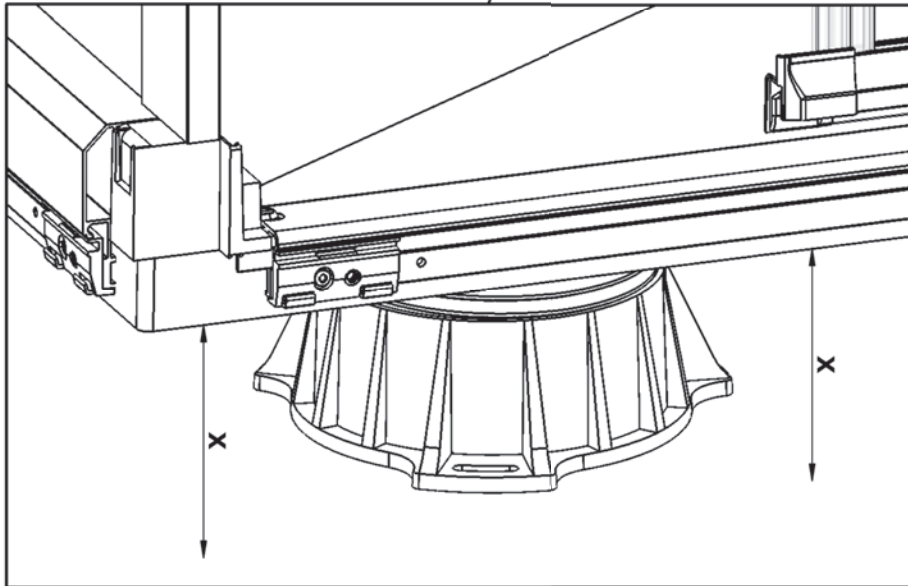
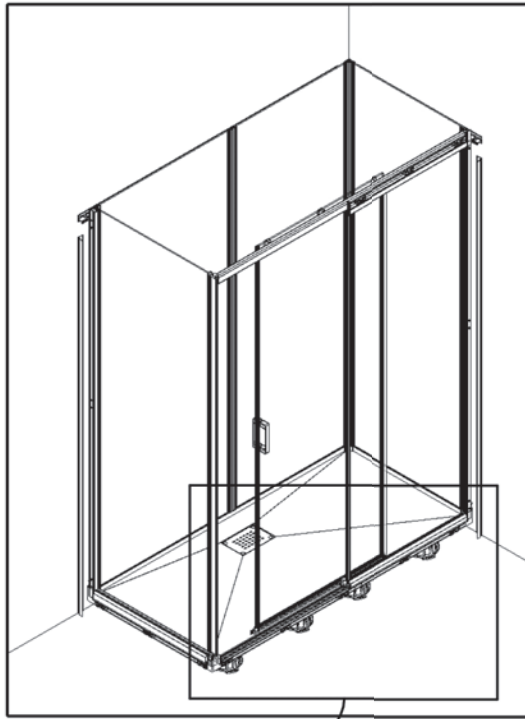


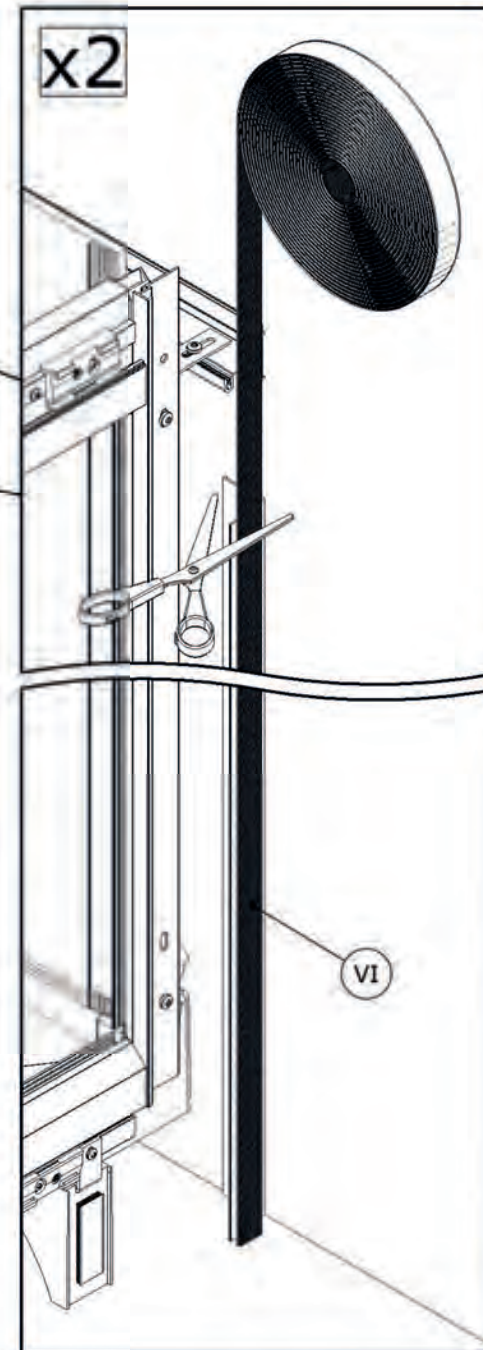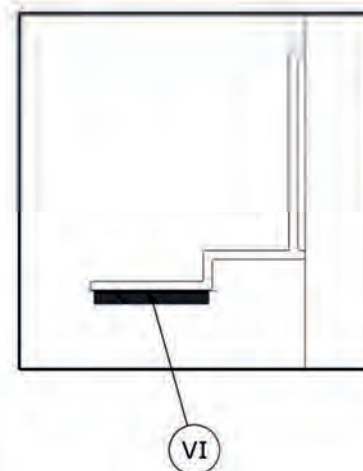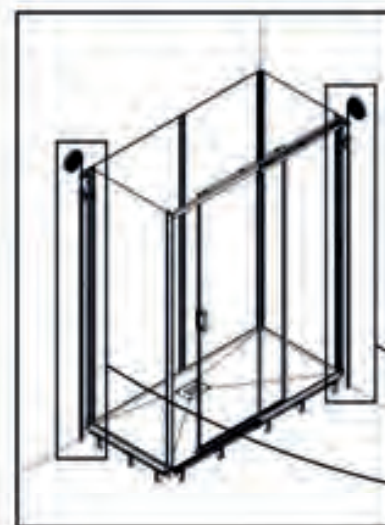
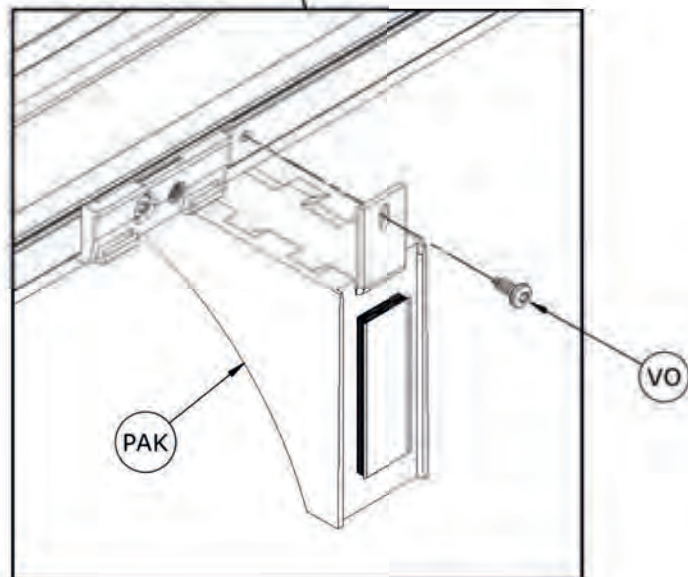


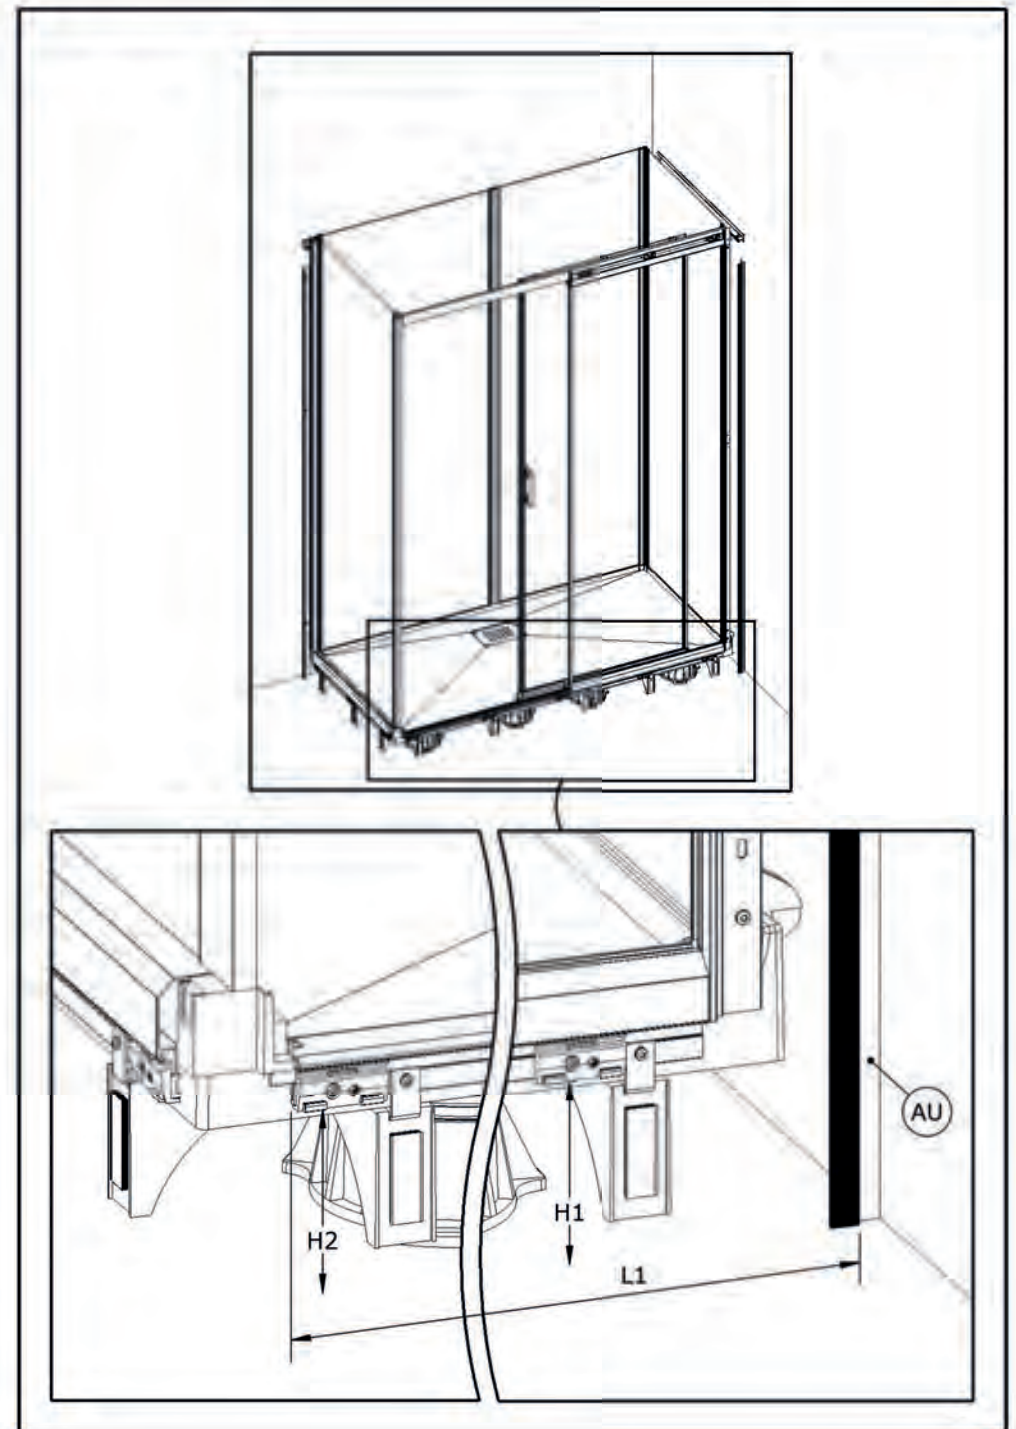
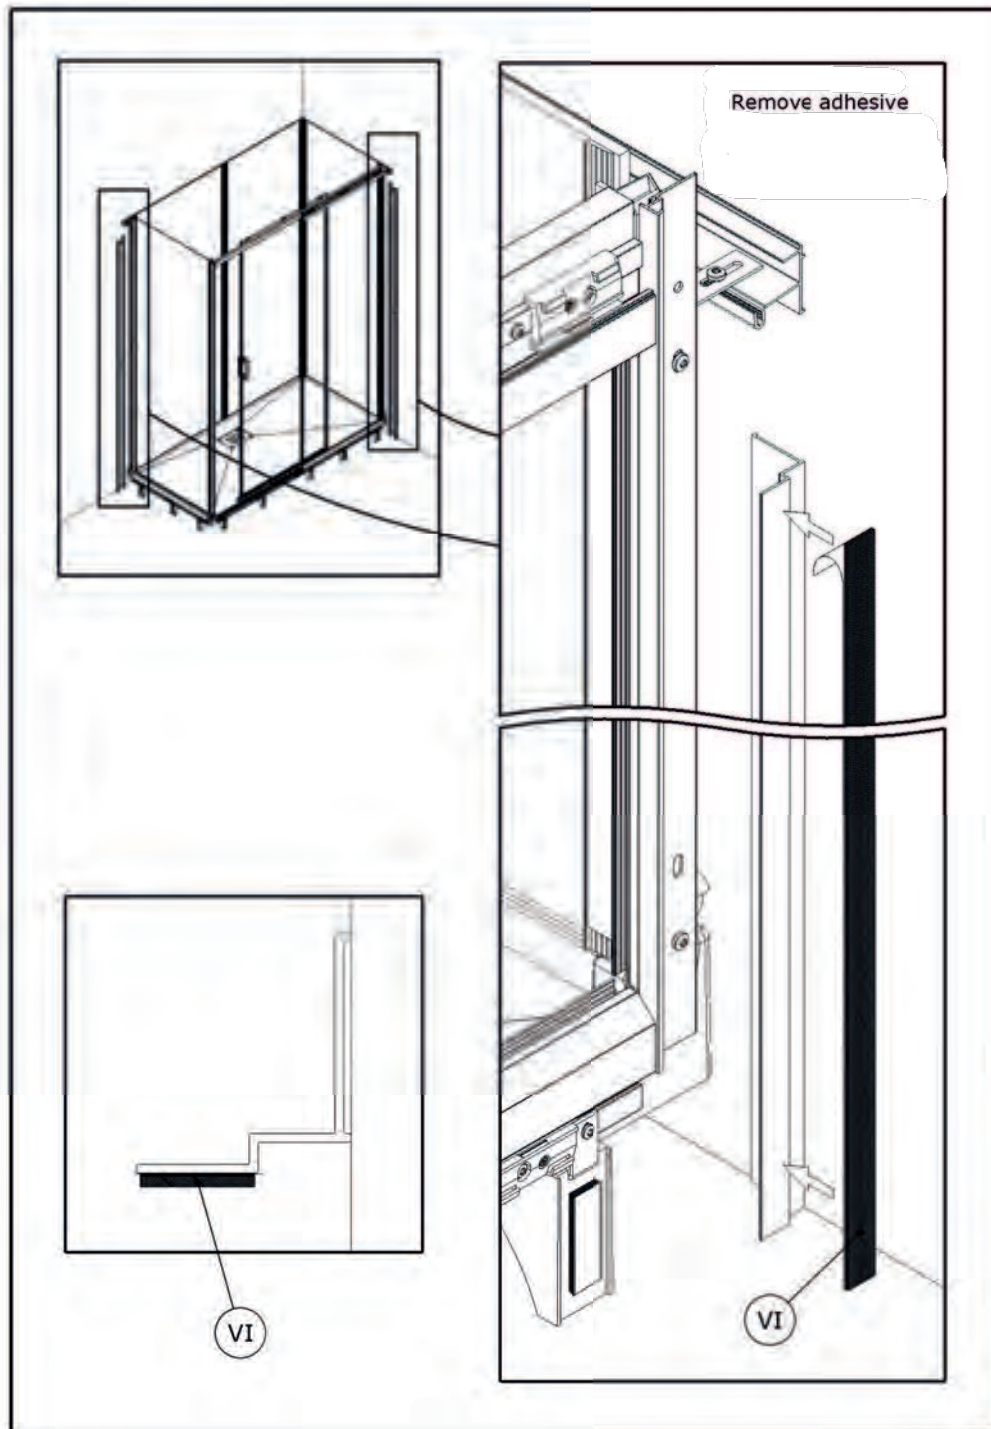


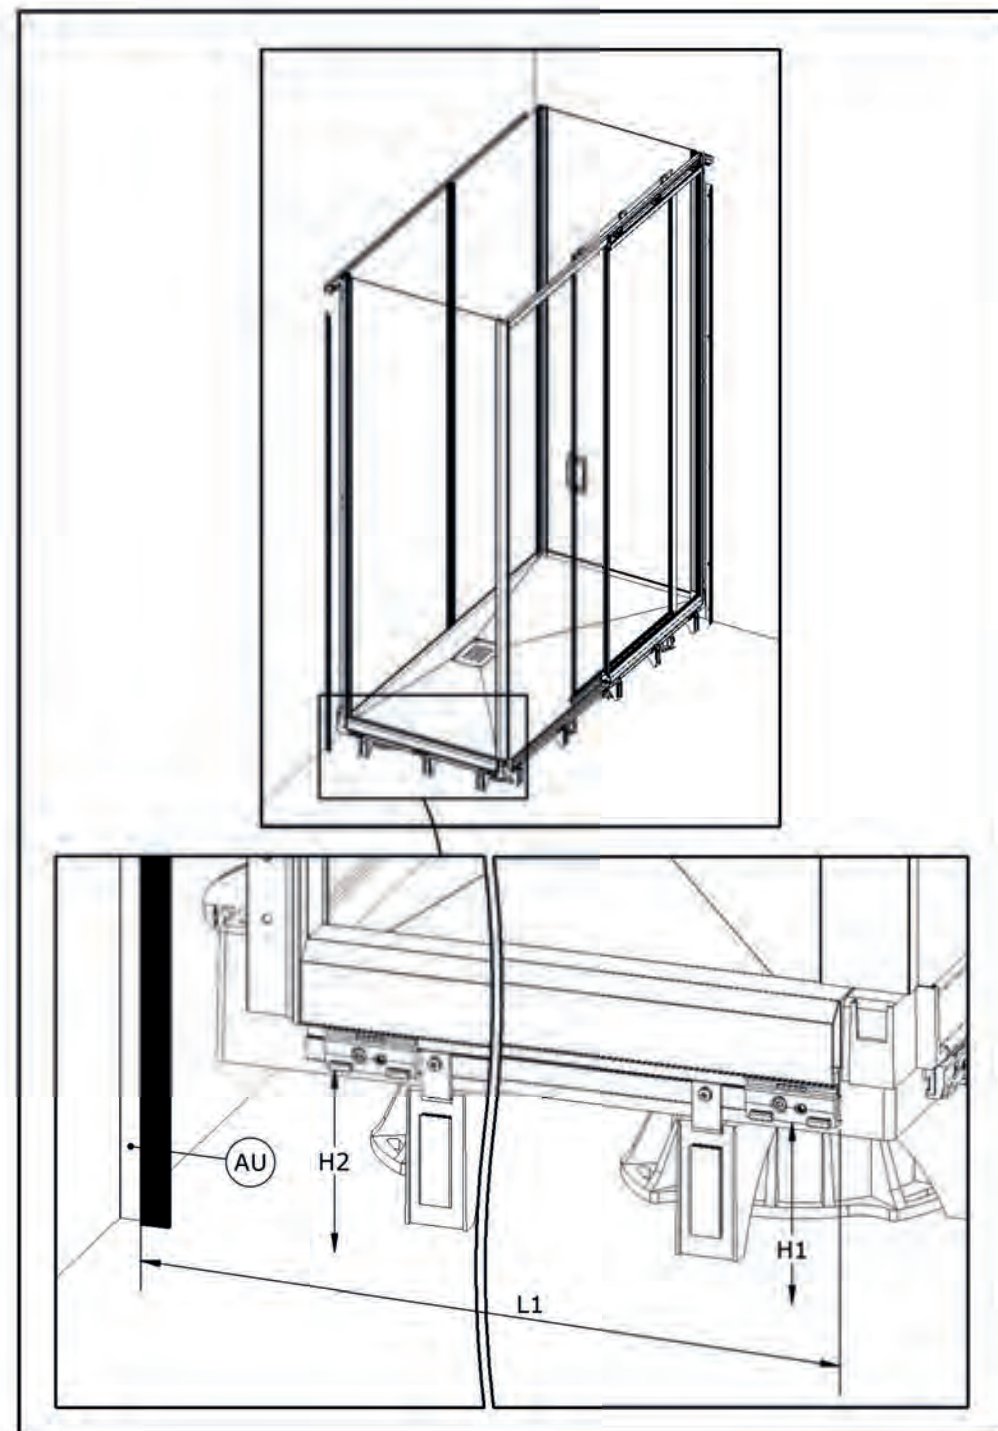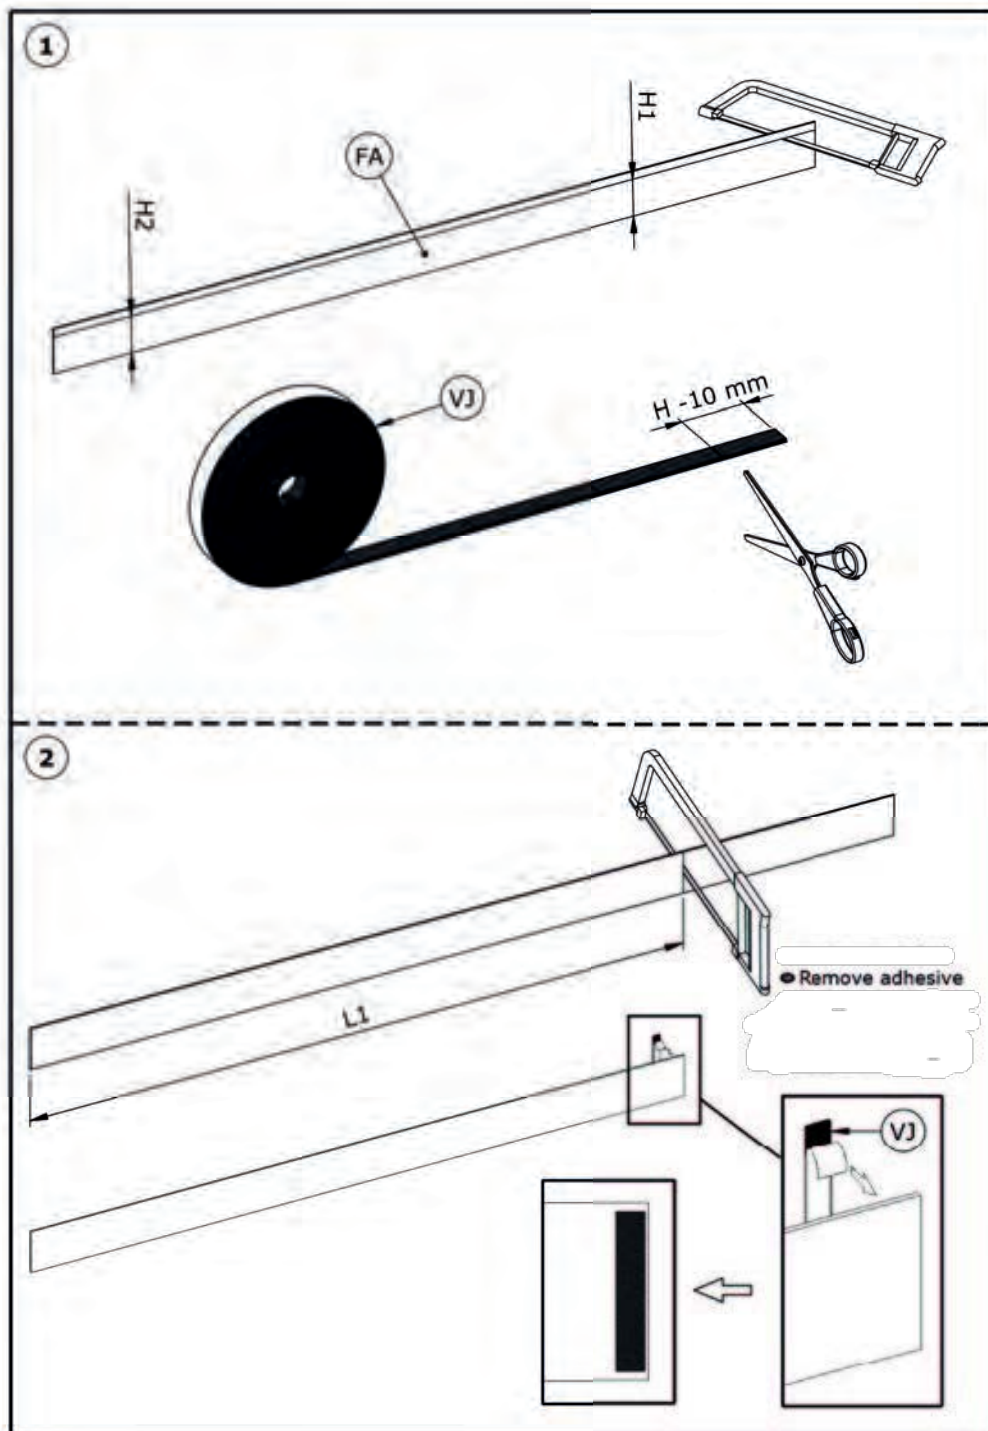

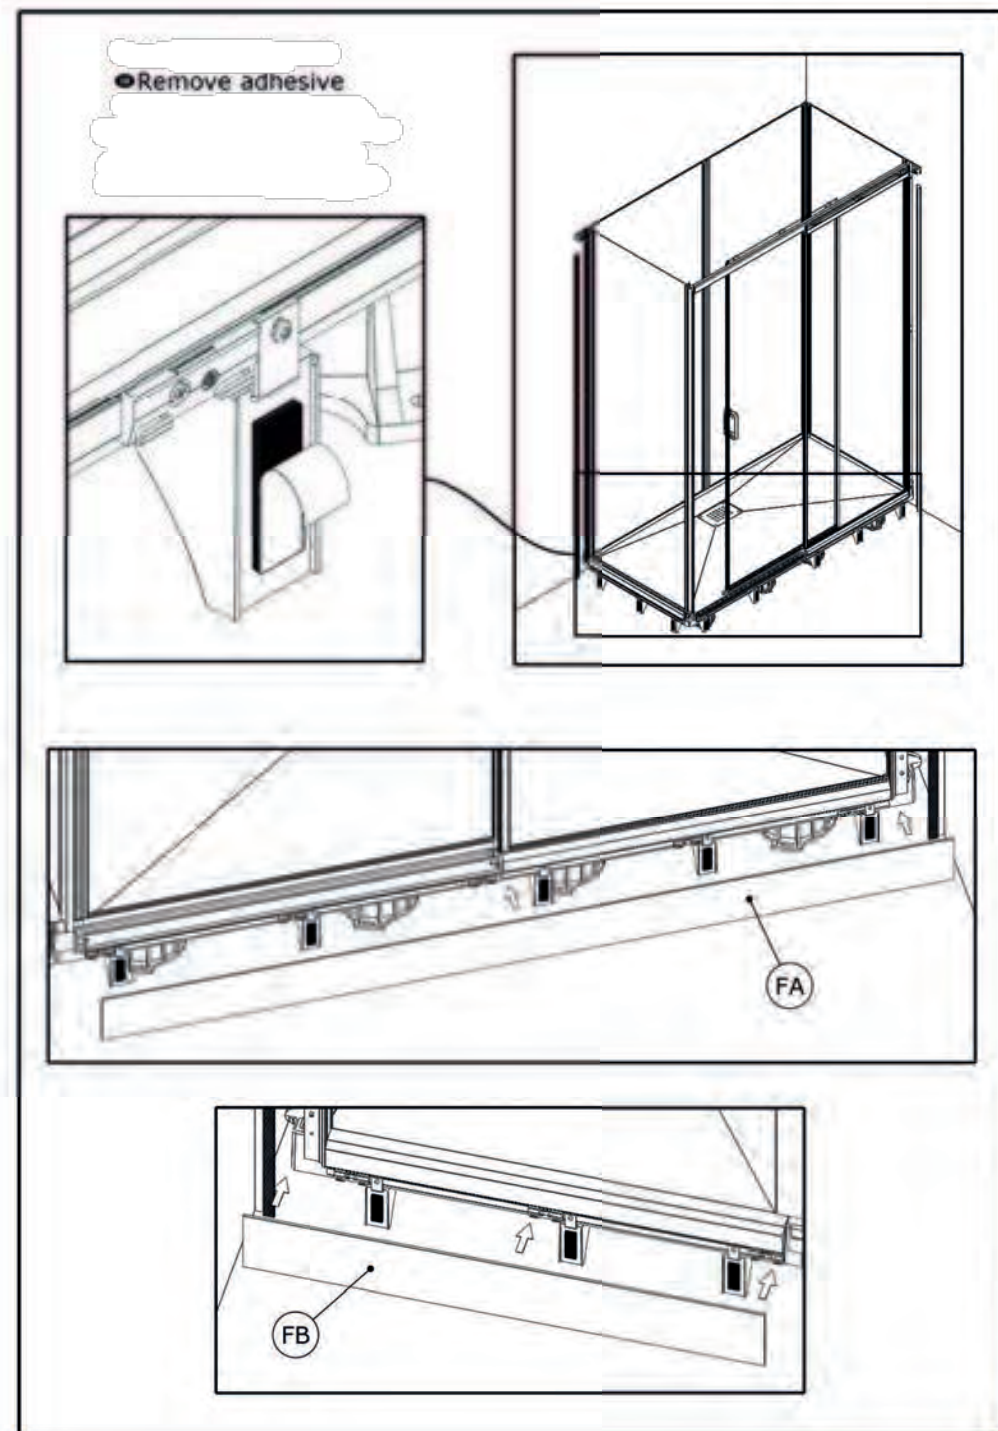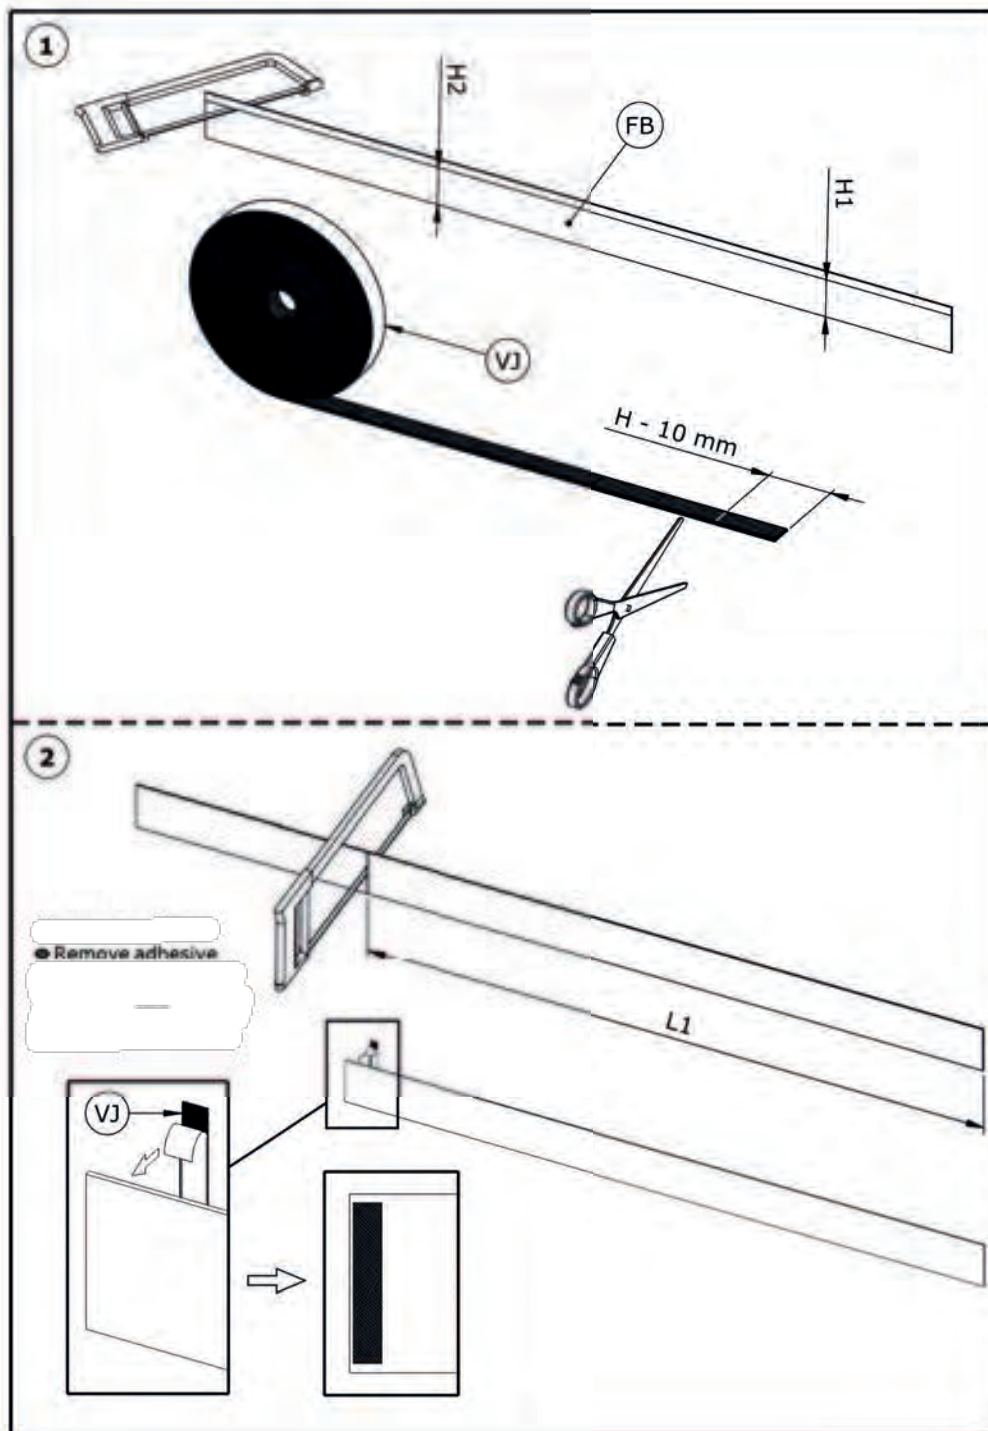


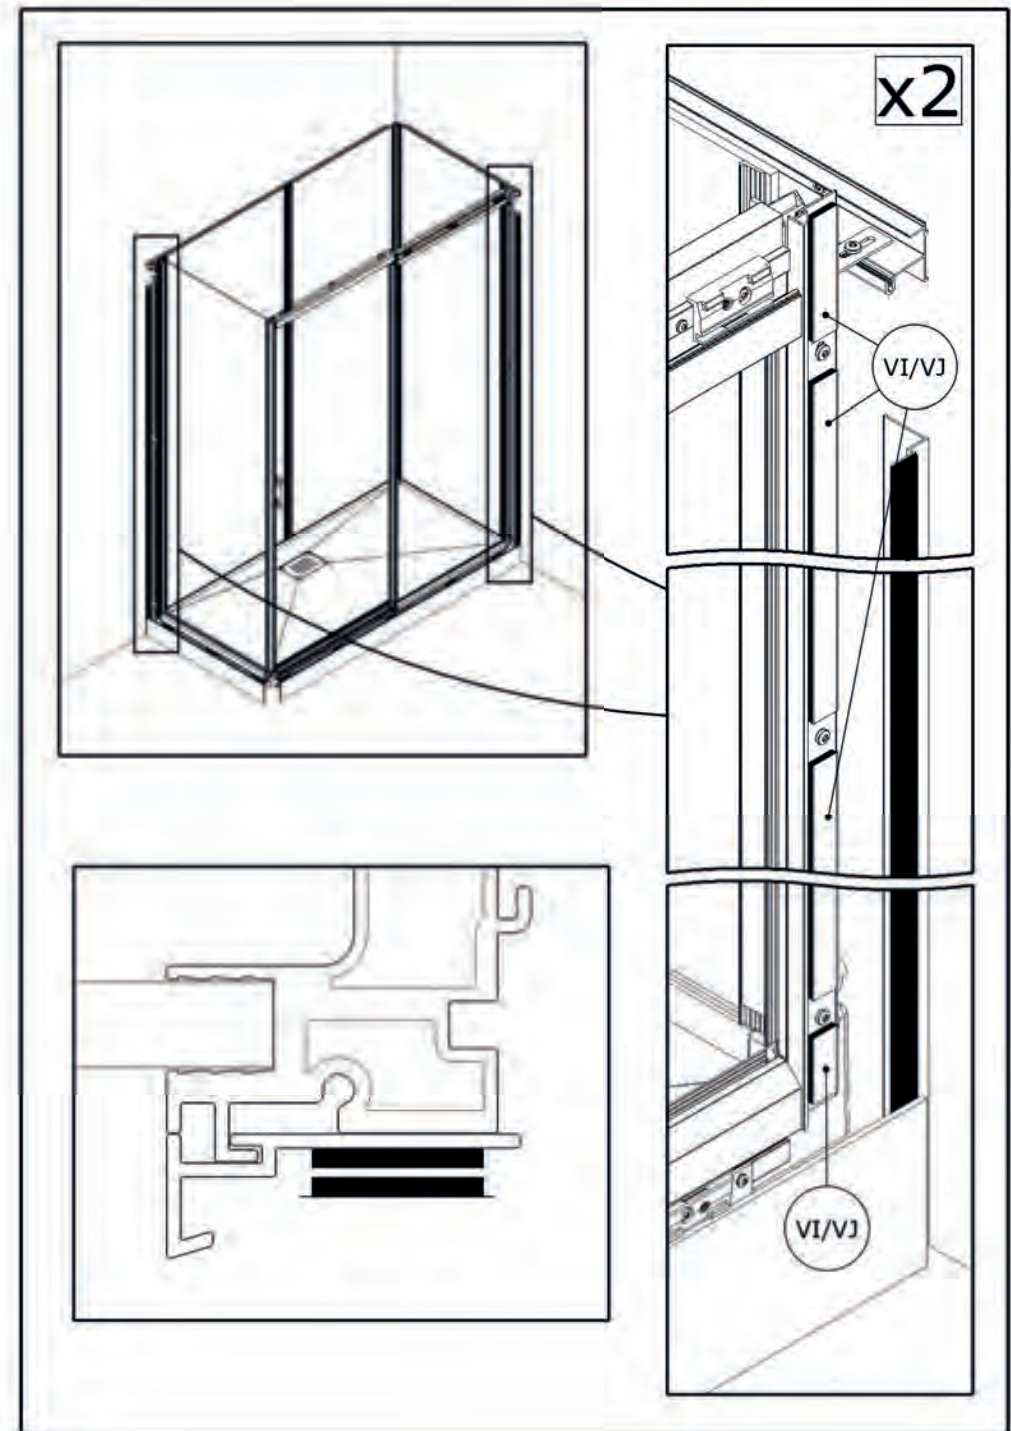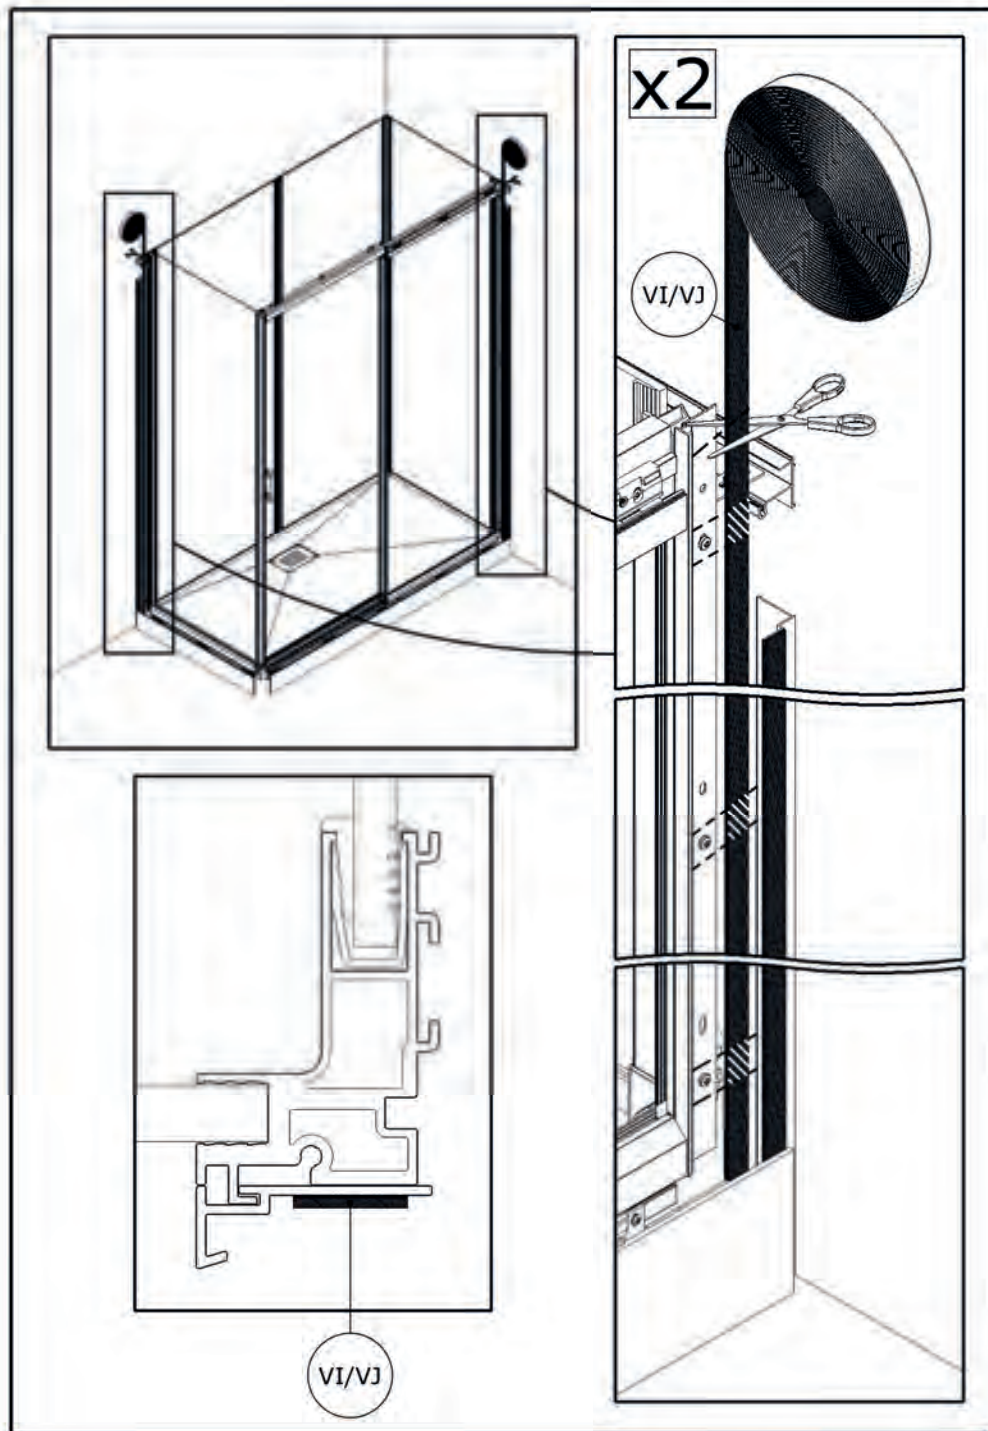

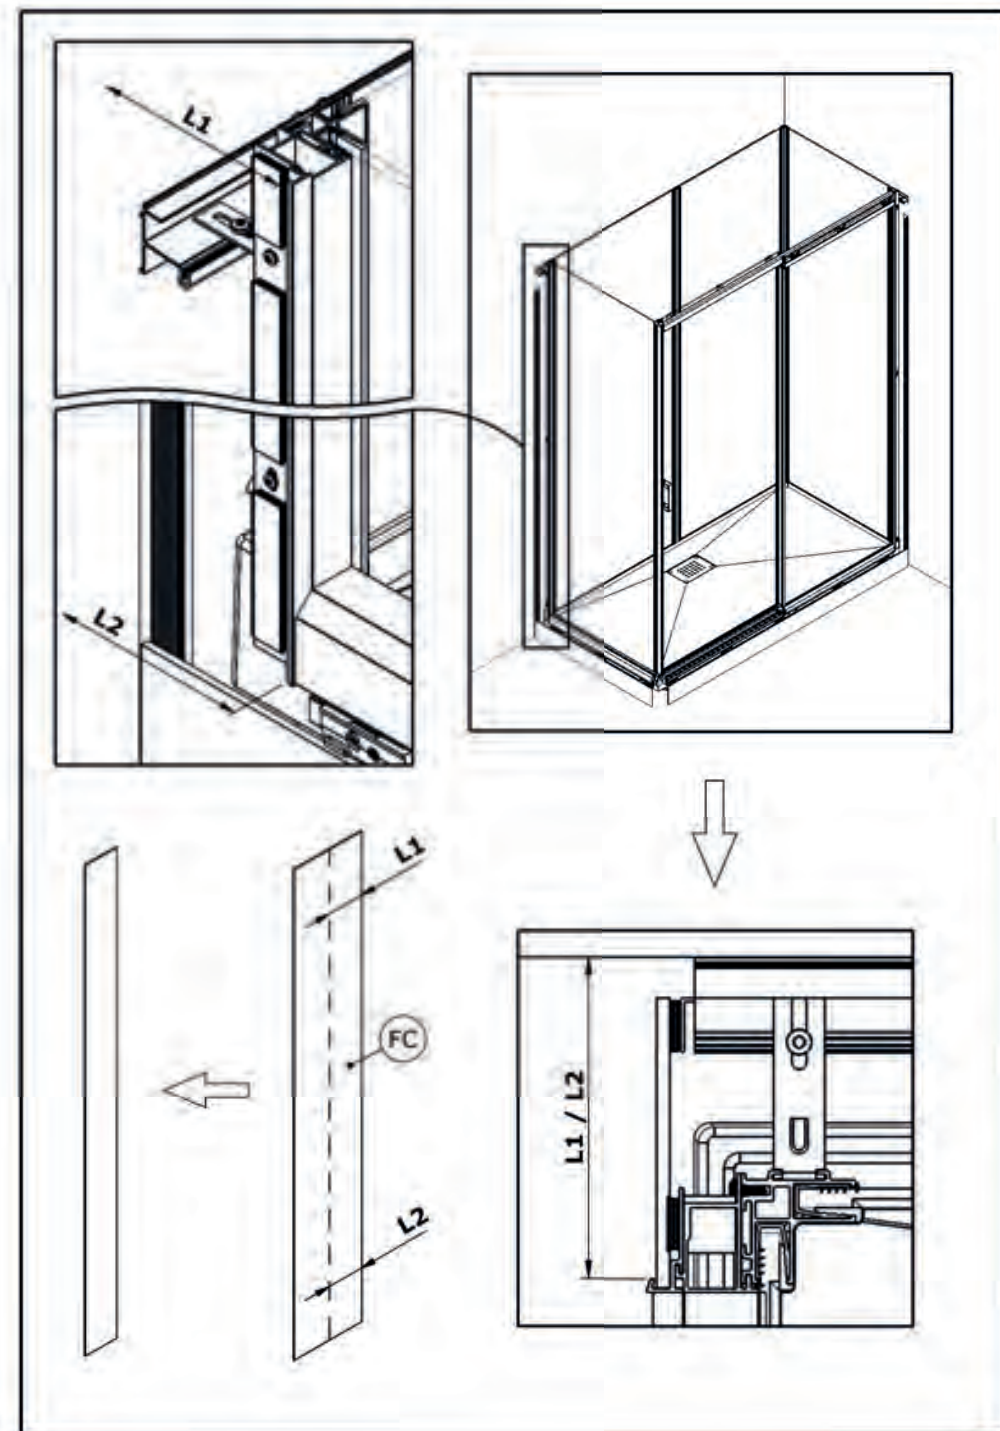
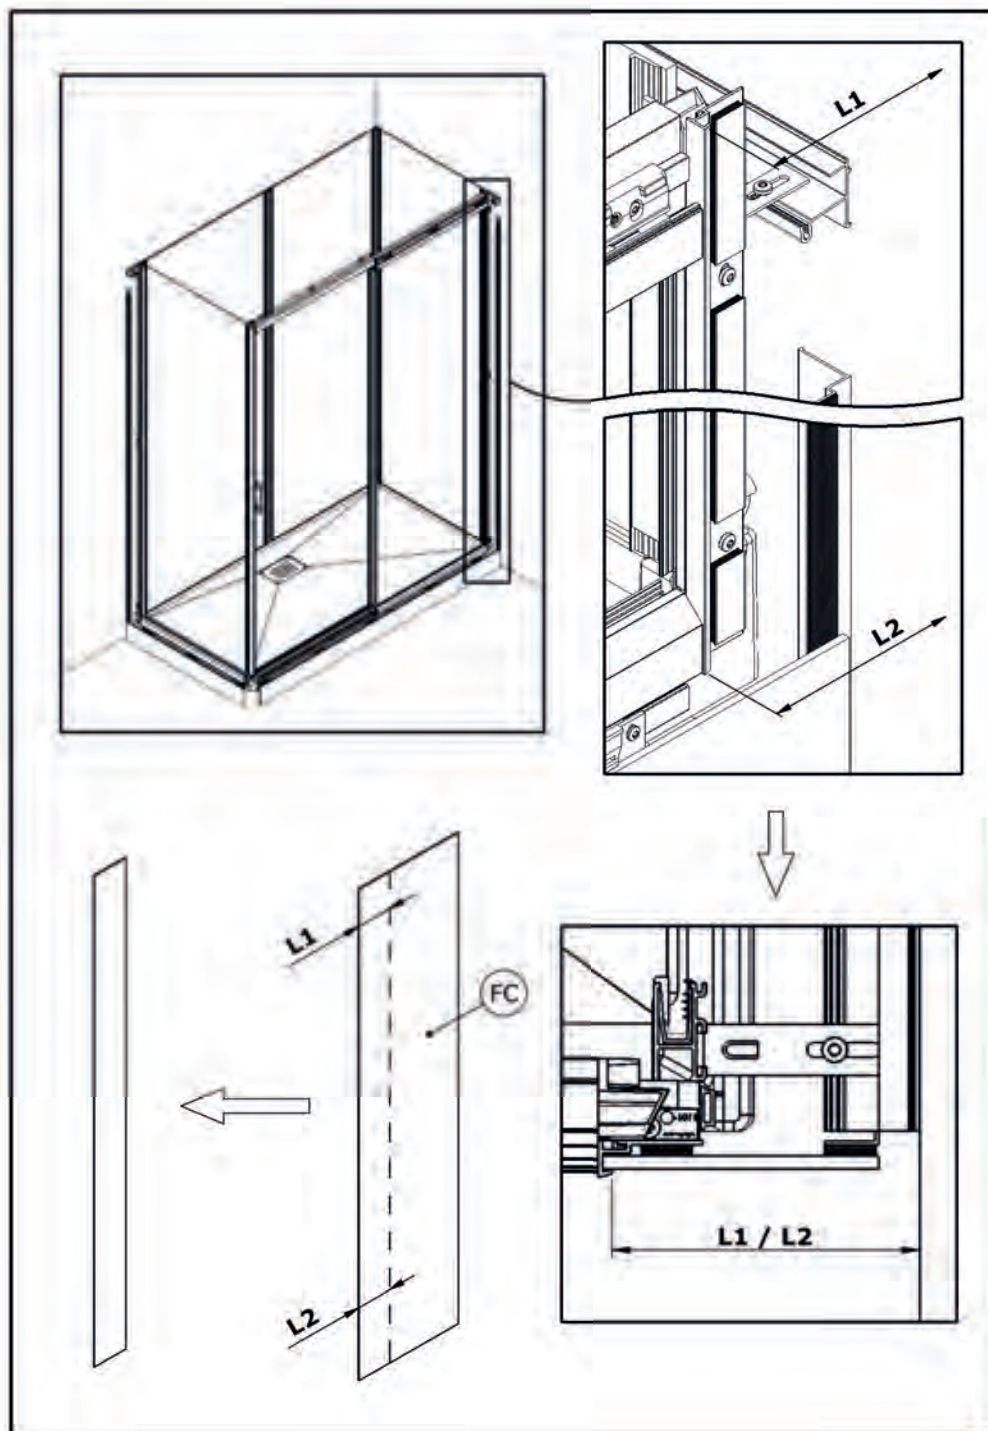


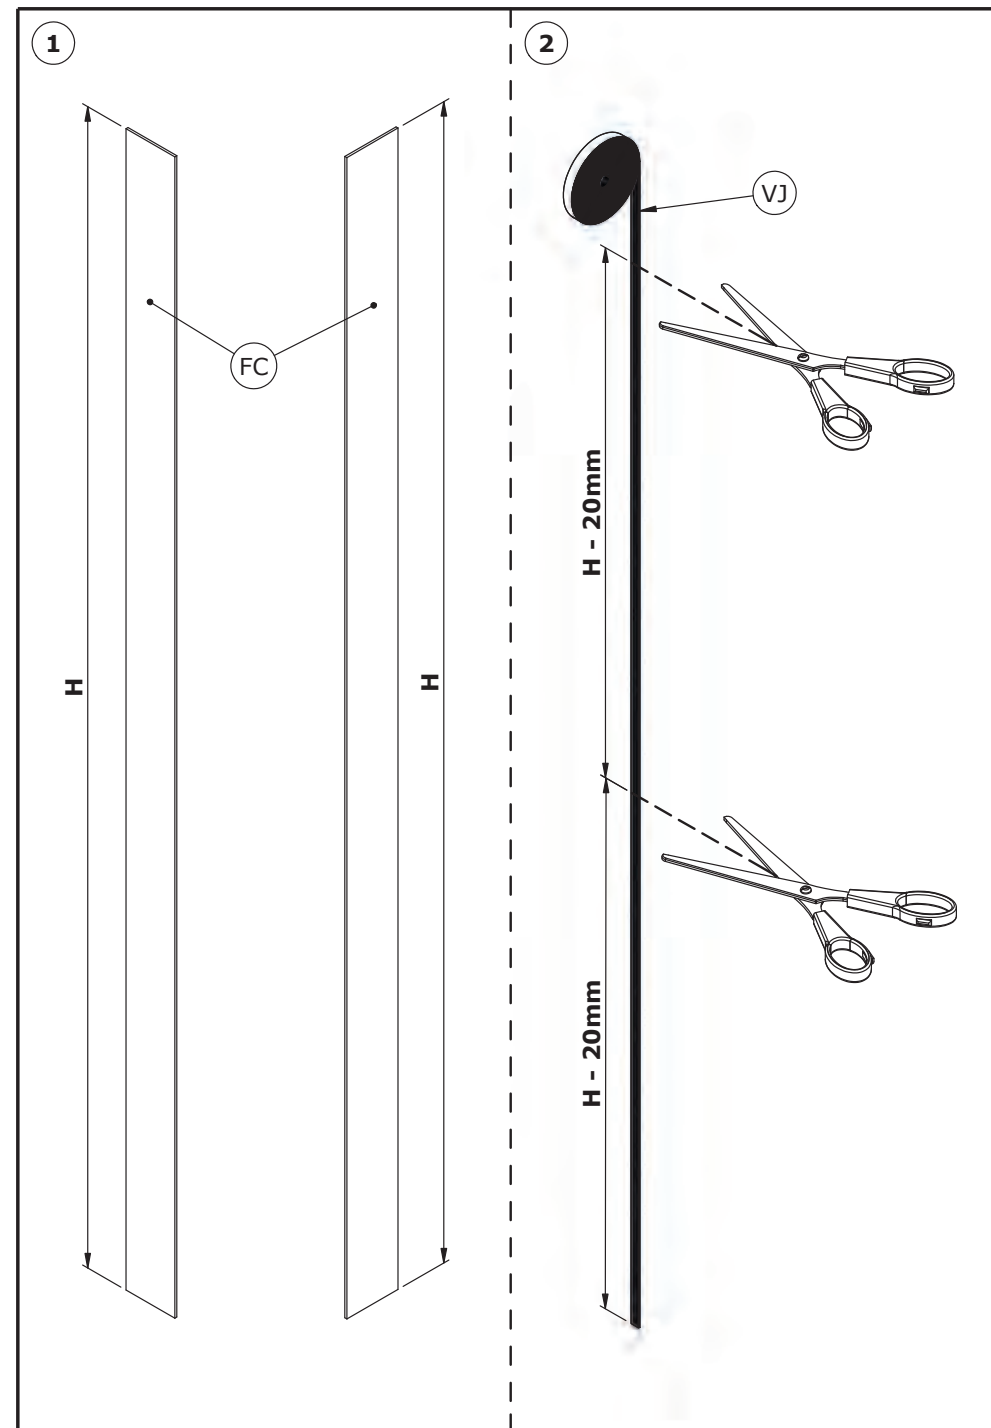
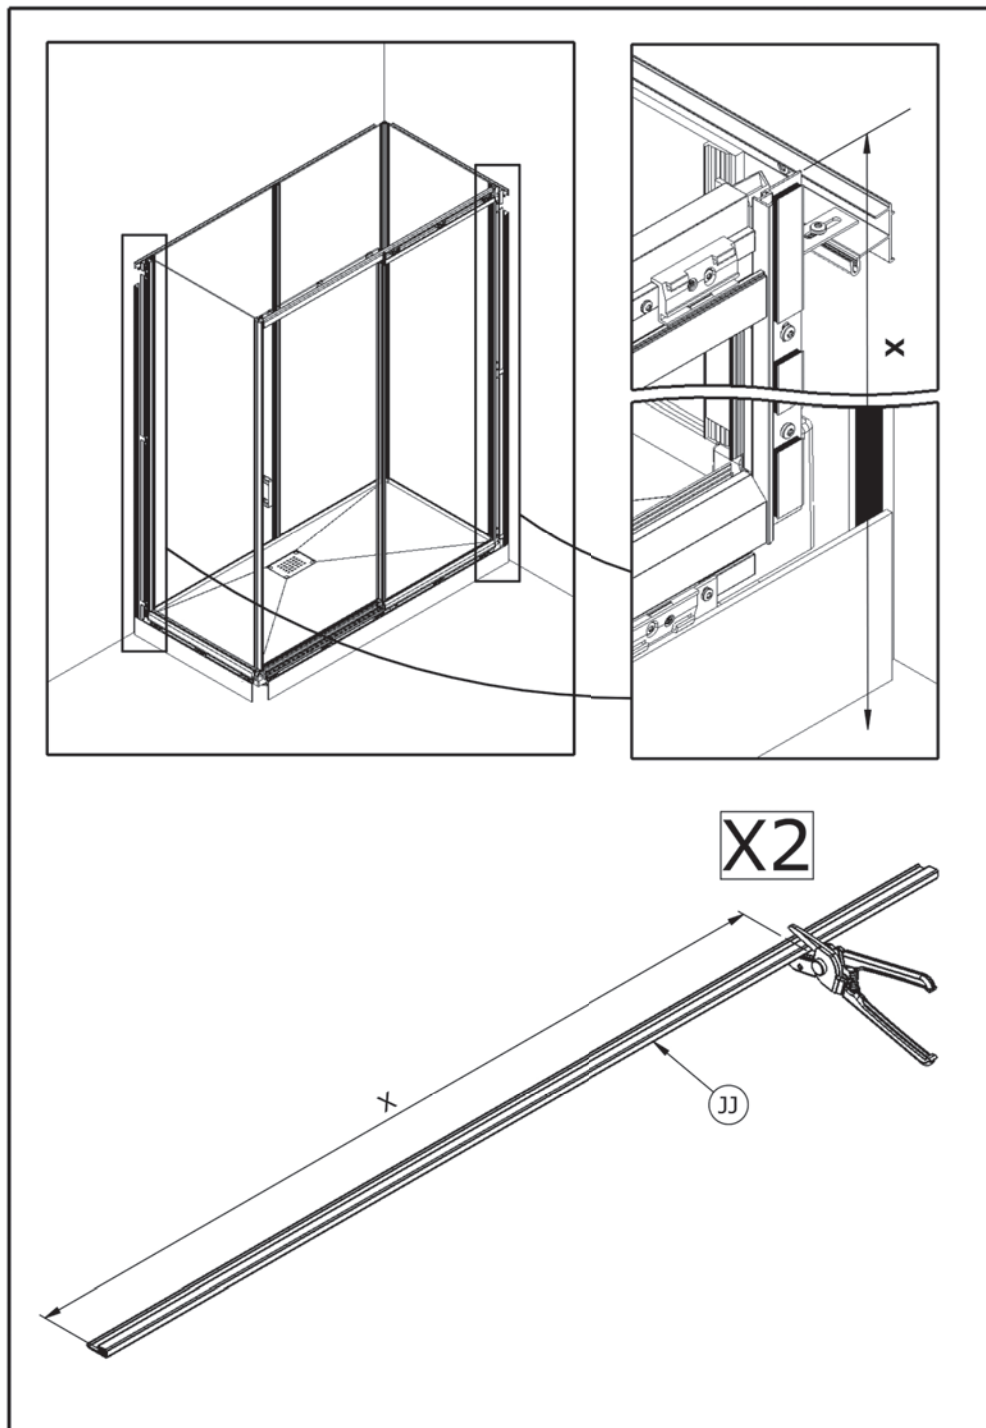




Remove adhesive






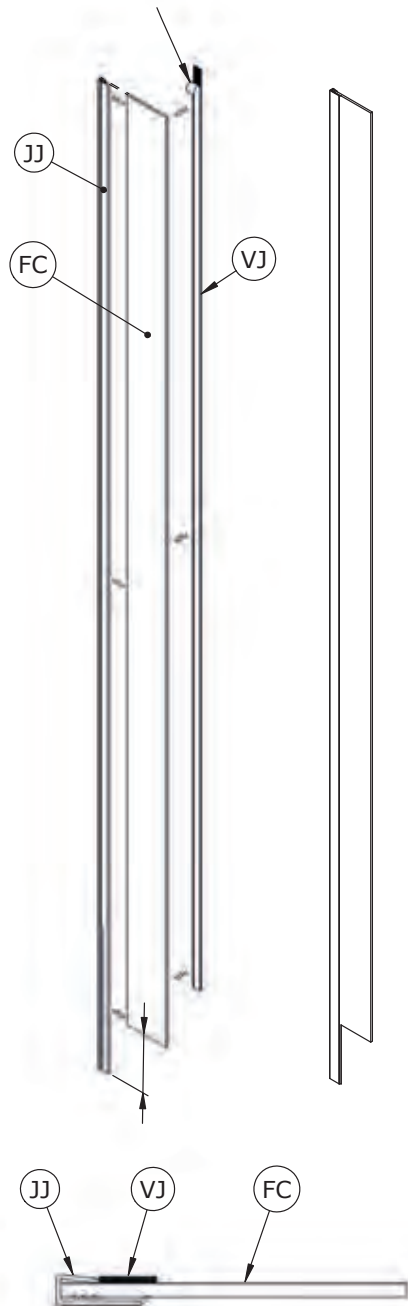








Remove adhesive

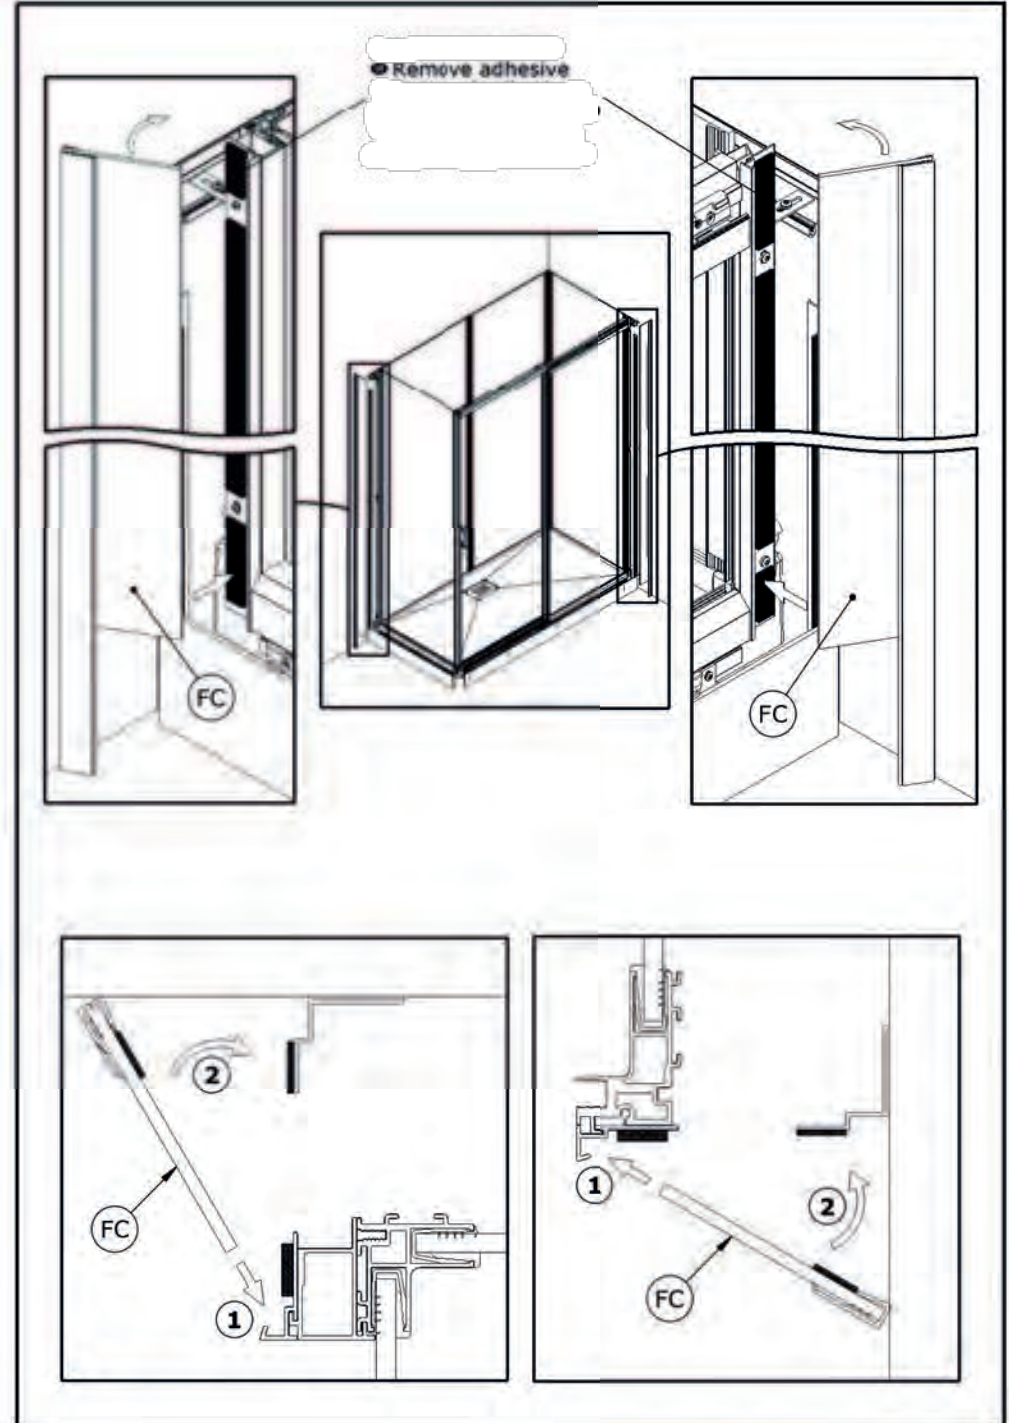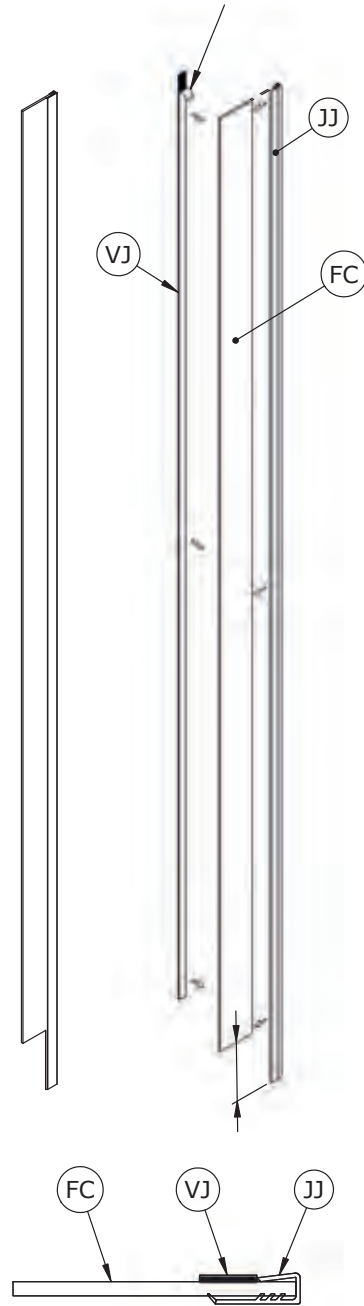





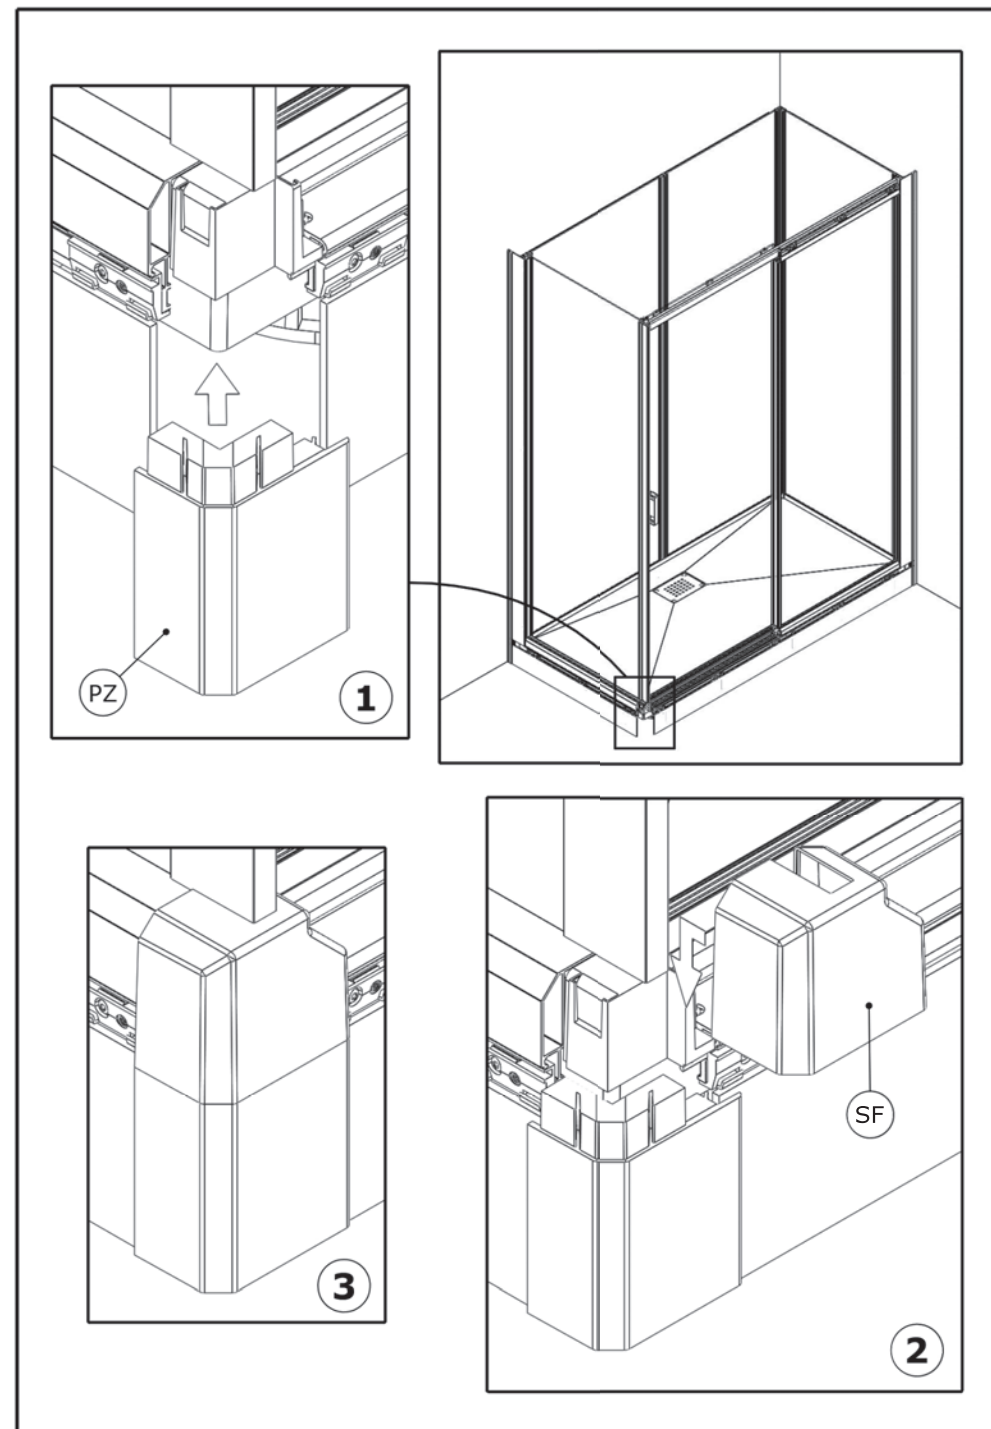
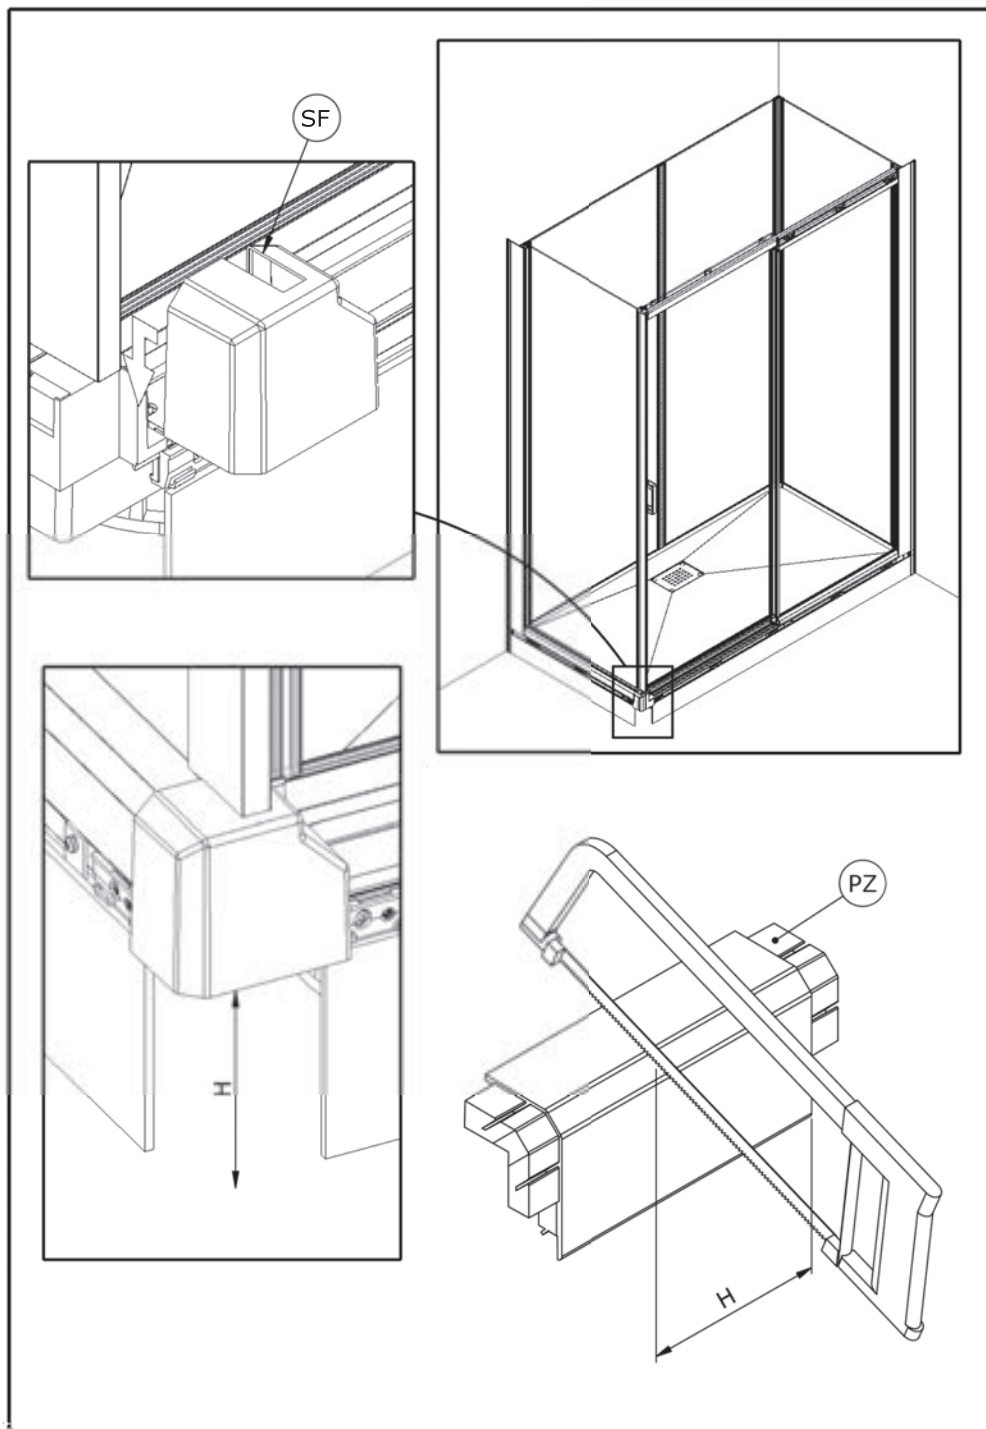



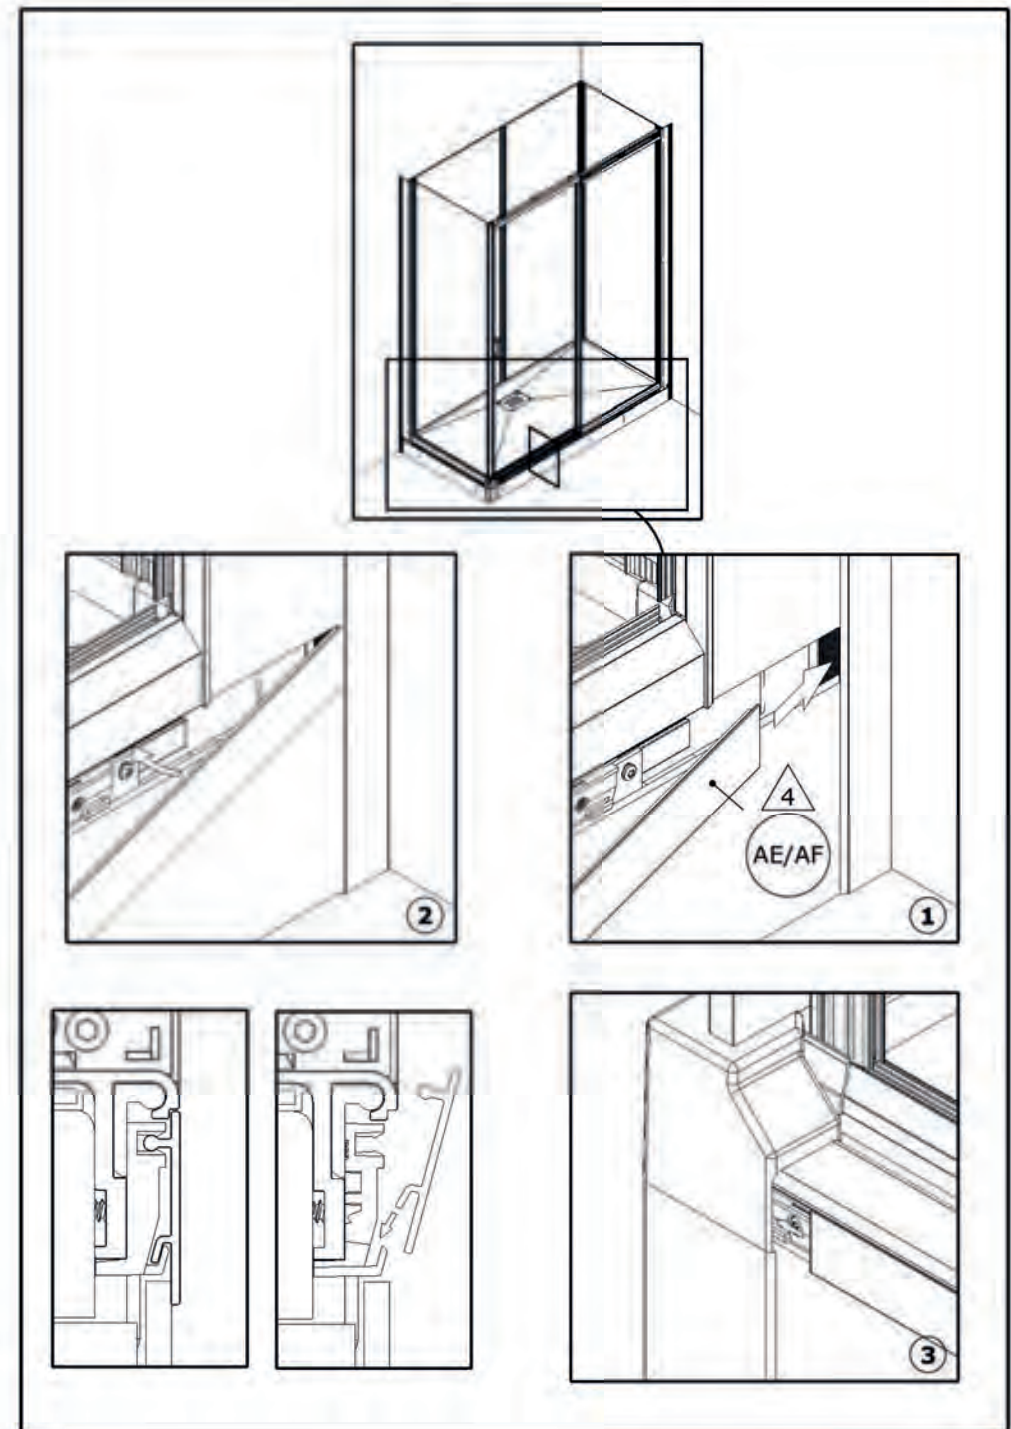
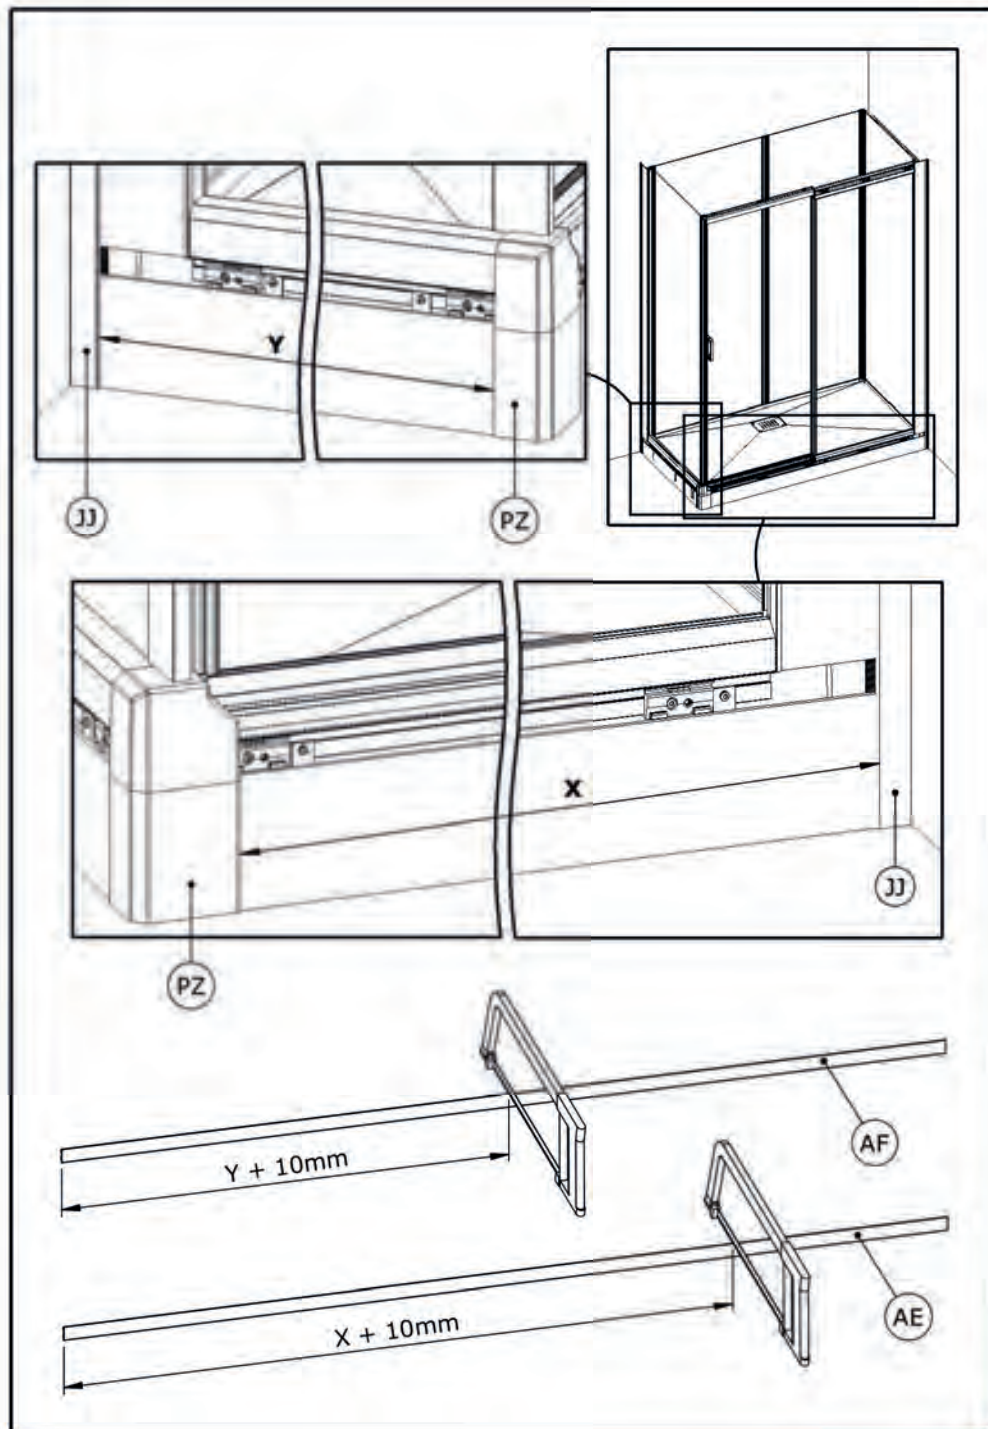


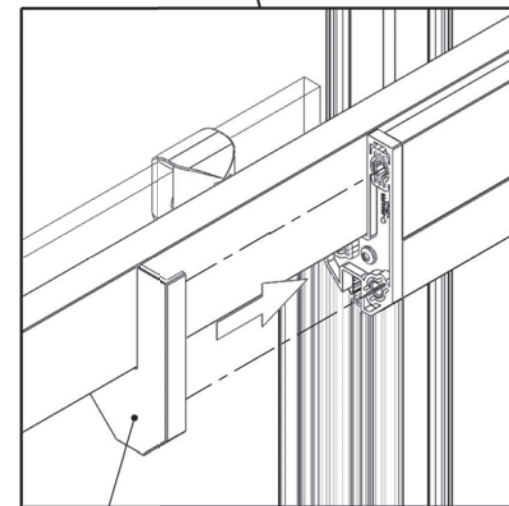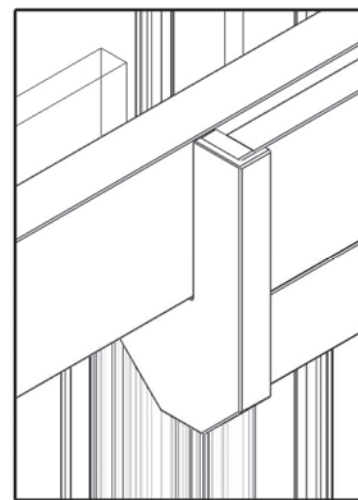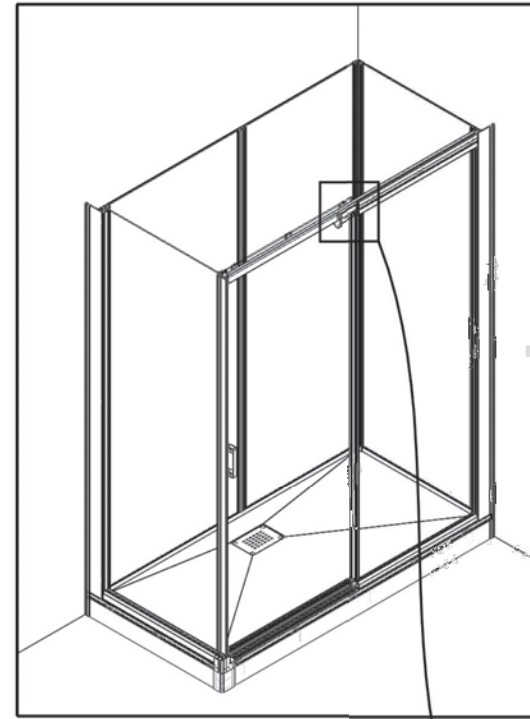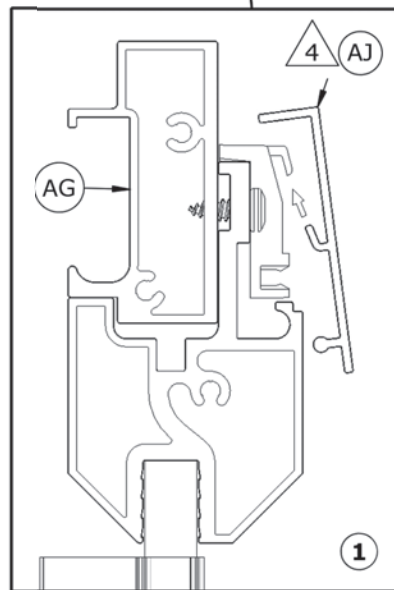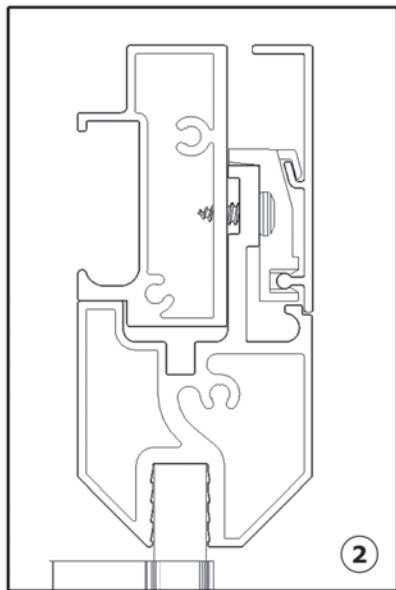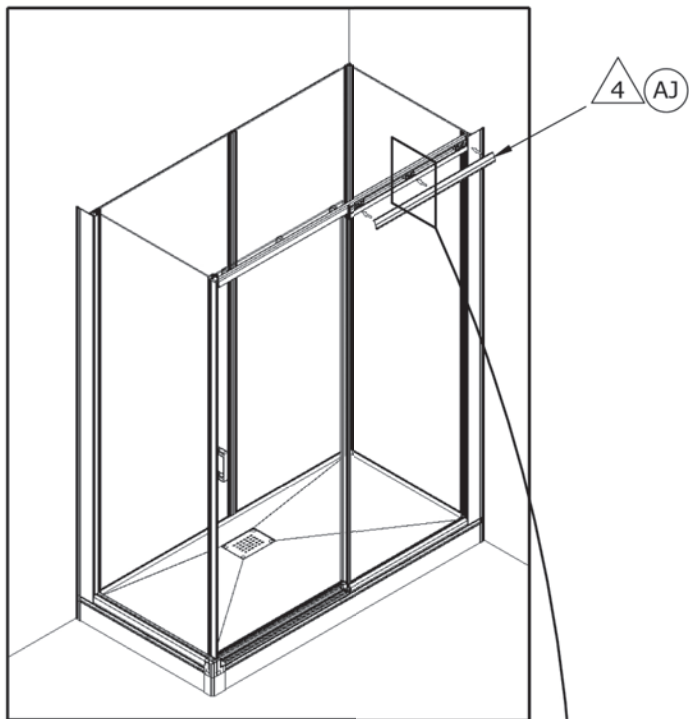

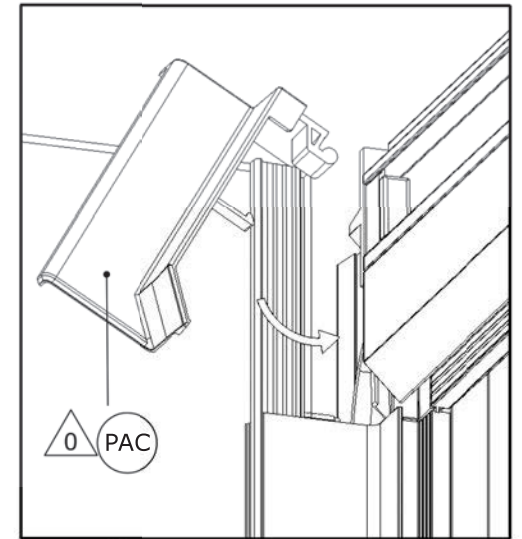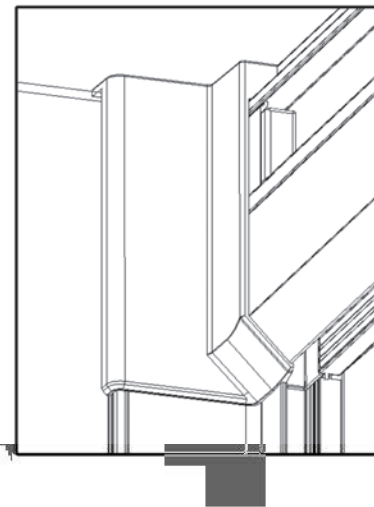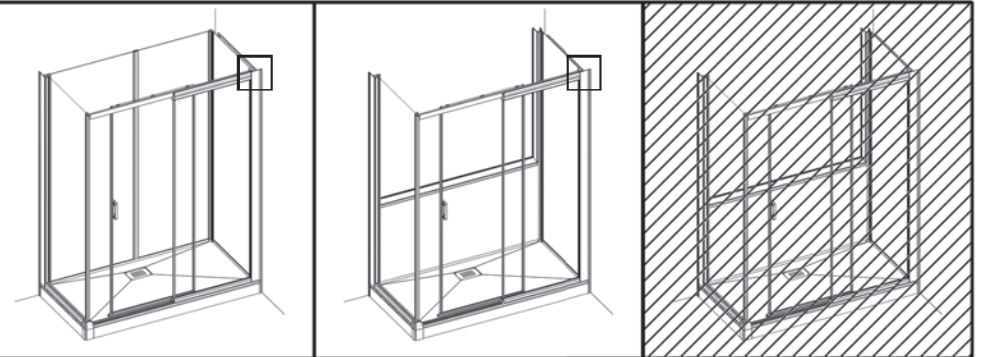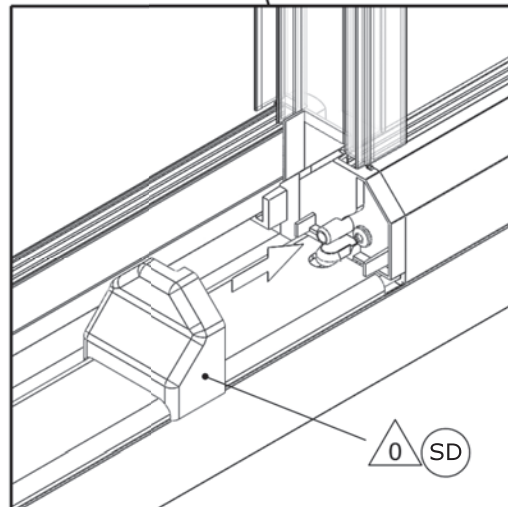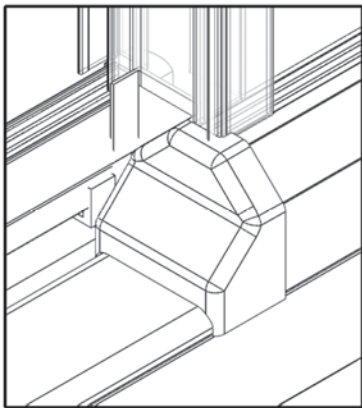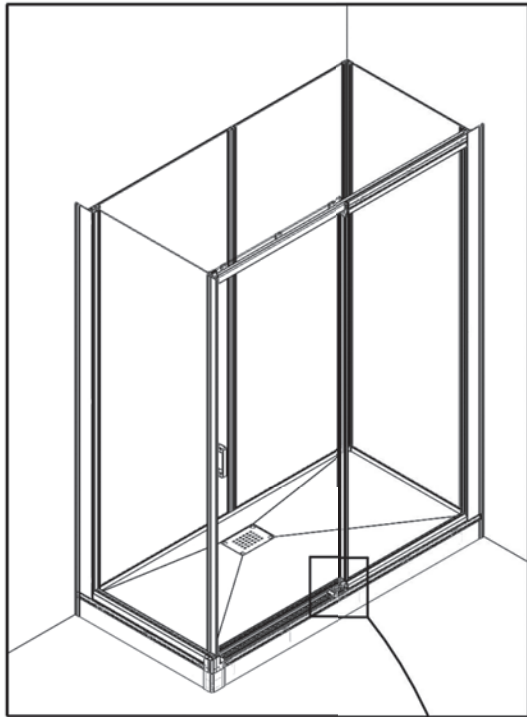

Inside shower

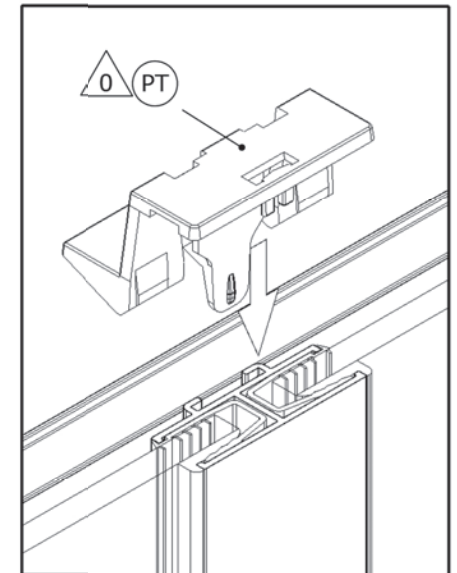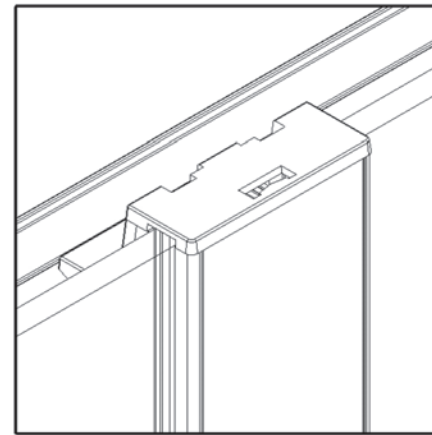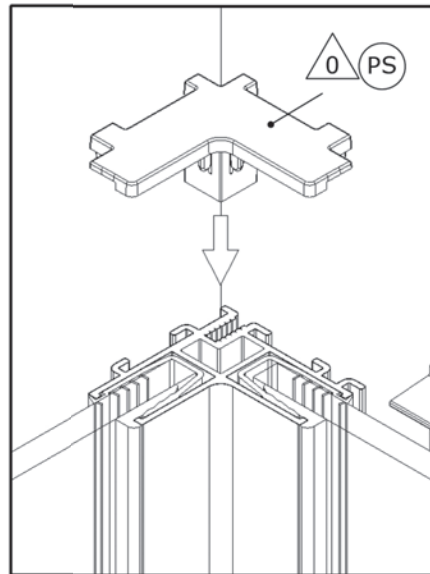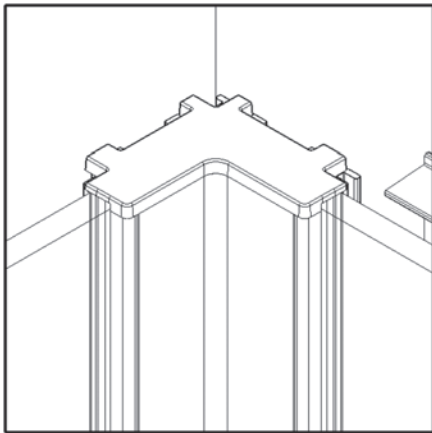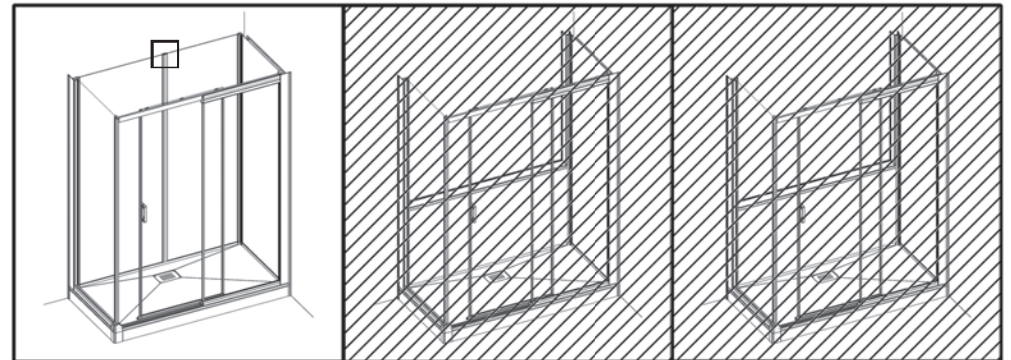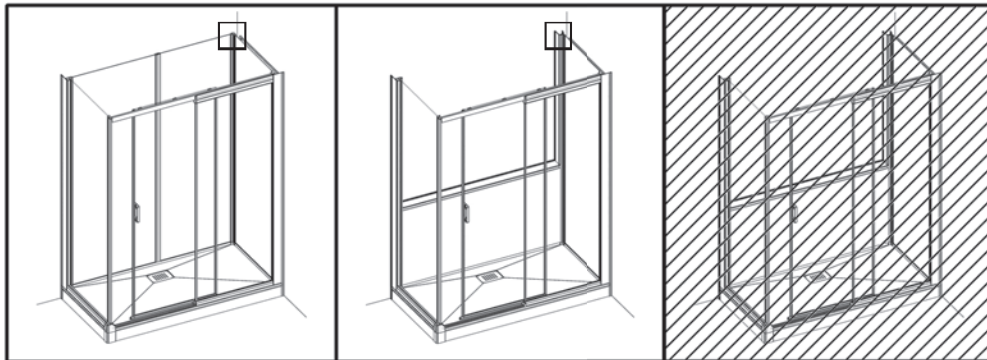

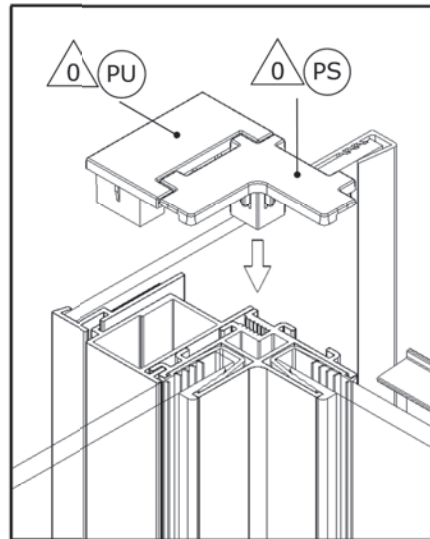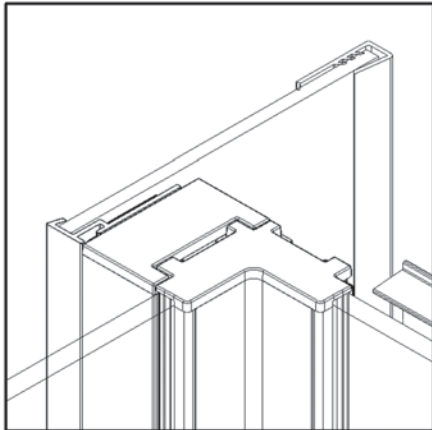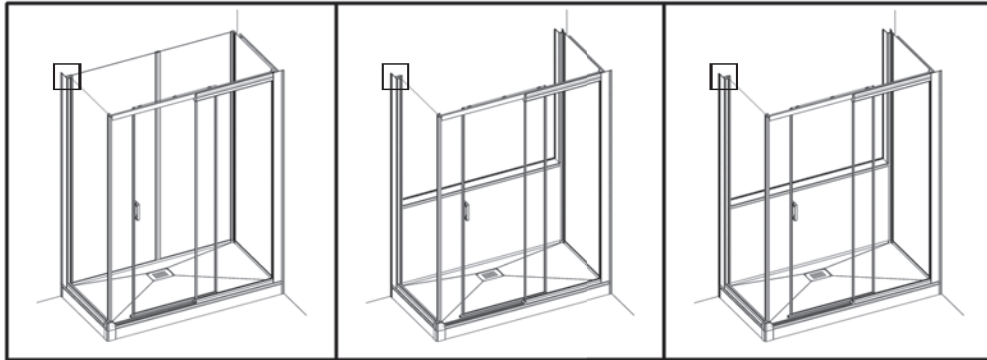

DES1305AD-C