



Kinedo

DES1397-C

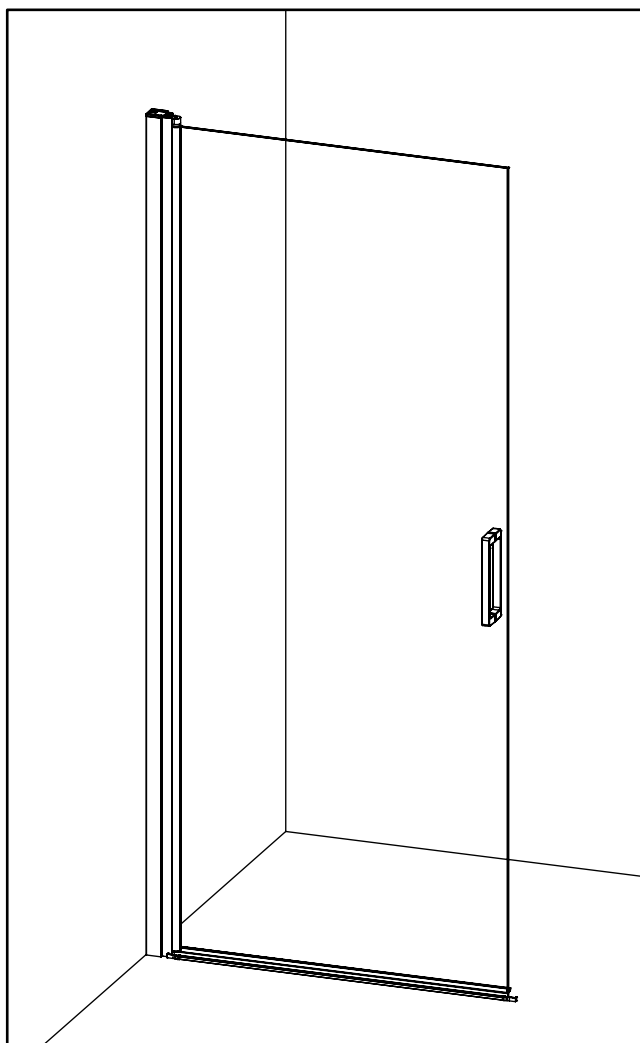


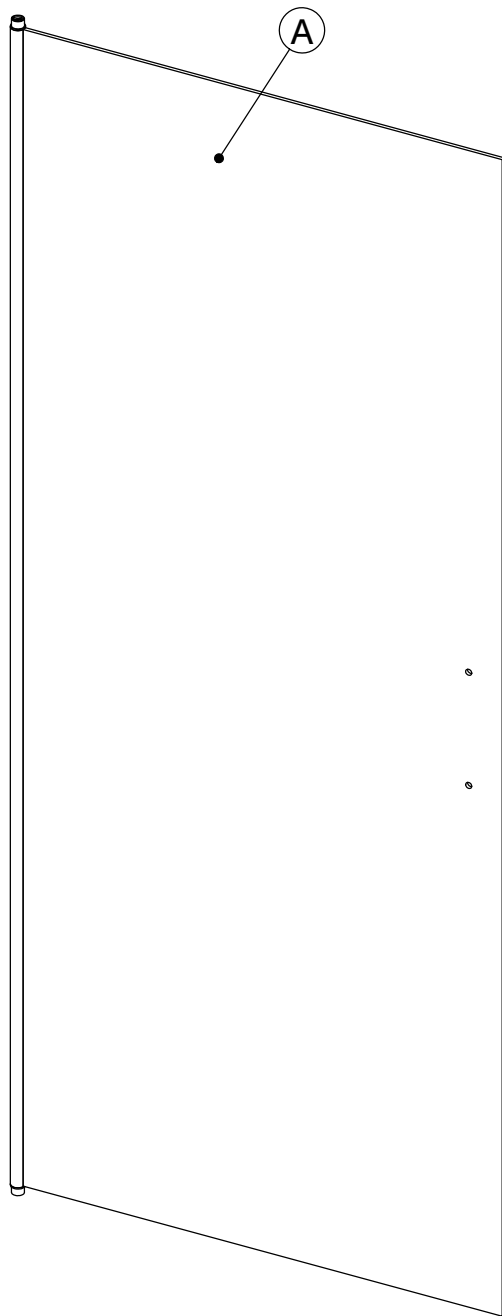

B <

The quantities given are what are required for the installation. There may be some surplus in the package provide.



Tools required

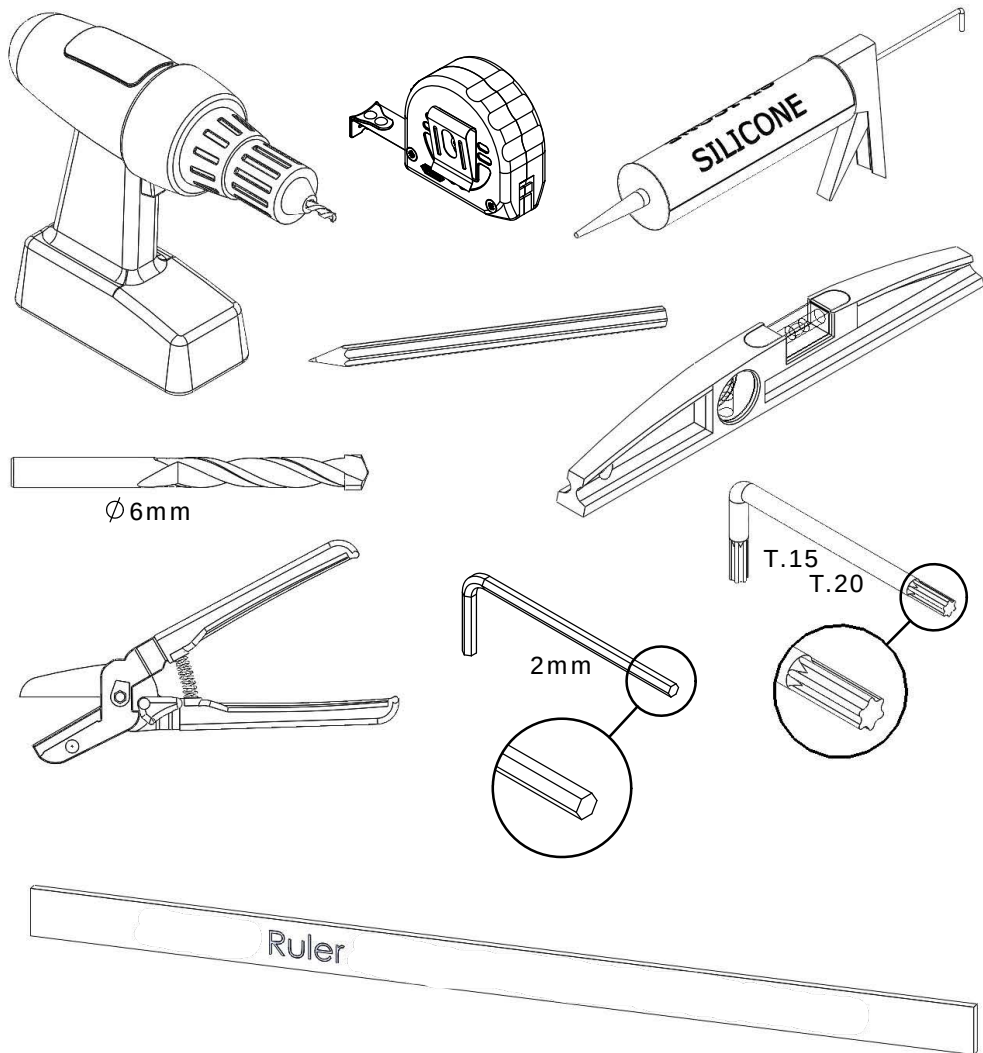



REVERSIBILITY

LEFT HAND


GB RIGHT HAND

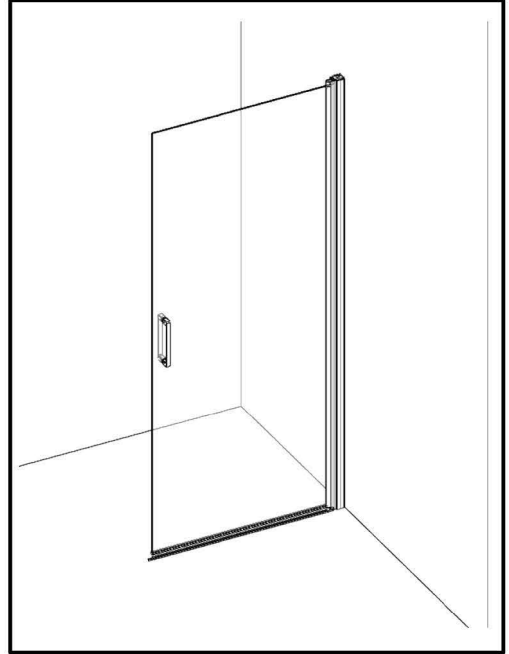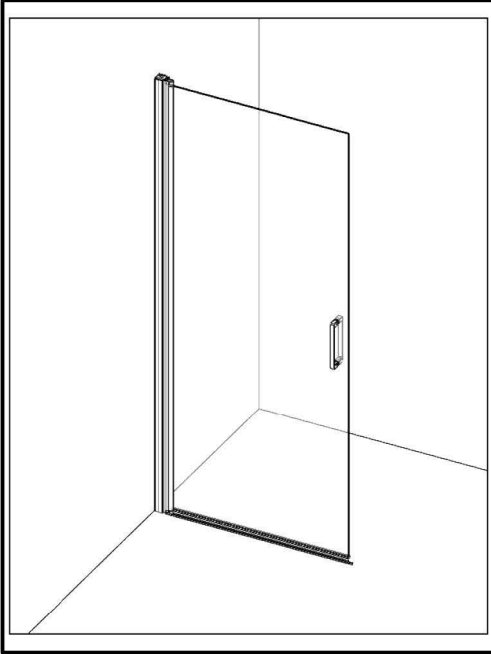






GB This cubicle can be installed either left or right hand. These installation instructions show a left hand installation.

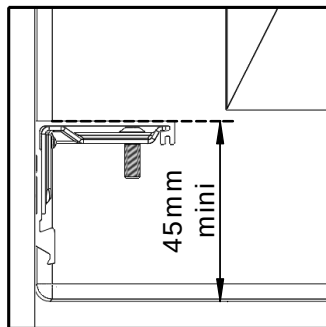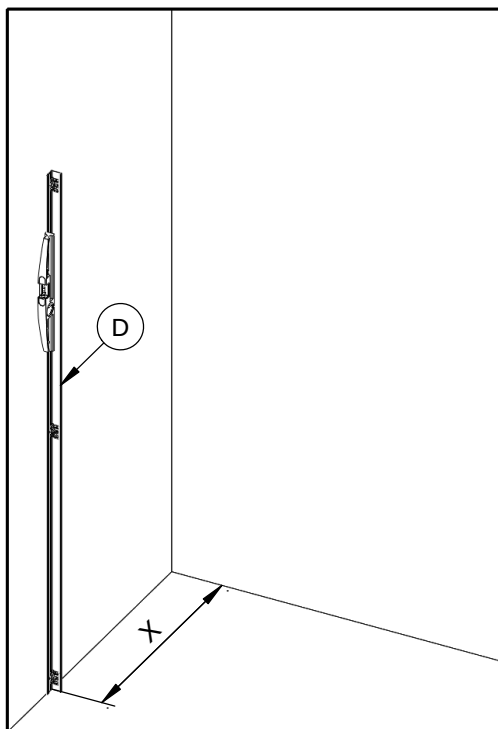


If shower tray

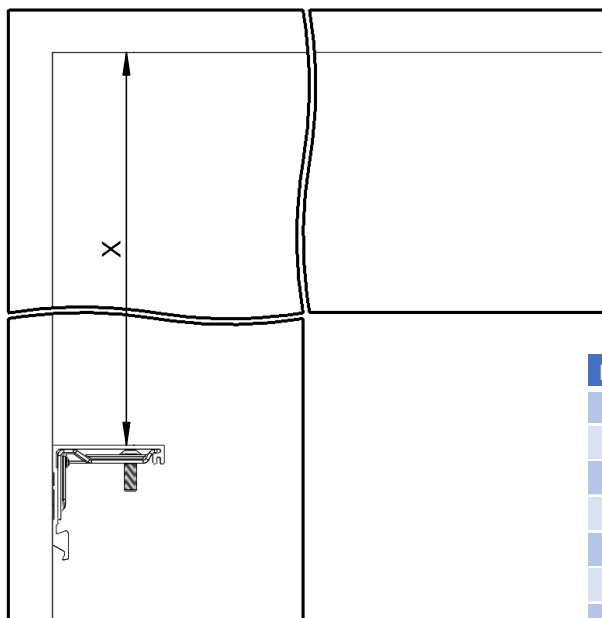

DIMENSIONS	X
70	630 - 645
75	680 - 685
80	730 - 745
85	780 - 785
90	830 - 845
95	880 - 885
100	930 - 945

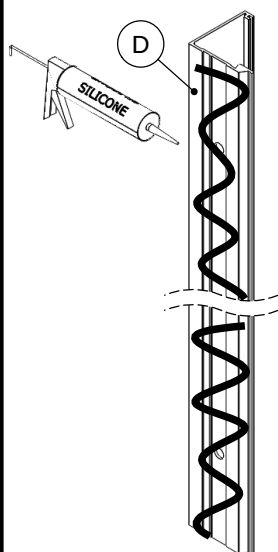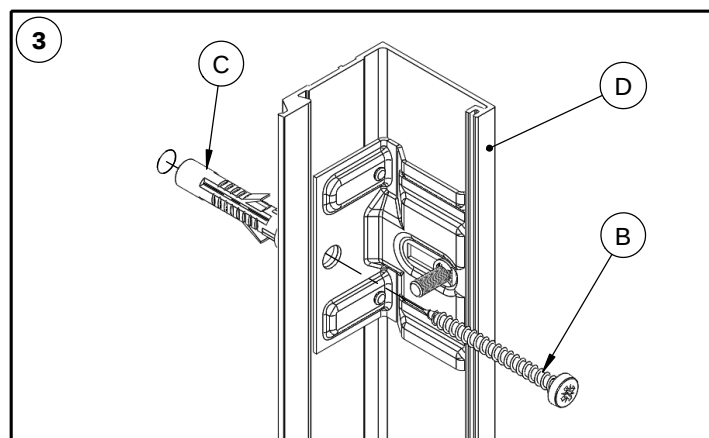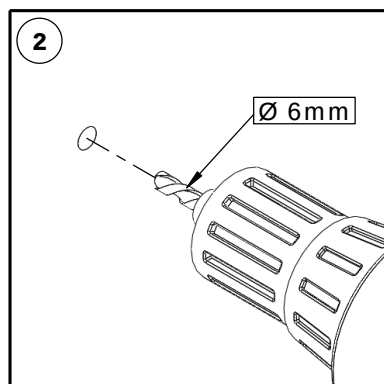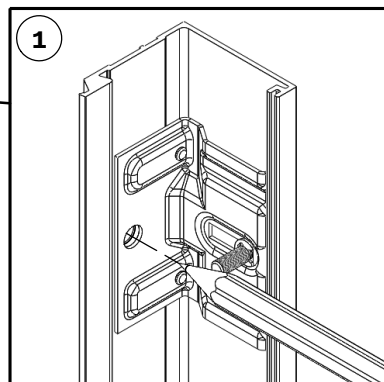
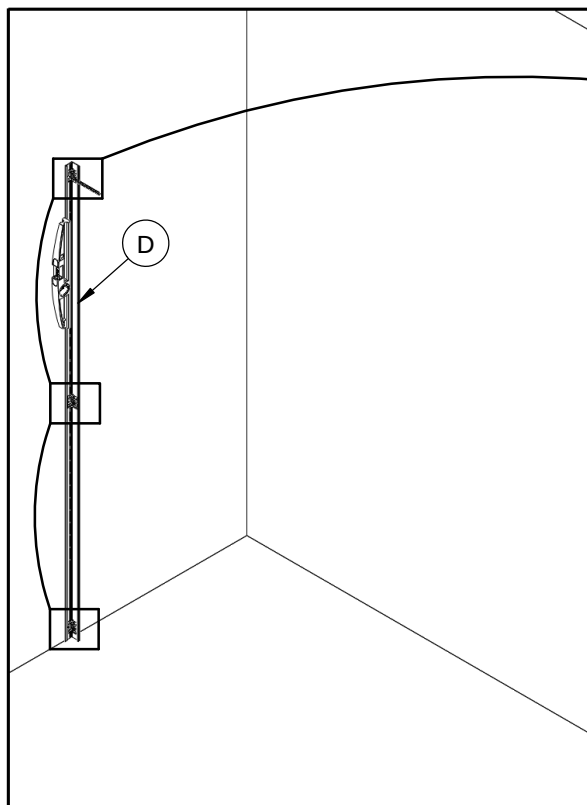



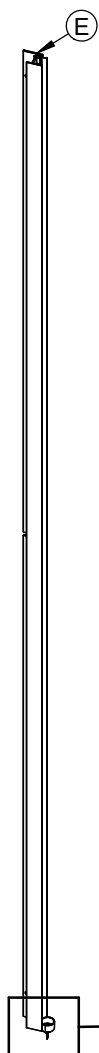


Tighten tightly










Align

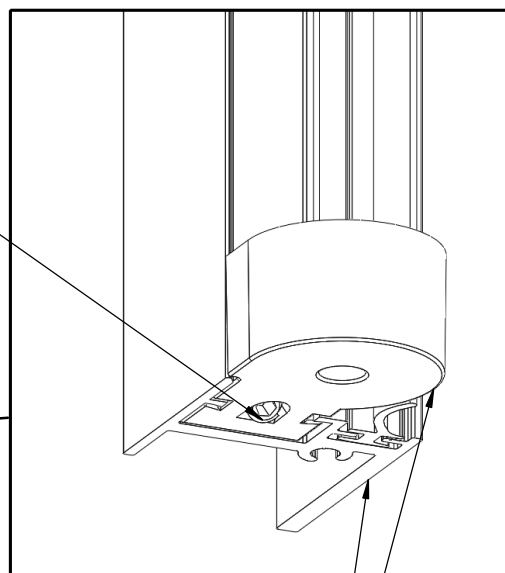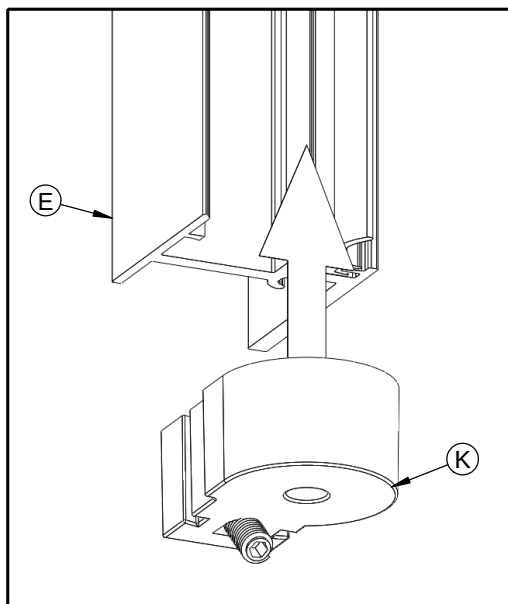

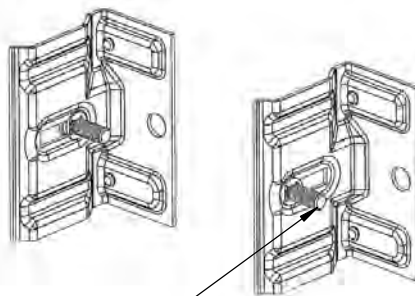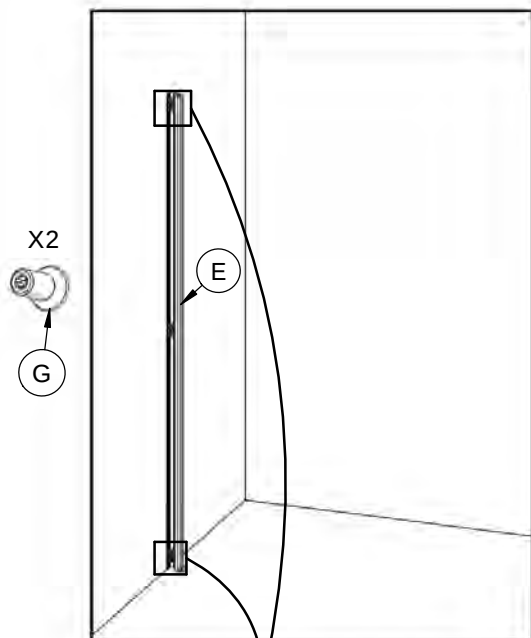



If necessary, loosen,
adjust and retighten

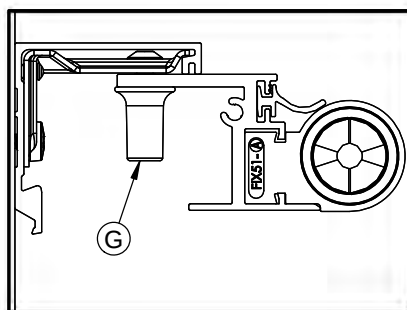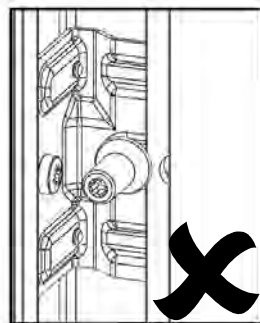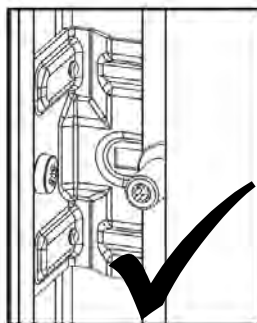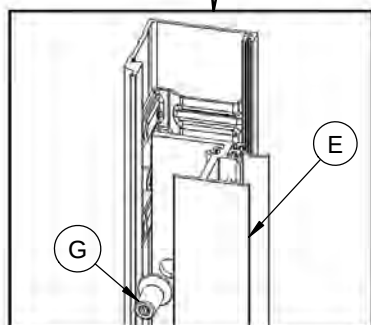

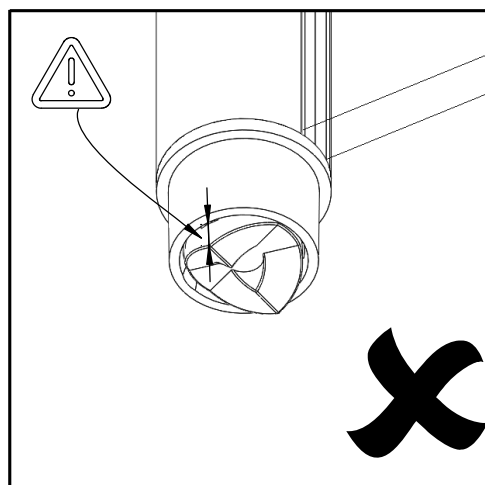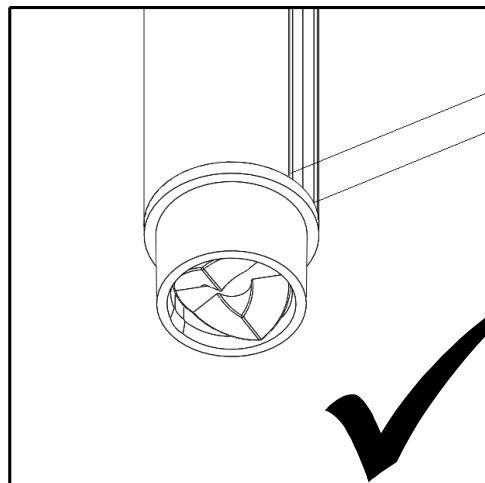
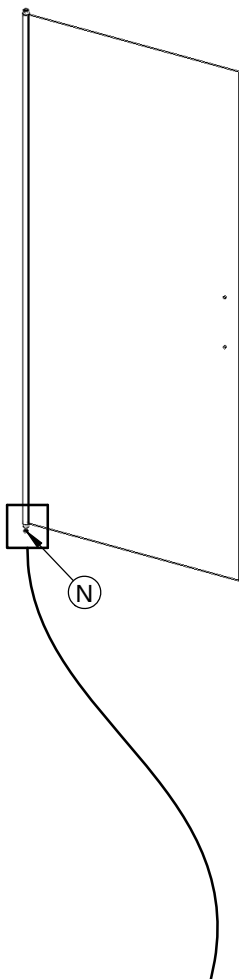


Put the lower part





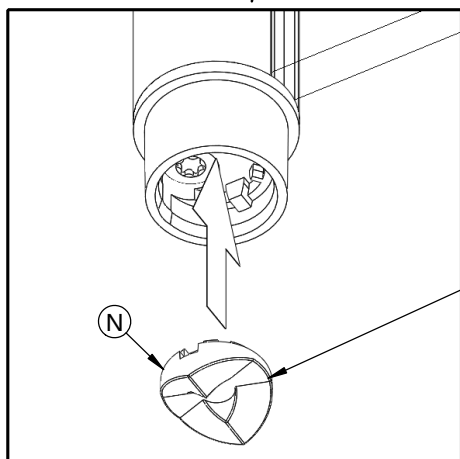




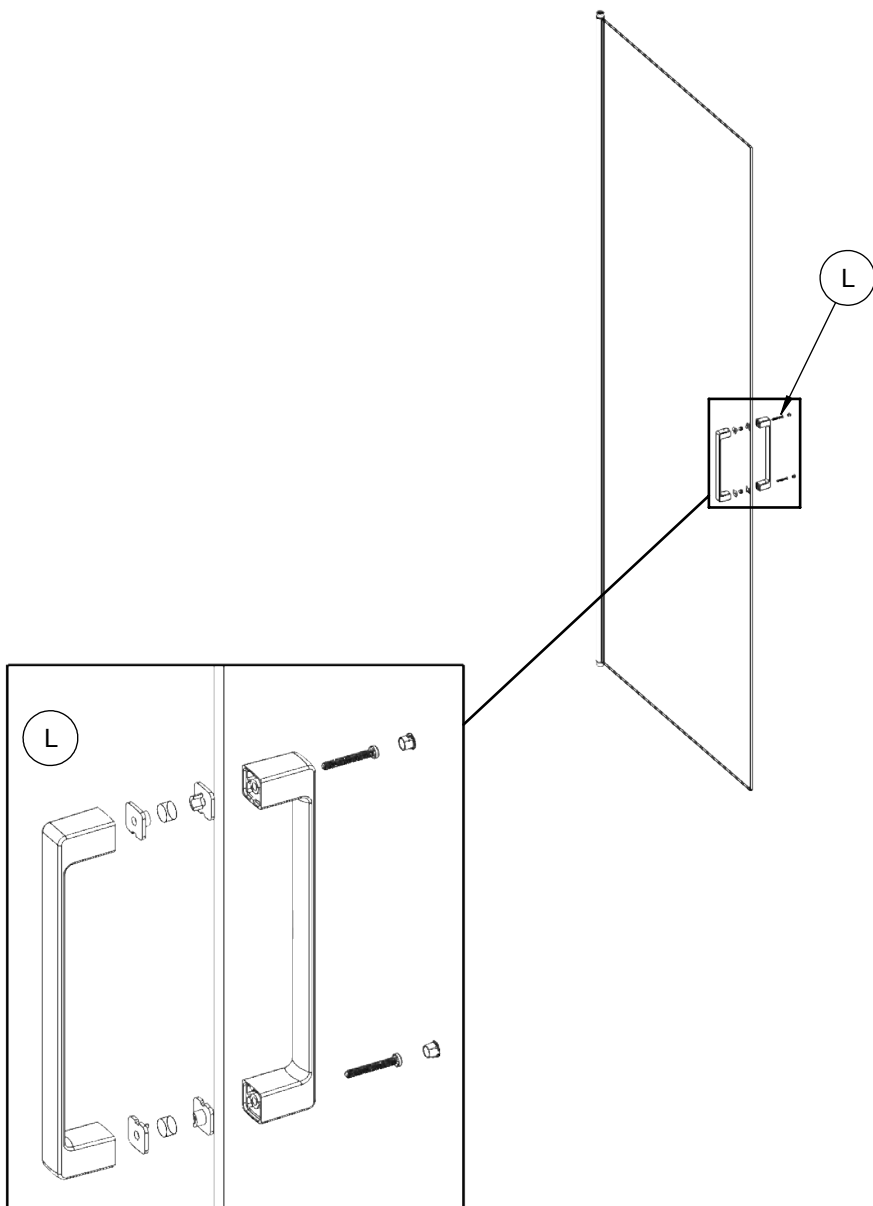


See installation instructions required

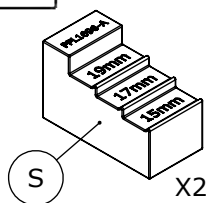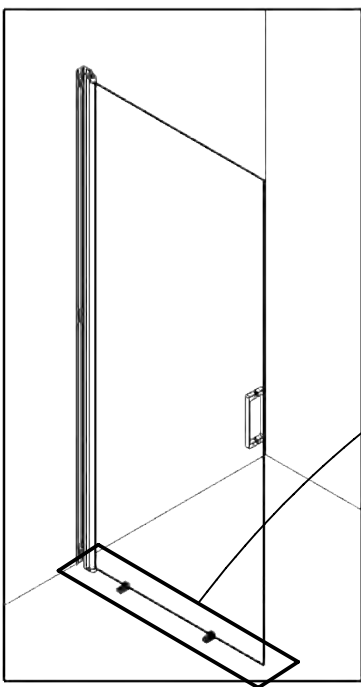





Squeeze tighten

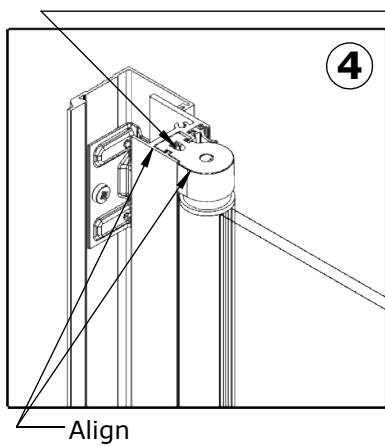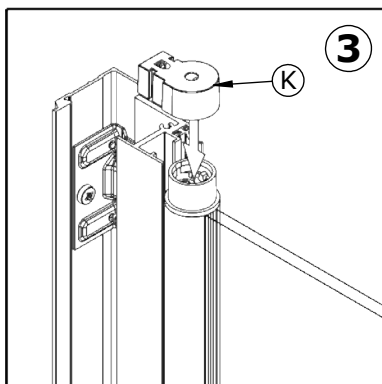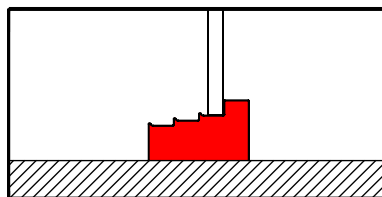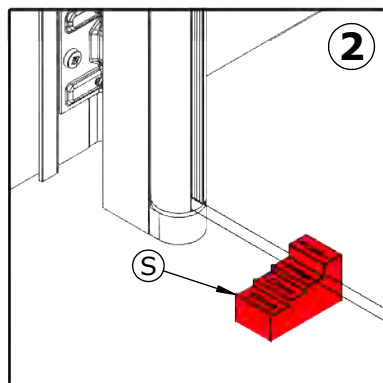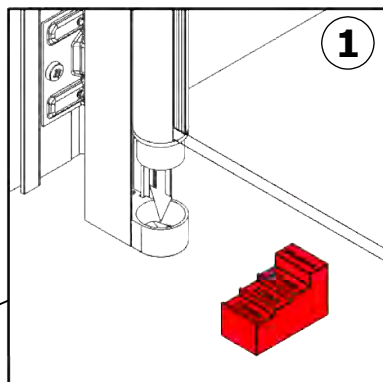

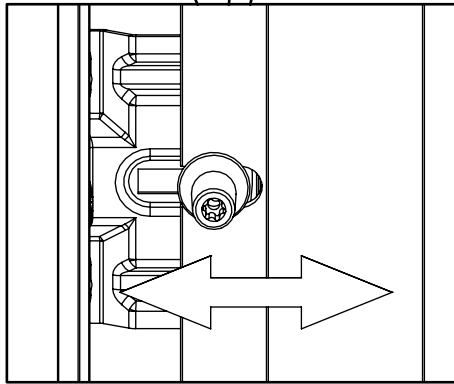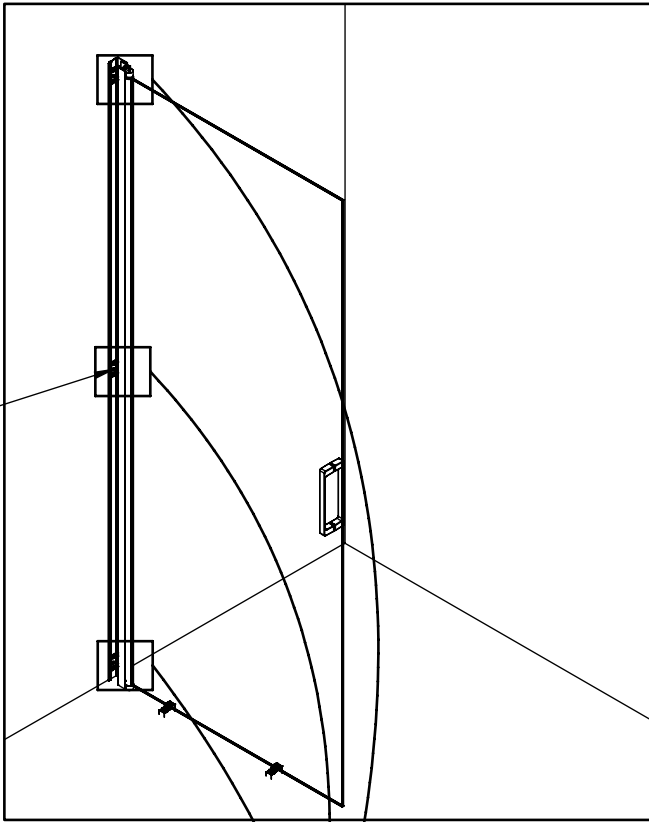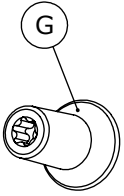







If necessary, loosen, adjust and retighten




Remove

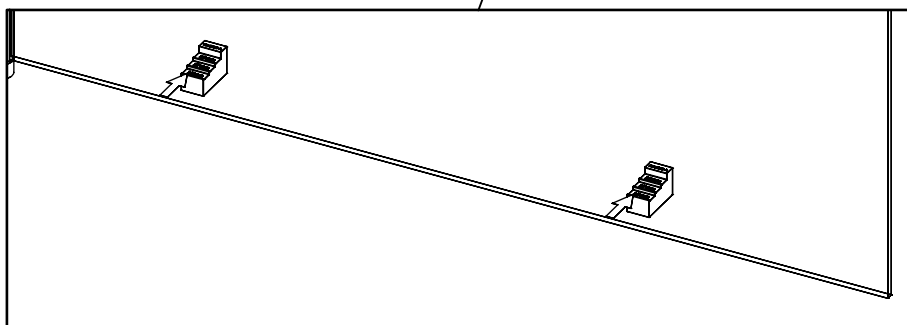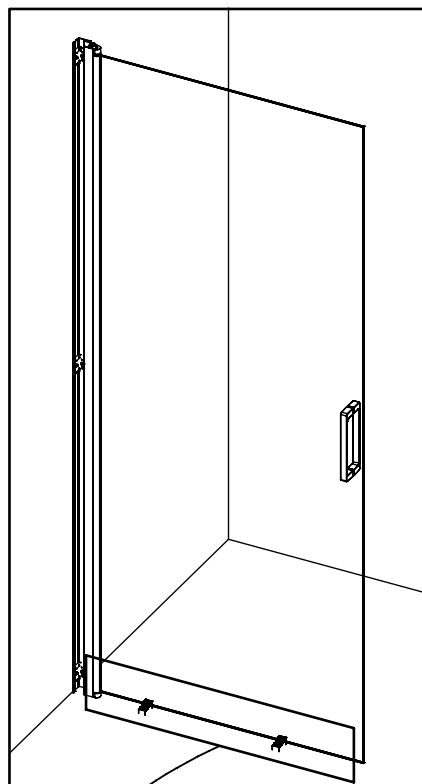
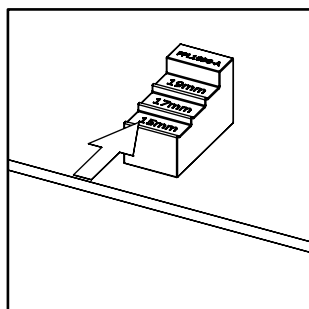
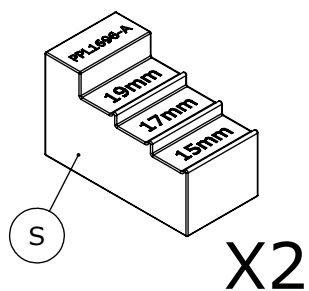











Inside

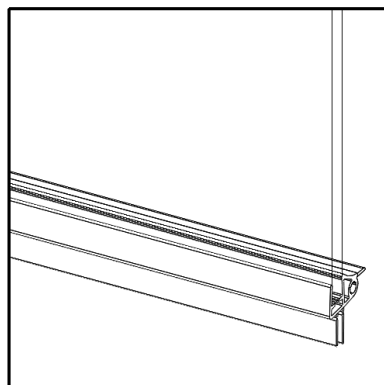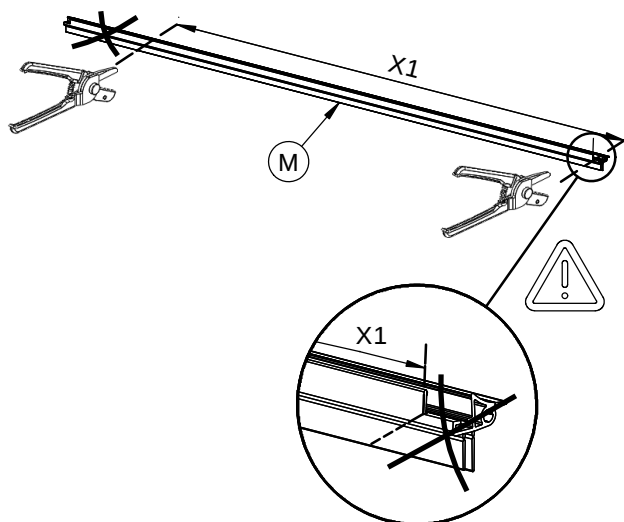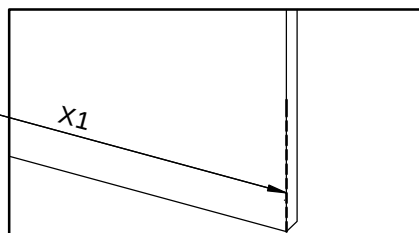
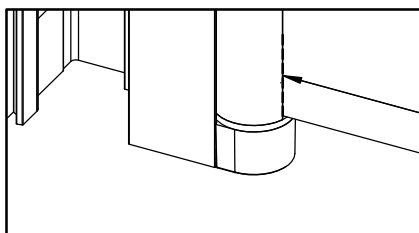
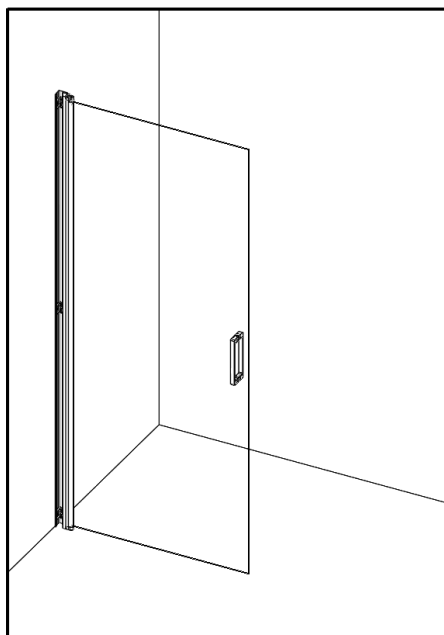
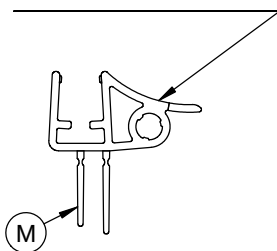


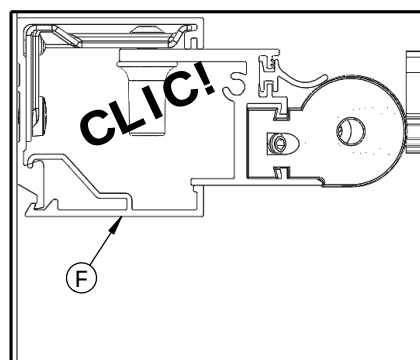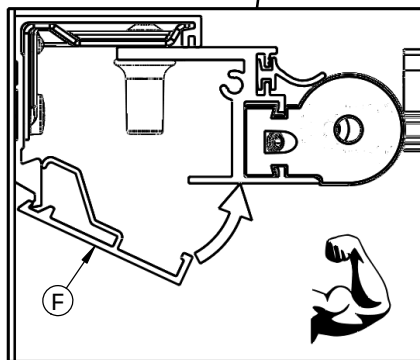
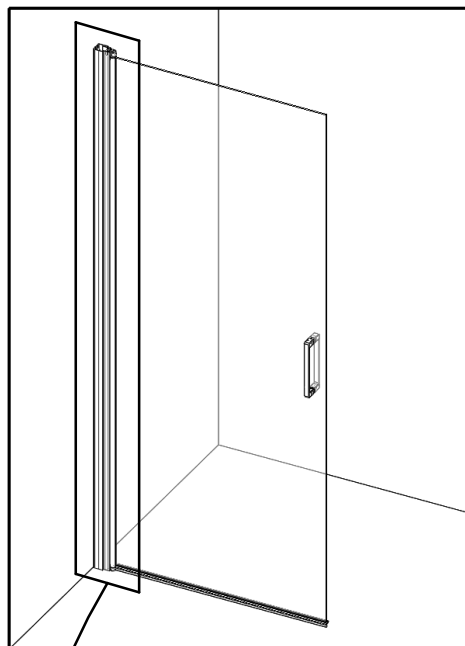


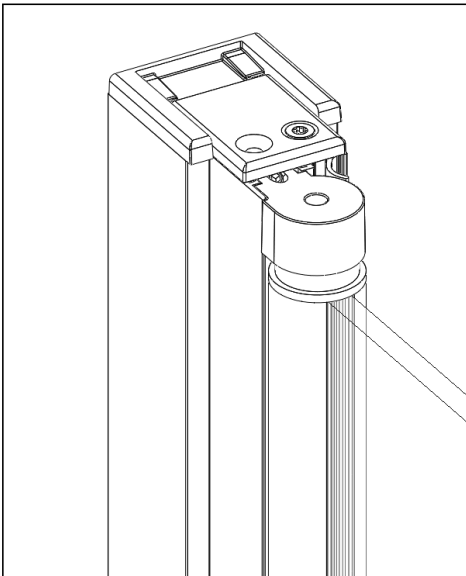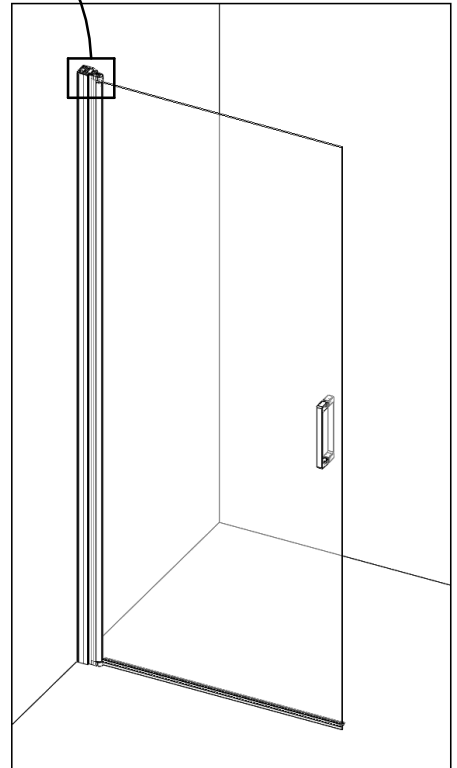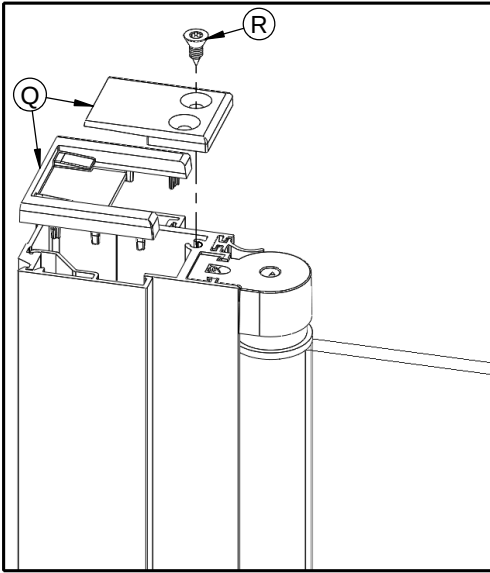

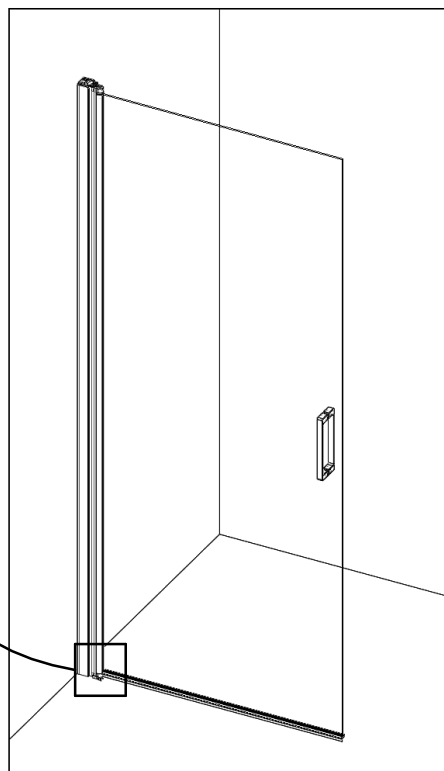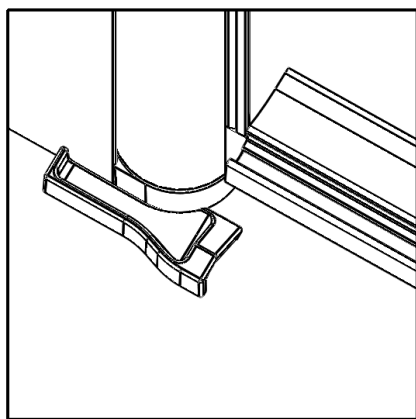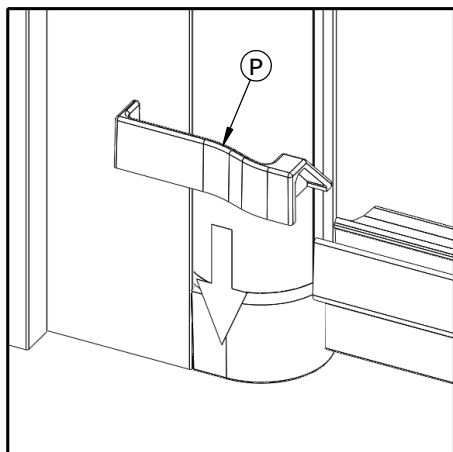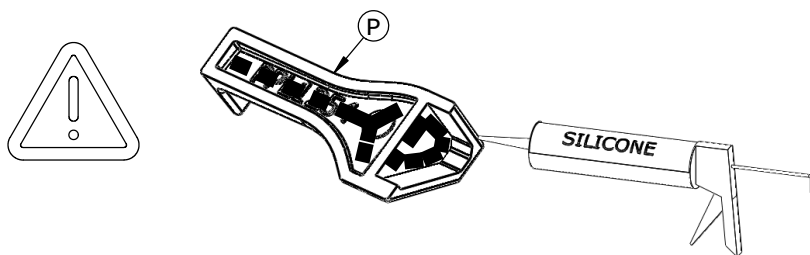

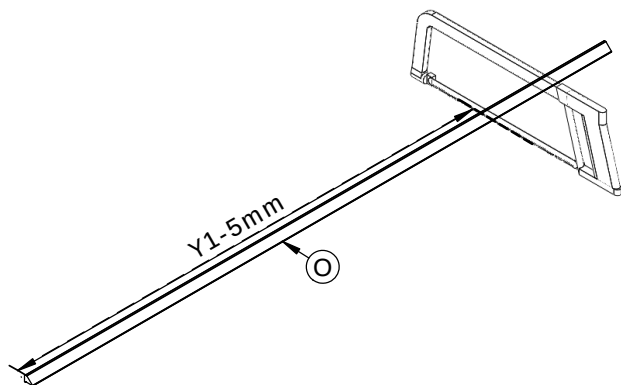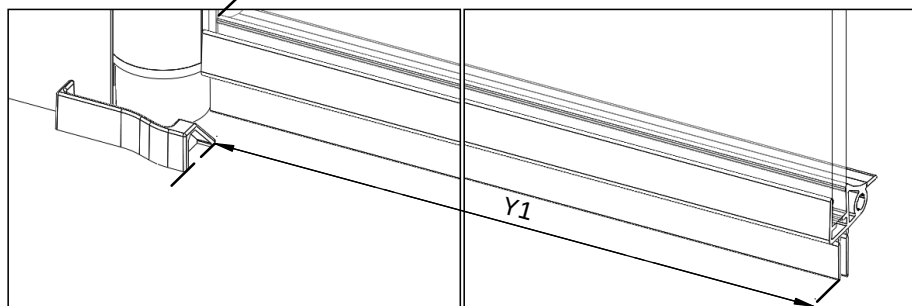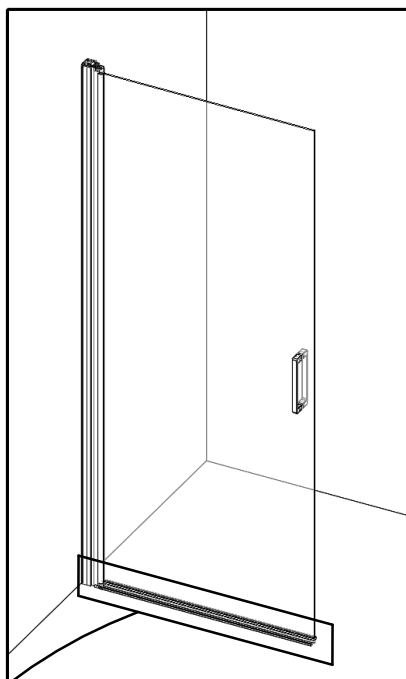

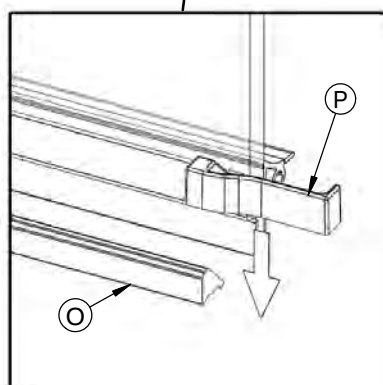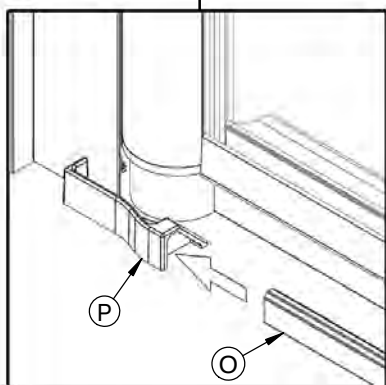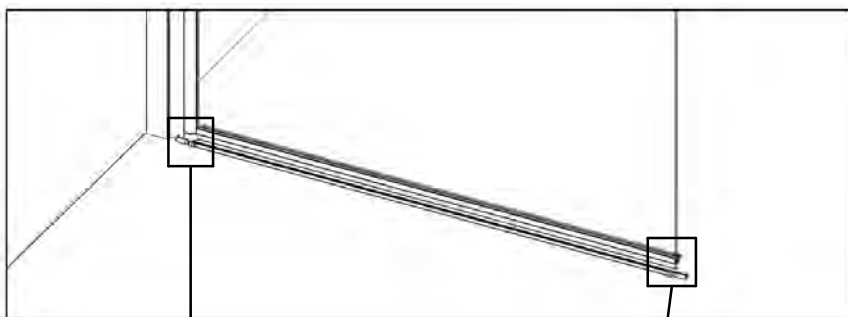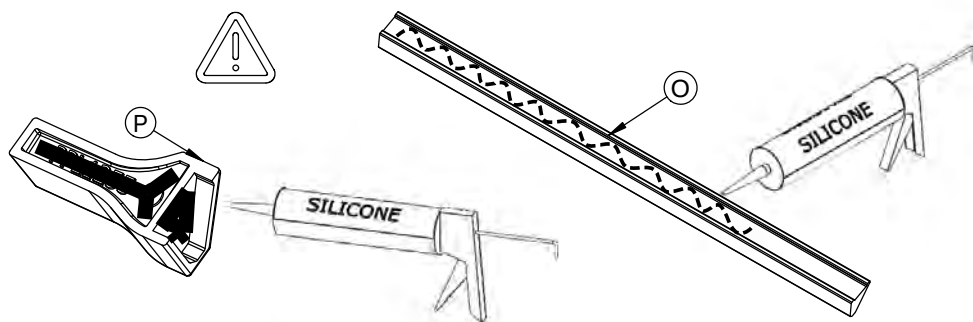

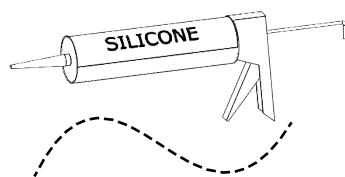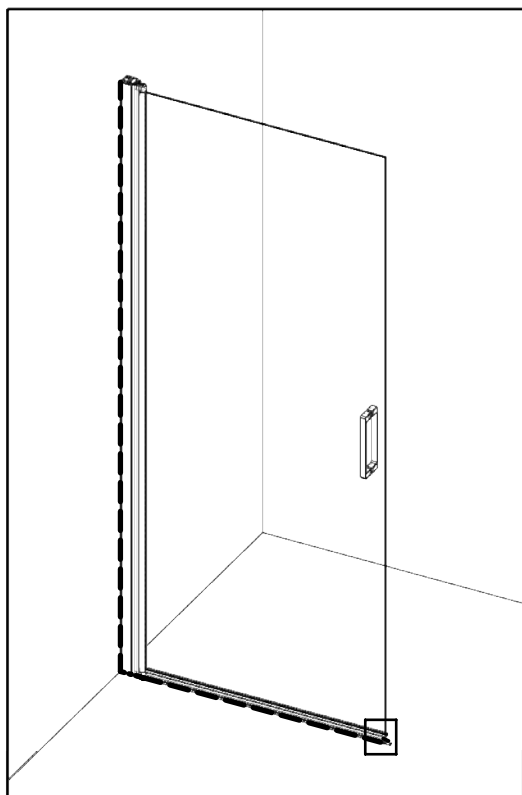

24h

