

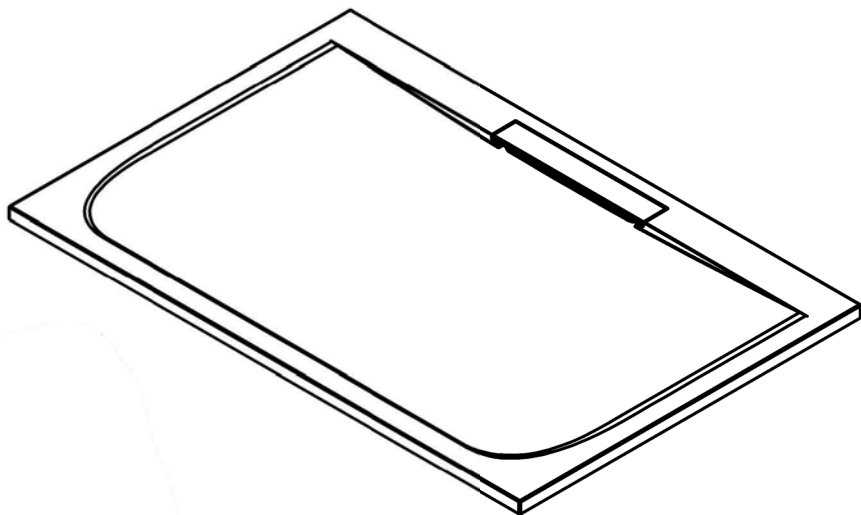


Kinedo

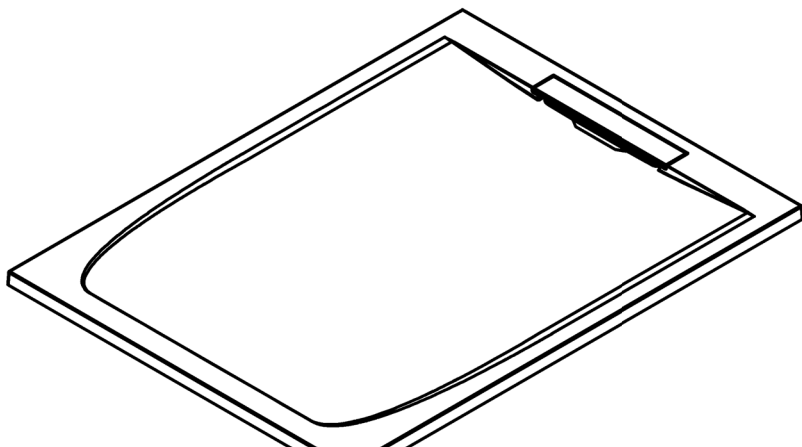


A

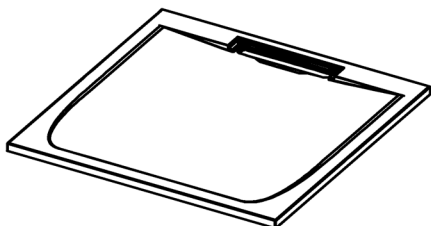


80x80	REC701
90x90	REC703

x1

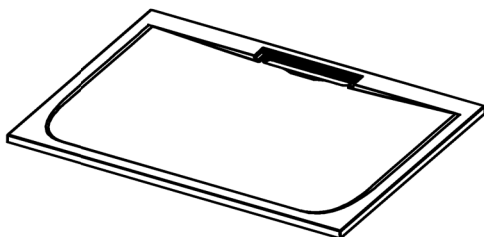


140x80	REC711	160x90	REC714
140x90	REC712	180x80	REC717
160x80	REC713	180x90	REC718

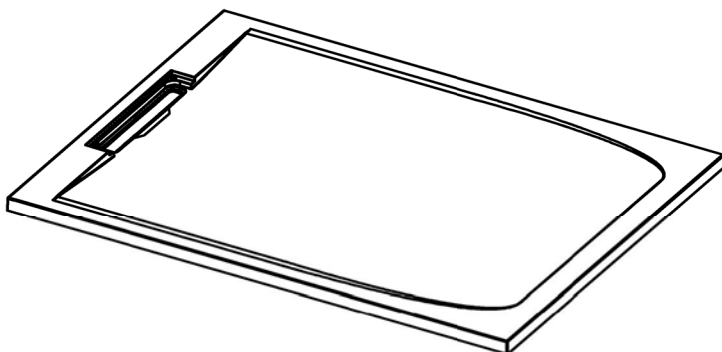

100x80	REC820	120x80	REC822	140x80	REC824	160x80	REC826	180x80	REC828
100x90	REC821	120x90	REC823	140x90	REC825	160x90	REC827	180x90	REC829

B


x1

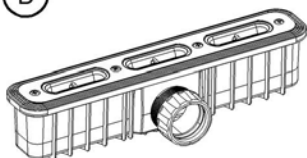

BOND39



C

x1




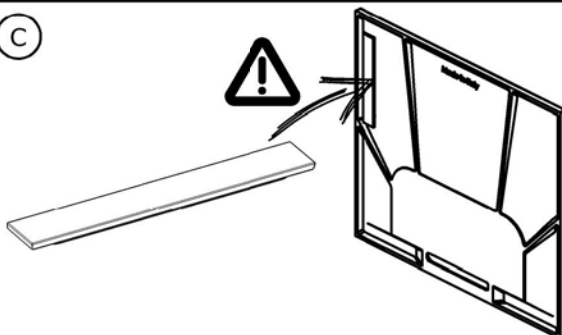


CAP27

Tools required

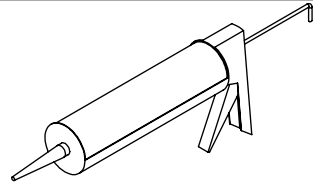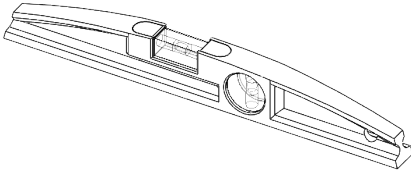



Polyurethane adhesive or MS polymer

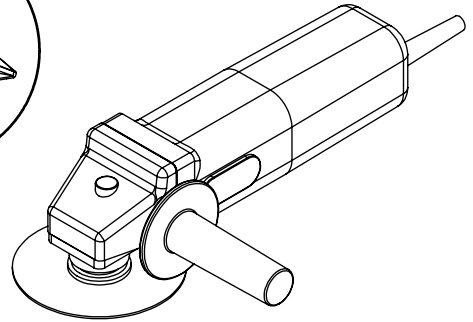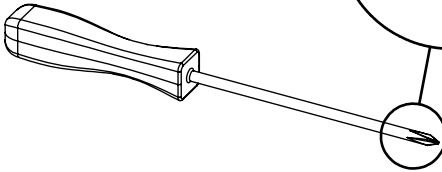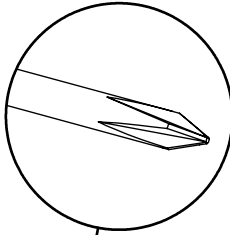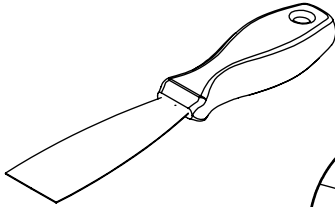


Grinder with diamond blade Ø230mm min.





ZONE AVAILABLE FOR OPTIONAL RECUTTING

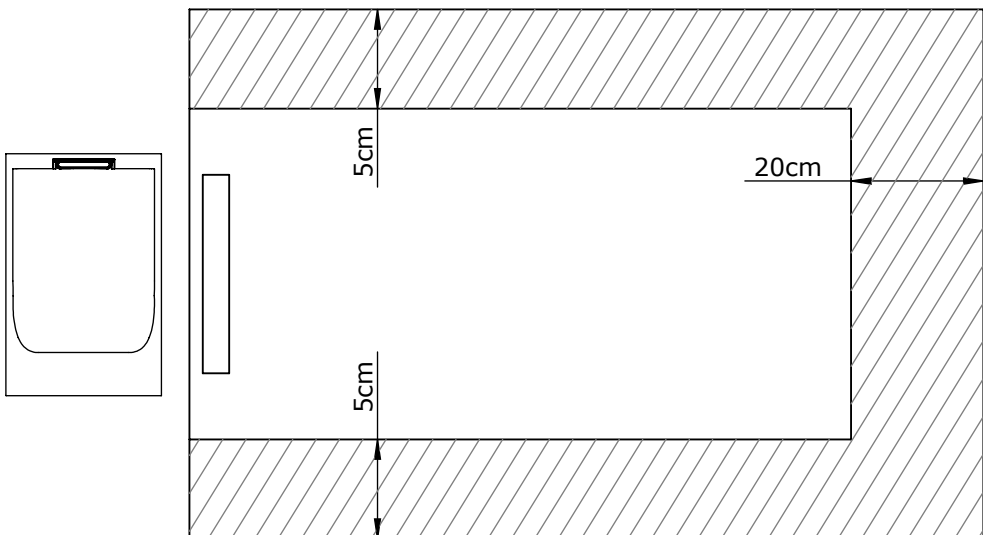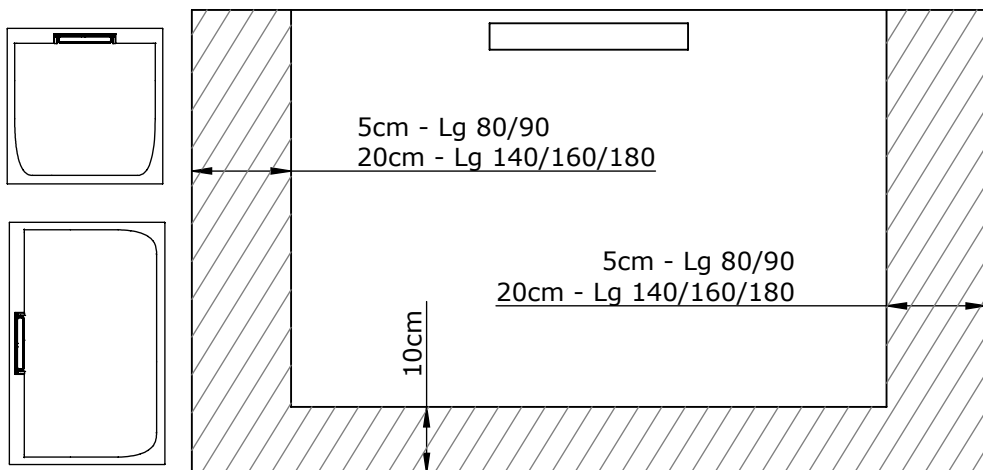



MAX cuttable area

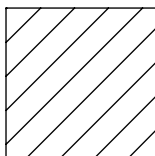

1

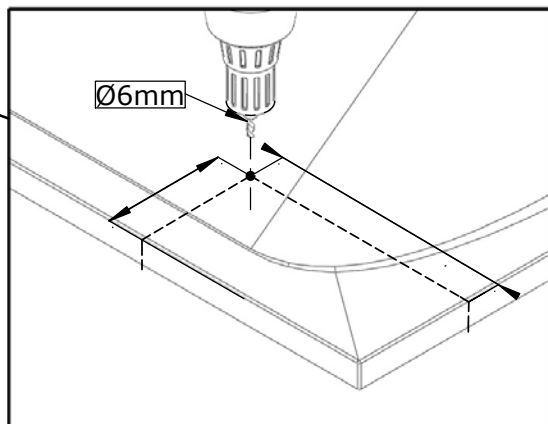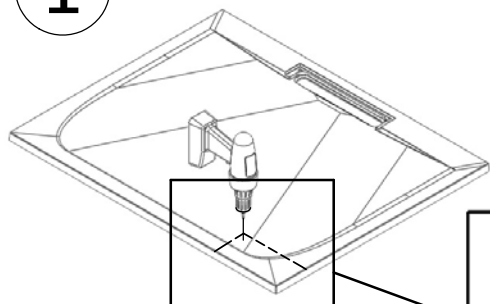

2

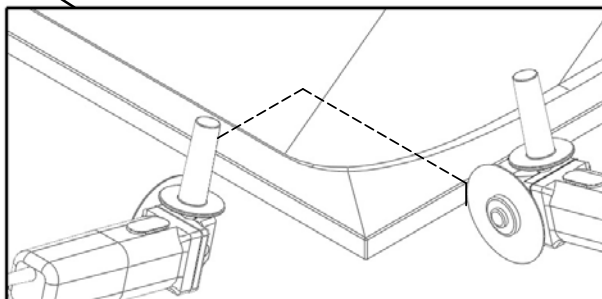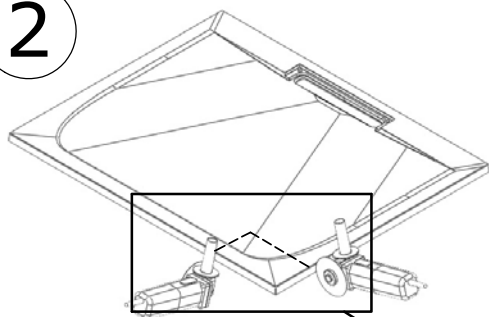


3




Apply a polyurethane adhesive or MS polymer layer using a spatula over the raw surface and fill the space between the ribs of the tray with a layer of adhesive

Polyurethane adhesive/MS polymer

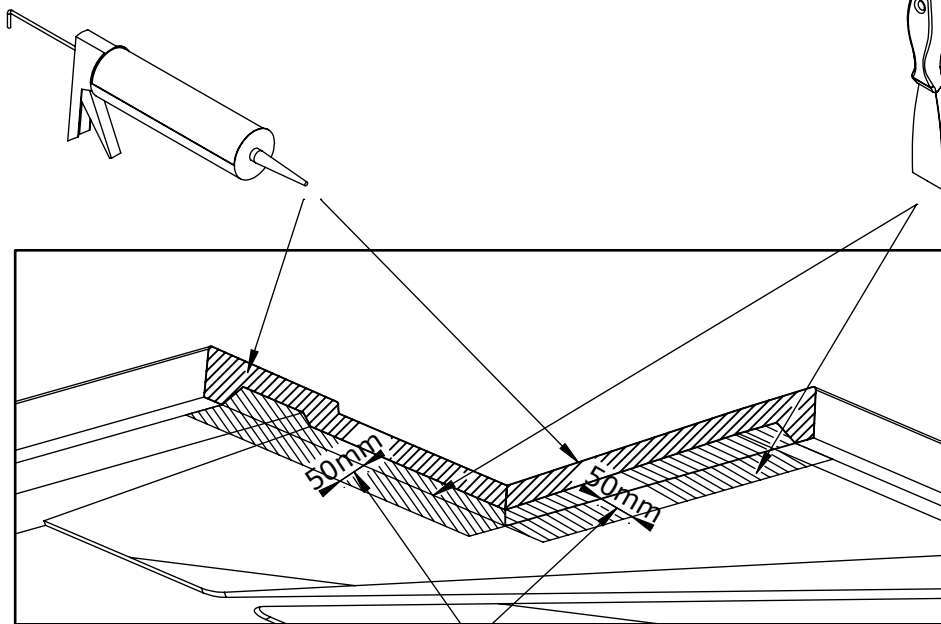


50mm layer of adhesive mortar.

Feet quantity.

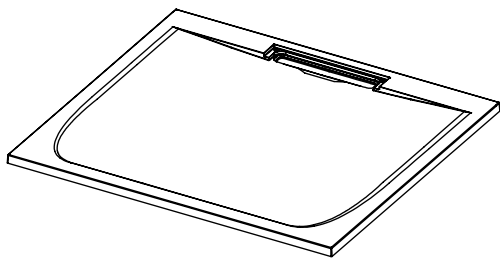


80x80	4	160x80	8
90x90	4	160x90	8
140x80	8	180x80	8
140x90	8	180x90	8

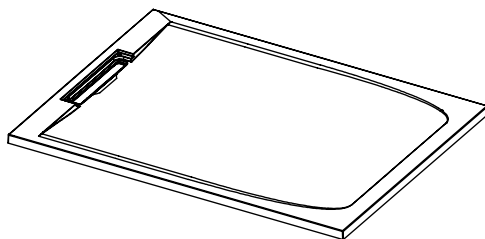



100x80	4	140x80	6	180x80	8
100x90	4	140x90	6	180x90	8
120x80	6	160x80	8		
120x90	6	160x90	8		

The distance from the edge of the shower tray to the edge of a peripheral support should be no more than 30 cm.



THE FEET MUST BE INSTALLED ON THE SHOWER TRAY RIBS

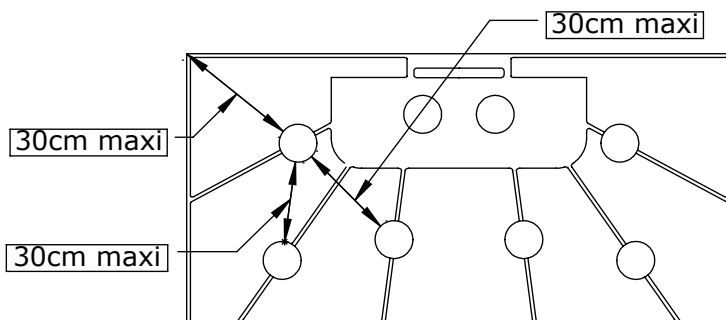

http://tiny.cc/notice_pieds_universelle

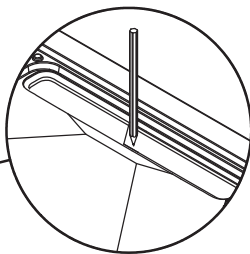
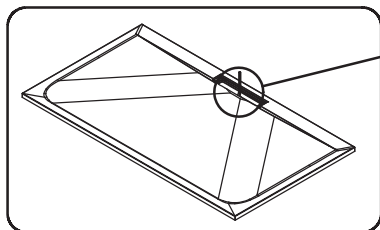


Mark the position of the waste and test-assemble the tray and waste

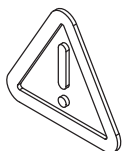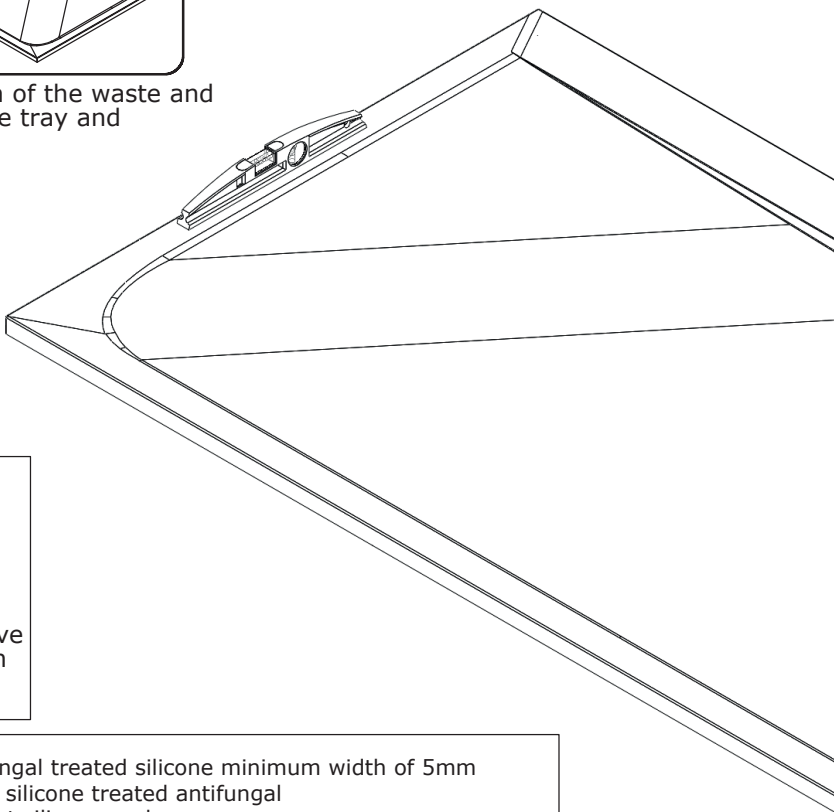

It's essential to have a rigid support on all sides of the shower tray

- ① - finishing antifungal treated silicone minimum width of 5mm
- ② - flexible sealing silicone treated antifungal
- ③ - support Element silicone seal
- ④ - silicone support
- ⑤ - polyurethane adhesive or MS polymer

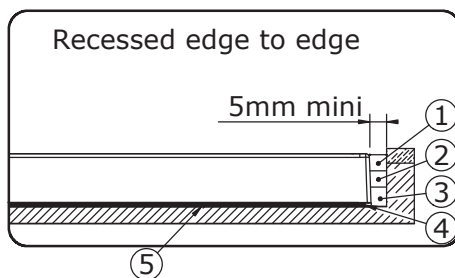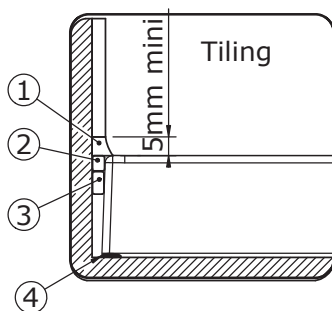






Throughout the duration of the installation, protect the recipient against any scratches, burns, shocks etc




The installation of an anti-vacuum valve is necessary for optimal use if another appliance is connected to the same discharge pipe

Do not use hydrochloric acid or powerful degreaser

Direct floor installation

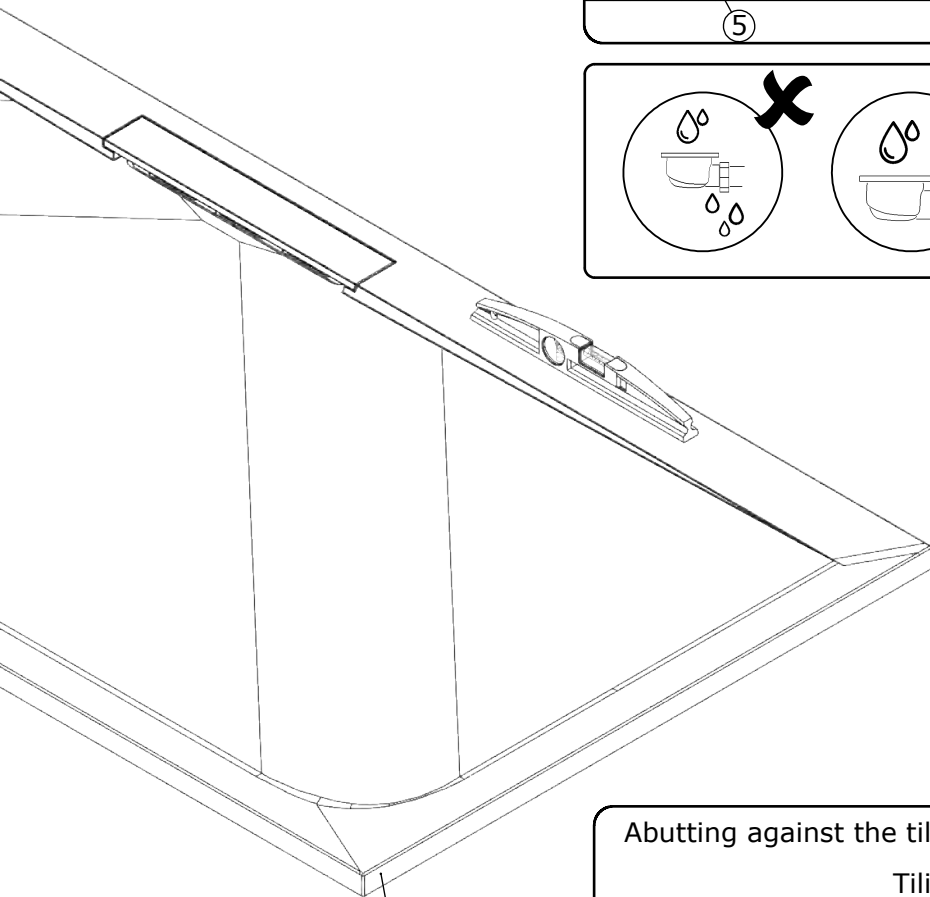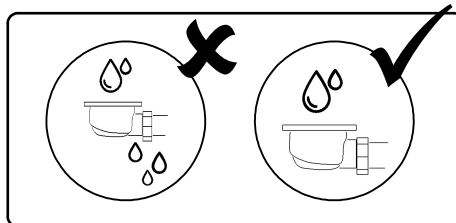

Abutting against the tile


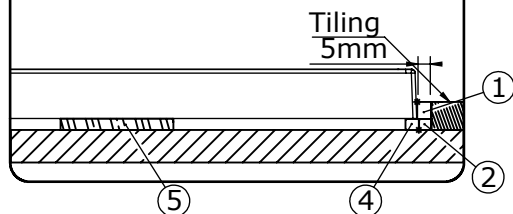


The base must be rigid, flat and dry

INSTALLATION TYPES

KINELINE SQUARE, RECTANGULAR DRAIN CENTERED ON THE LENGTH




1. Mounted on adjustable legs with cladding

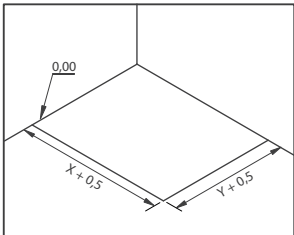

X	Y	C	D
80	80	68	21,5
90	90	78	26,5
140	80	68	51,5
140	90	78	51,5
160	80	68	61,5
160	90	78	61,5
180	80	68	71,5
180	90	78	71,5



Pre-installation

2. Installed in abutment against the tile

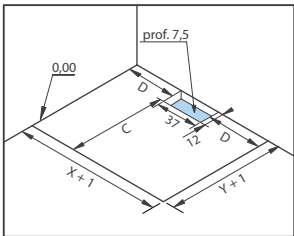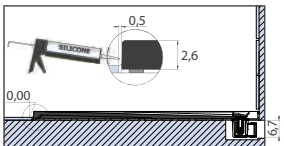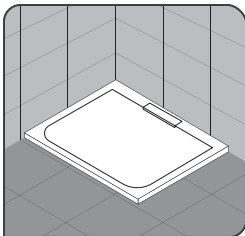




Pre-installation

3. Built-in and placed on adjustable legs

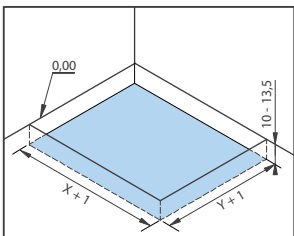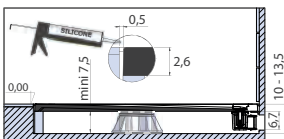

Pre-installation

4. Built-in and installed without adjustable feet

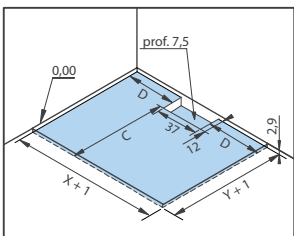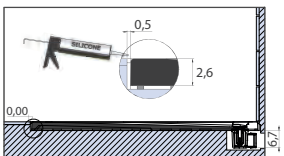
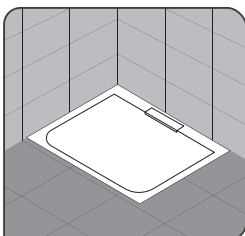


Pre-installation

INSTALLATION TYPES

KINELINE RECTANGULAR DRAIN CENTERED ON THE WIDTH




1. Mounted on adjustable legs with cladding

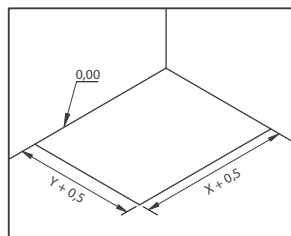

Pre-installation




X	Y	C	D
100	80	88	21,5
100	90	88	26,5
120	80	108	21,5
120	90	108	26,5
140	80	128	21,5
140	90	128	26,5
160	80	148	21,5
160	90	148	26,5
180	80	168	21,5
180	90	168	26,5

2. Installed in abutment against the tile

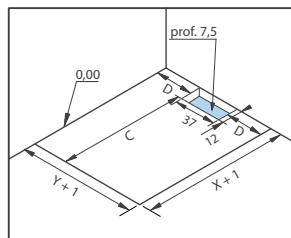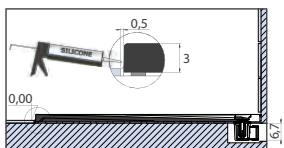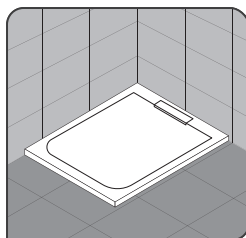




Pre-installation

3. Built-in and placed on adjustable legs

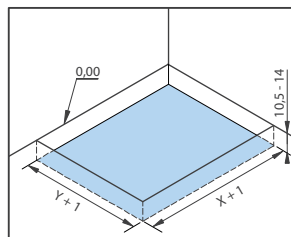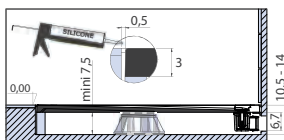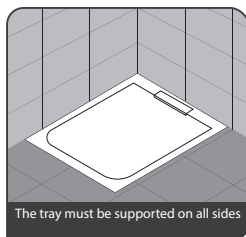



Pre-installation

4. Built-in and installed without adjustable feet

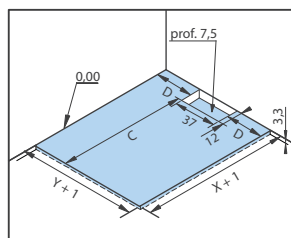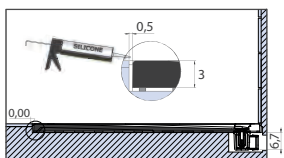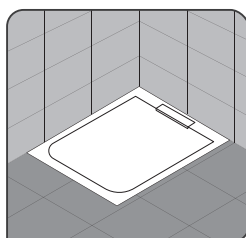


Pre-installation

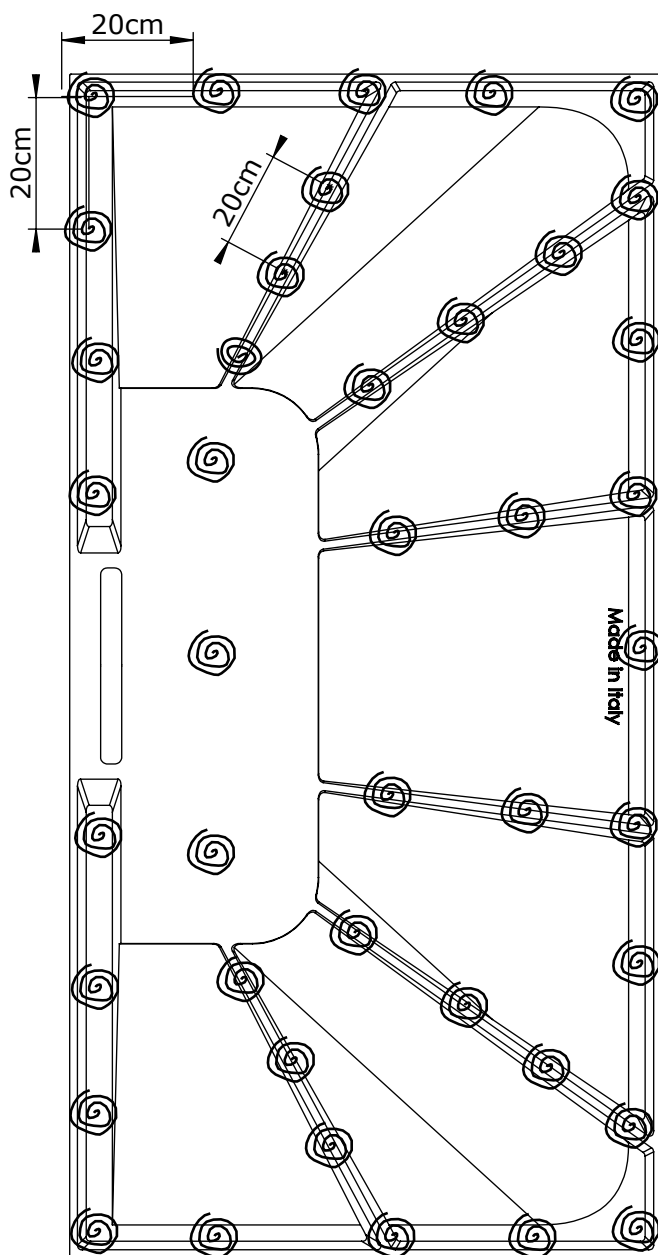

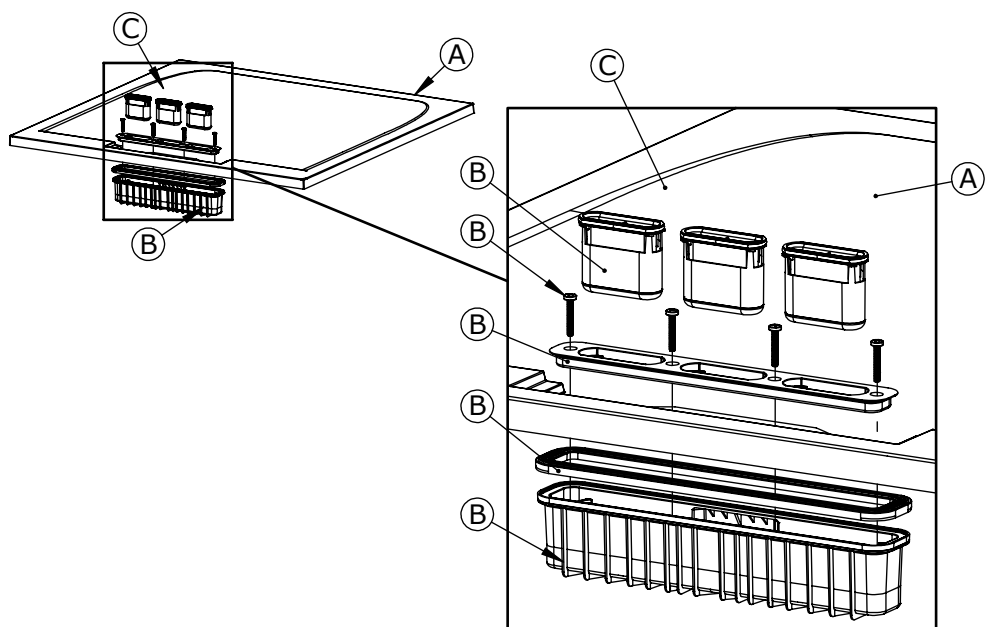

Or

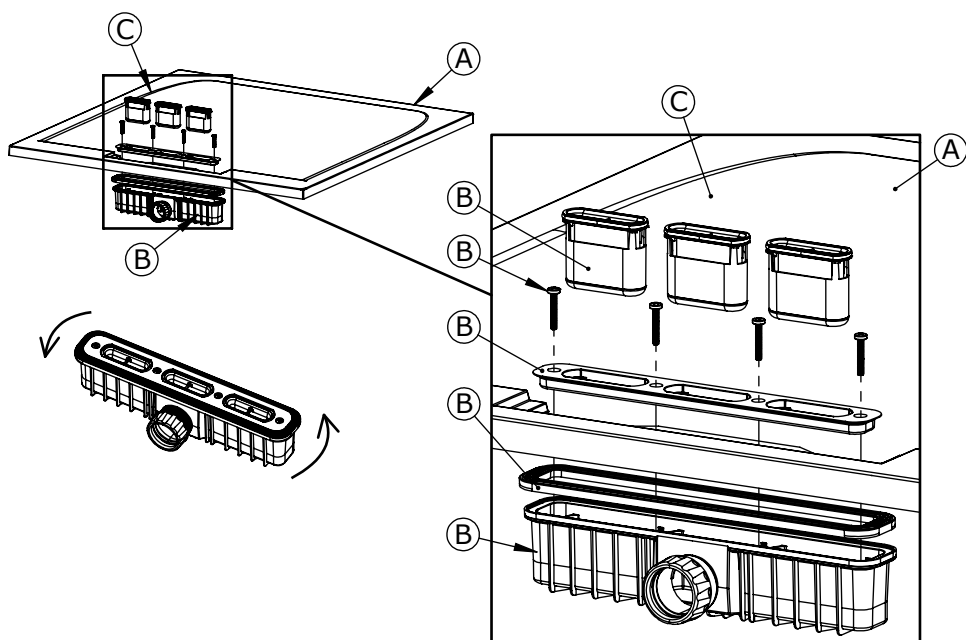



24h

