

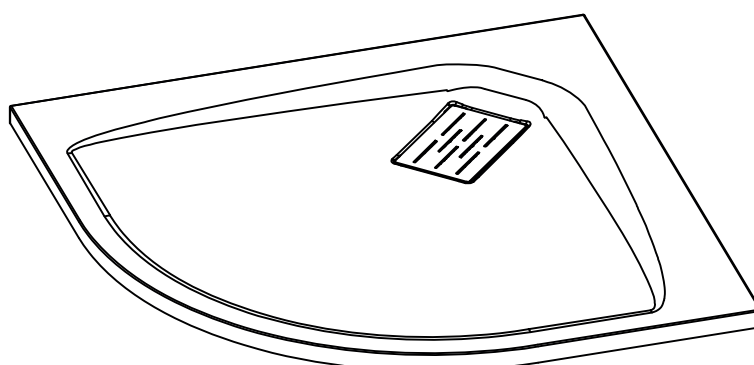


Kinedo

DES1488-D

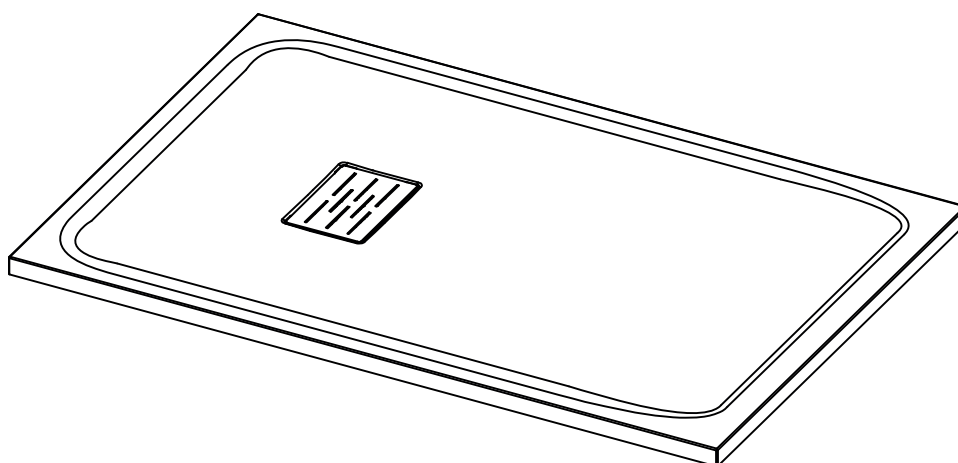




INSTALLATION INSTRUCTIONS

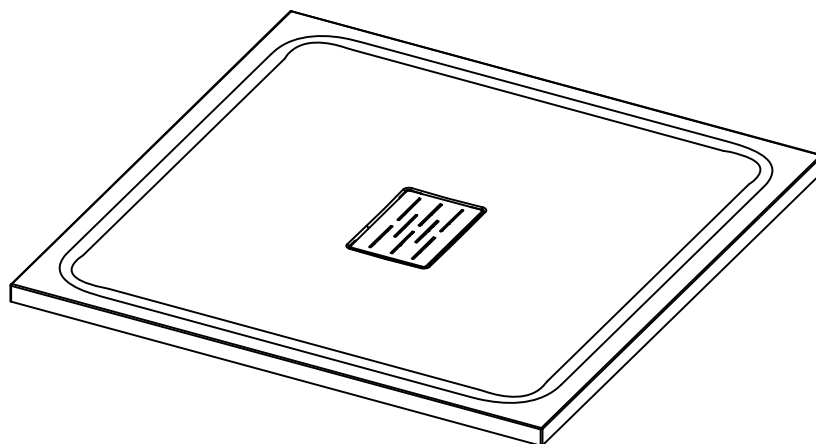

(A)

	80X80		
90X70		90X90	
100X70	100X80	100X90	100X100
120X70	120X80	120X90	120X100
140X70	140X80	140X90	140X100
150X70	150X80	150X90	150X100
160X70	160X80	160X90	160X100
170X70	170X80	170X90	
	180X80	180X90	180X100
	200X80	200X90	200X100


X1

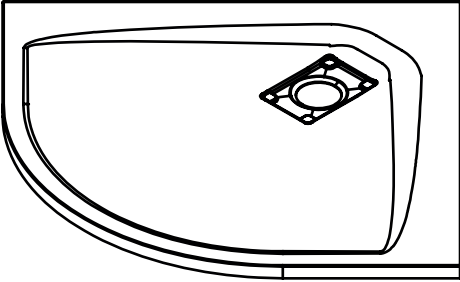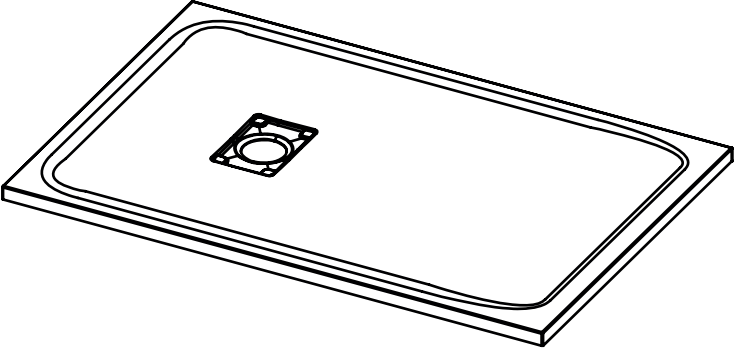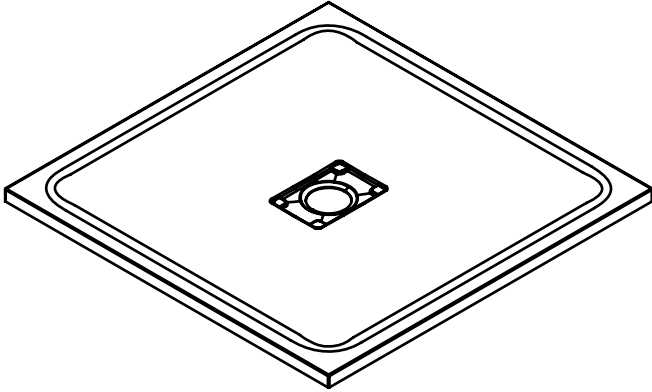

90X90

(B)


X1

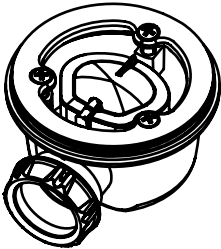

BOND33

(C)



X1

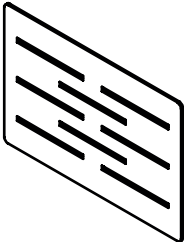




TOL165

The quantities given are what are required for the installation. There may be some surplus in the package provide.

Tools required

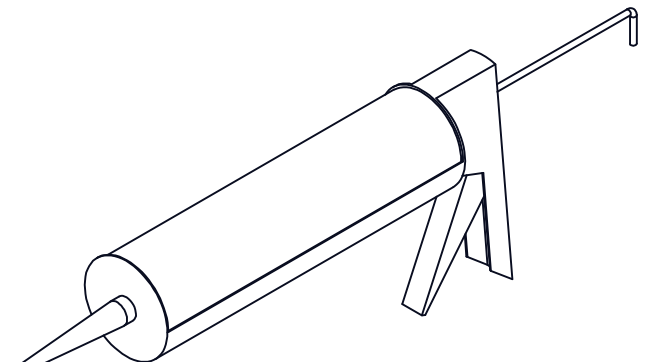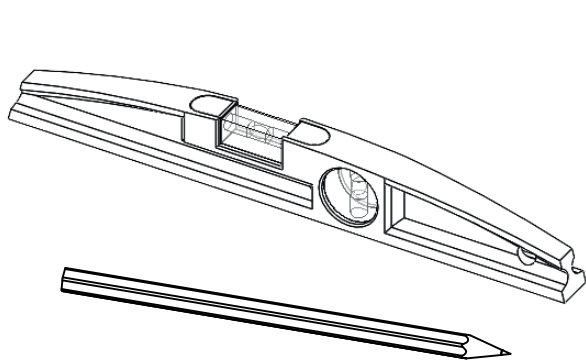




Polyurethane adhesive or MS polymer

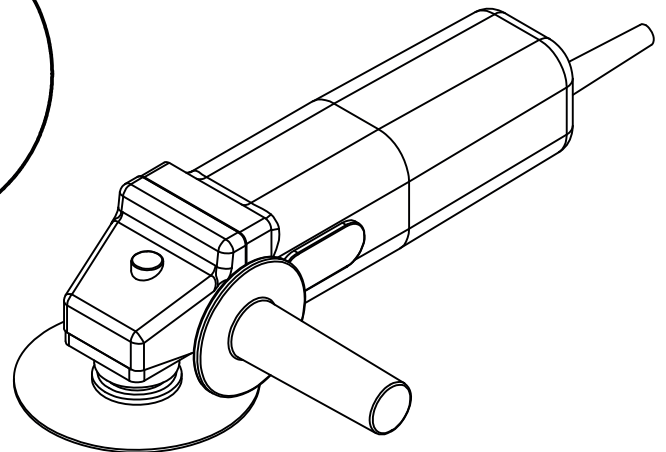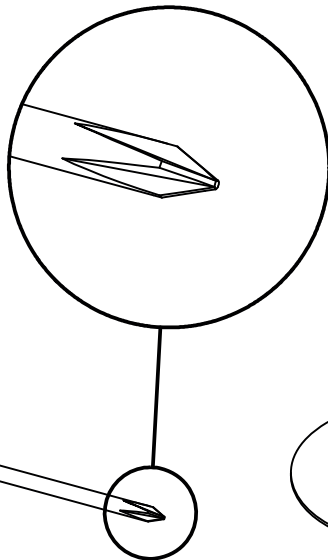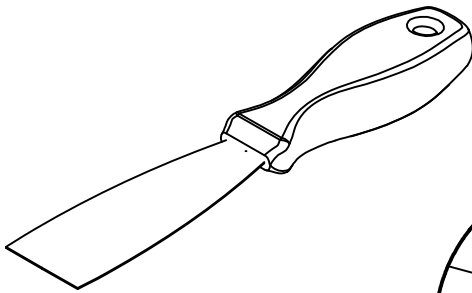


Grinder with diamond blade Ø230mm min.





ZONE AVAILABLE FOR OPTIONAL RECUTTING

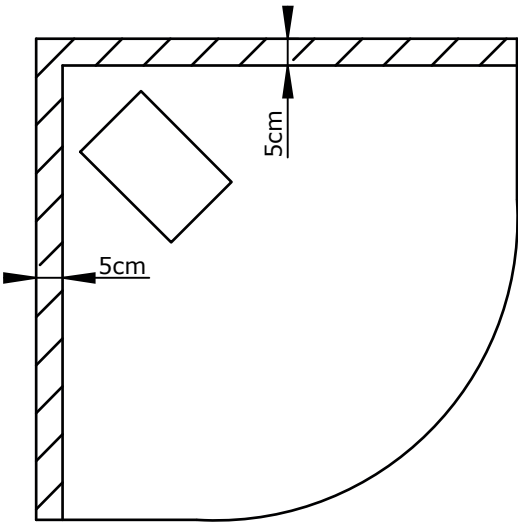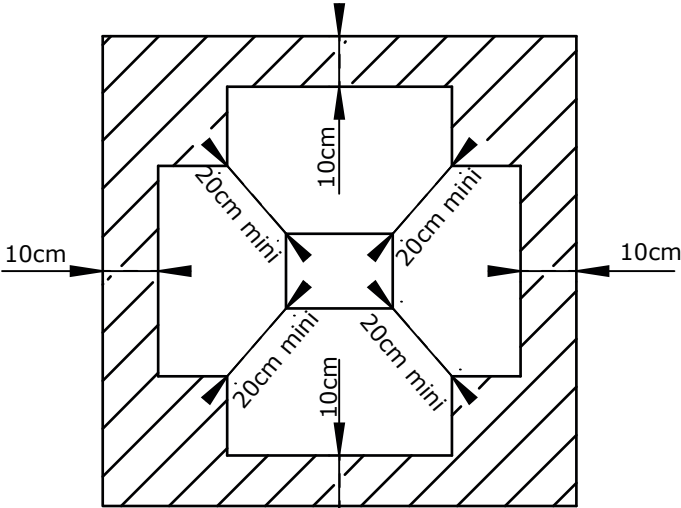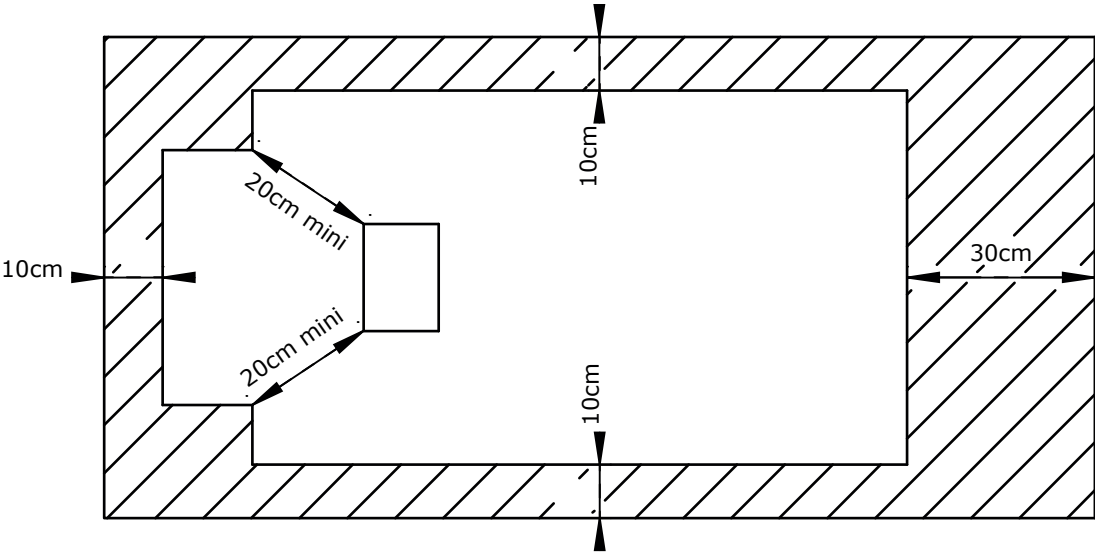



MAX cuttable area

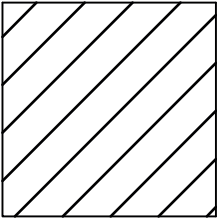

1

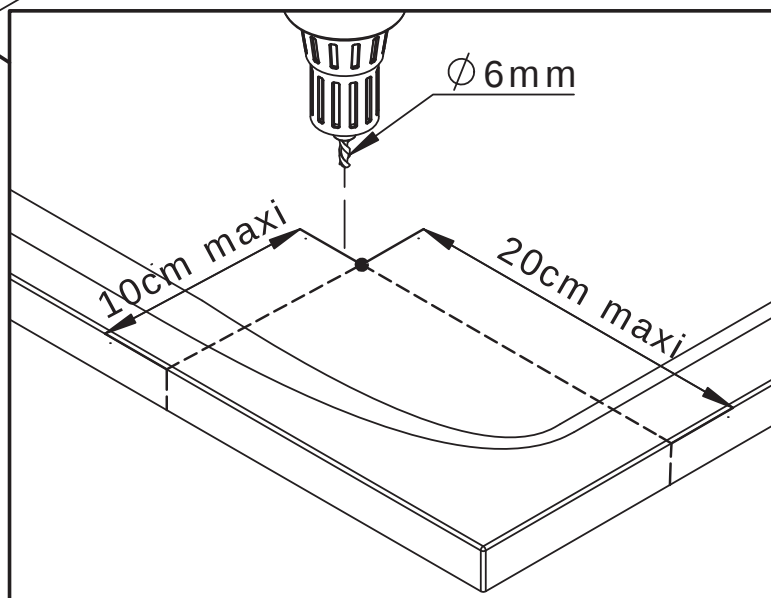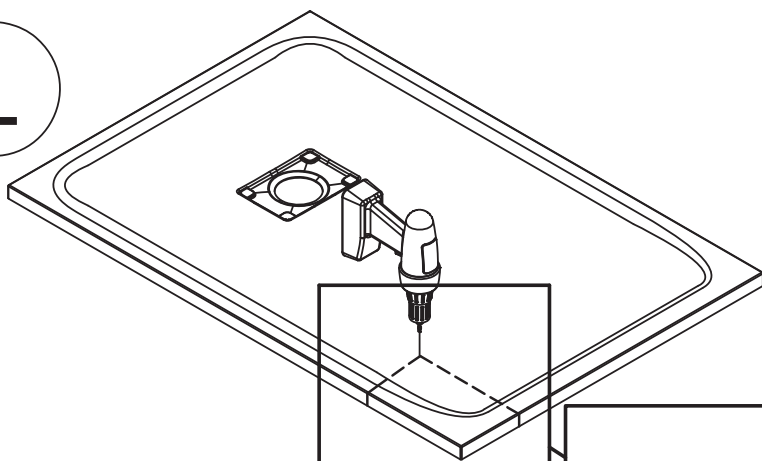

2

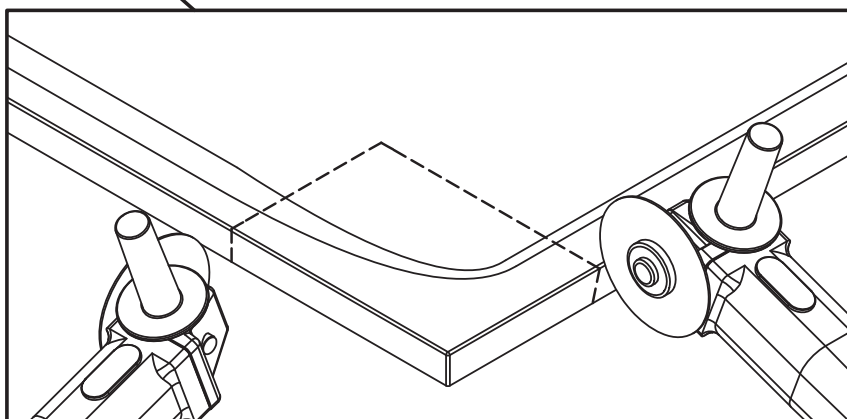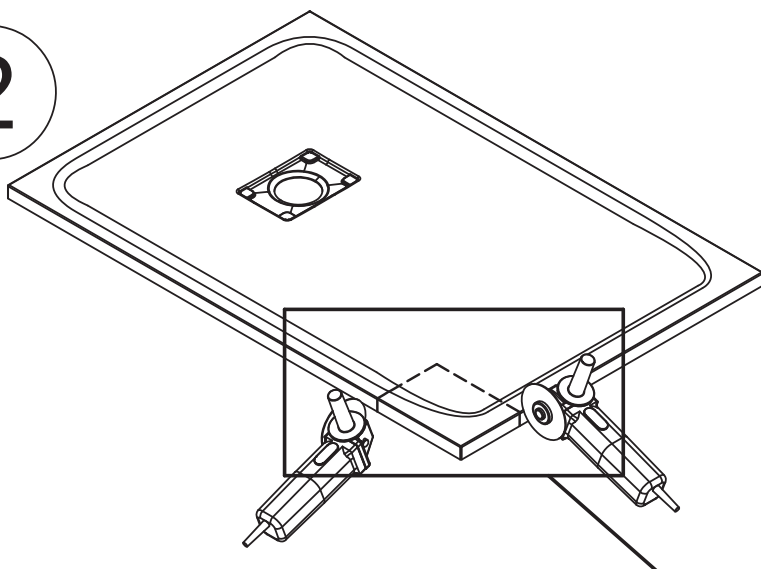


3




Apply a polyurethane adhesive or MS polymer layer using a spatula over the raw surface and fill the space between the ribs of the tray with a layer of adhesive mortar.

Polyurethane adhesive/MS polymer

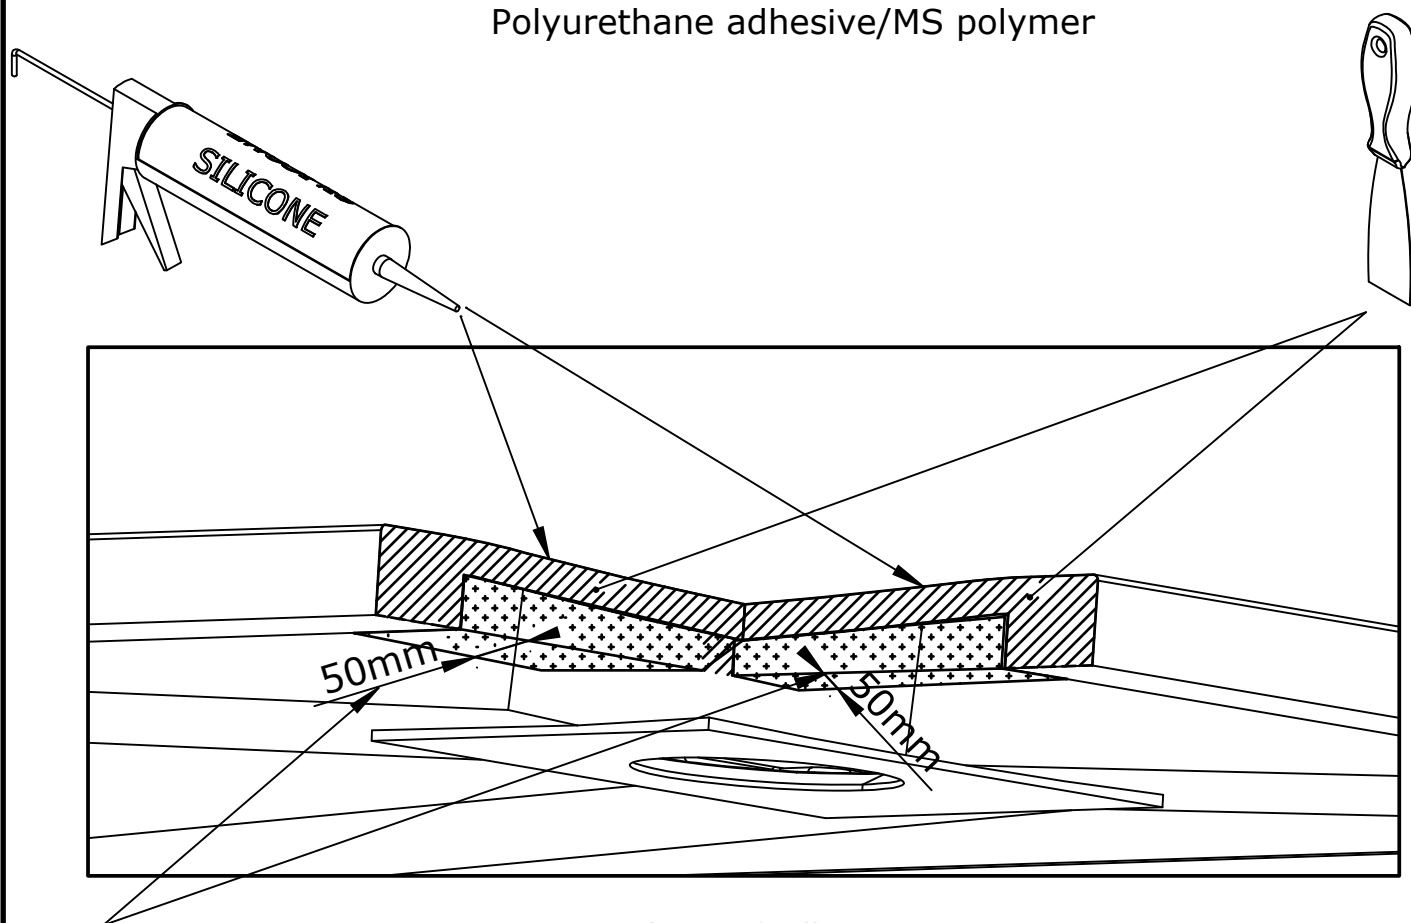


50mm layer of adhesive mortar

Feet quantity


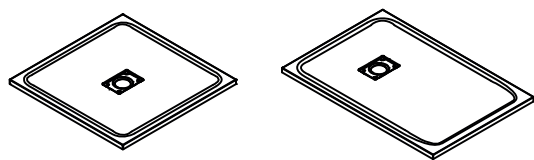


80X80	4	90X70	5	90X90	4	100X70	5	100X80	5	100X90	5	100X100	6
120X70	7	120X80	7	120X90	7	120X100	7	140X70	8	140X80	10	140X90	10
140X100	10	150X70	8	150X80	10	150X90	10	150X100	10	160X70	10	160X80	10
160X90	10	160X100	10	170X70	10	170X80	10	170X90	10	180X80	10	180X90	10
180X100	10	200X80	13	200x90	13	200x100	13						





90X90	7
-------	---



The distance from the edge of the shower tray to the edge of a peripheral support should be no more than 30 cm.
THE FEET MUST BE INSTALLED ON THE SHOWER TRAY RIBS.

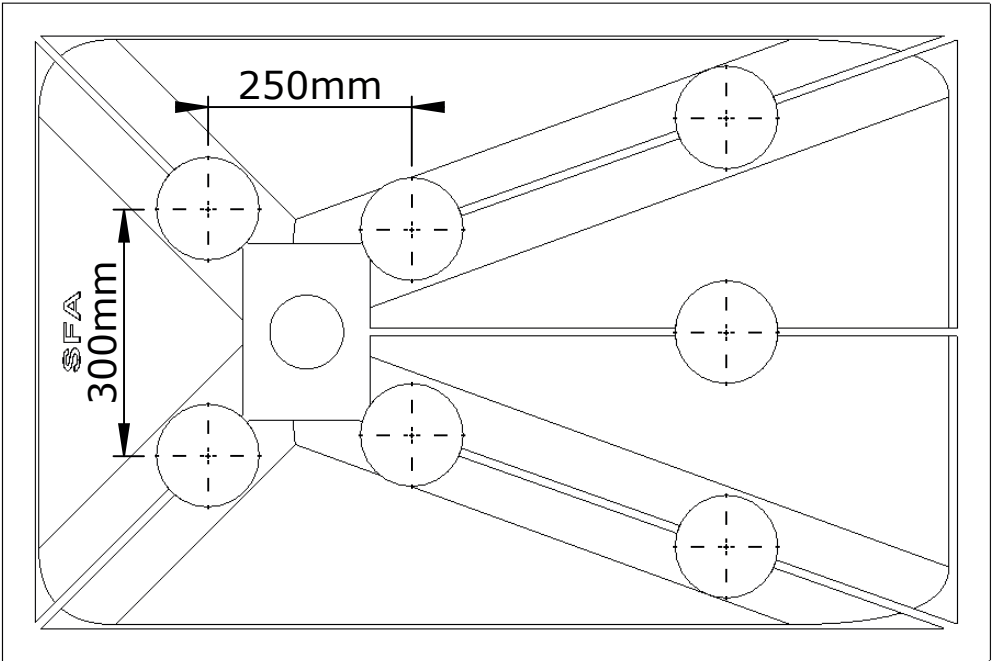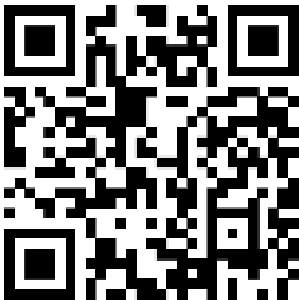

GB

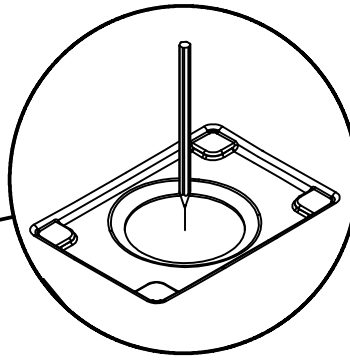
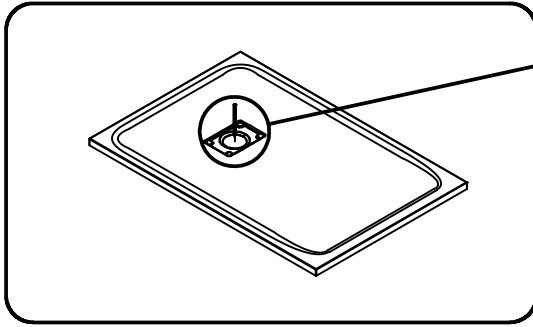


Mark the position of the waste and
test-assemble the tray and
waste

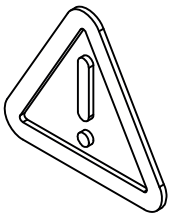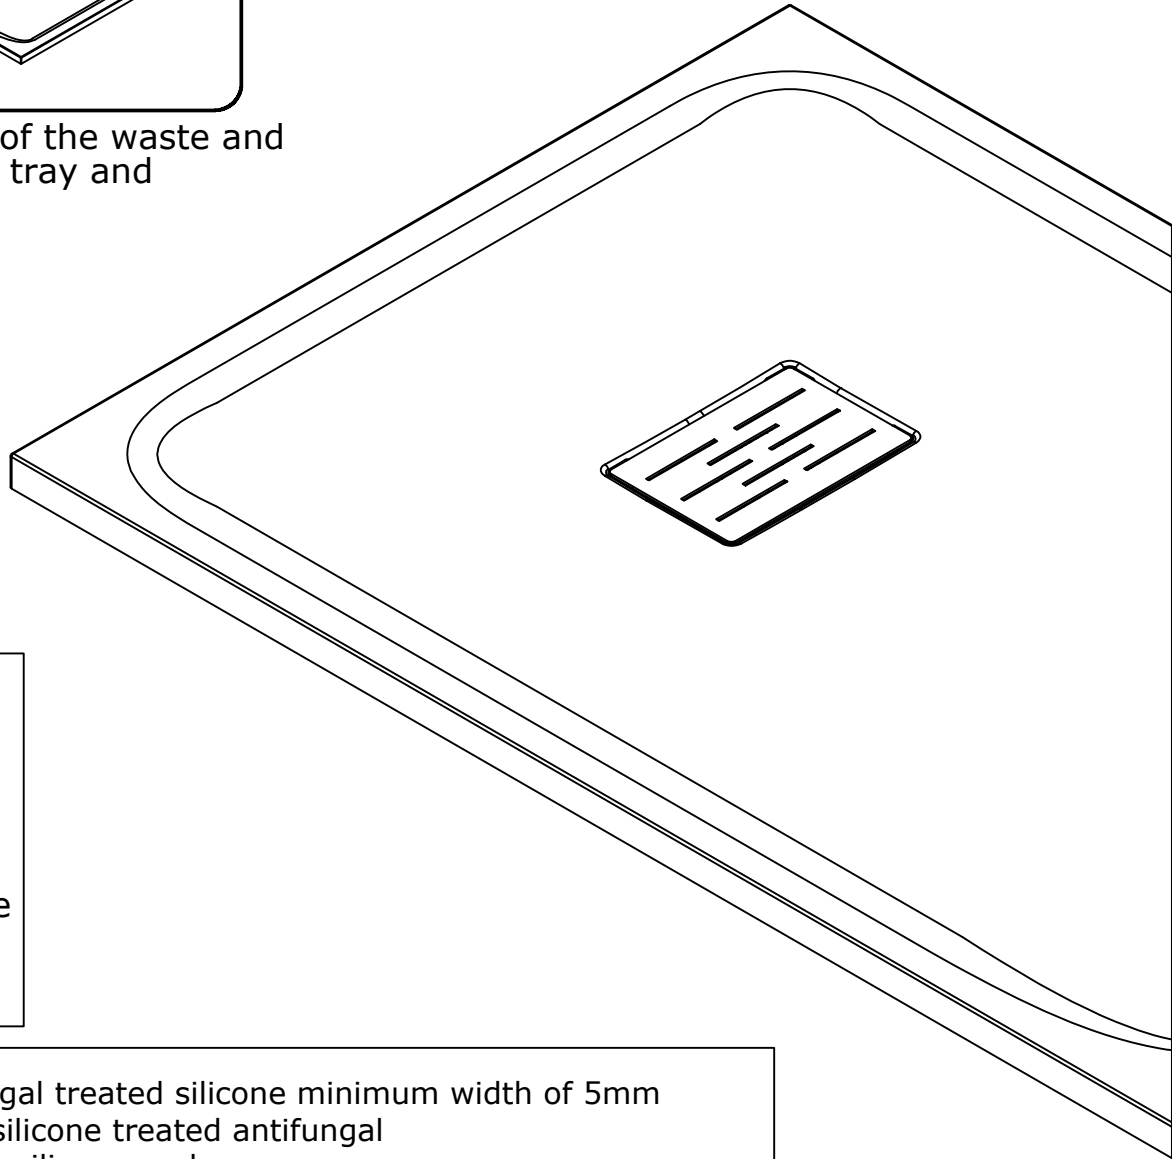

It's essential to have
a rigid support on
all sides of the
shower tray

- ① - finishing antifungal treated silicone minimum width of 5mm
- ② - flexible sealing silicone treated antifungal
- ③ - support Element silicone seal
- ④ - silicone support
- ⑤ - polyurethane adhesive or MS polymer

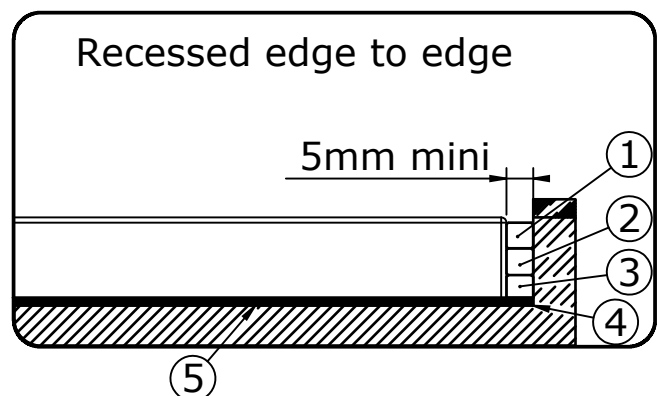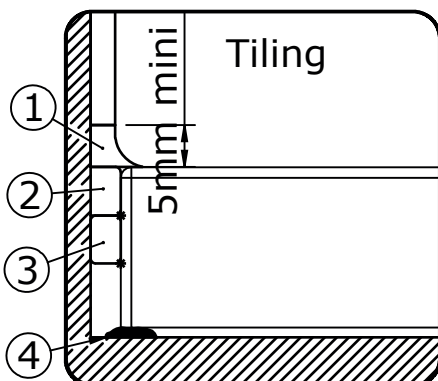





Throughout the duration of the installation, protect the recipient against any scratches, burns, shocks etc



The installation of an anti-vacuum valve is necessary for optimal use if another appliance is connected to the same discharge pipe


Do not use hydrochloric acid or powerful degreaser

Direct floor installation

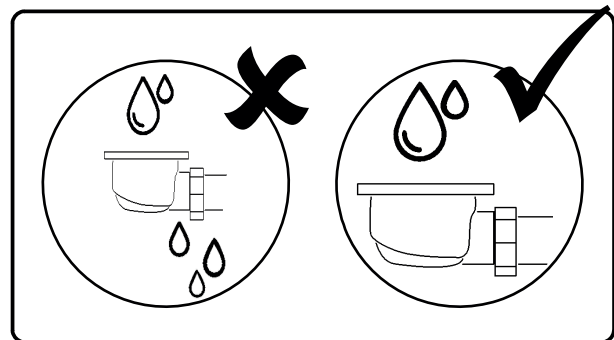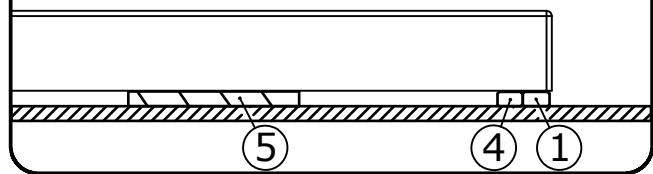

The base must be rigid, flat and dry


Abutting against the tile

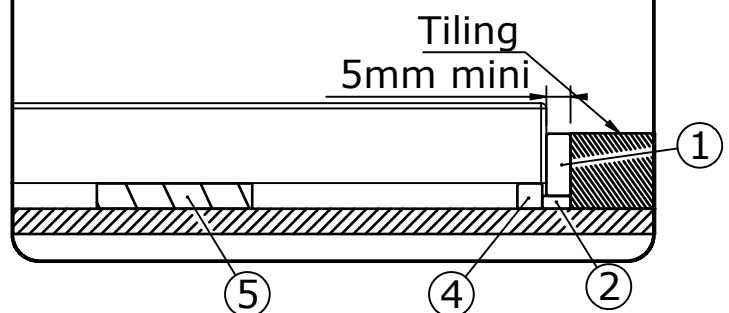


INSTALLATION TYPES KINEROCK EVO

KINEROCK EVO SQUARE AND RECTANGULAR


1. Mounted on adjustable legs with tiled cladding

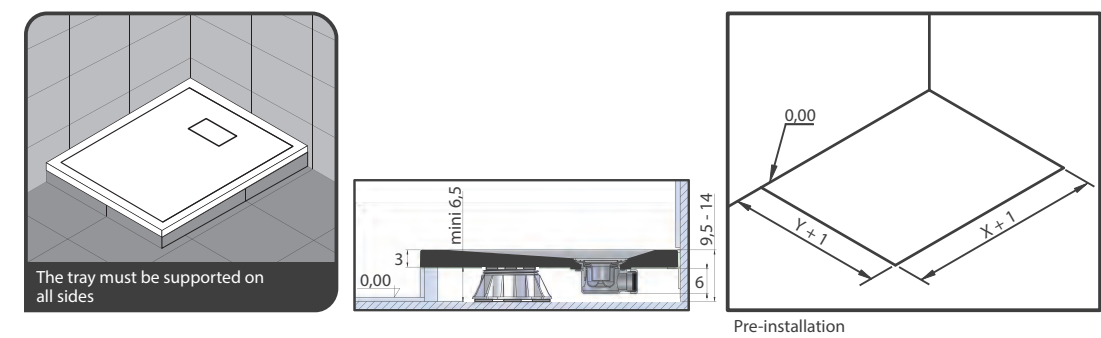


2. Installed in abutment against the tile

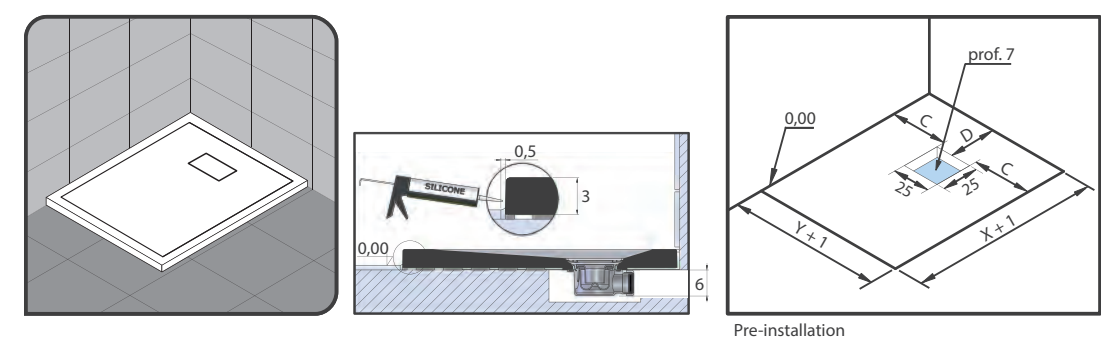

3. Built-in and installed on adjustable feet

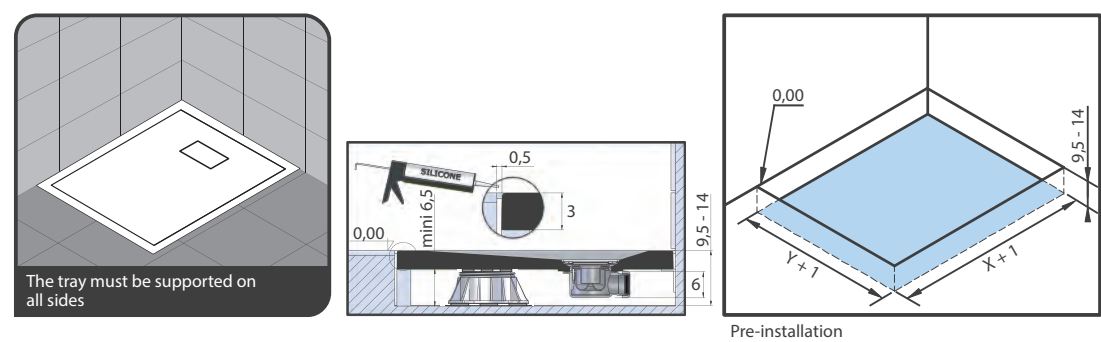

4. Built-in and installed without adjustable feet


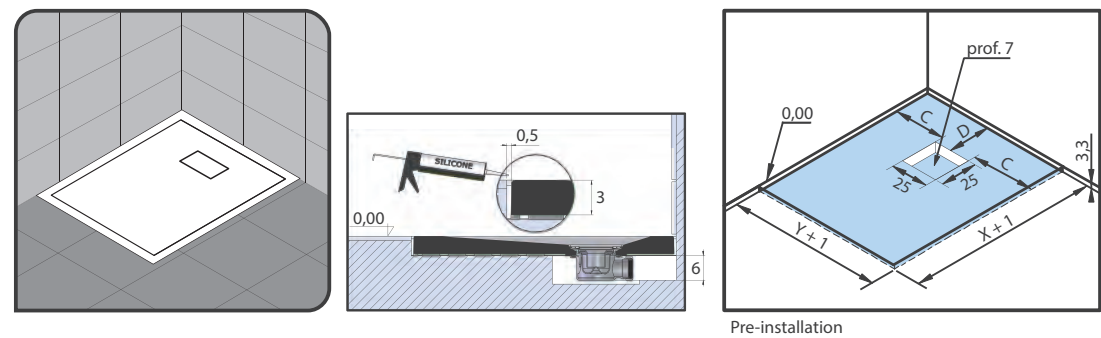


X	Y	B	C	D
80	80	25	-	5,5
80	80		27,5	27,5
90	90		32,5	32,5
100	100		37,5	37,5
90	70		22,5	19,5
100	70		22,5	19,5
100	80		27,5	24,5
100	90		32,5	29,5
120	70		22,5	24,5
120	80		27,5	24,5
120	90		32,5	29,5
120	100		37,5	29,5
140	70		22,5	19,5
140	80		27,5	24,5
140	90		32,5	29,5
140	100		37,5	29,5
150	70		22,5	19,5
150	80		27,5	24,5
150	90		32,5	29,5
160	70		22,5	19,5
160	80		27,5	24,5
160	90		32,5	29,5
160	100		37,5	29,5
170	70		22,5	19,5
170	80		27,5	24,5
170	90		32,5	24,5
180	80		27,5	24,5
180	90		32,5	29,5
180	100		37,5	29,5
200	80		27,5	24,5
200	90		32,5	24,5
200	100		37,5	24,5

INSTALLATION TYPES KINEROCK EVO




KINEROCK EVO 1/4 ROUND

1. Mounted on adjustable legs with tiled cladding

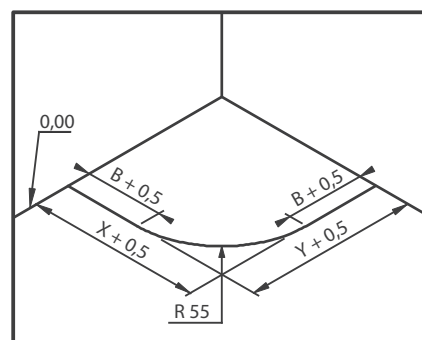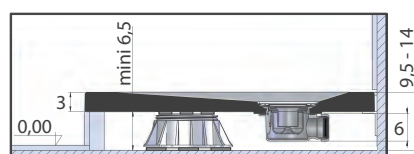



Pre-installation

2. Installed in abutment against the tile

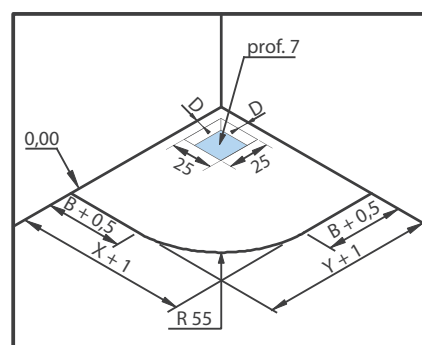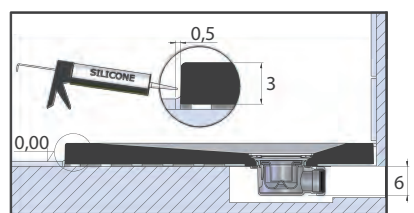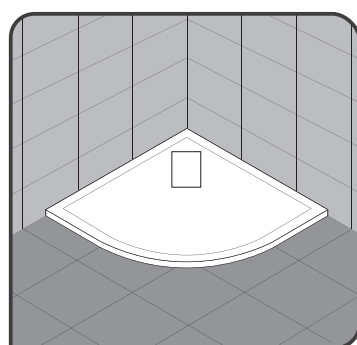




Pre-installation

3. Built-in and installed on adjustable feet

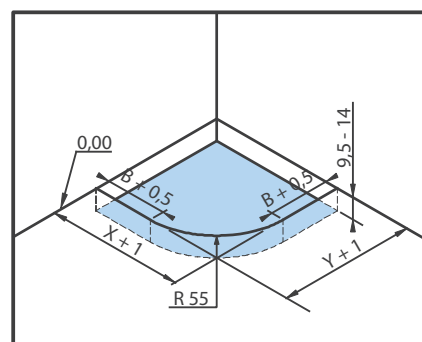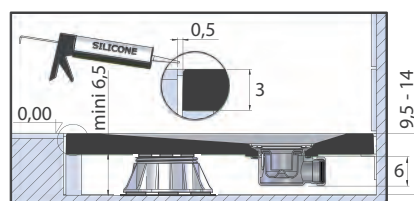


Pre-installation

4. Built-in and installed without adjustable feet

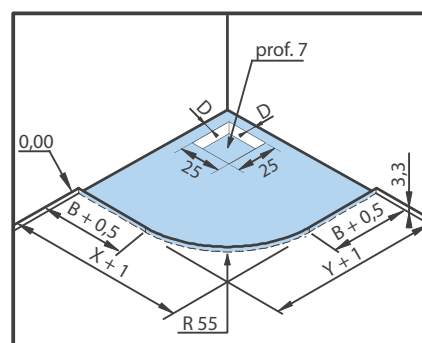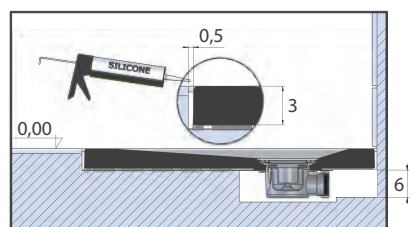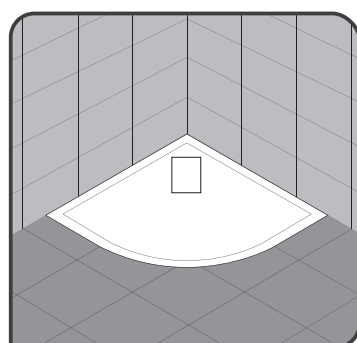

Pre-installation

Loading the plots glue polyurethane or MS polymer

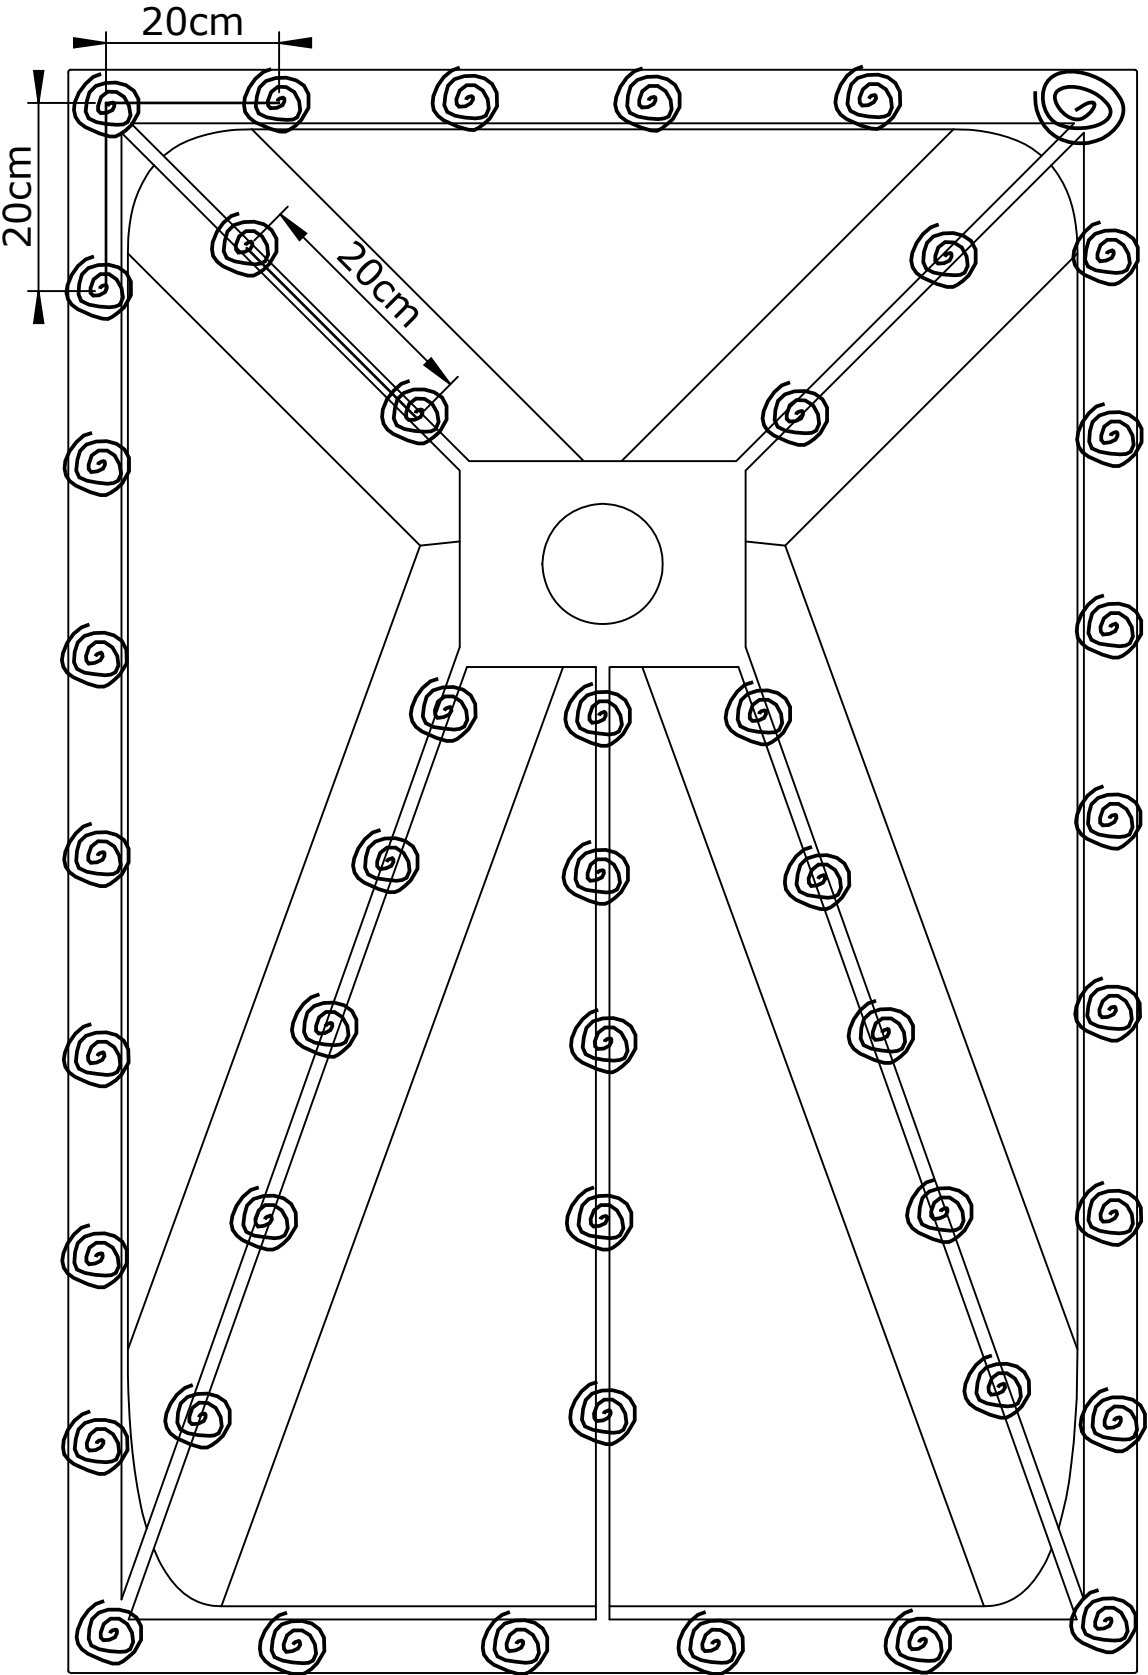



24h

