
This product should only be fitted by a fully qualified installer.

This product must be unpacked and checked for quality prior to installation.

Any missing parts or damage must be reported to your supplier within 10 days of purchase. No claims can be enforced outside of these items.

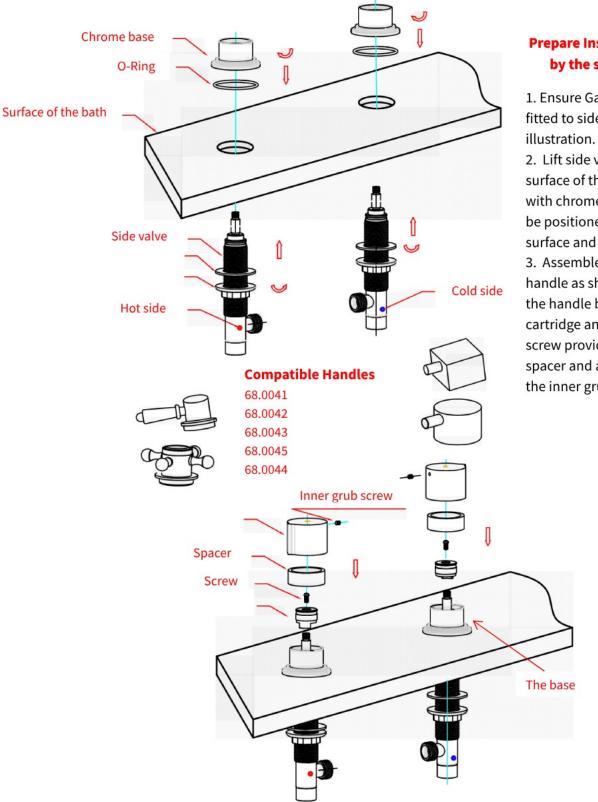

## Prepare Installation as required by the site circumstances

- 1. Ensure Gasket and hex nut are fitted to side valve as shown in illustration
- 2. Lift side valve through hole on surface of the bath and secure with chrome base O-ring must be positioned between bath surface and base.
- 3. Assemble chosen compatible handle as shown below, placing the handle bush over the cartridge and secure with the screw provided. Locate the spacer and attach handle using the inner grub screw.