
EB Code	56. 2055
Manufacturers Code	B220-A3C
Item	Walton BSM inc kit

## COMPONENTS

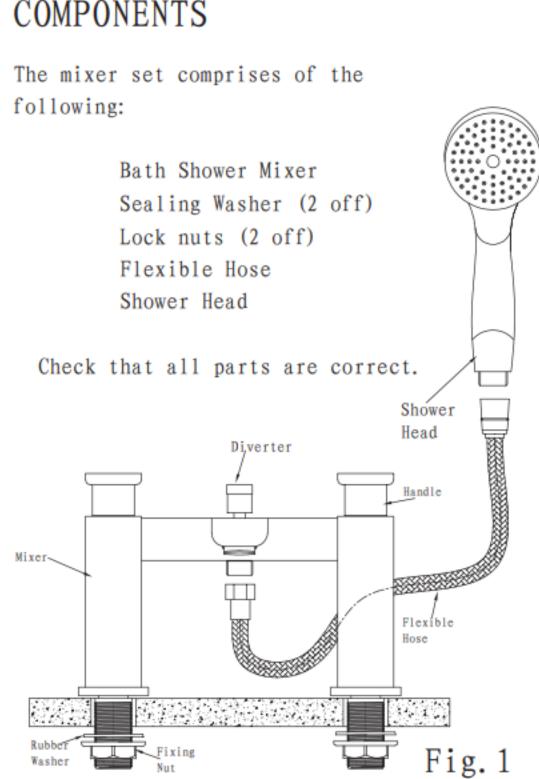

## INSTALLATION

Put the mixer into the hole as shown in fig. 1.

Use the rubber washer and the fixing nut to fix the mixer.

Screw the flexible hose into the diverter, and screw the shower head.

## LEAKTESTING

Switch on the supplies at the mains. Turn the mixer on and test for leaks in the connections.

## CLEANING

Do not use abrasive or solvent cleaning fluids. The mixer should be cleaned using a soft cloth and warm water. Any stains should be removed using washing up liquid.