


# Naturals by JT Tray Cutting guide




## Read the instructions carefully prior to starting.

The Naturals by JT shower tray can be cut by following the below instructions:


- 1) Measure the floor area to determine the required cuts.

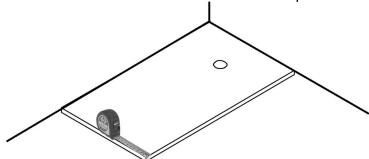

- 3) Carefully draw a light line on the shower tray using a pencil where you wish to cut the tray. Make sure you do not score the tray surface.

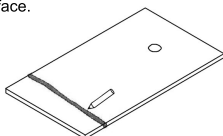


- 4) Check that your markings are correct and then mask off the cut line to protect the tray surface.

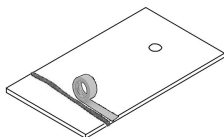

- THE CUTTING OF THE TRAY IS IRREVERSIBLE AND THEREFORE IT IS NOT JT'S RESPONSIBILITY IF THE TRAY IS CUT INCORRECTLY. DO NOT CUT UNTIL YOU ARE 100% SATISFIED THAT YOU HAVE READ AND UNDERSTAND THESE INSTRUCTIONS. THE GUARANTEE OF THE TRAY WILL BE VOID IF THE TRAY IS CUT LARGER THAN THE MAXIMUM DIMENSIONS ON THE TABLE SHOWN -



- 5) Using a circular saw and a diamond cutting blade, cut along the marks which were created in step 1.

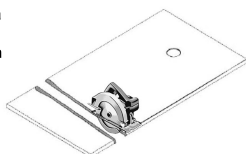

- 2) Using the table below, select the correct size of tray that you have and ensure your required cuts do not go over the maximum dimensions stated.

|           | MAXIMUM DIMENSIONS |    |
|-----------|--------------------|----|
|           | X                  | Y  |
| 800Q      | 50                 | -  |
| 900Q      | 50                 | -  |
| 800x800   | 50                 | -  |
| 900x900   | 50                 | -  |
| 1000x1000 | 50                 | -  |
| 900x700   | 150                | 50 |
| 1000x700  | 175                | 50 |
| 1000x800  | 175                | 50 |
| 1000x900  | 175                | 50 |
| 1200x700  | 200                | 50 |
| 1200x800  | 200                | 50 |
| 1200x900  | 200                | 50 |
| 1200x1000 | 200                | 50 |
| 1400x700  | 250                | 50 |
| 1400x800  | 250                | 50 |
| 1400x900  | 250                | 50 |
| 1400x1000 | 250                | 50 |
| 1500x700  | 425                | 50 |
| 1500x800  | 425                | 50 |
| 1500x900  | 425                | 50 |
| 1600x700  | 425                | 50 |
| 1600x800  | 425                | 50 |
| 1600x900  | 425                | 50 |
| 1600x1000 | 425                | 50 |
| 1700x700  | 525                | 50 |
| 1700x800  | 525                | 50 |
| 1700x900  | 525                | 50 |
| 1800x700  | 625                | 50 |
| 1800x800  | 625                | 50 |
| 1800x900  | 625                | 50 |
| 1800x1000 | 625                | 50 |
| 2000x800  | 800                | 50 |
| 2000x900  | 800                | 50 |

### CUT EXAMPLE

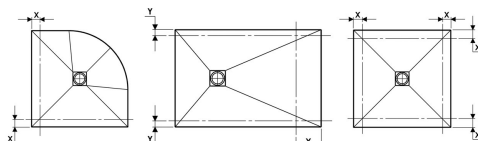

- DO NOT CUT ON THE SHORT EDGE CLOSEST TO THE WASTE
- ENSURE THE CUT EDGE IS POSITIONED AGAINST THE WALL
- DO NOT CUT MORE THAN THE STATED DIMENSIONS
- CUTTING THE TRAY WILL CUT INTO THE DRAINAGE FALLS