
# **INSTRUCTION MANUAL**


## Plain Mirror

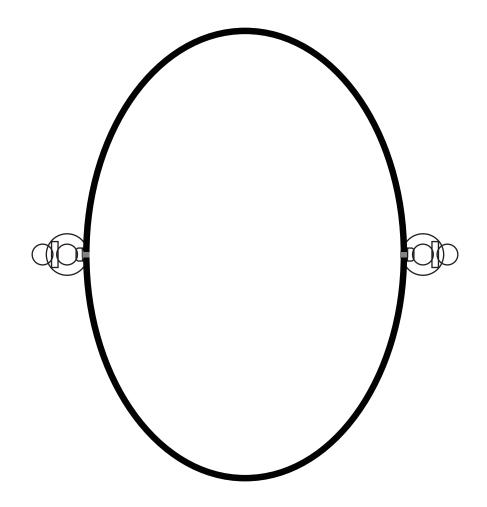



**SKU:**TRADMIRBLK

### Hanging the mirror


#### **Installation Tools**









Drill







Measuring tape


Spirit level


Hammer

Screwdriver

Pencil

#### **Installation Steps**

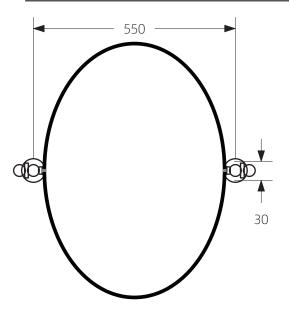


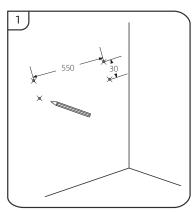


Make sure the wall is solid and suitable for safely supporting the overall weight of the mirror once installed.
Use a pencil to measure and mark the positions of the mirror nails, securing screws, and Rawl plugs. At the same time, use a

spirit level to ensure the bracket


is perfectly level.

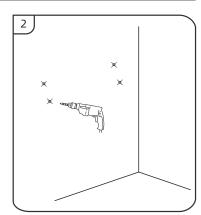


Select a  $\Phi 6$  drill bit and drill holes in the marked area to a depth of 40mm. (If the wall is tile, use a special ceramic drill).

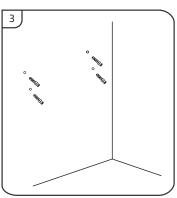


Insert Rawl plugs into drilled holes.

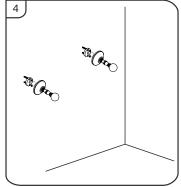

Unscrew the fixing plate on the base, thread the M4 \* 40 self tapping screw through the base fixing plate, and screw it into the

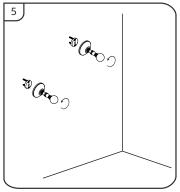

Fix the base onto the fixed plate.

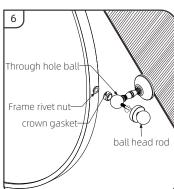

Insert Rawl plugs into drilled holes.

#### Recycling and disposal

Please recycle the packaging in accordance with your local government regulations on waste handling, and follow the same advice at the end of the products life.