

CERAMIC FIRECLAY SINKS


Instructions for knocking out a pre-punched tap hole



INSTRUCTIONS

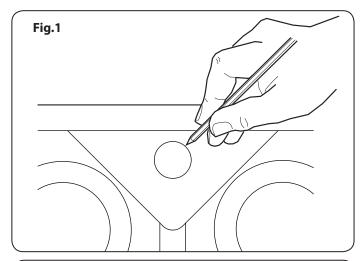

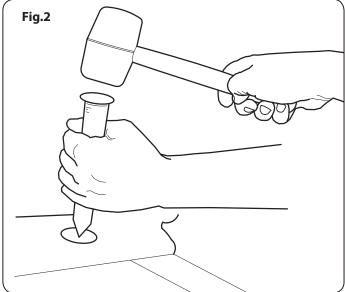

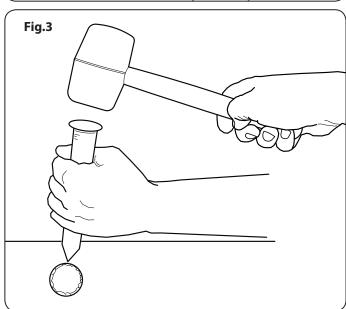

Due to our policy of continual improvement, we reserve the right to change specifications without prior notice.

Tools required

Ref	Description	
1	Sharp ended nail punch	
2	Hammer	
3	Pencil or marker	

Notes

lack

It is highly recomended that safety goggles and gloves are worn when knocking through the tap hole.

Procedure

1. Identify the centre of the pre-punched hole that you wish to use. Mark the centre on the enamelled side (glazed surface) of the sink.

DO NOT try to knock out the hole from underneath (Fig. 1).

- **2.** Place the sink in a well supported position.
- **3.** Take a sharp ended nail punch, placing the point onto the mark made. Using a hammer, strike firmly the top of the punch until the point has been broken through to the underside of the pre-punched hole (**Fig.2**).
- **4.** Carefully chip away the remaining material to gradually enlarge the tap hole until you have remove the entire pre-punched hole **(Fig.3)**.
- You should then find the tap mixer you intended to use, will fit the hole.

CE

RANGEmaster

Meadow Lane, Long Eaton,
Nottingham, NG10 2GD, England
Tel: +44 (0) 115 946 4000 Fax: +44 (0) 115 973 6602
E-mail: consumers@rangemaster.co.uk
www.rangemaster.co.uk

13

EN 13310: 2015

Kitchen sink made of: Ceramic fireclay

Cleanability: Pass
Load resistance: NPD / N/A
Durability: Pass

Check out our full range of Kitchen Products

Kitchen Sinks

Stainless Steel Kitchen Sinks

Granite Composite Kitchen Sinks

Glass Kitchen Sinks

Ceramic Kitchen Sinks

Franke Kitchen Sinks

Kitchen Taps

Contemporary Kitchen Taps

Traditional Kitchen Taps

Franke Kitchen Taps

Pull out Rinser Kitchen Taps

Instant Boiling Water Taps

Insinkerator Waste Disposal Units

