


INSTRUCTION MANUAL


Plain Mirror




SKU:MIR107/MIR136/MIR137

Hanging the mirror


Installation Tools

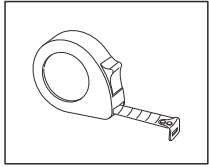


Measuring tape

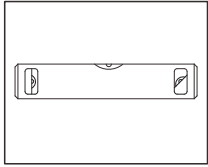


Spirit level

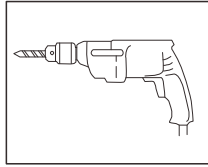


Drill

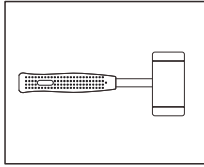

Hammer


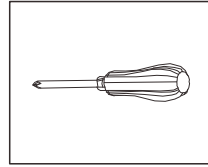


Screwdriver

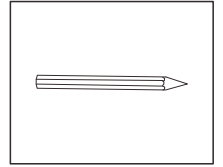


Pencil

Installation Steps

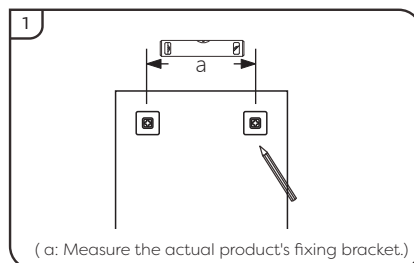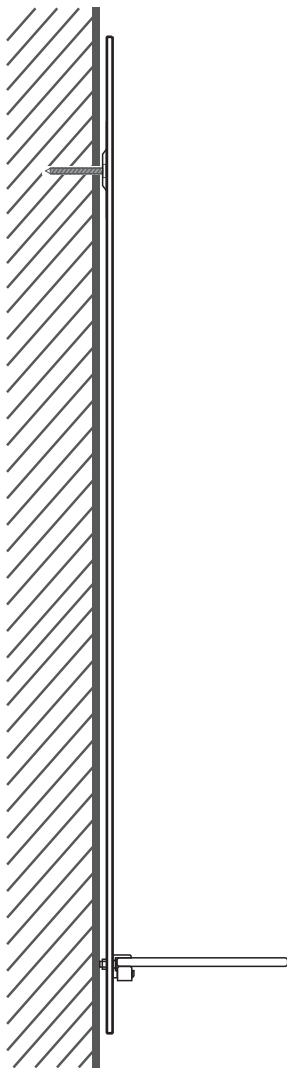


(a: Measure the actual product's fixing bracket.)


Make sure the wall is solid and suitable for safely supporting the overall weight of the mirror once installed.
Use a pencil to measure and mark the positions of the mirror nails, securing screws, and Rawl plugs. At the same time, use a spirit level to ensure the bracket is perfectly level.

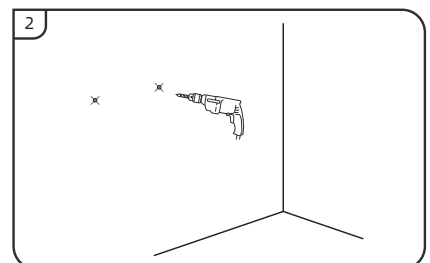


Select a $\phi 6$ drill bit and drill holes in the marked area to a depth of 40mm. (If the wall is tile, use a special ceramic drill).

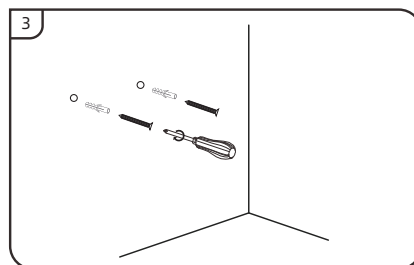


Insert Rawl plugs into drilled holes, and then screw the hook into the hole.

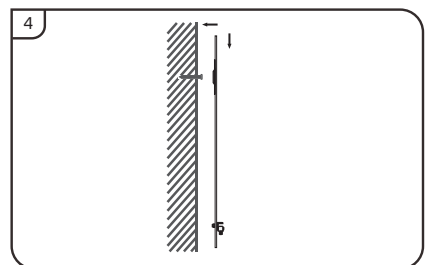

Hang the product on the wall hook.

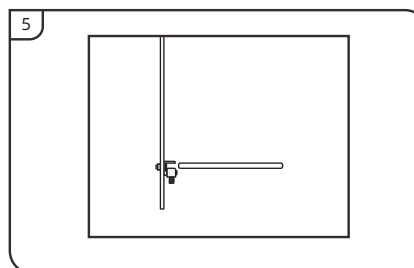

Place the layer board into the glass clip.

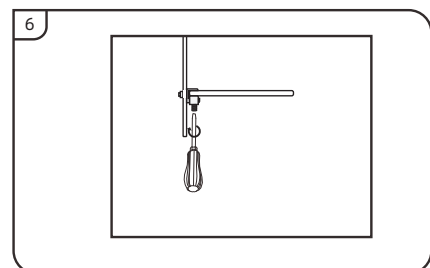

Tighten the nut with a flat screwdriver to secure the laminated board. Do the same thing on the other side as well.

Recycling and disposal

Please recycle the packaging in accordance with your local government regulations on waste handling, and follow the same advice at the end of the products life.