


## SLVT CONTROLLER VER3

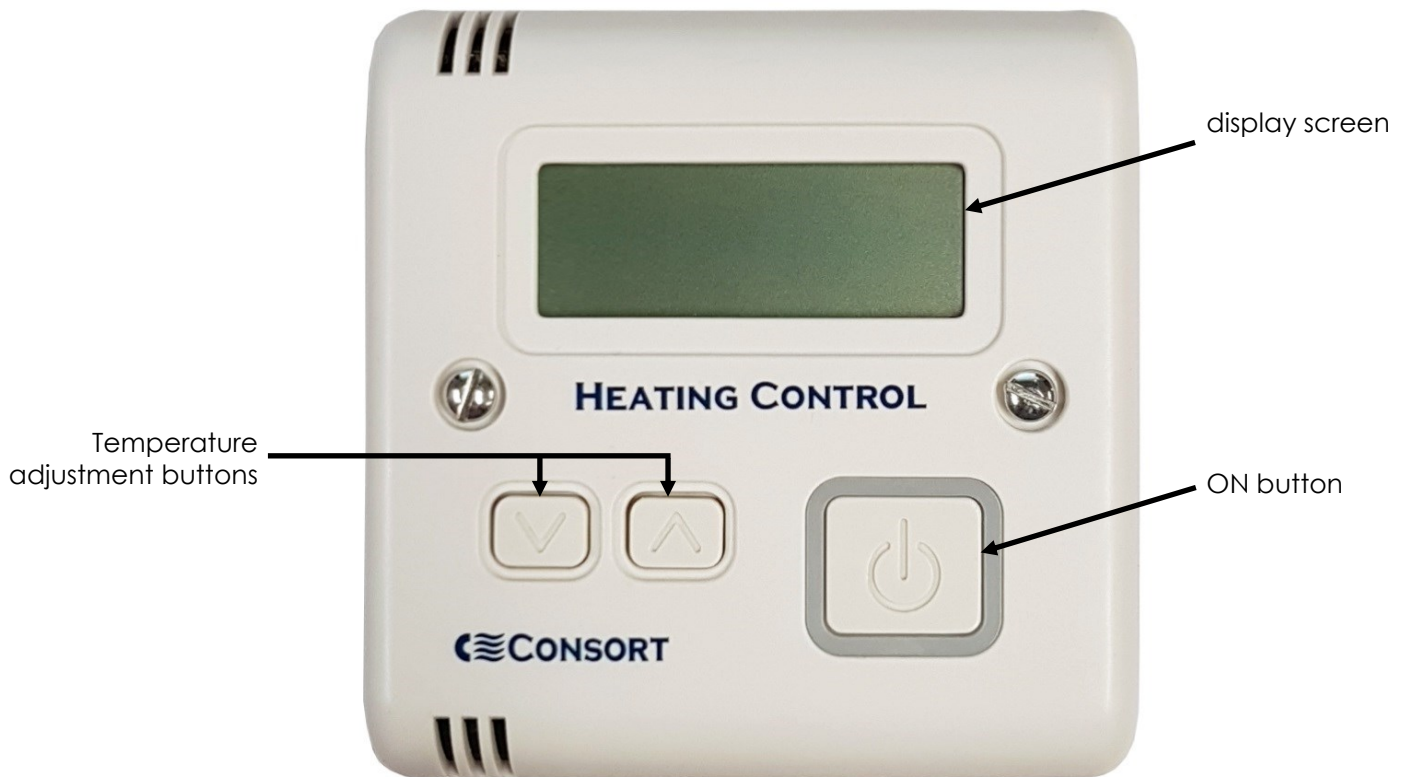

## Installation & Control Guide for SLVT Wireless Controller

All electrical appliances produced by the Company are guaranteed for one year against faulty materials or workmanship. This applies only if the appliance has been used for purposes in accordance with the instructions provided and has not been connected to an unsuitable electricity supply, or subject to misuse, neglect, damage or modified or repaired by any person not authorised by us. This guarantee is offered to you as an extra benefit and does not affect your legal rights.

The correct electricity supply voltage is shown on the rating label attached to the appliance.

Reasonable care has been taken to ensure that this guide is accurate at the time of printing. In the interest of progress the Company reserve the right to vary specifications from time to time without notice.

### **CUSTOMER HELPLINE**

Should you need any advice on the use of your new Consort product, please contact our Helpline:

#### **Consort Equipment Products Limited**

Thornton Industrial Estate, Milford Haven, Pembrokeshire, SA73 2RT

Tel: 01646 692172 Fax: 01646 695195 Email: [technical@consortepl.com](mailto:technical@consortepl.com) Web: [www.consortepl.com](http://www.consortepl.com)

Operation hours: Mon to Thu 8.30am to 4.30pm | Fri 8.30am to 3.30pm

BS EN ISO 9001 Registered Company No FM12671

# SLVT Wireless Controller

## Installation and User Guide

### WARNINGS

- Do NOT handle the appliance with wet hands.
- Do NOT use the appliance in workshops or rooms with high dust exposure.
  - Do NOT cover or restrict any aperture.
  - Do NOT use the appliance if damaged.
- Do NOT leave the appliance unattended where young children are present.
- Ensure that nothing is pushed into any aperture of this controller.
  - Operating temperature range -10 to +40°C.

### 1. Getting to know your SLVT wireless controller

The SLVT controller can control an unlimited number of heaters. The controller has 2 operating modes. It has to be set to the required mode prior to the installation by using the switches located at the back of the controller.

**Radio transmit symbol** – will flash every time a signal is sent.

Temperature can be displayed in °C or °F. This can be changed by SW1.

**Heating status symbol:**  
**Solid** - heating active  
**not shown** - heating inactive

Temperature not flashing : indicating room temperature  
 Temperature flashing : indicating set temperature when using UP or DOWN buttons

### 2. Temperature and Timer Mode

For timer mode, the switches are set as shown below.


In timer mode, switch 3 or 4 must be in the 'ON' position. This mode allows for 3 different settings which will alter the time period for each segment.

Switch 3 - Each time period represents 5 minutes.  
 Switch 4 - Each time period represents 15 minutes  
 Switch 3 & 4 - Each time period represents 30 minutes

#### Controller functionality in timer mode:

In timer mode, the controller acts as a 4 stage run-back timer. When the controller is in stand-by mode and button is pressed, the first indicator segment will light up green and heating is activated. When pressed again the second segment will light up and so on. Each segment is representing a time period that is selected when setting the switches.

In the example below, the only switch in the 'ON' position would be number 3. The button would be pressed four times to activate four 15-minute segments resulting in the heater staying on for 1 hour. At the end of the last time period, the light indicators will be red for 4 seconds and then go off. The controller is now in stand-by mode.

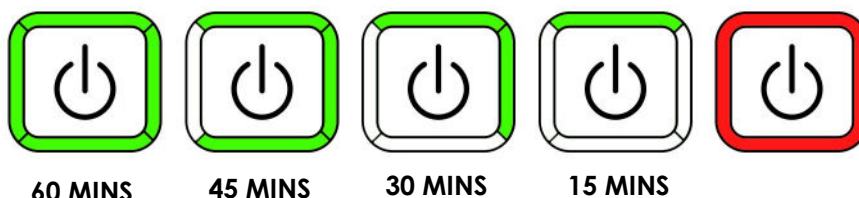

### 3. Temperature Control Mode

#### Temperature control for Comfort period

Prior to installation the maximum comfort temperature must be set by using the knob marked COMF located at the back of the controller as shown below. The range is 15°C to 35°C. The maximum comfort temperature limits the room temperature that can be set by users after installation. The required room temperature can be reduced by users by using the two adjustment buttons on the front of the controller after installation. These buttons allow the user to change the set room temperature up or down subject to not exceeding the maximum temperature set prior to installation.

After pressing the on button the heating will operate until the set room temperature is achieved, at this point the indicator lights around the on button will change from green to orange. When the room temperature drops the heating will become active again and the indicator lights will change back to green.

The display screen will show the actual room temperature, except briefly when either of the two adjustment buttons are pressed, the new target room temperature is then temporarily displayed. This will flash to show you it is the target temperature and not the room temperature.




Set temperature achieved



Variable resistors to set maximum comfort and setback temperatures

#### Temperature control for Setback period

For this mode, the switches are set as shown below.

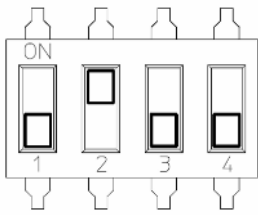

In this mode, the controller will set heating active when the room temperature drops below the set temperature. This feature can be used for frost protection or in situations where a minimum room temperature must be maintained. The setback temperature can be set using the knob marked SETB mounted on the back of the unit as shown above. This can be set from 0°C - 15°C.

If the heating is active in the setback mode, the indicators will illuminate red and green.



Room temperature below the set temperature. Heating is active.

Temperature control for comfort and setback periods can be used individually or together. This can also be used in conjunction with the timer mode options.

### 4. Changing temperature or timer settings after installation

The temperature and/or timer settings can be changed after installation. It is important to switch the power off to the controller before the changes are made. After the changes are made and the power is restored the new settings will take effect.

### 5. External Input

The controller can be switched off using any external device with voltage free contacts. For example, timers or a building management system.

**If this function isn't used, a wire link across the external input connectors must be used.**

When the external input connection is open, the indicators will light up red and the heating will be disabled. However, setback mode will still operate at low temperature.



## 6. Choosing a position in a room

The SLVT controller should be fixed to the wall. Avoid areas with draught or direct sun. Do not position the controller above or close to the heaters or other heat sources. Damp areas or areas where SLVT can be mechanically damaged should also be avoided. Avoid installing the controller in areas where there are metal objects between the heater and the controller. This will reduce the RF range. The RF range in ideal conditions can be up to 20m however this can be reduced when the signal is passing through the walls or other objects. The range can be also affected where the controller is mounted close to power cables, motors or equipment producing strong electromagnetic field. If the temperature control feature is used it is necessary to use one controller for each room or zone.

## 7. Installation

The controller is designed to fit onto most single gang back boxes. Do not use a recessed metal box for the installation. The controller can be powered by either mains 240VAC 50Hz or 12VDC. The power consumption is less than 1W. Do not connect mains voltage to 12V terminals, this will damage the controller. The maximum size wire that can be used is 1mm<sup>2</sup>, this can be twin and earth or standard flex. Do not overtighten the connector screws. Take care not to damage the components when connecting the cables.

**WARNING, this controller is not compatible with single gang metal back box with 4 fixing lugs.**


## 8. Connection to the Main Supply

For the mains power, connect L and N wires to the connectors marked as L and N. Electrical installation should be carried out by a competent installer, preferably registered with NICEIC (National Inspection Council for Electrical Installation Contracting) in accordance with the 17 edition of the IEE Wiring Regulations, (BS.7671), and any relevant Local Authority Bye-Laws. This heater is fitted with a 3-core mains supply cable and should be permanently connected to the electricity supply via a double pole switch having 3mm gap on each pole. A switched Fused Connection unit to BS.1363. Part 4 is a recommended mains supply connection accessory to ensure compliance with safety requirements applicable to fixed-wiring installation.

## 9. Connection to 12V DC

Powering the controller with 12Vdc allows the controller to be installed in a zone 2 area, however, the installation must comply with the Separated Extra Low Voltage (SELV) requirements. When powered by 12VDC, please ensure that the power supply is suitable for 12V 0.1A. For 12VDC power connect positive wire to terminal marked +12V and negative to terminal marked -12V.

*Please note: A 12Vdc power supply does not come with this controller, however, a standard 12Vdc constant voltage LED driver could be used.*

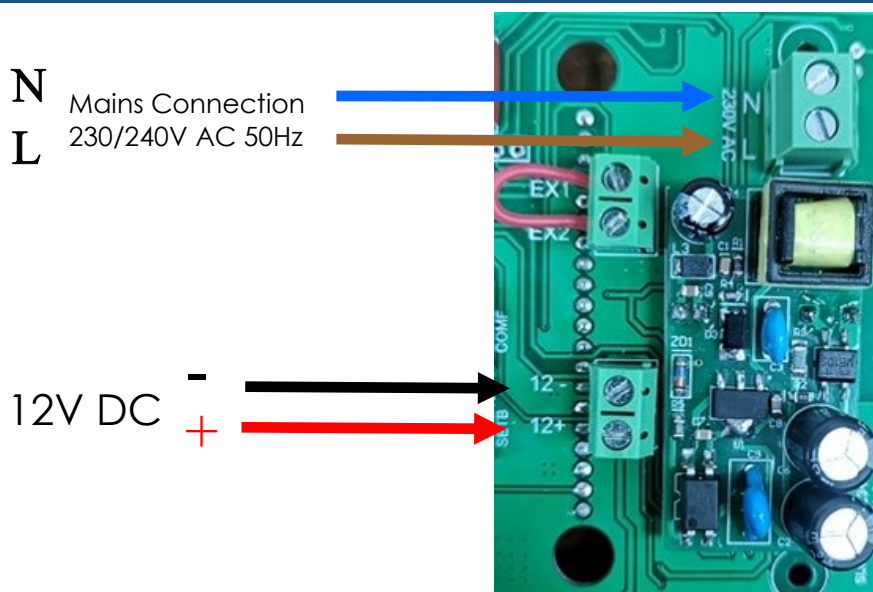

## 10. Self Diagnostic

The controller is equipped with a self diagnostic software that will check functionality of all main components. If there is a fault with any part of the controller or controller is operating outside of the temperature limits, the 4 indicators will flash red. If this happens, controller will not function in order to protect itself and the heaters.

## 11. Pairing with heaters

In order to pair your appliance with the controller you must:

- Ensure that the controller must be in OFF position (the light segments off or red).
- Turn power to the appliance ON.
- Within 20 seconds, press and hold the ON button on the controller until the orange segments light up in a sequence.
- After the pairing is finished, the light segments will change to green.
- If the pairing was successful, the appliance should emit heat. It can take up to 4 seconds.
- After 4 seconds, the appliance will be switched off.
- The appliance is now ready to be used.

## Declaration Of Conformity

In accordance with UK Government Guidance.  
WE HEREBY CERTIFY THAT THE APPLIANCES DETAILED HEREON HAVE BEEN  
INSPECTED AND TESTED, AND CONFORM TO THE REQUIREMENTS OF THE  
FOLLOWING UK STATUTORY INSTRUMENTS WHERE APPLICABLE:

**Electrical Equipment (Safety) Regulations 2016 SI. 2016 1101**  
**Electromagnetic Compatibility Regulations 2016 SI. 2016 No. 1091**  
**Radio Equipment Regulations 2017 SI. 2017 No. 1206**  
**The Restriction of use of Certain Hazardous Substances. SI. 2012 No. 3032**  
**The Waste Electrical & Electronic Equipment Regulations 2013. SI. 2013 No. 3113**  
**Security Requirements for 'Connectable Products' PTSI ACT 2022**  
**The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023**

### Transposed standards used:

- **BS EN 55014 (2016)**
- **BS EN 301489.1 & .3**
- **BS EN 300220 .1 & .2**
- **BS EN 60730.2.9**
- **BS EN 60335.1 (2012)**
- **BS EN 60335.2.30 (2009)**
- **ETSI BS EN 303645**
- **EN 50663 (2017)**
- **EN 60730-2-9 (2010)**
- **EN 60730-1 (2011)**
- **ETSI EN 300 220-1 V3.1.1 (2017-02)**
- **ETSI EN 300 220-2 V3.2.1 (2018-06)**
- **ETSI EN 301 489-1 V2.2.2 (2019)**
- **ETSI EN 301 489-3 V2.1.1 (2019)**

**PART NUMBER AND DESCRIPTION OF APPLIANCE:** **SLVT**

**NAME OF RESPONSIBLE PERSON:** **DAVID O'SULLIVAN**  
**POSITION:** **OPERATIONS MANAGER**  
**DATE:** **24/06/24**

**CONSORT EQUIPMENT PRODUCTS LTD.**

THORNTON INDUSTRIAL ESTATE, MILFORD HAVEN, PEMBROKESHIRE, SA73 2RT. UK

TEL: +44 1646 692172 E-MAIL: [TECHNICAL@CONSORTEPL.COM](mailto:TECHNICAL@CONSORTEPL.COM)

[WWW.CONSORTEPL.COM](http://WWW.CONSORTEPL.COM)



**FM 12671**