

SMART INSTALLATION

AQUALISA SMARTVALVE™ SETUP

⚠ Before any electrical adjustment is attempted, the electricity supply must be turned off at the mains switch.
Electrical installation may only be carried out by a qualified person.
All copper pipe work must be cross-bonded and connected to a reliable earthing point.

1 Power supply to the SmartValve™ MUST be earthed and utilise a 3 amp fuse. Connect the Aqualisa SmartValve™ power lead to a suitable electrical connection in accordance with current local and national wiring rules (refer to safety information section).
Examples of suitable connections:
• A double pole 3 amp fused switched spur incorporated in the fixed wiring circuit.
• A plug and socket, whereby the 3amp fuse can be fitted into either the plug or the socket itself.
Ensure that these are located in an accessible, dry location and not in the bathroom.

⚠ THIS APPLIANCE MUST BE EARTHED
We recommend protecting surface mounted cables in suitable approved conduit to avoid the risk of damage from vermin.
The power lead should also be clipped in place with 'IP' clips or similar to avoid accidents.

2 For divert models refer to Cable Diagram section below.
Loosen the single fixing screw on the top of the Aqualisa SmartValve™ and diverter (where supplied) then carefully tilt the lid up and off the location tags, and set the lid aside.
Plug in the transparent connector of the low voltage, 10m data cable into the socket adjacent to the temperature adjuster as indicated on the label, or into the diverter where specified.
Feed the cable out of the Aqualisa SmartValve™ or diverter ensuring it is correctly routed within the data cable channel.



⚠ Divert models have product specific diverters, and the supplied diverter must be used. If diverter is lost, damaged or separated from the main product contact Customer Services for the correct replacement.

i A further data cable socket has been provided for use with a wired remote or diverter. This can be accessed by carefully snapping and removing the entry pillar and connecting the cable as described above. Please refer to the Wired Remote Installation Guide or the below cable diagram. N.B. Wired Remotes are product specific.

3 When making any adjustment to the Aqualisa SmartValve™ settings the power MUST be isolated. For water economy utilise the Eco mode. This is not to be used on Combination boiler installations, whereby only the Combi mode must be used.
To change the mode, use a flat bladed screwdriver.
Use the table below for water system settings.

Setting Water System Mode		
Water System	Valve Type	Setting
Combination Boiler ensure setting is changed from factory default	Standard Aqualisa SmartValve™	Combi Factory default will be Normal HP, this setting must be changed to Combi for temperature stability and optimum performance
Balanced High Pressure	Standard Aqualisa SmartValve™	Normal HP (factory default) or Eco HP
Separately Pumped Gravity	Standard Aqualisa SmartValve™	Normal HP (factory default) or Eco HP
Gravity Pumped	Pumped Aqualisa SmartValve™	Normal Gravity (factory default) or Eco Gravity

⚠ The ECO setting reduces the flow rate, therefore is not recommended when used in conjunction with combination boiler or bath filler applications. Site conditions can affect temperature settings, installer to adjust as required. See Controller Commissioning Instructions section.

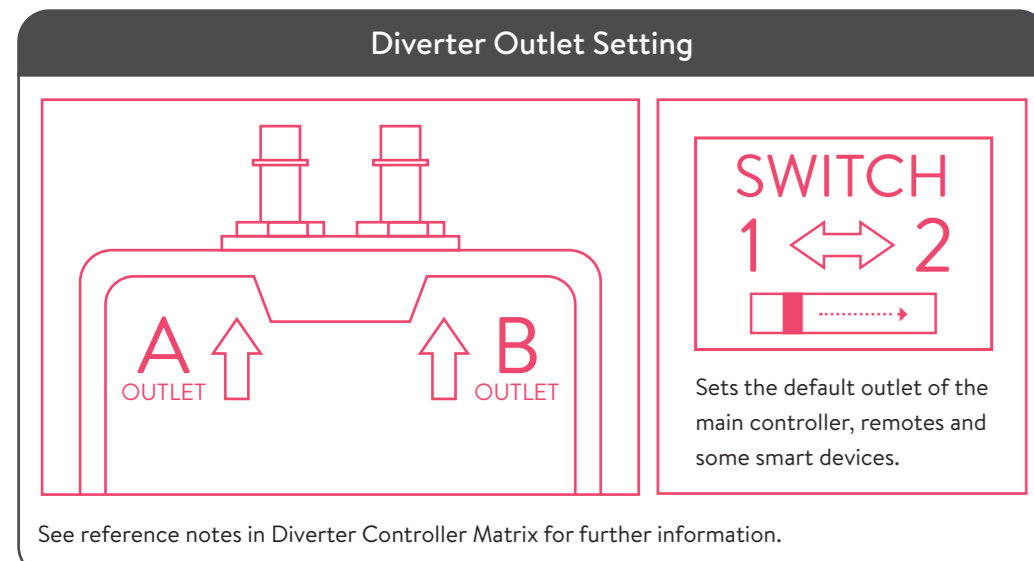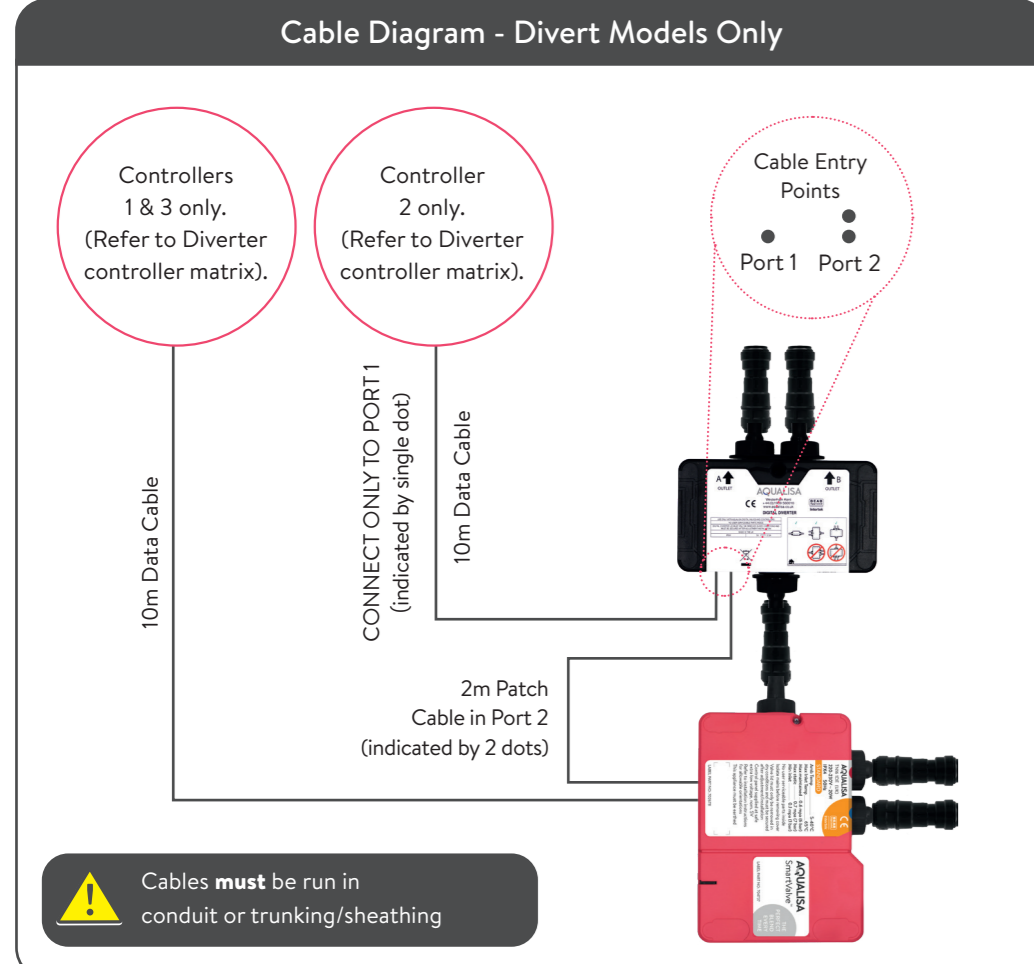

Divertor Controller Matrix

Controller 1
The controller will automatically assign the outlets as follows:
• Top button to outlet A of the diverter
• Bottom button to outlet B of the diverter

Divertor Controller Primary Outlet Set Up
Wired remote:
Divertor switch position 1 will allocate Outlet A as the primary. Divertor switch position 2 will allocate Outlet B as the primary.
Note: Changing the diverter switch position will not override the main controller settings.
Aqualisa (ShowerMe) App:
Outlet A is always the primary (default) outlet, regardless of the diverter switch position.
Smart Speaker:
Will always default to the outlet that was last used.

Controller 2
Divertor Controller Primary Outlet Set Up
Controller:
Divertor switch position 1 will allocate Outlet A as the primary. Divertor switch position 2 will allocate Outlet B as the primary.
Aqualisa App:
Outlet A is always the primary (default) outlet, regardless of the diverter switch position.
Smart Speaker:
Divertor switch position 1 will allocate Outlet A as the primary. Divertor switch position 2 will allocate Outlet B as the primary.

Controller 3
⚠ Remove the protective label to allow the temperature bezel to rotate.
Refer to User Instructions. Configure Outlets section.
Note: The diverter switch position does not affect the primary outlet settings, configuring the outlets via the controller settings will establish the preferred primary outlet.
Aqualisa (ShowerMe) App:
Will start the outlet as per the user profile settings.
Smart Speaker:
Outlet A is always the primary (default) outlet, regardless of the diverter switch position or the primary outlet settings of the controller (configured outlets)

CONTROLLER COMMISSIONING INSTRUCTIONS

i When the power supply to the Aqualisa SmartValve™ is turned on the controller will automatically go into a set-up / configuration sequence. Whilst in the set-up sequence the controller will display flashing LED's or a message on the display screen, this process can take up to 2 minutes to complete. The controller is ready to use once the configuration process has finished.
Controller 3 - Special note: The protective label must be removed to allow the temperature bezel to rotate freely.

- Turn on the power supply to the Aqualisa SmartValve™.
- Run the shower at maximum temperature (factory pre set to 45°C). If required, the maximum temperature can be adjusted. (Refer to Safety Information for guidance).
- To adjust the maximum temperature, isolate the power supply to the Aqualisa SmartValve™.
Using a flat bladed screwdriver adjust the 'MAX TEMP ADJUSTMENT' control as indicated. When the temperature has been set to the desired position, carefully replace the Aqualisa SmartValve™ lid and secure the fixing screw, hand tight only.
- Reinstate the electrical supply to the Aqualisa SmartValve™. Press the 'Start/Stop' button on the controller to turn on the shower and test.

ADJUSTABLE HEIGHT HEADS

i Installation videos are available on our website www.aqualisa.co.uk/installation-videos

- Ensure the finished wall surface is even, prepare pipework from the Aqualisa SmartValve™ or diverter (where supplied) to the required position for the hose outlet using a Ø15mm pipe. Slide the wall spacer down the projecting pipe until flush with the finished wall surface.
- Slide the 15mm gripper ring down the projecting pipe until flush with the wall spacer fitting. Should the gripper ring become damaged or compromised, please contact the Customer Helpline for a replacement.
- Trim the projecting pipe to a length of 15-22mm, measured from the face of the gripper ring, using a suitable cutter. If a hacksaw is used, the pipe end must be carefully de-burred and chamfered.
- Clean and lubricate the pipe using a suitable (silicone based) lubricant.
- Remove the locking screw, rotate the chrome outlet assembly and remove the outlet from the wall mounting plate by carefully levering with a flat bladed screwdriver.
IMPORTANT: the seating o-ring may unseat itself from the mounting plate spigot and lodge inside the chrome assembly. This must be removed and refitted as per point 8.
- Ensuring the locking screw hole is positioned at the bottom, place the wall outlet mounting plate onto the pipe assembly and mark and prepare the fixing points, using the fixings provided (if suitable).
- Secure the wall mounting plate to the wall using the screws provided (if suitable).

- Place the 'O' ring on the recess of the spigot section on the mounting plate, offer the chrome outlet onto the mounting plate in the 5 o'clock position and rotate clockwise until a stop is reached.
- Refit the locking screw taking care not to overtighten.
- To fit the rail, prepare two fixing holes up to a maximum of 657mm apart.
Note: the rail kit supplied utilises a floating bracket that can be positioned to suit existing screw holes on retrofit installations.
- Dependant on the model purchased, depress the single release button or the side levers of the handset holder and slide onto the rail assembly.
- Carefully slide the gel hook onto the rail under the handset holder.
- Secure the top rail bracket into position on the finished wall surface using the short wall screw.
- Slide the bottom rail bracket onto the end of the rail that has a hole.
- Slide the rail assembly up through the top rail bracket.
- Align the fixing hole of the bottom bracket with the corresponding holes on the rail assembly, ensuring the smaller sized hole on the rail is closest to the wall. Secure the bottom rail bracket to the wall using the long wall screw.
- Place the rail end caps into both brackets and push firmly into position.
- Ensuring the hose washer is in the correct position; attach the hose to the wall outlet or the bottom of the exposed rail.
⚠ Run the shower for a few seconds to clear any debris and to check for any leaks.
- Pass the hose through the gel hook.
- ⚠** Current Water Supply Regulations state that the handset should not be allowed to pass a point 25mm above the spill over level of the bath or shower tray. If this cannot be achieved, the hose must be passed through the gel hook which has been designed to be utilised as a hose restraint.
- i** Make note of the type of your shower head (A or B) when proceeding with below instructions.
- For shower head A:** Ensuring the hose washers are in the correct position, depress the anti-swivel locking button on the handset and secure the handset to the handset holder.
For shower head B: Disengage the pivot clip by pushing in the outer grey button on the front of the shower head, as shown. Remove the threaded spigot from the bottom of the handset by loosely attaching the hose to the thread and pulling clear. Ensure the hose washer is in the correct position, tighten the threaded spigot into the hose using a suitable spanner, taking care not to over-tighten. Reinsert the spigot into the handset and engage the pivot clip prior to placing the handset into the handset holder.
- WALL MOUNTED HEAD**
i Installation videos are available on our website www.aqualisa.co.uk/installation-videos
- Run a 15mm outlet pipe from the Aqualisa SmartValve™ or diverter (where supplied) to the preferred position for the fixed head.
- Cut the outlet pipe to the finished length (55mm-150mm measured from the finished wall surface) using a suitable cutter. If a hacksaw is used, the pipe end must be carefully de-burred and chamfered.
- Offer the fixed head arm over the projecting pipework and ensuring it is visibly straight, mark the four fixing points.

- Remove the fixed head arm and drill and prepare using the fixings provided (if suitable) taking care to avoid pipework hidden in the wall.
- Ensuring the pipe is clean and free of dust, slide the wall spacer followed by the fixing bush onto the pipe flush with the finished wall surface.
Note: the fixing bush contains a gripper ring and once fitted cannot be removed by pulling. If damaged or compromised, please contact the Customer Helpline for a replacement.
- Fit the 15mm 'O' ring against the end of the fixing bush. Lubricate the 'O' ring using a suitable silicone based lubricant.
- ⚠** The 'O' ring must be positioned on the 15mm pipe flush to the fixing bush, not onto the fixing bush shaft.
- Refit the shower arm and secure it to the wall using the screws provided (if suitable).
- ⚠** Run the shower for a few seconds to clear any debris and to check for any leaks.
- Slide the cover plate into position flush with the finished wall surface.
- Ensuring the rubber washer is in the correct position, attach the shower head to the fixed arm and carefully secure using a suitable spanner, or a tool with smooth jaws, sufficiently to lock the head into position.

CEILING MOUNTED HEAD

- ⚠** The ceiling mounted fixed head is supplied with screws for fixing the product to a noggin. A NOGGIN MUST BE USED AS PART OF THIS INSTALLATION.
- i** Installation videos are available on our website www.aqualisa.co.uk/installation-videos or alternatively, scan the QR code on the reverse of this guide.
- Run a 15mm outlet pipe from the Aqualisa SmartValve™ or diverter (where supplied) to the preferred position for the fixed head.
 - Locate the position for the fixed head in the bathroom and firstly drill a pilot hole to mark the position before checking that there is suitable space behind the ceiling for the fixing assembly.
 - ⚠** The minimum height required behind the ceiling is 50mm and the space must allow for an 80mm wide, 50mm deep noggin to be used to support the assembly.
 - Drill a hole (minimum Ø28mm, maximum Ø40mm) through the ceiling and the noggin.
 - Remove the fixing bracket carefully from the fixed head arm.
 - Set the fixing bracket into position and mark the fixing points. Remove the bracket and drill and prepare suitable fixings. Refit the fixing bracket and secure it through the ceiling and into the noggin using the screws provided (if suitable).
 - Feed the arm through the fixing bracket to the correct depth. Tighten the nut using a 32mm spanner if necessary to facilitate.
 - Cut off the excess pipe allowing for a suitable working length to allow for the required 22mm connection. If a push fit connector is to be used then the pipe must be abraded to remove all chrome plating.
 - Connect the pipe work from the Aqualisa SmartValve™ or diverter (where supplied) to the end of the fixed head pipe using a suitable coupling. Fully tighten the nut on the ceiling mounting bracket using a 32mm spanner if necessary to facilitate.
 - ⚠** Run the shower for a few seconds to clear any debris and to check for any leaks.
 - Lubricate the 'O' ring if necessary and carefully slide the cover plate back over the fixed head arm and into position against the ceiling.

- Secure the cover plate to the arm using the grub screw and 2.5mm hexagonal key provided.
- BATH OVERFLOW FILLER**
⚠ The bath overflow filler is suitable for baths up to a maximum thickness of 24mm.
i Installation videos are available on our website www.aqualisa.co.uk/installation-videos
- Carefully unscrew and remove the overflow filler outlet from the body assembly and set aside.
- Carefully unscrew and remove the bath waste clicker assembly from the waste body and set aside.
- Offer the bath waste into position ensuring the rubber washer is correctly aligned between the waste assembly and the bath base.
- Ensuring the rubber washer is correctly aligned, pass the bath waste clicker through the bath and secure to the waste body assembly.
- Connect the bath waste to a suitable trap (not supplied).
- Offer the outlet body assembly into position at the rear of the bath ensuring the rubber washer is correctly aligned between the outlet body assembly and bath wall.
- Ensuring the rubber washer is correctly aligned, pass the overflow filler outlet through the bath and secure to the body assembly.
- Remove the relevant inlet blanking plug and attach the flexible hose to the blended inlet connection.
⚠ PTFE thread tape or similar MUST be used to guarantee a watertight seal.
- WASTE PIPE EXTENSION KIT**
i If required for larger baths, a 900mm waste pipe conversion kit is available from the Aqualisa Customer Service department, part number 477302. Please contact our Customer Service Department on 01959 560010.
- Unscrew the clamping nut and remove the waste pipe from the waste assembly.
- Remove the clamping nut and sealing washer from the waste pipe and set aside.
- Carefully cut down the length of the waste pipe, and disconnect from the outlet assembly, ensuring not to damage the outlet.
- To reassemble, push the longer waste pipe into position over the outlet, and secure it in place using a jubilee clip (not supplied), then re-fit the waste assembly.
NOTE: the waste pipe may need to be softened by running it under hot water, to ensure it slides over the outlet.

TROUBLESHOOTING

Symptom	Possible cause	Action
Controller LED's flashing and changing colour when power turned on to the Aqualisa SmartValve™	Start up sequence and controller configuration in process (controller specific)	No action required - sequence and configuration can last up to 2 minutes. Wait until LED's go out and then the controller is ready to use.
Controller unresponsive / No Lights / Blank	Power supply turned off to Aqualisa SmartValve™	Check that the connector is in the correct orientation and fully pushed home and that the cable schematics are as per the Cable Diagram.
Controller displaying "Preparing, please wait..." for longer than 2 minutes	Loss of communications	Check data cable connections are making good contact and are fully inserted. Check that the wiring schematics are as per installation instructions.
Pump noisy and low / no flow	Air lock (for Gravity fed systems only)	For models utilising an adjustable head kit; disconnect the handset from the hose, lower the hose into the shower tray or bath, set the temperature to fully cold and then start the shower. As the water starts to flow and increase in volume gradually increase the temperature. If the flow starts to splutter, stop moving the temperature control until the flow again stabilises, then continue to move the dial towards the hottest setting.
	Restriction in waterway	Check for debris in the inlet filters of the Aqualisa SmartValve™.
Low / no flow	Incorrect Aqualisa SmartValve™ fitted	If water supplies are gravity fed, the PUMPED Aqualisa SmartValve™ must be used (unless a separate stand alone pump is being utilised).
	Water supply issue	For Standard Aqualisa SmartValve™ - Ensure water is turned fully on at the mains and at the servicing valve in the supply. Ensure isolation valves are fully open.
	Mixed water supplies	For Standard Aqualisa SmartValve™ - ensure hot and cold supplies are from the mains water supply.
	Check filters	Check for debris in the inlet filters of the Aqualisa SmartValve™, diverter and Fixed Head connection washer.
	Incoming mains water pressure or flow too low	After confirming that the filters are clear, check with the local water authority.
	Connectors and water supply feeds to the Aqualisa SmartValve™ are restrictive	Refer to IMPORTANT INFORMATION sections: Connections and Pipe sizing.
	Separate, stand alone pump not activating (Standard Aqualisa SmartValve™ only)	Ensure sufficient flow to activate the flow switches of the pump. For Aqualisa divert products a twin ended universal (negative head) pump must be used. Refer to IMPORTANT INFORMATION section.
	Aqualisa SmartValve™ pump not activating	Refer to Setting Water System Mode section, ensure mode is set to normal or ECO gravity setting.
Unable to adjust or control temperature	Reversed inlet water supplies (i.e. Hot supply feeding cold inlet and vice-versa)	Ensure correct water supply to specified inlet connection.
Fluctuating water temperature	Incorrect setting on Logic Module of Aqualisa SmartValve™	If hot water supply is from a combination boiler - the Logic module mode MUST be set to COMBI.
	Airlock in water supplies (for gravity fed systems only)	See "Air lock" in Possible Cause section.
	Hot water temperature too high	Ensure hot water supply temperature is below 65°C (minimum 55°C for stored water and 50°C for combination boilers).
	Communications issue	Check data cable connections.
	Combination boiler unable to meet demand	Check that the hot water temperature is stable at another high flowing outlet (e.g. bath hot tap - run at maximum flow rate), additionally run a cold outlet at 1/3 of a maximum flow rate.
Temperature too low	Low hot water temperature	Check that domestic hot water temperature is a minimum of 55°C for stored water and 50°C for combination boilers.
	Logic Module temperature setting too low	Refer to section: Controller Commissioning Instructions.
Temperature too low - Controller temperature ready display does not stabilise	Mixed water supplies	Water supplies MUST be from the same source: MUST NOT be gravity hot and mains cold.
	Unbalanced water supplies	For mains fed systems the cold and hot feeds should be as evenly balanced as possible - especially for HP unvented systems.
	Combination boiler unable to meet demand	Check the hot water temperature is stable at another high flowing outlet (e.g. bath hot tap - run at maximum flow rate), additionally run a cold outlet at 1/3 of a maximum flow rate.
Controller remains illuminated after switching shower off	Poor cable connection	Check data cable connections are making good contact and are fully inserted (this includes installations where a wired remote is fitted).
	Object within range of proximity sensor and activating Auto Wake-up	Check user guide to see if the model in question has this feature - and if so go to settings menu for guidance on disabling this function.
Water flows from incorrect outlet (divert models only)	Pipe work configured incorrectly	Refer to sections: Diverter Outlet Setting and Diverter Controller - Primary Outlet Setup
	Primary outlet setting not configured	Refer to sections: Diverter Outlet Setting and Diverter Controller - Primary Outlet Setup
	Outlets not configured (For models with display screen only)	Refer to User Guide: Settings Section - Configuring your Outlets.
Flow will not switch between outlets	Communications issue	Check that 2m patch lead is connected between Aqualisa SmartValve™ and diverter and that the cables are connected to the correct ports. See section: Wiring Diagram - Diverter Models Only.
	Outlets not configured (For models with display screen only)	Turn off the power supply to the Aqualisa SmartValve™, leave isolated for at least 2 minutes. Reinstate power supply and then following instruction in the User Guide (Settings Menu) complete a factory reset, then proceed to Configure Outlets.

For further information and advice contact Aqualisa Customer Helpline or refer to the Troubleshooting sections in the User Guide.